

Owner's Manual

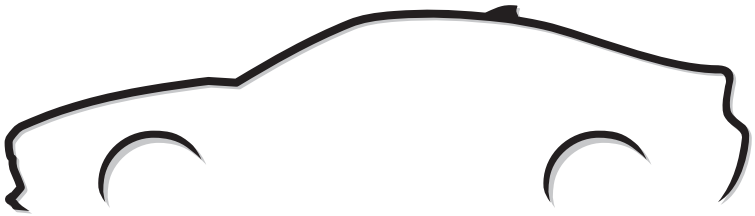

SUBARU BRZ

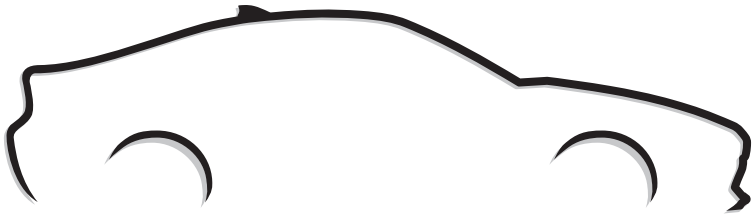

SUBARU

Foreword

Congratulations on choosing a SUBARU vehicle. This Owner's Manual has all the information necessary to keep your SUBARU in excellent condition and to properly maintain the emission control system for minimizing emission pollutants. We urge you to read this manual carefully so that you may understand your vehicle and its operation. For information not found in this Owner's Manual, such as details concerning repairs or adjustments, we recommend that you contact the SUBARU dealer from whom you purchased your SUBARU or the nearest SUBARU dealer.

The information, specifications and illustrations found in this manual are those in effect at the time of printing. SUBARU CORPORATION reserves the right to change specifications and designs at any time without prior notice and without incurring any obligation to make the same or similar changes on vehicles previously sold. This Owner's Manual applies to all models and covers all equipment, including factory installed options. Some explanations, therefore may be for equipment not installed in your vehicle.

Please leave this manual in the vehicle at the time of resale. The next owner will need the information found herein.


NOTE: "SUBARU dealer" means an authorized SUBARU dealer and/or repairer.

SUBARU CORPORATION, TOKYO, JAPAN

"SUBARU" and the six-star cluster design are registered trademarks of SUBARU CORPORATION.

© Copyright 2022 SUBARU CORPORATION

This manual describes the following vehicle type.

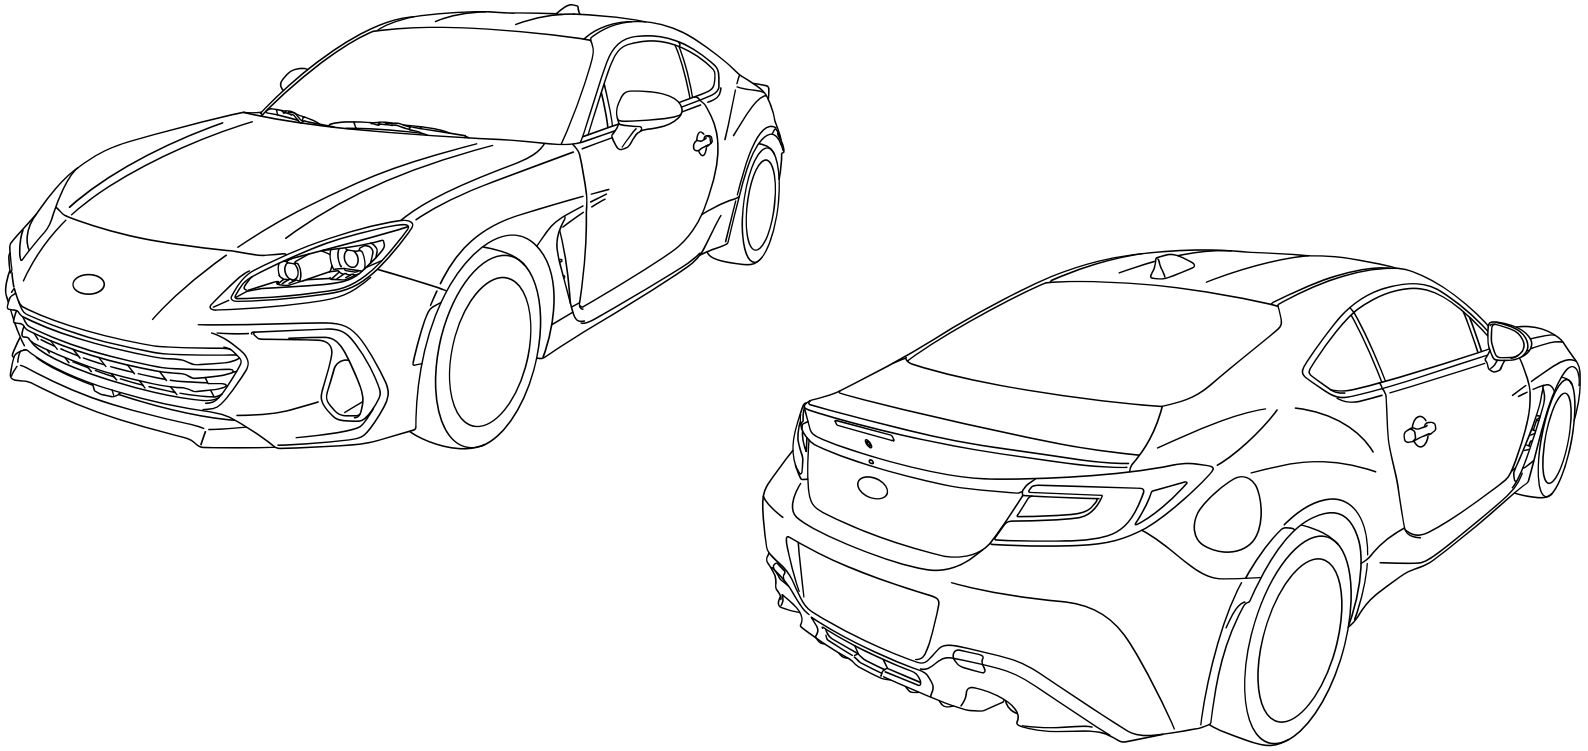

002011

Table of Contents

Introduction 1	
Illustrated Index 13	
Seat, Seatbelt and SRS Airbags 27	*Chapter 1*
Keys and Doors 91	*Chapter 2*
Instruments and Controls 117	*Chapter 3*
Climate Control 185	*Chapter 4*
Audio 197	*Chapter 5*
Interior Equipment 199	*Chapter 6*
Starting and Operating 209	*Chapter 7*
Driving Tips 275	*Chapter 8*
In Case of Emergency 289	*Chapter 9*
Appearance Care 319	*Chapter 10*
Maintenance and Service 325	*Chapter 11*
Specifications 371	*Chapter 12*
Supplement 385	*Chapter 13*
Index 425	*Chapter 14*

- Warranties 2
- How to Use This Owner's Manual 2
  - Using Your Owner's Manual.....2
  - Safety Warnings 3
  - Safety Symbol.....3
  - Abbreviation List 4
- Vehicle Symbols 4
- Safety Precautions When Driving 5
  - Seatbelt and SRS Airbag 5
  - Child Safety.....5
  - Engine Exhaust Gas (Carbon Monoxide).....7
  - Drinking and Driving 7
  - Drugs and Driving..... 8
  - Driving When Tired or Sleepy..... 8
  - Modification of Your Vehicle 8
  - Car Phone/Cell Phone and Driving 8
  - Driving Vehicles Equipped with Navigation/ Audio System..... 9
  - Driving with Pets..... 9
  - Tire Pressures..... 9
  - Attaching Accessories..... 9
- General Information 10
  - Vehicle Data Recording..... 10
  - Gear Shift Indicator (If Equipped) 10
- EU Battery Directive 2006/66/EC.....11

Warranties

All warranty information, including details of coverage and exclusions, is in the “Warranty and Service Booklet”. Please read these warranties carefully.

How to Use This Owner’s Manual

■ Using Your Owner’s Manual

Before you operate your vehicle, carefully read this manual. To protect yourself and extend the service life of your vehicle, follow the instructions in this manual. Failure to observe these instructions may result in serious injury and damage to your vehicle.

This manual is composed of fourteen chapters. Each chapter begins with a brief table of contents, so you can usually tell at a glance if that chapter contains the information you want.

Introduction

This chapter informs you general information before driving.

Illustrated Index

This chapter informs you about the vehicle layout with illustrations.

Chapter 1: Seat, Seatbelt and SRS Airbags

This chapter informs you how to use the seat and seatbelt and contains precautions for the SRS airbags.

Chapter 2: Keys and Doors

This chapter informs you how to operate the keys, locks and windows.

Chapter 3: Instruments and Controls

This chapter informs you about the operation of instrument panel indicators and how to use the instruments and other switches.

Chapter 4: Climate Control

This chapter informs you how to operate the climate control.

Chapter 5: Audio

This chapter informs you about your audio system.

Chapter 6: Interior Equipment

This chapter informs you how to operate interior equipment.

Chapter 7: Starting and Operating

This chapter informs you how to start and operate your SUBARU.

Chapter 8: Driving Tips

This chapter informs you how to drive your SUBARU in various conditions and explains some safety tips on driving.

Chapter 9: In case of Emergency

This chapter informs you what to do if you have a problem, such as a flat tire or engine overheating.

Chapter 10: Appearance Care

This chapter informs you how to keep your SUBARU looking good.

Chapter 11: Maintenance and Service

This chapter informs you when you need to take your SUBARU to the dealer for scheduled maintenance and informs you how to keep your SUBARU running properly.

Chapter 12: Specifications

This chapter informs you about the dimensions and capacities of your SUBARU.

Chapter 13: Supplement

This chapter informs you of supplementary information complied with some countries' requirements.

Chapter 14: Index

This is an alphabetical listing of all that's in this manual. You can use it to quickly find something you want to read.

For EyeSight system:

For details about the EyeSight system, refer to the Owner's Manual supplement for the EyeSight system.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of equipment.

■ Safety Warnings

You will find a number of WARNINGs, CAUTIONs and NOTEs in this manual.

These safety warnings alert you to potential hazards that could result in injury to you or others.

Please read these safety warnings as well as all other portions of this manual carefully in order to gain a better understanding of how to use your SUBARU vehicle safely.

⚠ WARNING

A WARNING indicates a situation in which serious injury or death could result if the warning is ignored.


⚠ CAUTION

A CAUTION indicates a situation in which injury or damage to your vehicle, or both, could result if the caution is ignored.

NOTE

A NOTE gives information or suggestions how to make better use of your vehicle.

■ Safety Symbol

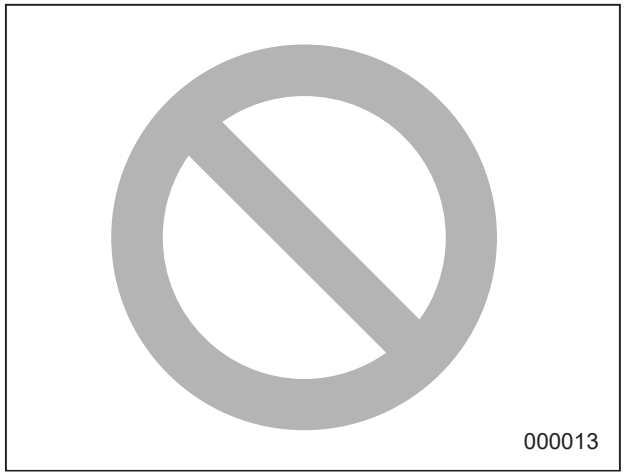

You will find a circle with a slash through it in this manual. This symbol means "Do not", "Do not do this", or "Do not let this happen", depending upon the context.

– CONTINUED –

■ Abbreviation List

You may find several abbreviations in this manual. The meanings of the abbreviations are shown in the following list.

Abbreviation	Meaning
ABS	Anti-lock brake system
A/C	Air conditioner
ALR	Automatic locking retractor
ALR/ELR	Automatic locking retractor/ Emergency locking retractor
AT	Automatic transmission
BSD	Blind Spot Detection
DRL	Daytime running light
EBD	Electronic brake force distribution
ELR	Emergency locking retractor
GPS	Global positioning system
INT	Intermittent
LCA	Lane Change Assist
LED	Light emitting diode
LHD	Left-hand drive
LSD	Limited Slip Differential
MIL	Malfunction indicator light
MT	Manual transmission
OBD	On-board diagnostics
RAB	Reverse Automatic Braking
RCTA	Rear Cross Traffic Alert
RHD	Right-hand drive
RON	Research octane number
SRH	Steering Responsive Headlight
SRS	Supplemental restraint system
SRVD	Subaru rear vehicle detection
TFT	Thin Film Transistor
TIN	Tire identification number
TPMS	Tire pressure monitoring system
TRC	Traction Control

Vehicle Symbols

There are some of the symbols you may see on your vehicle.

For warning and indicator lights, refer to "Warning and Indicator Lights" ☞P25.

Mark	Name
	WARNING
	CAUTION
	Read these instructions carefully
	Wear eye protection
	Battery fluid contains sulfuric acid
	Keep children away
	Keep flames away
	Prevent explosions

Safety Precautions When Driving

■ Seatbelt and SRS Airbag

⚠ WARNING

- **All persons in the vehicle must fasten their seatbelts BEFORE the vehicle starts to move. Otherwise, the possibility of serious injury becomes greater in the event of a sudden stop or accident.**
- **To obtain maximum protection in the event of an accident, the driver and all passengers must always wear seatbelts when in the vehicle. The SRS (Supplemental Restraint System) airbag does not do away with the need to fasten seatbelts. In combination with the seatbelts, it offers the best combined protection in case of a serious accident.**

  Not wearing a seatbelt increases the chance of severe injury or death in a crash even when the vehicle has the SRS airbag.

- **The SRS airbags deploy with considerable speed and force. Occupants who are out of the proper position when the SRS airbag deploys could suffer very serious injuries. Because the SRS airbag needs enough space for deployment, the driver should always sit upright and well back in the seat as far from the steering wheel as practical while still maintaining full vehicle control and the front passenger should move the seat as far back as possible and sit upright and well back in the seat.**

For instructions and precautions, carefully read the following sections.

- For the seatbelt system, refer to "Seatbelts" ☞P37.
- For the SRS airbag system, refer to "SRS Airbag (Supplemental Restraint System Airbag)" ☞P64.

■ Child Safety

⚠ WARNING

- **Never hold a child on your lap or in your arms while the vehicle is moving. The passenger cannot protect the child from injury in a collision, because the child will be caught between the passenger and objects inside the vehicle.**
- **While riding in the vehicle, infants and small children should always be seated in the REAR seat in an infant or child restraint system which is appropriate for the child's age, height and weight. If a child is too big for a child restraint system, the child should sit in the REAR seat and be restrained using the seatbelts. According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. Never allow a child to stand up or kneel on the seat.**

– CONTINUED –

- **Put children aged 12 and under or 1.5 m (4 feet 11 inches) tall or less in the REAR seat properly restrained at all times in a child restraint system or in a seatbelt. The SRS airbag deploys with considerable speed and force and can injure or even kill children, especially if they are 12 years of age and under or 1.5 m (4 feet 11 inches) tall or less and are not restrained or improperly restrained. Because children are lighter and weaker than adults, their risk of being injured from deployment is greater.**



Warning label
A) AIRBAG

⚠ WARNING

- **NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.**
- **Always lock the passengers' windows using the lock switch when children are riding in the vehicle. Failure to follow this procedure could result in injury to a child operating the power window. Refer to "Windows" ☞P110.**
- **Never leave unattended children, adults or animals in the vehicle. They could accidentally injure themselves or others through inadvertent operation of the vehicle. Also, on hot or sunny days, the temperature in a closed vehicle could quickly become high enough to cause severe or possibly fatal injuries to them.**
- **When leaving the vehicle, close all windows and lock all doors. Also make certain that the trunk is closed.**

For instructions and precautions, carefully read the following sections.

- For the seatbelt system, refer to "Seatbelts" ☞P37.
- For the child restraint system, refer to "Child Restraint Systems" ☞P45.
- For the SRS airbag system, refer to "SRS Airbag (Supplemental Restraint System Airbag)" ☞P64.

■ Engine Exhaust Gas (Carbon Monoxide)

⚠ WARNING

- **Never inhale engine exhaust gas. Engine exhaust gas contains carbon monoxide, a colorless and odorless gas which is dangerous, or even lethal, if inhaled.**
- **Always properly maintain the engine exhaust system to prevent engine exhaust gas from entering the vehicle.**
- **Never run the engine in a closed space, such as a garage, except for the brief time needed to drive the vehicle in or out of it.**
- **Avoid remaining in a parked vehicle for a long time while the engine is running. If that is unavoidable, then use the ventilation fan to force fresh air into the vehicle.**
- **Always keep the front ventilator inlet grille free from snow, leaves or other obstructions to ensure that the ventilation system always works properly.**
- **If at any time you suspect that exhaust fumes are entering the vehicle, have the problem checked and corrected as soon as possible. If you must drive under these conditions, drive only with all windows fully open.**
- **Keep the trunk lid closed while driving to prevent exhaust gas from entering the vehicle.**

■ Drinking and Driving

⚠ WARNING

Drinking and then driving is very dangerous. Alcohol in the bloodstream delays your reaction and impairs your perception, judgment and attentiveness. If you drive after drinking even if you drink just a little it will increase the risk of being involved in a serious or fatal accident, injuring or killing yourself, your passengers and others. In addition, if you are injured in the accident, alcohol may increase the severity of that injury.

Please don’t drink and drive.

Drunken driving is one of the most frequent causes of accidents. Since alcohol affects all people differently, you may have consumed too much alcohol to drive safely even if the level of alcohol in your blood is below the legal limit. The safest thing you can do is never drink and drive.

– CONTINUED –

■ Drugs and Driving

⚠ WARNING

There are some drugs (over the counter and prescription) that can delay your reaction time and impair your perception, judgment and attentiveness. If you drive after taking them, it may increase your, your passengers' and other persons' risk of being involved in a serious or fatal accident.

If you are taking any drugs, check with your doctor or pharmacist or read the literature that accompanies the medication to determine if the drug you are taking can impair your driving ability. Do not drive after taking any medications that can make you drowsy or otherwise affect your ability to safely operate a motor vehicle. If you have a medical condition that requires you to take drugs, please consult with your doctor.

Never drive if you are under the influence of any illicit mind-altering drugs. For your own health and well-being, we urge you not to take illegal drugs in the first place and to seek treatment if you are addicted to those drugs.

■ Driving When Tired or Sleepy

⚠ WARNING

When you are tired or sleepy, your reaction will be delayed and your perception, judgment and attentiveness will be impaired. If you drive when tired or sleepy, your, your passengers' and other persons' chances of being involved in a serious accident may increase.

Please do not continue to drive but instead find a safe place to rest if you are tired or sleepy. On long trips, you should make periodic rest stops to refresh yourself before continuing on your journey. When possible, you should share the driving with others.

■ Modification of Your Vehicle

⚠ WARNING

Do not remove the genuine SUBARU navigation and/or audio system. Doing so could cause the following functions to be inoperable.

- **Combination meter display (color TFT)**
- **Rear view image and help lines**
- **Vehicle settings**
- **Clock**

⚠ CAUTION

Your vehicle should not be modified. Modification could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranties.

■ Car Phone/Cell Phone and Driving

⚠ CAUTION

Do not use a car phone/cell phone while driving; it may distract your attention from driving and can lead to an accident. If you use a car phone/cell phone, pull off the road and park in a safe place before using your phone. In some countries, only hands-free phones may legally be used while driving.

■ Driving Vehicles Equipped with Navigation/Audio System

⚠ WARNING

Do not allow the monitor to distract your attention from driving. Also, do not operate the controls of the navigation/audio system while driving. The loss of attention to driving could lead to an accident. If you wish to operate the controls of the navigation/audio system, first take the vehicle off the road and stop it in a safe place.

■ Driving with Pets

Unrestrained pets can interfere with your driving and distract your attention from driving. In a collision or sudden stop, unrestrained pets or cages can be thrown around inside the vehicle and hurt you or your passengers. Besides, the pets can be hurt under these situations. It is also for their own safety that pets should be properly restrained in your vehicle. Restrain a pet with a special traveling harness which can be secured to the rear seat with a seatbelt or use a pet carrier which can be secured to the rear seat by routing a seatbelt through the carrier's handle. Never restrain pets or pet carriers in the front passenger's seat. For further information, consult your veterinarian, local animal protection society or pet shop.

■ Tire Pressures

Check and, if necessary, adjust the pressure of each tire and the spare (if equipped) at least once a month and before any long journey.

Check the tire pressure when the tires are cold. Use a pressure gauge to adjust the tire pressures to the values shown on the tire inflation pressure label. For detailed information, refer to "Tires and Wheels" ☞P351.

⚠ WARNING

Driving at high speeds with excessively low tire pressures can cause the tires to deform severely and to rapidly become hot. A sharp increase in temperature could cause tread separation, and destruction of the tires. The resulting loss of vehicle control could lead to an accident.

■ Attaching Accessories

⚠ WARNING

- **Do not attach any accessories, labels or stickers (other than properly placed inspection stickers) to the windshield. Such items may obstruct your view.**
- **If it is necessary to attach an accessory (such as an electronic toll collection (ETC) device or security pass) to the windshield, we recommend that you consult your SUBARU dealer for details on the proper location.**

– CONTINUED –

- **Do not connect any unauthorized accessories or devices to the data link connector (OBDII port). This connector should be used only with compatible diagnostic devices for inspection and maintenance by an authorized service technician using authorized service tools. Connecting unauthorized devices, such as a driver-behavior tracking device, may adversely affect vehicle systems, including safety systems, or allow others to access information stored in your vehicle. The use of unauthorized devices may also cause unexpected malfunctions, such as a drained battery, or may damage vehicle systems. The manufacturer's warranty will not cover any part that malfunctions, fails, or is damaged due to the use of an unauthorized device with the data link connector.**

General Information

■ Vehicle Data Recording

The vehicle is equipped with sophisticated computers that will record certain data, such as:

- Vehicle speed
- Engine speed
- Engine control information
- Shift state information
- Driving information, etc.

▼ Data usage

SUBARU may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

SUBARU will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by SUBARU in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

■ Gear Shift Indicator (If Equipped)

⚠ CAUTION

The indication of the gear shift indicator is only a guideline for driving more fuel-efficiently. The indicator does not inform the driver about safe shift operation timing. The driver has the responsibility for suitable shift operation depending on the traffic conditions or driving conditions (e.g., overtaking or driving on an uphill slope).

This indicator supports the driver to drive more fuel-efficiently. The vehicle system determines the shift operation timing depending on the driving conditions, and informs the driver by the indicator on the combination meter. For details, refer to "Gear shift indicator (MT models)" ☞P142

NOTE

Usually, the gear shift indicator is guideline for driving more fuel-efficiently and it also may operate to prevent a possible engine stall at low engine speed.

EU Battery Directive 2006/66/EC


Followings are the symbol of EU Battery Directive 2006/66/EC.

This directive applies to the collection of batteries, recycling of disposed batteries and accumulators, and batteries not disposed of in landfills because they could be hazardous to the environment.

In your vehicle, there are some batteries that do not have the 2006/66/EC EU Battery directive symbol.

Please check and obey all local laws and regulations for the disposal of batteries or accumulations.

The following devices utilize batteries that do not have the symbol:

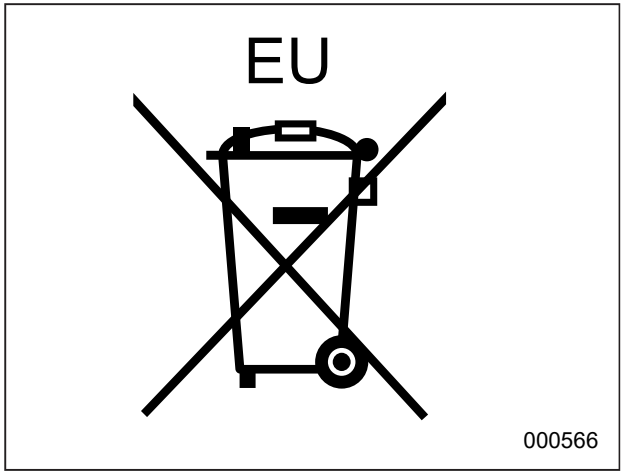


- Access key fobs: CR2032


Illustrated Index

- Exterior 14
- Interior.....16
- Instrument Panel.....19
- Steering Wheel 20
- Light Control and Wiper Control Levers/ Switches 21
  - Type A..... 21
  - Type B..... 22
- Combination Meter.....23
  - Normal mode..... 23
  - TRACK mode..... 24
- Warning and Indicator Lights 25

Exterior

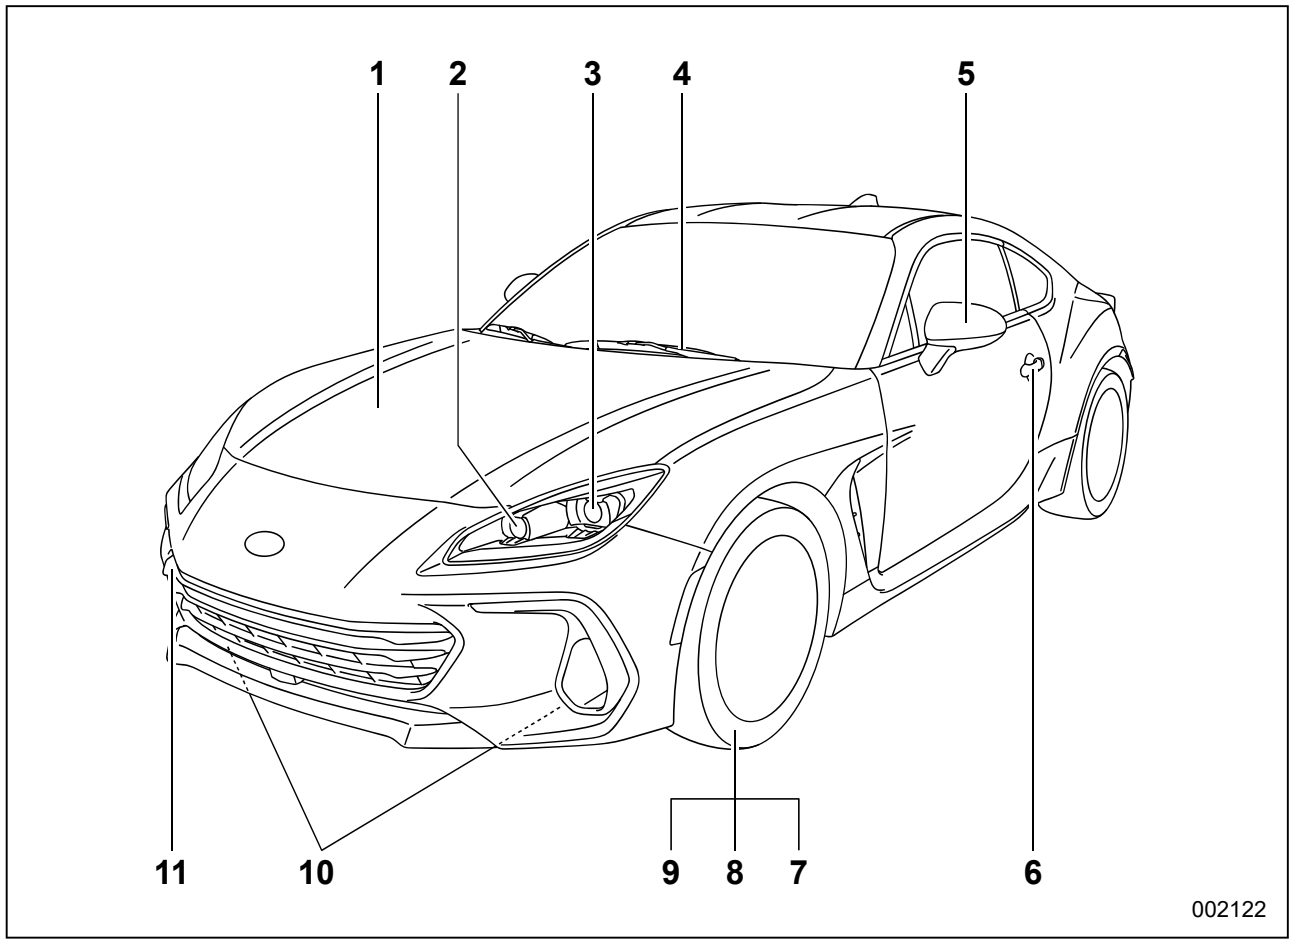


1) Engine hood (page 336)
2) Turn signal lights (page 176, 366)
3) Lights (page 168, 366)
4) Wipers (page 178)
5) Outside mirrors (page 182)
6) Door locks (page 108)
7) Tire pressure (page 353)
8) Flat tires (page 292)
9) Tire chains (page 284)
10) Tie-down hooks (page 309)
11) Towing hook (page 309)

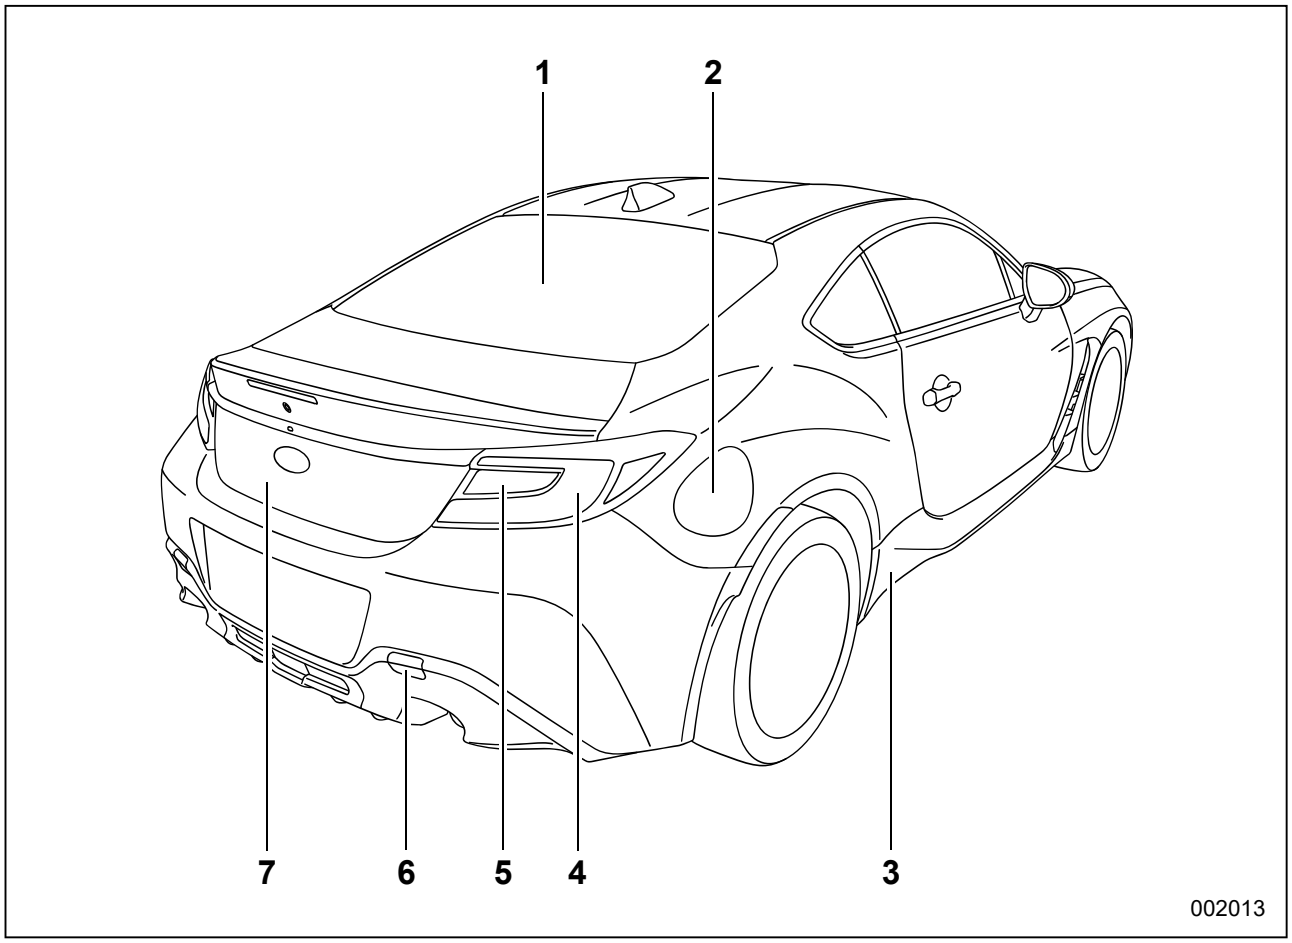


1) Rear window defogger (page 181)
2) Fuel filler lid and cap (page 212)
3) Tie-down holes (page 309)
4) Lights (page 168, 366)
5) Turn signal lights (page 176, 366)
6) Towing hook (page 309)
7) Trunk lid (page 113)

Interior

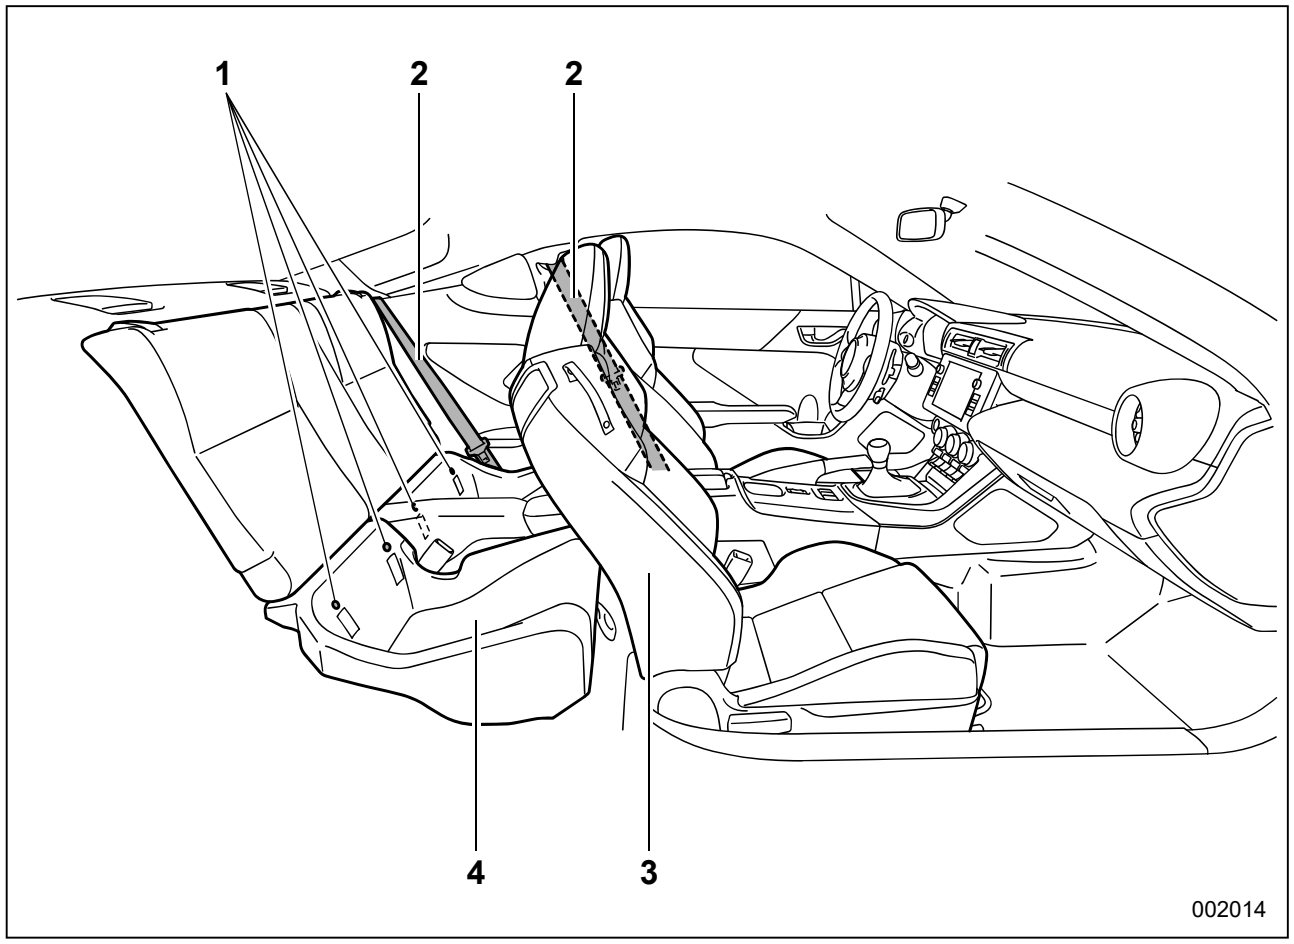

1) Lower anchorages for child restraint system (page 45)
2) Seatbelts (page 37)
3) Front seats (page 28)
4) Rear seats (page 35)

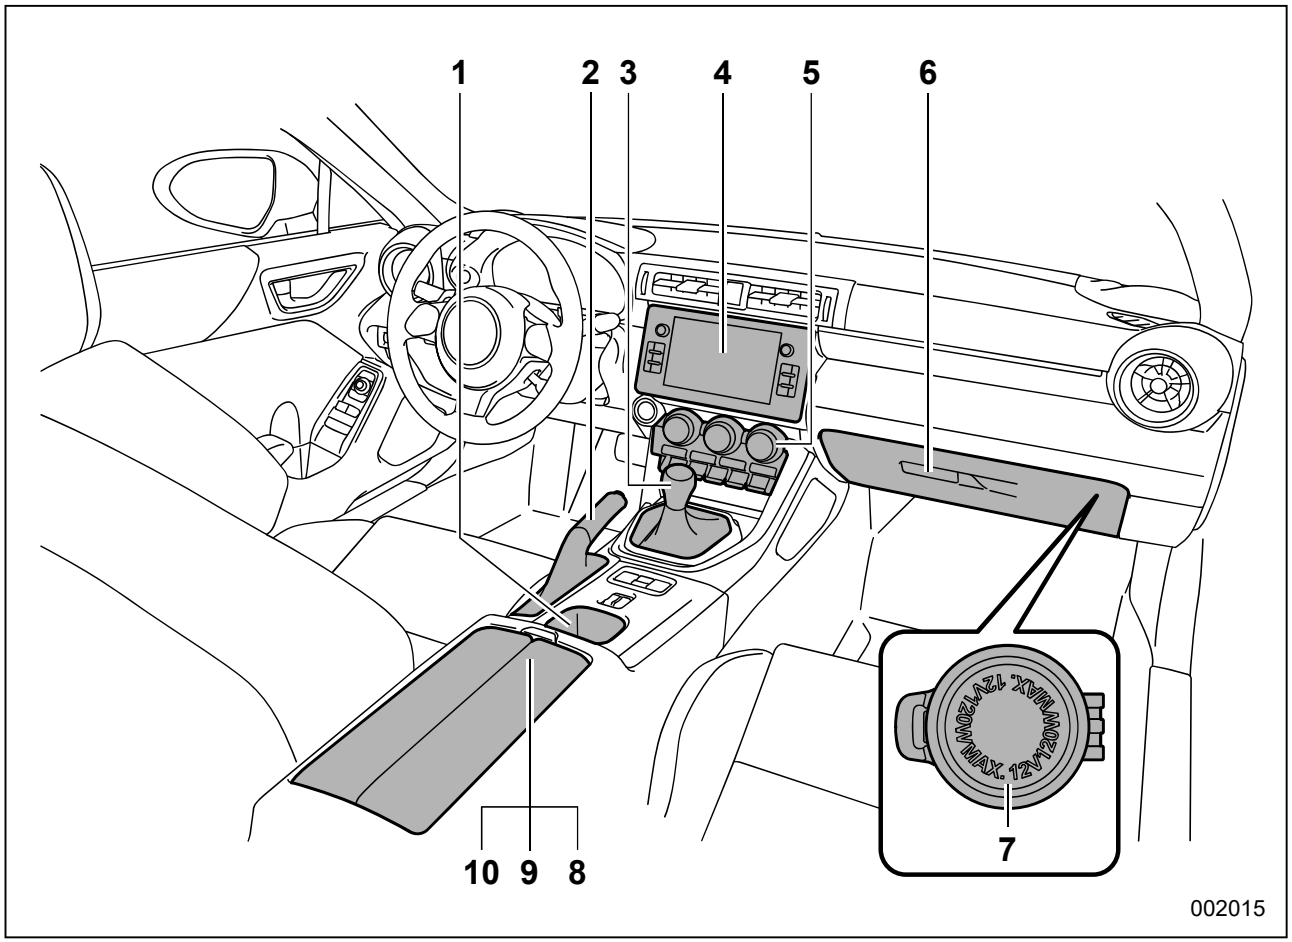


The illustration above is a typical example for left-hand drive models. For right-hand drive models, the locations of some switches/levers are different from those shown in the illustration.

1) Cup holder and console tray (AT models) (page 202)
2) Parking brake lever (page 243)
3) Shift lever (MT models)/Select lever (AT models) (page220, 223)
4) Center information display (page153)/ Audio*/Audio and navigation system*
5) Climate control (page 186)
6) Glove box (page 202)
7) Accessory power outlet (page 203)
8) Center console (page 202)
9) Cup holder and console tray (page 202)
10) USB power supply (page 204)

*: For details about how to use the audio and navigation system (if equipped), refer to the separate navigation/audio Owner's Manual.

– CONTINUED –

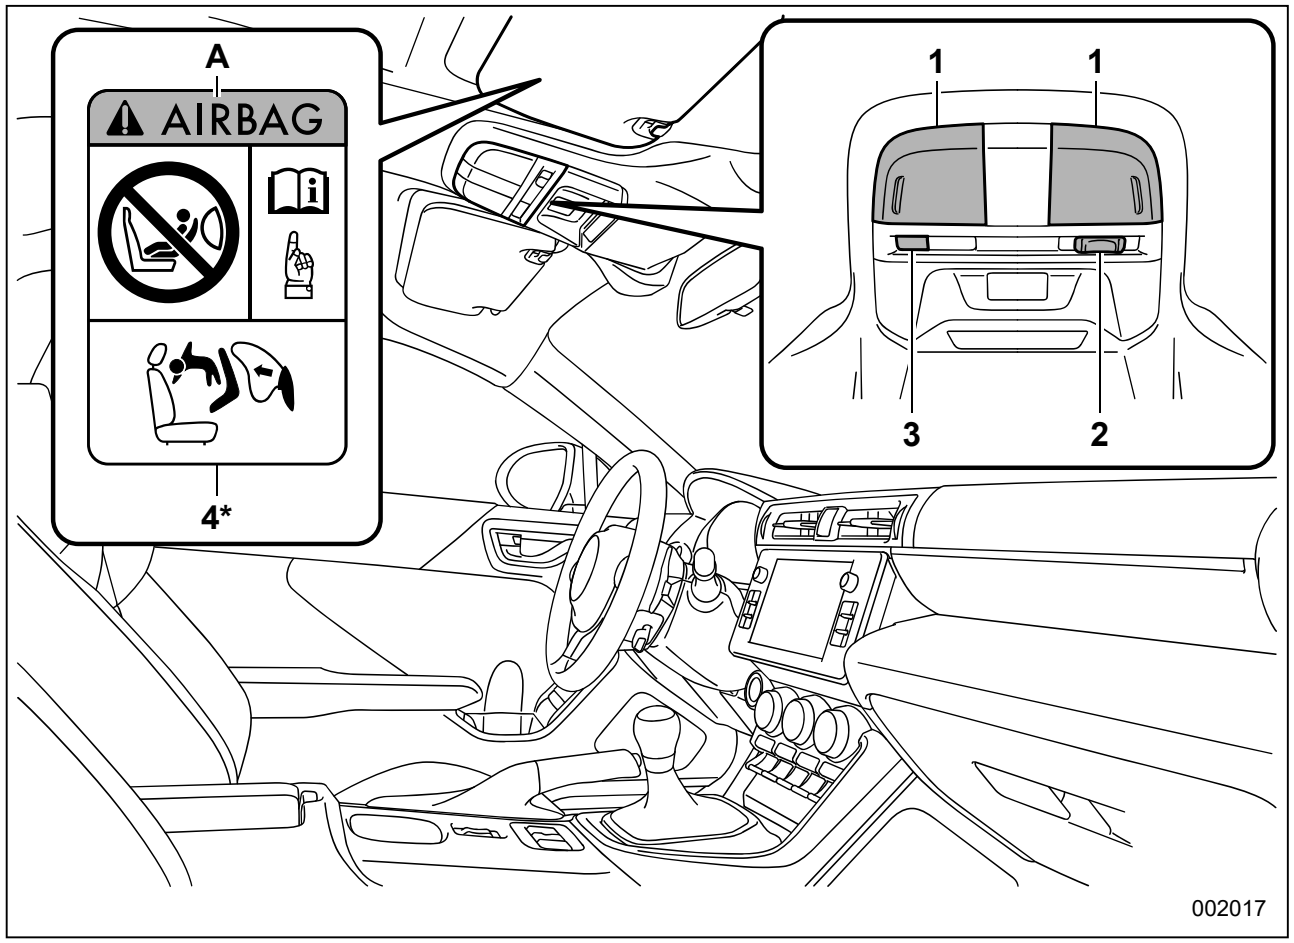

The illustration above is a typical example for left-hand drive models. For right-hand drive models, the locations of some switches/levers are different from those shown in the illustration.

1) Map light switches (page 200)
2) Door interlock switch (page 200)
3) SOS button for eCall system (if equipped)
4) Warning labels for child restraint system (page 48)


A) AIRBAG

*: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

NOTE

For details about SOS switch for eCall system, refer to the Owner's Manual supplement for the eCall system.


Instrument Panel

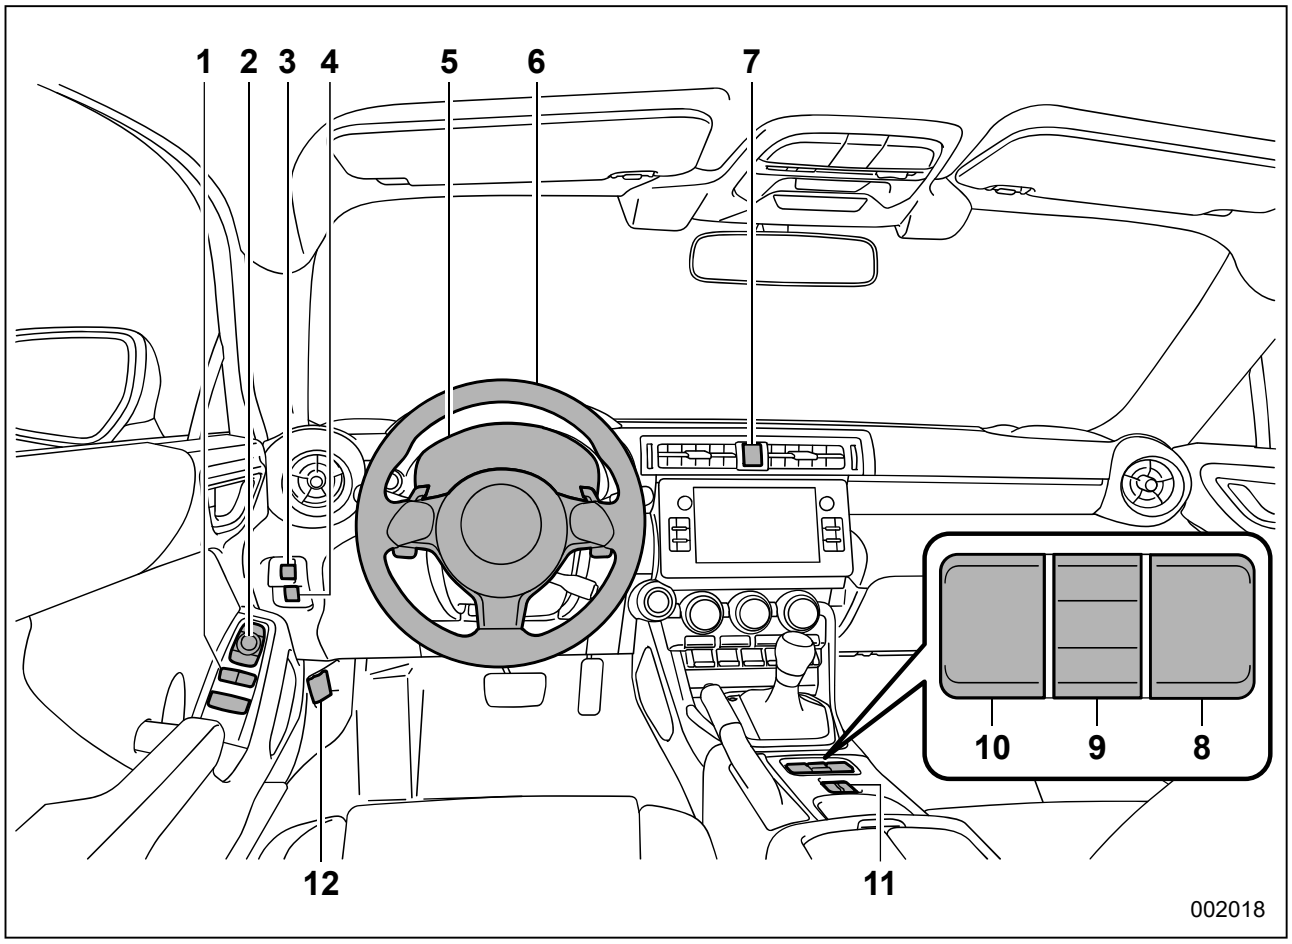

The illustration above is a typical example for left-hand drive models. For right-hand drive models, the locations of some switches/levers are different from those shown in the illustration.

1) Power window switches (page 110)
2) Remote control mirror switch (page 182)
3) Illumination brightness control dial (page 124)
4) Trunk lid opener button (page 115)
5) Combination meter (page 121)
6) Tilt/Telescopic steering (page 183)
7) Hazard warning flasher switch (page 121)
8) TRACK switch (page 238)
9) Driving mode select switch (AT models) (page 228)
10) Vehicle Stability Control (VSC) OFF switch (page 236)
11) Seat heater switches (page 33)
12) Hood release knob (page 336)

Steering Wheel

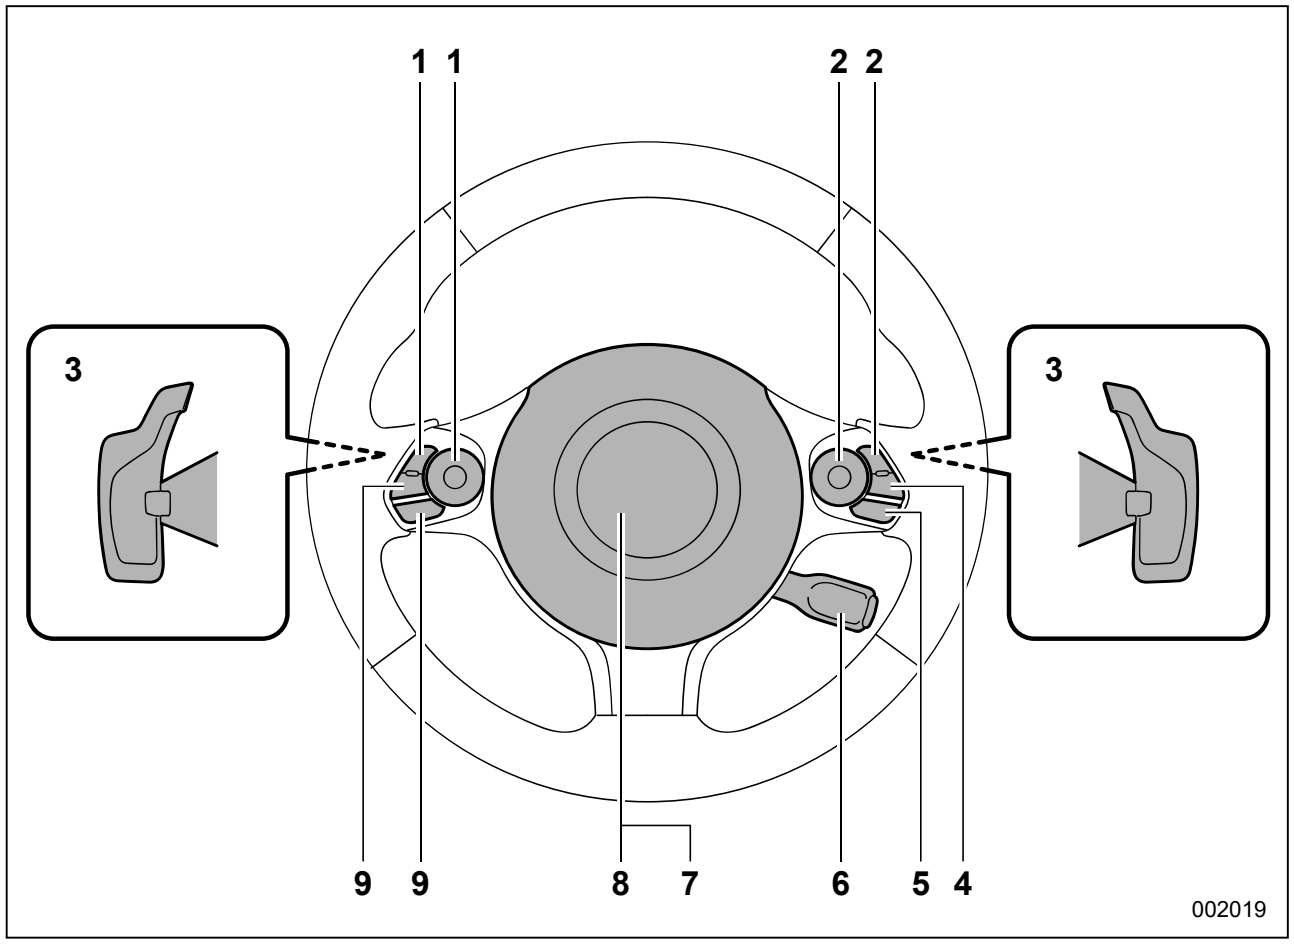


1) Audio control switches*1
2) Control switches for combination meter display (color TFT) (page 145)
3) Shift paddles (AT models) (page 226)
4) Following distance setting switch*2
5) Talk switch for voice command system*1
6) Cruise control switch (page 247)*2
7) SRS airbag (page 64)
8) Horn (page 184)
9) Hands-free phone switches*1

*1: For details about how to use the switches, refer to the separate navigation/audio Owner's Manual.

*2: For models with the EyeSight system, refer to the Owner's Manual supplement for the EyeSight system.

Light Control and Wiper Control Levers/Switches


■ Type A

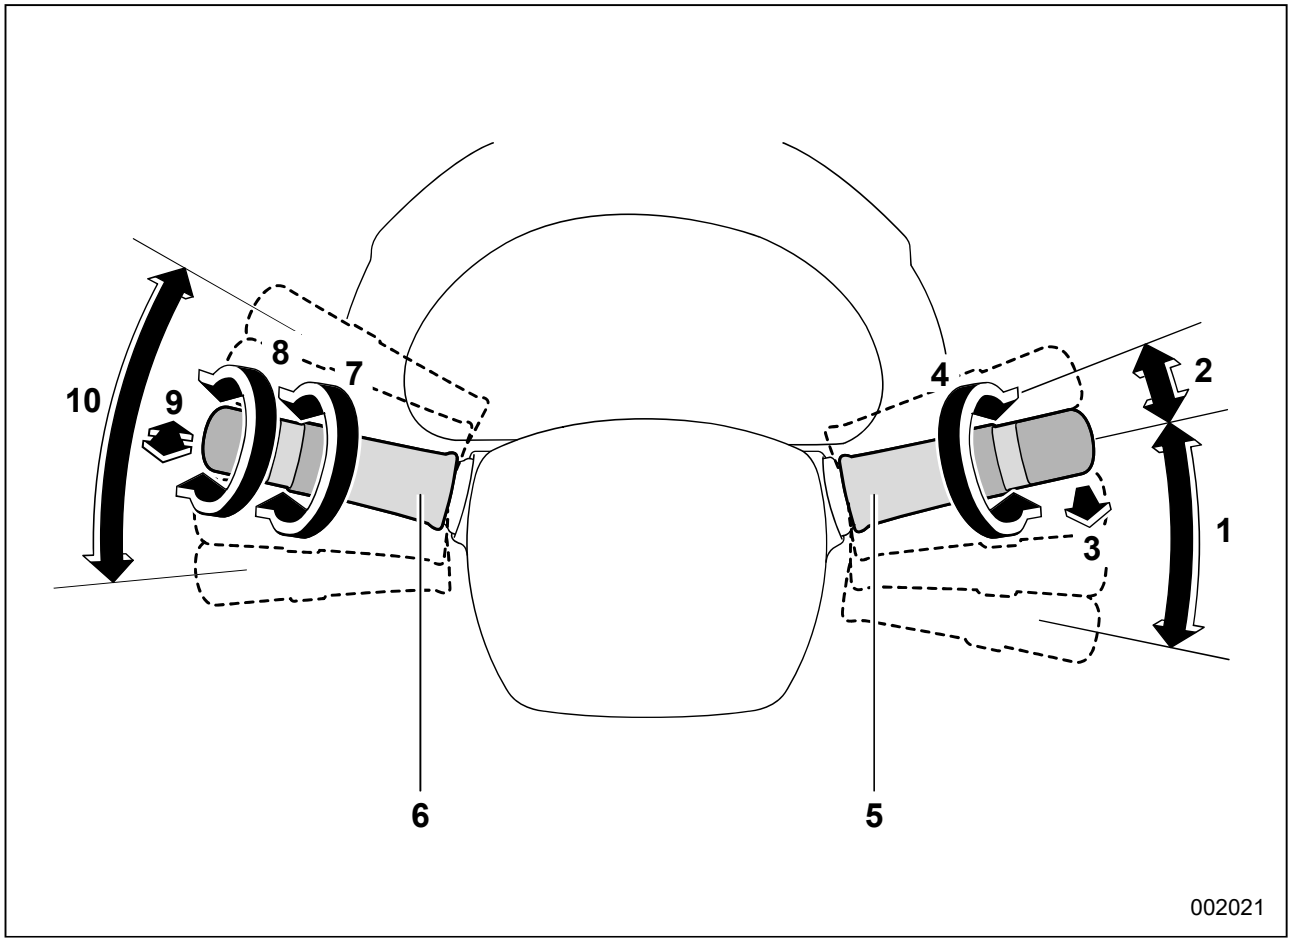

1) Windshield wiper (page 177)
2) Mist (page 179)
3) Windshield washer (page 180)
4) Wiper intermittent time control switch (page 179)
5) Wiper control lever (page 178)
6) Light control switch (page 168)
7) Rear fog light switch (page 175)
8) Headlight ON/OFF/AUTO (page 168)
9) Headlight flasher High/Low beam change (page 170)
10) Turn signal lever (page 176)

– CONTINUED –


■ Type B

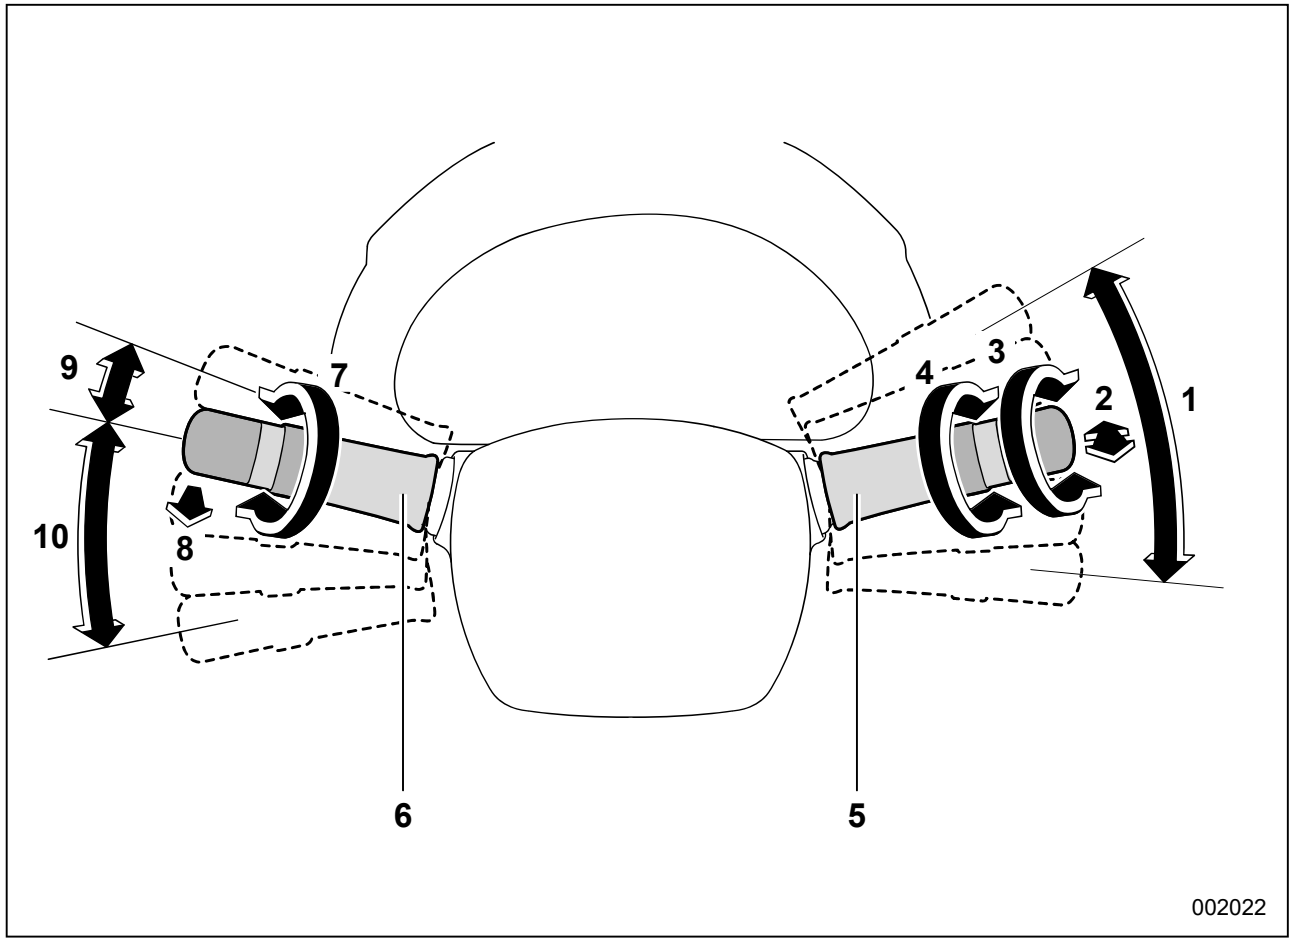

1) Turn signal lever (page 176)
2) Headlight flasher High/Low beam change (page 170)
3) Headlight ON/OFF/AUTO (page 168)
4) Rear fog light switch (page 175)
5) Light control switch (page 168)
6) Wiper control lever (page 178)
7) Wiper intermittent time control switch (page 179)
8) Windshield washer (page 180)
9) Mist (page 179)
10) Windshield wiper (page 177)

Combination Meter


■ Normal mode

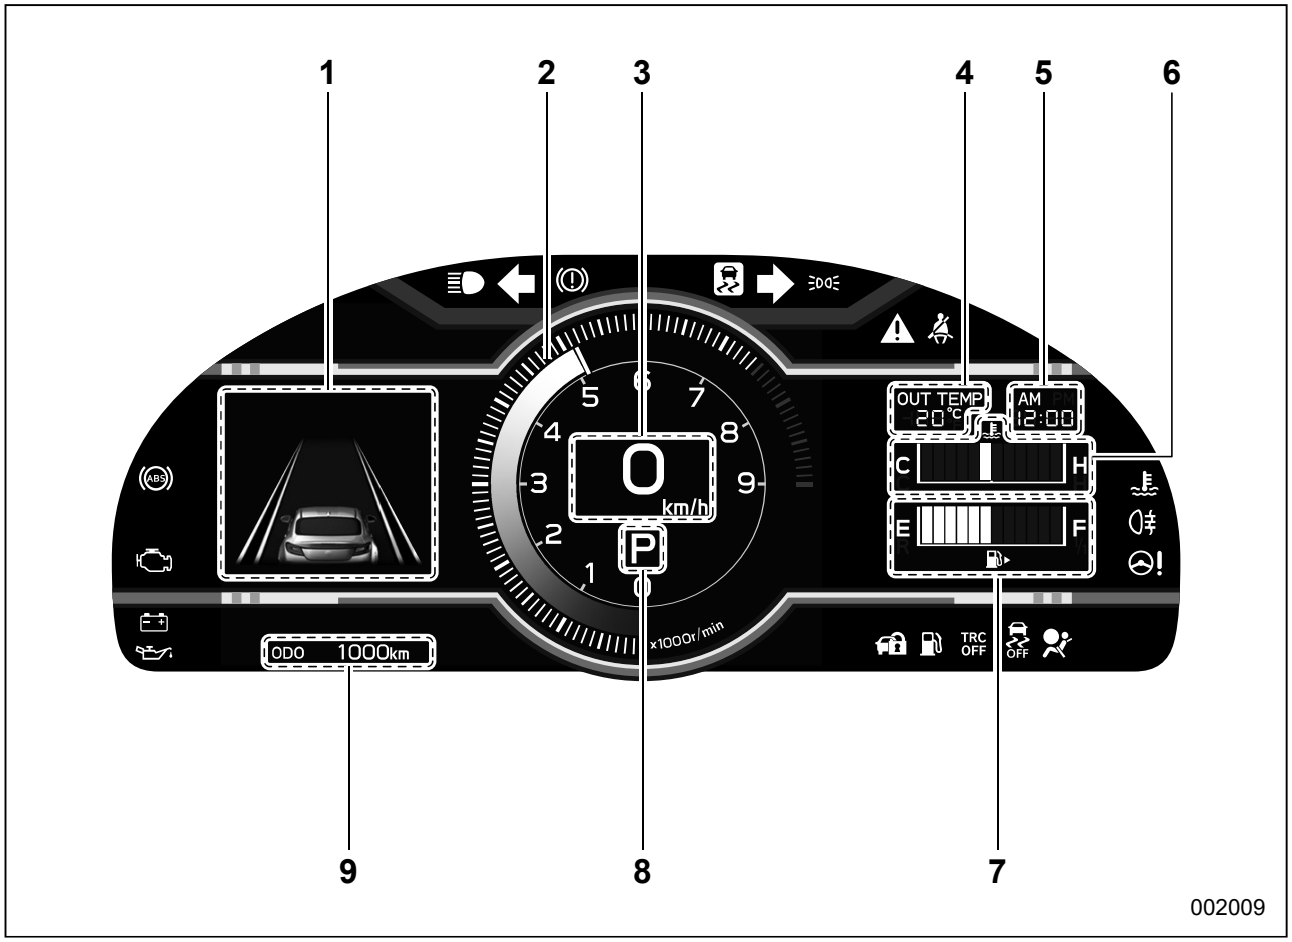

1) Combination meter display (color TFT) (page 145)
2) Tachometer (page 121)
3) Speedometer (page 121)
4) Outside temperature (page 123)
5) Clock (page 166)
6) Engine coolant temperature gauge (page 123)
7) Fuel gauge (page 123)
8) Select lever/gear position indicator (page 141)
9) Trip meter and odometer (page 122)

– CONTINUED –

■ TRACK mode

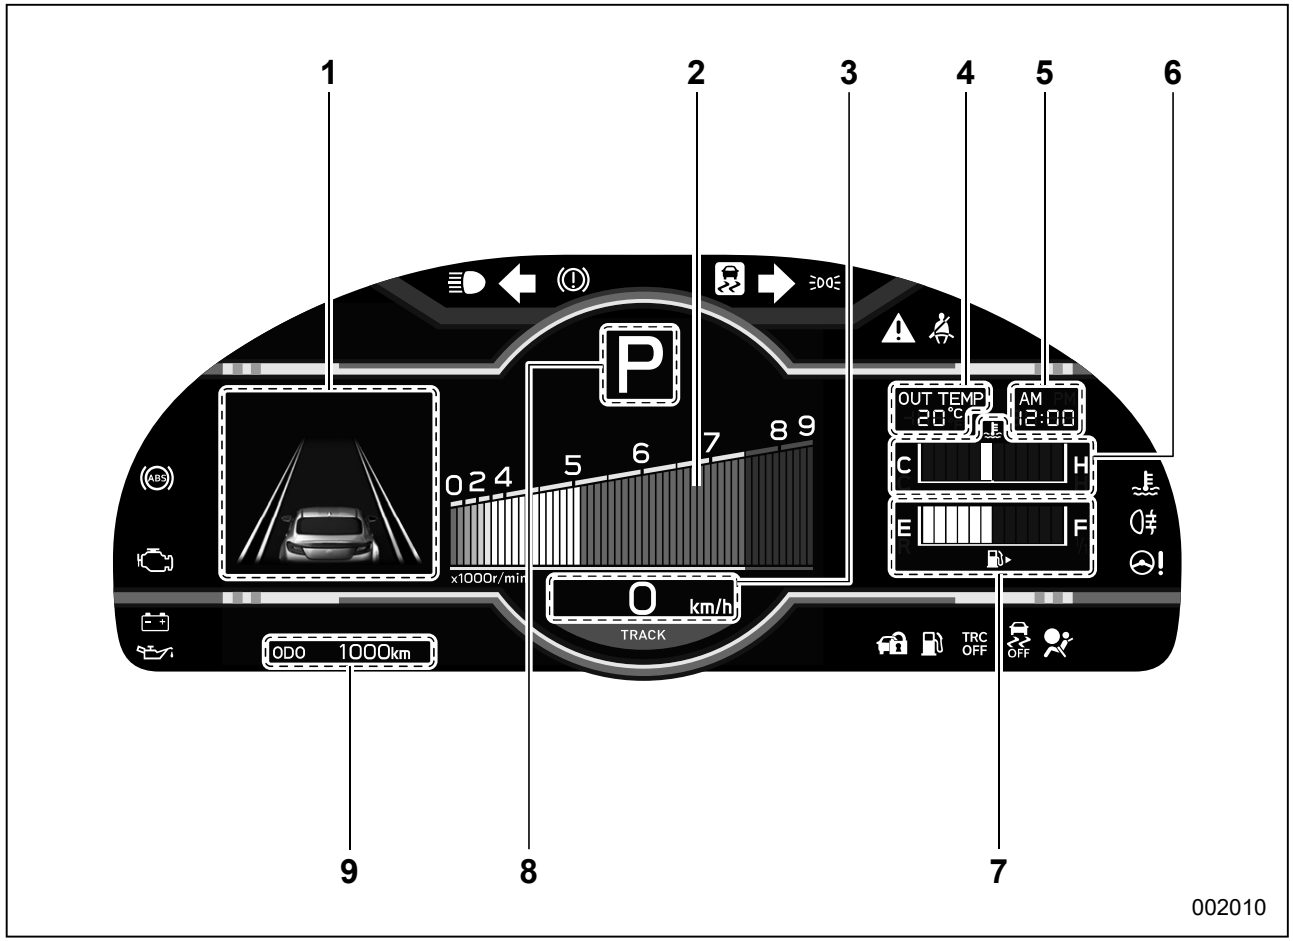

1) Combination meter display (color TFT) (page 145)
2) Tachometer (page 121)
3) Speedometer (page 121)
4) Outside temperature (page 123)
5) Clock (page 166)
6) Engine coolant temperature gauge (page 123)
7) Fuel gauge (page 123)
8) Select lever/gear position indicator (page 141)
9) Trip meter and odometer (page 122)

Warning and Indicator Lights

Mark	Name	Page
	Seatbelt warning light	126
	Front passenger's seatbelt warning light	126
	Rear passenger's seatbelt warning light	127
	SRS airbag system warning light	128
	Malfunction indicator light (Check Engine light)	129
	Coolant temperature low indicator light (blue)/Coolant temperature high warning light (red)	130
	Charge warning light	131
	Oil pressure warning light	131
A/T OIL TEMP	AT OIL TEMP warning light (AT models)	131
	ABS warning light	133
	Brake system warning light	134

Mark	Name	Page
	Vacuum pressure system warning light (yellow)	134
	Door open indicator	134
	Low fuel warning light	134
	Power steering warning light	135
	Vehicle Stability Control (VSC) warning light/ Vehicle Stability Control (VSC) operation indicator light	135
	Vehicle Stability Control (VSC) OFF indicator light	136
TRC OFF	TRC OFF indicator light	135
	Access key warning indicator	137
	Immobilizer indicator light	141
	Turn signal indicator lights	142
	High beam indicator light	142
	High beam assist indicator light (if equipped)	142

Mark	Name	Page
	Automatic headlight beam leveler warning light	142
	LED headlight warning light	143
SRH OFF	Steering Responsive Headlight OFF indicator light	143
SRH	Steering Responsive Headlight warning light	143
	Hill start assist indicator light	143
	Headlight indicator light	143
	Rear fog light indicator light (if equipped)	143
	Cruise control indicator light (white/green)/ Cruise control warning light (yellow) (models without the EyeSight system)	142
	Upshift indicator/ Downshift indicator	141
	Low tire pressure warning light (if equipped)	131
ON 	Front passenger's frontal airbag ON indicator light (if equipped)	128
OFF 	Front passenger's frontal airbag OFF indicator light (if equipped)	128

– CONTINUED –

Mark	Name	Page
	Subaru Rear Vehicle Detection warning indicator (if equipped)	143
	Subaru Rear Vehicle Detection OFF indicator (if equipped)	143
	Snow mode indicator light (if equipped)	141
	Sport mode indicator light (if equipped)	141
	TRACK mode indicator light	238
	Icy road surface warning indicator	143
	RAB warning indicator (if equipped)	144
	RAB OFF indicator (if equipped)	144
	Gasoline particulate filter warning light (if equipped)	144
	Vehicle speed warning light (if equipped)	144
	Master warning light	144

1-1. Front Seats 28
Manual Seat.....31
Head Restraint Adjustment 32
1-2. Seat Heater (If Equipped) 33
Front Seat Heater.....34
1-3. Rear Seats 35
Folding Down the Rear Seatback.....35
1-4. Seatbelts 37
Seatbelt Safety Tips 37
Emergency Locking Retractor (ELR).....39
Automatic Locking Retractor/Emergency Locking Retractor (ALR/ELR) (if Equipped) 39
Seatbelt Warning Light and Chime 39
Fastening the Seatbelt 39
Seatbelt Maintenance.....42
1-5. Seatbelt Pretensioners 42
Front seatbelt with Shoulder Belt Pretensioner 43
System Monitors.....44
System Servicing.....44
Precautions against Vehicle Modification.....44
1-6. Child Restraint Systems.....45
Applications for Australia models 45
Safety Precautions 45
Safety Tips for Installing child Restraint Systems 46
Where to Place a Child Restraint System..... 47
Choosing a Child Restraint System..... 49
Installing Child Restraint Systems with Seatbelt 55
Installing a Booster Seat or Booster Cushion 59
Installation of Child Restraint Systems Using ISOFIX Anchor Bars 60
Top Tether Anchorages 62
1-7. SRS Airbag (Supplemental Restraint System Airbag).....64
General Precautions regarding SRS Airbag System..... 64
Components..... 71
SRS airbag..... 74
System operation..... 78
SRS airbag system monitor..... 87
SRS airbag system servicing 88
Precautions against vehicle modification 89

1-1. Front Seats

⚠ WARNING

- **Never adjust the seat while driving, as personal injury or loss of vehicle control may occur.**
- **Before adjusting the seat, ensure nothing is blocking the adjusting mechanism.**
- **After adjusting the seat, move it back and forth to ensure the seat is securely locked. If it is not, it may move suddenly or the seatbelt may not operate properly.**
- **Do not put objects under the front seats. They may interfere with front seat locking mechanism and cause an accident.**
- **Seatbelts provide maximum restraint when the occupant sits back and upright in the seat. To reduce the risk of sliding under the seatbelt in a collision, the front seatbacks should always be used in the upright position while the vehicle is running. If the front seatbacks are not in the upright position and a collision occurs, the risk of sliding under the lap belt and of the lap belt sliding up over the abdomen will increase, and both can result in serious injury or death.**
- **The SRS airbags deploy with considerable speed and force. Occupants who are not sitting back and upright when the SRS airbag deploys could suffer serious injury. Because the SRS airbag needs enough space for deployment, the driver should always sit upright and well back in the seat as far from the steering wheel as practical while still maintaining full vehicle control, and the front passenger should move the seat as far back as possible and sit upright and well back in the seat.**




100082

⚠ WARNING

Put children aged 12 and under or 1.5 m (4 feet 11 inches) tall or less in the REAR seat properly restrained at all times in a child restraint device or in a seatbelt, whichever is appropriate for the child's age, height and weight. The SRS airbag deploys with considerable speed and force and can injure or even kill children, especially if they are 12 years of age and under or 1.5 m (4 feet 11 inches) tall or less and are not restrained or improperly restrained. Because children are lighter and weaker than adults, their risk of being injured from deployment is greater.
Secure ALL types of child restraint devices (including forward facing child seats) in the REAR seats at all times.


NEVER INSTALL A CHILD SEAT IN THE FRONT SEAT. DOING SO RISKS SERIOUS INJURY OR DEATH TO THE CHILD BY PLACING THE CHILD'S HEAD TOO CLOSE TO THE SRS AIRBAG.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. For instructions and precautions concerning child restraint systems, refer to "Child Restraint Systems" ☞P45.

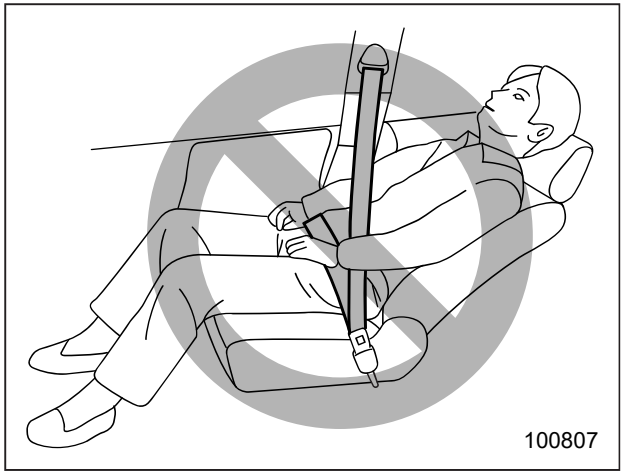
100807

⚠ WARNING

To prevent the passenger from sliding under the seatbelt in the event of a collision, always put the seatback in the upright position while the vehicle is in motion. Also, do not place objects such as cushions between the passenger and the seatback. If you do so, the risk of sliding under the lap belt and of the lap belt sliding up over the abdomen will increase, and both can result in serious internal injury or death.

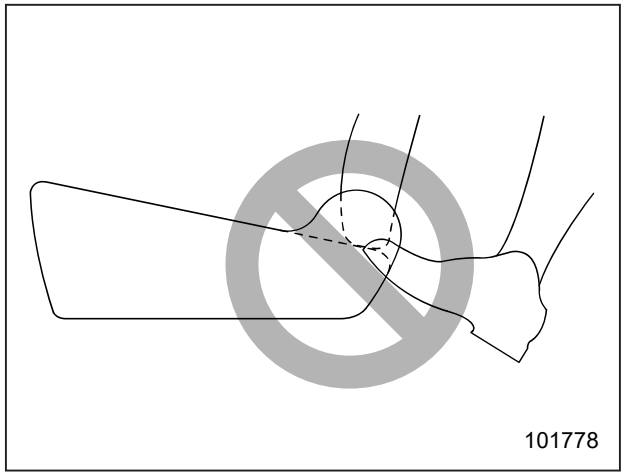

101778

– CONTINUED –

⚠ WARNING


Do not let rear passengers rest their feet between the front seatback and seat cushion. Doing so may interfere with the proper operation of the following systems and could result in serious injury.

- **Occupant detection system (if equipped)**
- **SRS side airbag**
- **Front seat heater (if equipped)**

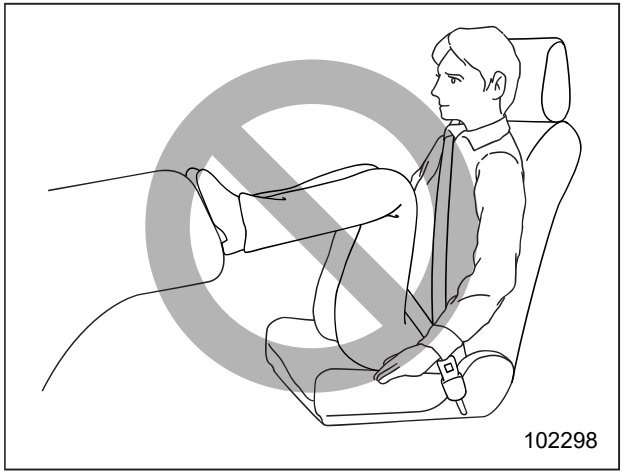

⚠ WARNING

Do not press your feet onto the instrument panel. Doing so may prevent the occupant detection function of the SRS airbag system from functioning correctly, and may result in serious injury or death in the event of an accident.

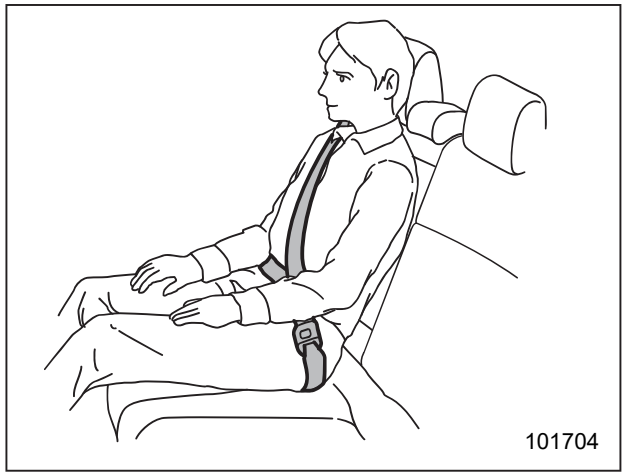


⚠ WARNING

Seatbelts provide maximum restraint when the occupant sits well back and upright in the seat. Do not put cushions or any other materials between occupants and seatbacks or seat cushions. If you do so, the risk of sliding under the lap belt and of the lap belt sliding up over the abdomen will increase, and both can result in serious internal injury or death.


■ Manual Seat

▼ Forward and backward adjustment

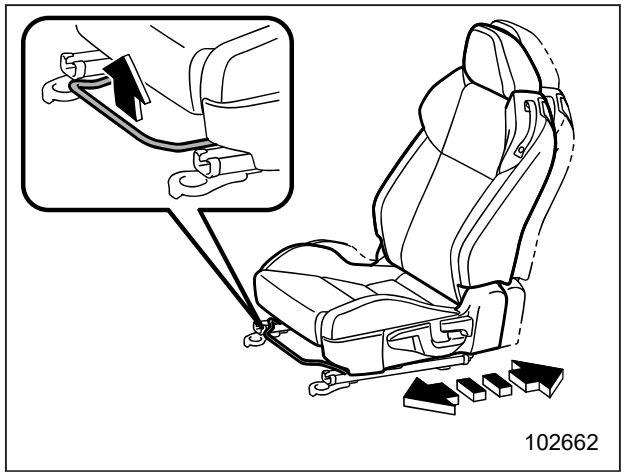

1. Sit in the seat to adjust.
2. Pull the lever upward, slide the seat to the desired position, and then release the lever.
3. Try to move the seat back and forth to make sure that it is securely locked into place.


▼ Reclining the seatback

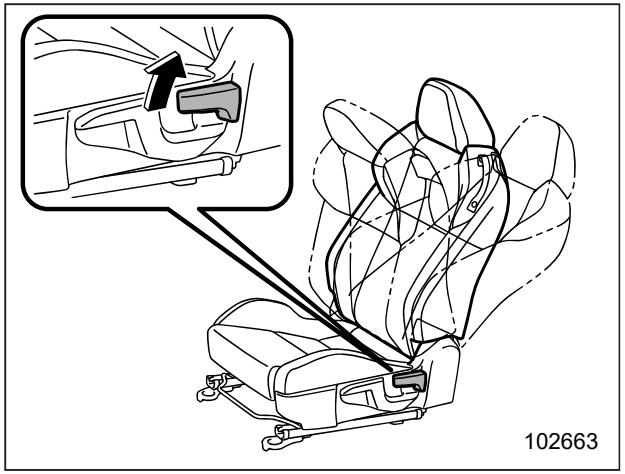

1. Pull up the reclining lever, adjust the seatback to the desired position, and then release the lever.
2. Make sure the seatback is securely locked into place.

The seatback placed in a reclined position can spring back upward with force when pulling up the lever. While operating the lever to return the seatback, hold the seatback lightly so that it may be raised back gradually.

▼ Seat cushion height adjustment (driver's seat)

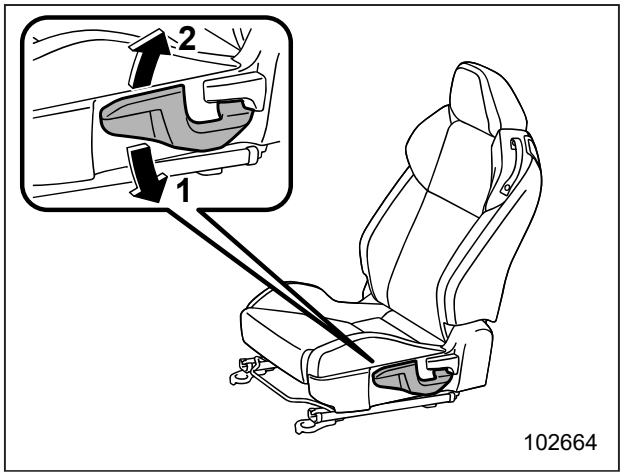


1) Push the lever down to lower the seat.
2) Pull the lever up to raise the seat.

You can adjust the height of the seat by moving the seat cushion adjustment lever up or down.


▼ Getting in and out of the rear seats

To get in and out of the rear seats, use the reclining lever or seatback fold lever.

– CONTINUED –

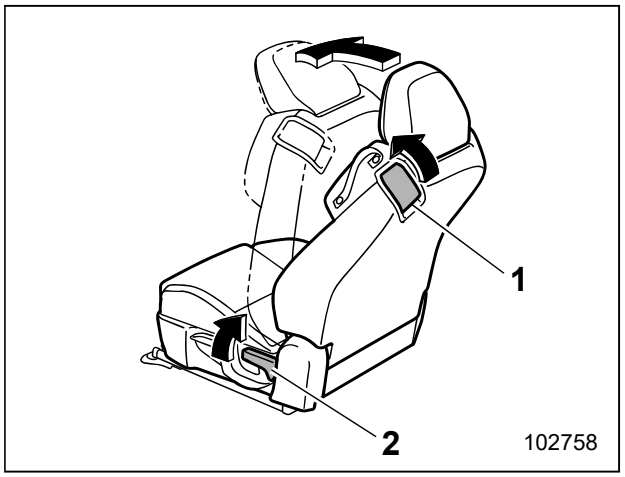

Driver's seat
1) Seatback fold lever
2) Reclining lever

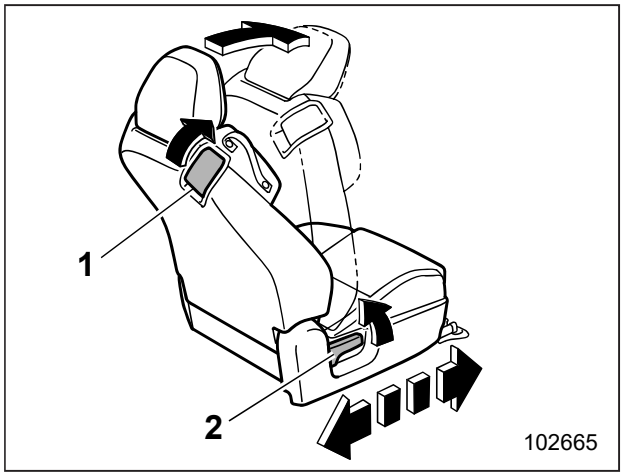

Front passenger's seat
1) Seatback fold lever
2) Reclining lever

▽ Before getting in or out of the rear seats

Release the seatbelt from the seatbelt guide.

▽ Getting in the rear seats

Lift the reclining lever or seatback fold lever.

The seatback will fold forward.

Front passenger's seat only: The seat can be slid forward and backward.

▽ Getting out of the rear seats

Lift the reclining lever or seatback fold lever.

The seatback will fold forward.

Front passenger's seat only: The seat can be slid forward and backward.

▽ After getting in or out of the rear seats

Return the seatback to the upright position until the seat locks.

Front passenger seat only: The seat will lock in position at the point where the seatback reaches the upright position.


■ Head Restraint Adjustment

⚠ WARNING

- **Never drive the vehicle with the head restraints removed because they are designed to reduce the risk of serious neck injury in the event that the vehicle is struck from the rear. Also, never install the head restraints backwards. Doing so will prevent the head restraints from functioning as intended. Therefore, when the head restraints are removed, all head restraints must be reinstalled properly to protect vehicle occupants.**
- **The vehicle should not be operated until the head restraints are installed in their proper positions.**

Both the driver's seat and front passenger's seat are equipped with head restraints. Both head restraints are adjustable in the following ways.

▼ **Head restraint height adjustment**

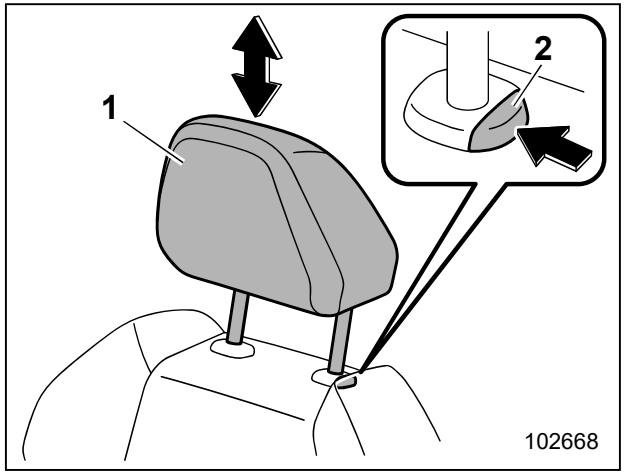

1) Head restraint
2) Release button

To raise:

Pull the head restraint up.

To lower:


Push the head restraint down while pressing the release button on the top of the seatback.

To remove:

While pressing the release button, pull out the head restraint.

To install:

Install the head restraint into the holes that are located on the top of the seatback until the head restraint locks. Press and hold the release button to lower the head restraint.

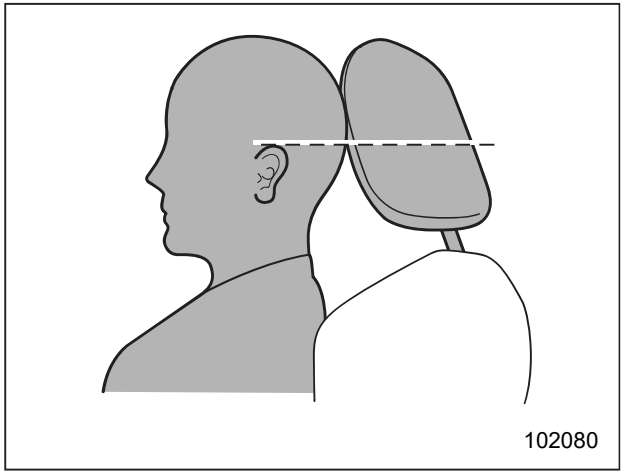

Each head restraint should be adjusted so that the center of the head restraint is closest to the top of the occupant's ears.

NOTE

It is not possible to remove or install the head restraint without reclining the front seatback. Reclining the front seatback and then remove or install the head restraint.

1-2. Seat Heater (If Equipped)

The seat heater operates when the ignition switch is in the "ON" position.

⚠ CAUTION

- **Do not put hard or heavy objects or ones with protrusions on the seat, and do not stab the seat with sharp objects, such as pins or needles.**
- **People with delicate skin may suffer slight burns even at low temperatures if they use the seat heater for a long period of time. When using the heater, always be sure to warn the persons concerned.**
- **Do not put anything on the seat which insulates against heat, such as a blanket, cushion, or similar items. This may cause the seat heater to overheat.**
- **When the seat is warmed enough or before you leave the vehicle, be sure to turn off the seat heater.**


NOTE

- **Use of the seat heater for a long period of time while the engine is not running can cause battery discharge.**

– CONTINUED –

• When using for a long period of time, we recommend setting the heater to the LOW position. Use the HIGH position for only quick heating at the start of the function usage.

■ Front Seat Heater

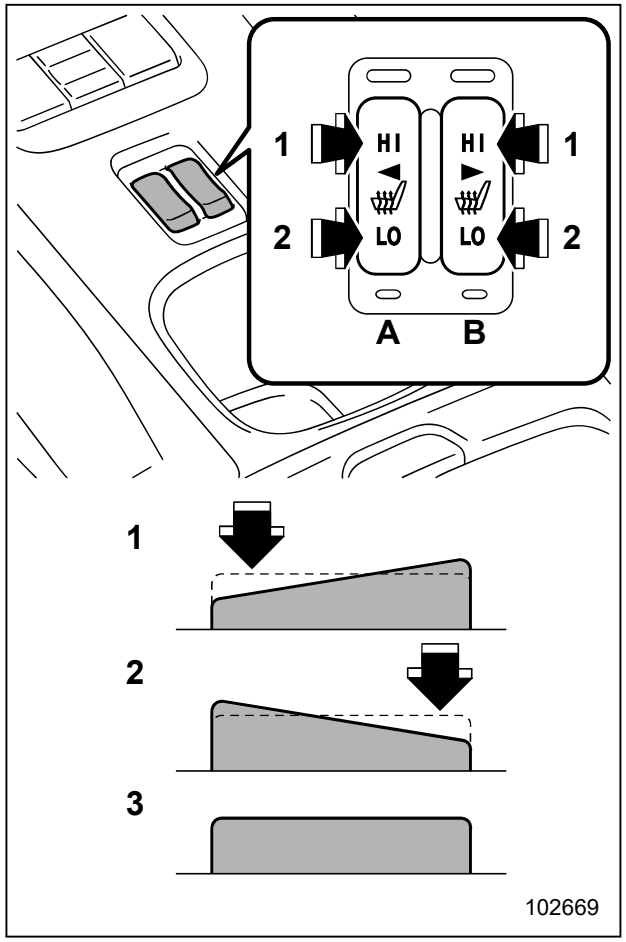

1) **HIGH** – Rapid heating
2) **LOW** – Normal heating
3) Off


A) Left-hand side
B) Right-hand side

To turn on the seat heater, push the "LOW" or "HIGH" position on the switch, as desired, depending on the temperature. Selecting the "HIGH" position will cause the seat to heat up quicker.

To turn off the seat heater, lightly press the opposite side of the current position.

The indicator located on the switch illuminates when the seat heater is in operation. When the vehicle's interior is warmed enough or before you leave the vehicle, be sure to turn the switch off.

1-3. Rear Seats

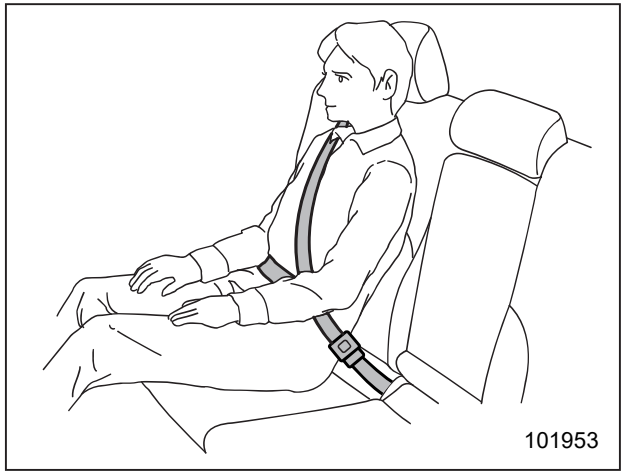


⚠ WARNING

Seatbelts provide maximum restraint when the occupant sits back and upright in the seat. Do not place cushions or any other materials between occupants and seatbacks or seat cushions. By doing so, the risk of sliding under the lap belt and of the lap belt sliding up over the abdomen will increase, and both can result in serious internal injury or death.

■ Folding Down the Rear Seatback

⚠ WARNING

- **When folding down the seatback, check that there are no passengers or objects on the rear seat. Not doing so creates a risk of injury or property damage.**
- **Never allow passengers to ride on the folded rear seatback or in the trunk. Doing so may result in serious injury or death.**
- **Secure all objects and especially long items properly to prevent them from being thrown around inside the vehicle and causing serious injury during a sudden steering maneuver or acceleration.**
- **When you return the seatback to its original position, shake it slightly to confirm that it is securely in place. If it is not securely fixed in place, it may suddenly fold down in the event of sudden braking, or objects may move out from the trunk, both could cause serious injury or death.**

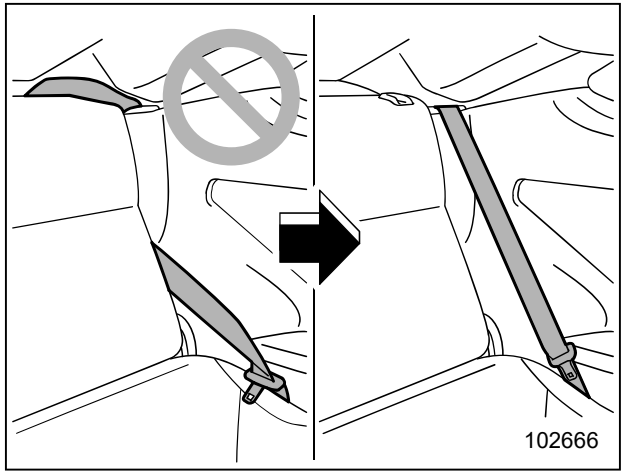


⚠ WARNING

When the seatback is returned to its original position, observe the following precautions. Failure to do so may lead to serious injury or an accident because the proper seatbelt operation will be affected.


- **The seatbelt should not be caught in the seatback and it should be fully visible.**

– CONTINUED –

▼ Folding down the rear seatback

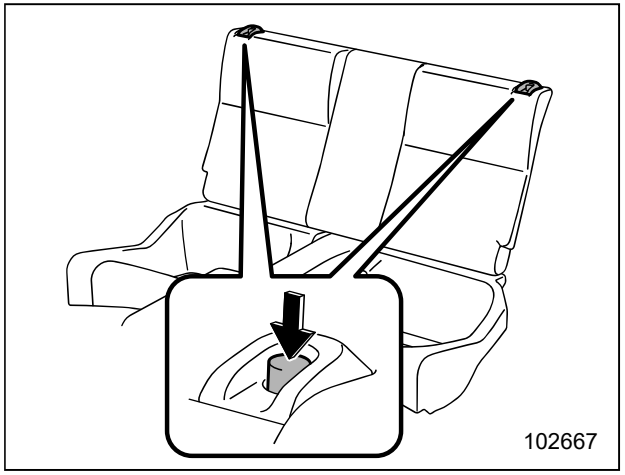

Lock release button

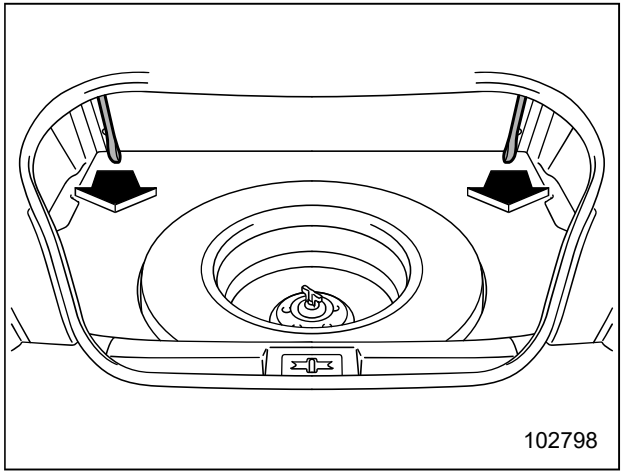


Lock release strap

Unlock the seatback by performing either of the following procedures and then fold the seatback down.

- Push the lock release button.
- Pull the lock release strap.

▼ Return the rear seatback

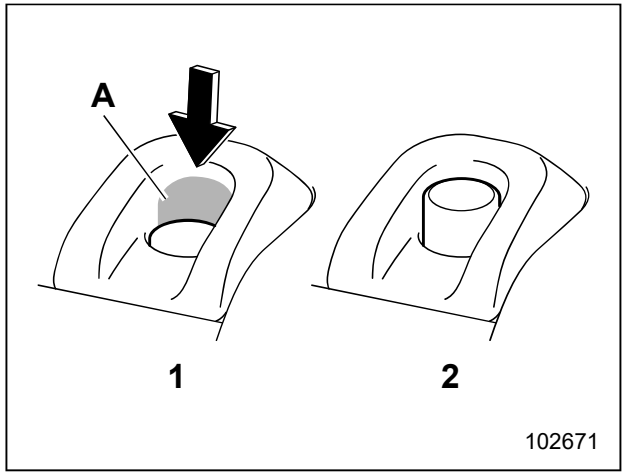

Lock release button


1) Unlocked
2) Locked

A) Unlocking marker in red

To return the seatback to its original position, raise the seatback until it locks into place and ensure that the unlocking marker on the lock release button is no longer visible.

⚠ WARNING

When you return the seatback to its original position, check that the unlocking marker is not visible. Also, push the rear seatback and then check that it is securely locked in position by lightly pushing it back and forth. If the seatback is not securely fixed in place, the seatback may suddenly fold down in the event of sudden braking, or objects may move out from the trunk, which could cause serious injury or death.

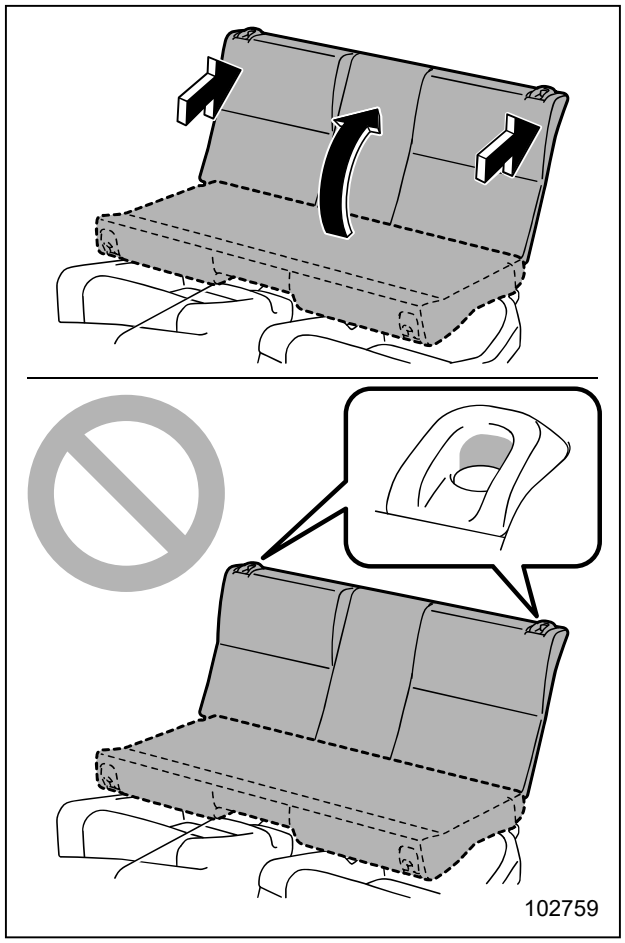

1-4. Seatbelts

■ Seatbelt Safety Tips

⚠ WARNING

- **All persons in the vehicle should fasten their seatbelts BEFORE the vehicle starts to move. Otherwise, the possibility of serious injury becomes greater in the event of a sudden stop or accident.**
- **All belts should fit snugly in order to provide full restraint. Loose fitting belts are not as effective in preventing or reducing injury.**
- **Each seatbelt is designed to support only one person. Never use a single belt for two or more persons – even children. Otherwise, in an accident, serious injury or death could result.**
- **Replace all seatbelt assemblies including retractors and attaching hardware worn by occupants of a vehicle that has been in a serious accident. Also, be sure to replace seatbelt assemblies that show signs of severe fraying or having been cut. The entire assembly should be replaced even if damage is not obvious.**
- **When replacing a seatbelt, the new seatbelt must be type-approved and intended for installation in the same position as the replaced seatbelt.**
- **When wearing the seatbelt, insert the tongue plate into the correct buckle. Otherwise, in an accident, serious injury or death could result.**
- **Do not fasten your seatbelt with a child on your knees. Otherwise, in an accident, serious injury or death could result.**

– CONTINUED –

- **Put children aged 12 and under or 1.5 m (4 feet 11 inches) tall or less in the REAR seat properly restrained at all times in a child restraint device or in a seatbelt, whichever is appropriate for the child's age, height and weight. The SRS airbag deploys with considerable speed and force and can injure or even kill children, especially if they are 12 years of age and under or 1.5 m (4 feet 11 inches) tall or less and are not restrained or improperly restrained. Because children are lighter and weaker than adults, their risk of being injured from deployment is greater.**

  Secure ALL types of child restraint devices (including forward facing child seats) in the REAR seats at all times.

  NEVER INSTALL A CHILD SEAT IN THE FRONT SEAT. DOING SO RISKS SERIOUS INJURY OR DEATH TO THE CHILD BY PLACING THE CHILD'S HEAD TOO CLOSE TO THE SRS AIRBAG.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. For instructions and precautions concerning the child restraint system, refer to"Child Restraint Systems" ☞P45.

This vehicle is equipped with a crash sensing and diagnostic module, which will record the use of the seatbelt by the front passenger when any of the SRS frontal, side and curtain airbags deploys.

▼ Infants or small children


Use a child restraint system that is suitable for this vehicle. Refer to "Child Restraint Systems" ☞P45.

▼ Children

If a child is too big for a child restraint system, the child should sit in the rear seat and be restrained using the seatbelts. According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. Never allow a child to stand up or kneel on the seat.

If the shoulder portion of the belt crosses the face or neck, move the child closer to the belt buckle to help provide a good shoulder belt fit. Care must be taken to securely place the lap belt as low as possible on the hips and not on the child's waist. If the shoulder portion of the belt cannot be properly positioned, a child restraint system should be used. Never place the shoulder belt under the child's arm or behind the child's back.

▼ Expectant mothers

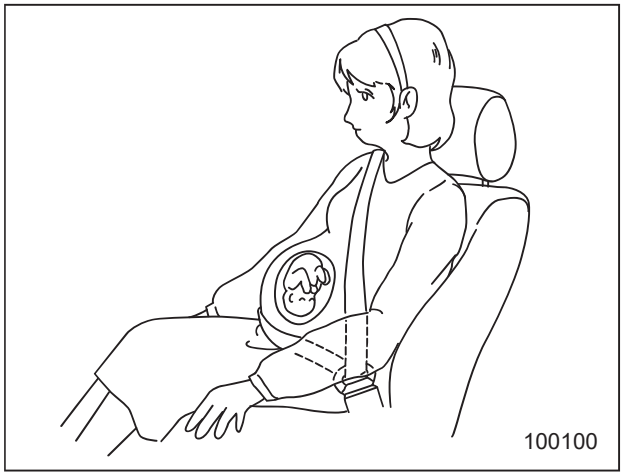

Expectant mothers also need to use the seatbelts. They should consult their doctor for specific recommendations. The lap belt should be worn securely and as low as possible over the hips, not over the waist.

■ Emergency Locking Retractor (ELR)

All seatbelts in the vehicle have an Emergency Locking Retractor (ELR).

The emergency locking retractor allows normal body movement but the retractor locks automatically during a sudden stop, impact or if you pull the belt very quickly out of the retractor.

■ Automatic Locking Retractor/Emergency Locking Retractor (ALR/ELR) (if Equipped)

For some models, each rear passenger's seatbelt has an Automatic Locking Retractor/ Emergency Locking Retractor (ALR/ELR). The Automatic Locking Retractor/ Emergency Locking Retractor normally functions as an Emergency Locking Retractor (ELR). The ALR/ELR has an additional locking mode, "Automatic Locking Retractor (ALR) mode", intended to secure a child restraint system.

First check if the ALR mode is equipped for the seatbelts of the vehicle. If the ALR mode is equipped, the seatbelts function as follows.

When a seatbelt is once drawn out completely and is then retracted even slightly, the retractor locks the seatbelt in that position and the seatbelt cannot be extended. As the belt is rewinding, clicks will be heard which indicate the retractor functions as an ALR. When the seatbelt is retracted fully, the ALR mode is canceled and the ELR mode is restored.

For models with ALR/ELR seatbelts, when securing a child restraint system on the rear seats by using a seatbelt in the forward-facing direction, the seatbelt must be changed over to the Automatic Locking Retractor (ALR) mode. For instructions on how to install the child restraint system using a seatbelt, refer to "Child Restraint Systems" ☞P45.

When the child restraint system is removed, make sure that the retractor is restored to the Emergency Locking Retractor (ELR) mode by allowing the seatbelt to retract fully.

■ Seatbelt Warning Light and Chime



Refer to "Seatbelt Warning Light and Chime" ☞P126.


■ Fastening the Seatbelt

⚠ WARNING

- **Never use a belt that is twisted or reversed. In an accident, this can increase the risk or severity of injury.**
- **Keep the lap belt as low as possible on your hips. In a collision, this spreads the force of the lap belt over stronger hip bones instead of across the weaker abdomen.**
- **Seatbelts provide maximum restraint when the occupant sits well back and upright in the seat. To reduce the risk of sliding under the seatbelt in a collision, the front seatbacks should be always used in the upright position while the vehicle is running. If the front seatbacks are not used in the upright position in a collision, the risk of sliding under the lap belt and of the lap belt sliding up over the abdomen will increase, and both can result in serious internal injury or death.**

– CONTINUED –

- **Do not put cushions or any other materials between occupants and seatbacks or seat cushions. If you do so, the risk of sliding under the lap belt and of the lap belt sliding up over the abdomen will increase, and both can result in serious internal injury or death.**

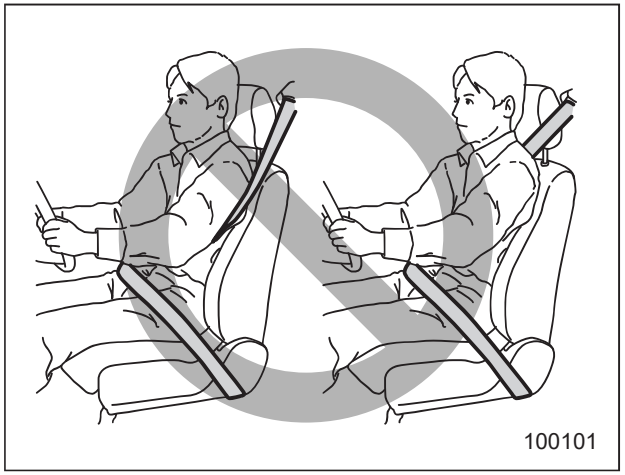


⚠ WARNING

Never place the shoulder belt under the arm or behind the back. If an accident occurs, this can increase the risk or severity of injury.

⚠ CAUTION

Metallic parts of the seatbelt can become very hot in a vehicle that has been closed up in sunny weather; they could burn an occupant. Do not touch such hot parts until they cool.

▼ Front seatbelt guide

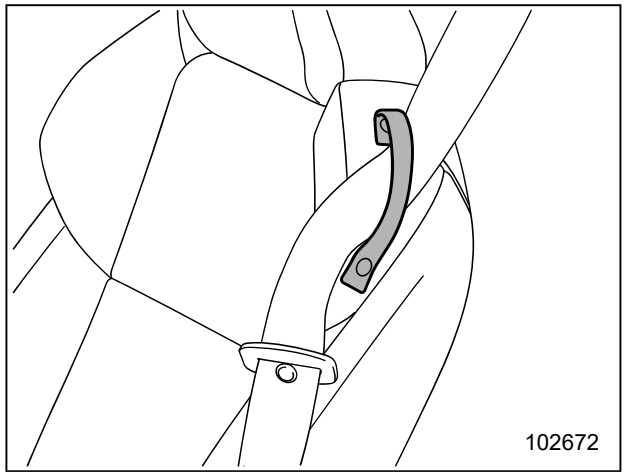

To enable the seatbelt to be easily extended, pass the seatbelt through the guide. When getting in or out of the rear seats, release the seatbelt from the guide.


▼ Front seatbelts

1. Adjust the seat position:


Driver's seat: Adjust the seatback to the upright position. Move the seat as far from the steering wheel as practical while still maintaining full vehicle control.

Front passenger's seat: Adjust the seatback to the upright position. Move the seat as far back as possible.

2. Sit well back in the seat.
3. Pick up the tongue plate and pull the belt out slowly. Do not let it get twisted.
   - If the belt stops before reaching the buckle, return the belt slightly and pull it out more slowly.
   - If the belt still cannot be unlocked, let the belt retract slightly after giving it a strong pull, then pull it out slowly again.

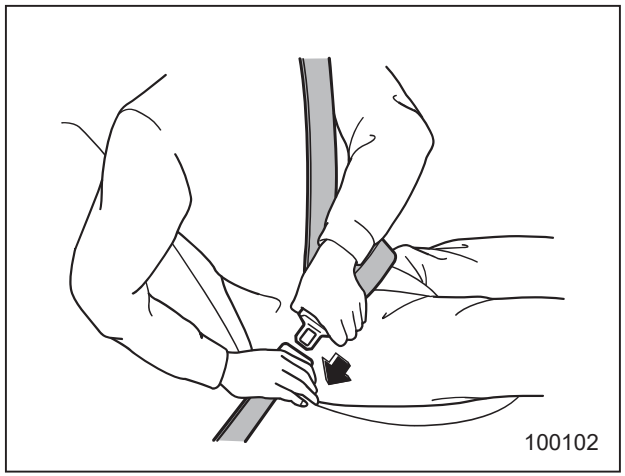


4. Insert the tongue plate into the buckle until you hear a click.

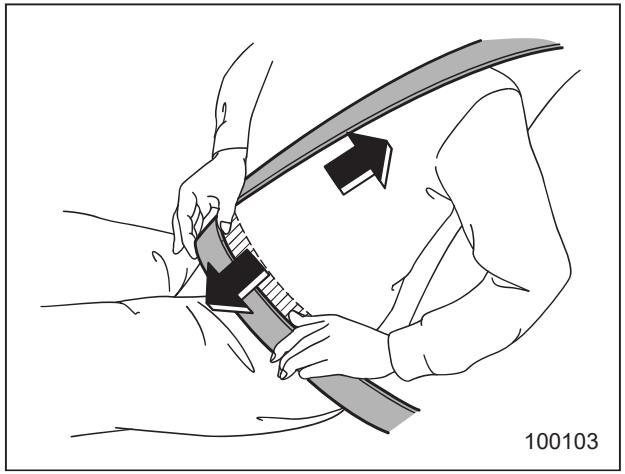

5. To tighten the lap part, pull up on the shoulder belt.

6. Place the lap belt as low as possible on the hips, not on the waist.

▽ Unfastening the seatbelt

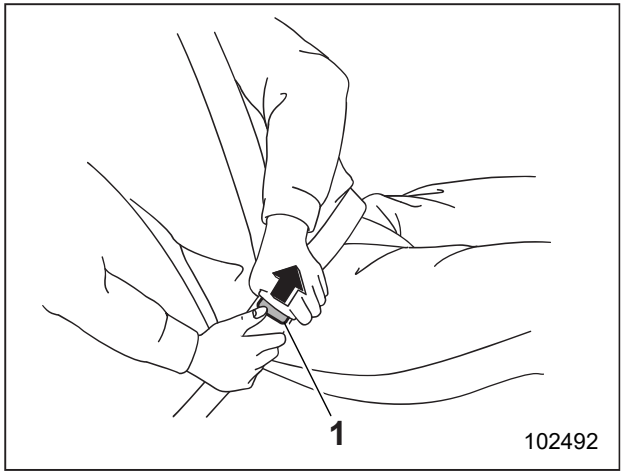


1) Button

1. Push the button on the buckle.
2. Retract the seatbelt slowly to prevent it from getting tangled or twisted.


Before closing the door, make sure that the belts are retracted properly to avoid catching the belt webbing in the door.

▼ Rear seatbelts

1. Sit well back in the seat.
2. Pick up the tongue plate and pull the belt out slowly. Do not let it get twisted.
   - If the belt stops before reaching the buckle, return the belt slightly and pull it out more slowly.
   - If the belt still cannot be unlocked, let the belt retract slightly after giving a strong pull on it, then pull it out slowly again.

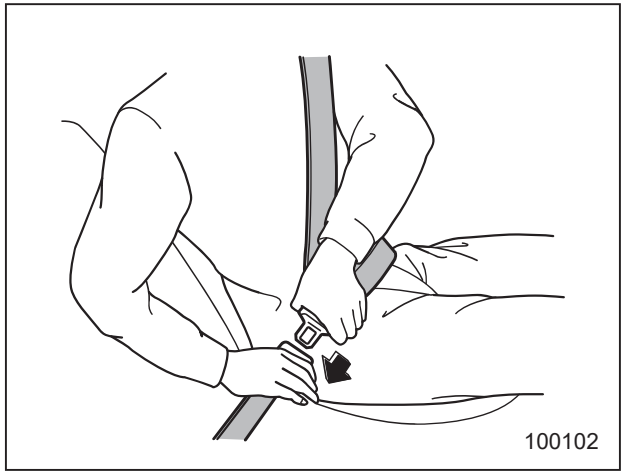

3. Insert the tongue plate into the buckle until you hear a click.

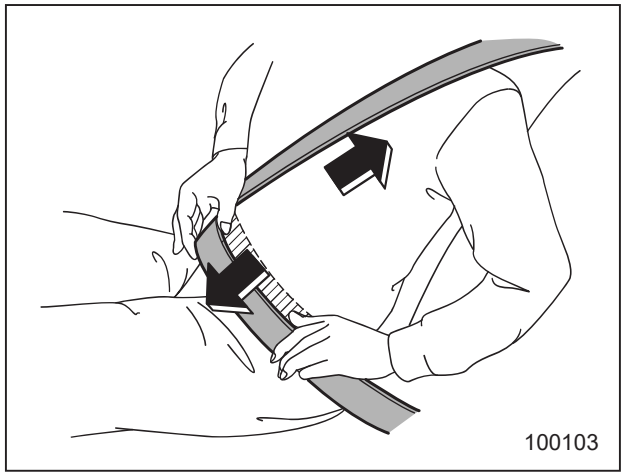


4. To tighten the lap part, pull up on the shoulder belt.

– CONTINUED –

5. Place the lap belt as low as possible on the hips, not on the waist.

▽ **Unfastening the seatbelt**

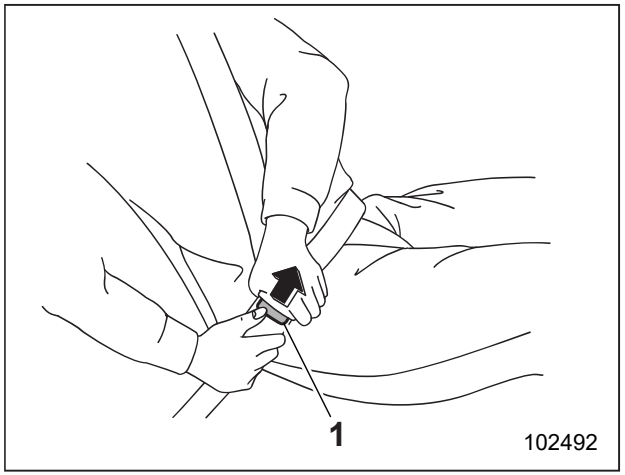

1) Button

1. Push the button on the buckle.
2. Retract the seatbelt slowly to prevent it from getting tangled or twisted.

Before closing the door, make sure that the belts are retracted properly to avoid catching the belt webbing in the door.

■ Seatbelt Maintenance

To clean the seatbelts, use a mild soap and lukewarm water. Never bleach or dye the belts because this could seriously affect their strength.

Inspect the seatbelts and attachments including the webbing and all hardware periodically for cracks, cuts, gashes, tears, damage, loose bolts or worn areas. Replace the seatbelts even if only minor damage is found.

⚠ CAUTION

- **Keep the belts free of polishes, oils, chemicals and particularly battery acid.**
- **Never attempt to make modifications or changes that will prevent the seatbelt from operating properly.**

1-5. Seatbelt Pretensioners

The following seatbelts have a seatbelt pretensioner.

- Driver's seatbelt
- Front passenger's seatbelt

The seatbelt pretensioners are designed to be activated in the event of an accident involving a moderate to severe frontal and side collision.

⚠ WARNING


- **To obtain maximum protection, the occupants should sit in an upright position with their seatbelts properly fastened. Refer to "Seatbelts" ☞P37.**

- **Do not modify, remove or strike the seatbelt retractor assemblies equipped with seatbelt pretensioners or surrounding area. This could result in accidental activation of the seatbelt pretensioners or could make the system inoperative, possibly resulting in serious injury. Seatbelt pretensioners have no user-serviceable parts. For required servicing of seatbelt retractors equipped with seatbelt pretensioners, we recommend that you consult your SUBARU dealer.**
- **When discarding seatbelt retractor assemblies equipped with seatbelt pretensioners or scrapping the entire vehicle due to collision damage or for other reasons, we recommend that you consult your SUBARU dealer.**

NOTE

- **Seatbelt pretensioners are not designed to activate in minor impacts or in rear impacts.**
- **Pretensioners are designed to function on a one-time-only basis. In the event that a pretensioner is activated, both the driver's and front passenger's seatbelt retractor assemblies should be replaced only by an authorized SUBARU dealer. When replacing seatbelt retractor assemblies, use only genuine SUBARU parts.**
- **If a seatbelt that has a seatbelt pretensioner does not retract or cannot be pulled out due to a malfunction or activation of the pretensioner, contact your SUBARU dealer as soon as possible.**
- **If the seatbelt retractor assembly or surrounding area has been damaged, contact your SUBARU dealer as soon as possible.**
- **When you sell your vehicle, we urge you to inform the buyer that the vehicle is equipped with seatbelt pretensioners. Also, notify the buyer of the contents in this section.**

■ Front seatbelt with Shoulder Belt Pretensioner

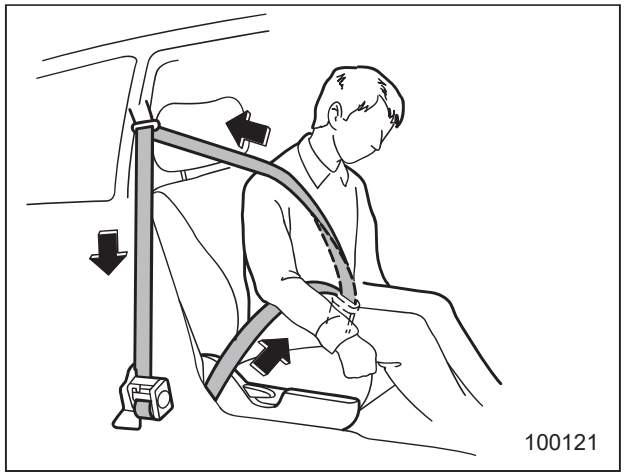

The pretensioner sensor also serves as follows.

- Front impact sensor
- Side impact sensor

If the sensor detects a certain predetermined amount of force during frontal or side collisions, any seatbelt that has a seatbelt pretensioner is quickly drawn back in by the retractor to take up the slack so that the belt more effectively restrains the seat occupant.

The front seatbelt pretensioner includes a tension reducing device which limits the peak forces exerted by the seatbelt on the occupant in the event of a collision. The adaptive force limiter (if equipped) will select a reducing load to suit the body size

– CONTINUED –

of the occupant as detected by the occupant detection sensor.

When a seatbelt pretensioner is activated, an operating noise will be heard and a small amount of smoke will be released. These occurrences are normal and not harmful. This smoke does not indicate a fire in the vehicle.

Once the seatbelt pretensioner has been activated, the seatbelt retractor remains locked. Consequently, the seatbelt cannot be pulled out and retracted and therefore must be replaced.

■ System Monitors

A diagnostic system continually monitors the readiness of the seatbelt pretensioner with the ignition switch in the “ON” position. The seatbelt pretensioners share the control module with the SRS airbag system. Therefore, if any malfunction occurs in a seatbelt pretensioner, the SRS airbag system warning light will illuminate. For details, refer to "SRS airbag system monitor" ☞P87.

■ System Servicing

⚠ WARNING

- **When discarding a seatbelt retractor assembly or scrapping the entire vehicle damaged by a collision, we recommend that you consult your SUBARU dealer.**
- **Tampering with or disconnecting the system’s wiring could result in accidental activation of the seatbelt pretensioner and/or SRS airbag or could make the system inoperative, which may result in serious injury. Do not use electrical test equipment on any circuit related to the seatbelt pretensioner and SRS airbag systems. For required servicing of the seatbelt pretensioner, we recommend that you consult your nearest SUBARU dealer.**

⚠ CAUTION

For the locations of the sensors and control modules, refer to "Components" ☞P71.

If you need service or repair in those areas or near the front seatbelt retractors, we recommend that you have the work performed by your authorized SUBARU dealer.

NOTE

If the front or side part of the vehicle is damaged in an accident to the extent that the seatbelt pretensioner does not operate, we recommend that you contact your SUBARU dealer as soon as possible.

■ Precautions against Vehicle Modification

We recommend that you consult your SUBARU dealer if you want to install any accessory parts to your vehicle.

⚠ CAUTION

Do not perform any of the following modifications. Such modifications can interfere with proper operation of the seatbelt pretensioners.


- **Attachment of any equipment (bush bar, bullbar, winches, snow plow, skid/sump plate, etc.) to the front end other than genuine SUBARU accessory parts or parts that match the quality of genuine SUBARU accessory parts.**
- **Modification of the suspension system or front end structure.**
- **Installation of a tire of different size and construction from the tires specified on the vehicle placard attached to the driver's center pillar or specified for individual vehicle models in this Owner's Manual.**

1-6. Child Restraint Systems

■ Applications for Australia models


Refer to the Owner's Manual supplement for the instructions of the child restraint system.

■ Safety Precautions

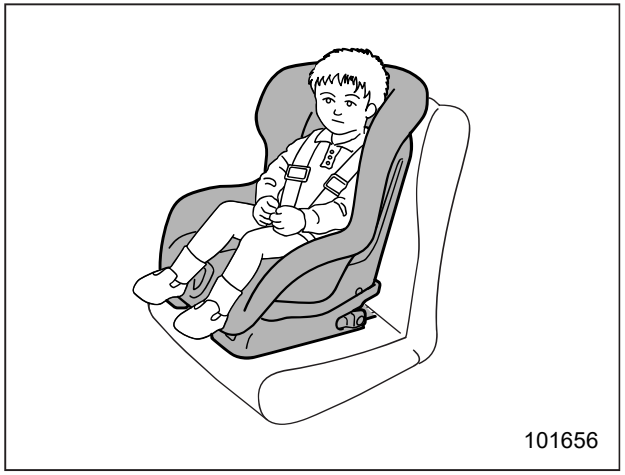

Infants and small children aged 12 and under or 1.5 m (4 feet 11 inches) tall or less should always be placed in an infant or child restraint system in the rear seat while riding in the vehicle. You should use an infant or child restraint system that is appropriate for the child's age and size. All child restraint systems are designed to be secured in the vehicle seats.
Children could be endangered in an accident if their child restraint systems are not properly secured in the vehicle. When installing the child restraint system, carefully follow the manufacturer's instructions.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.

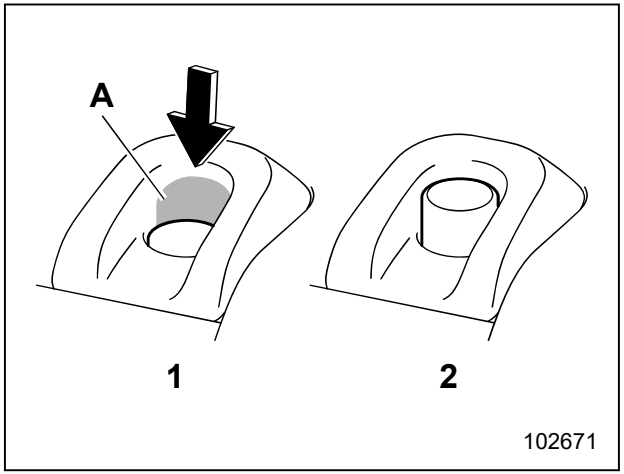


Lock release button
1) Unlocked
2) Locked
A) Unlocking marker in red

– CONTINUED –


⚠ WARNING

- **Before installing a child restraint system, check that the unlocking marker on the seatback lock release button cannot be seen to confirm that the rear seatback is securely locked in position. If the rear seatback is not locked securely, serious injury may result.**
- **Do not leave children in the car unattended. High interior temperatures may cause heat stroke and dehydration that result in serious injury or death.**

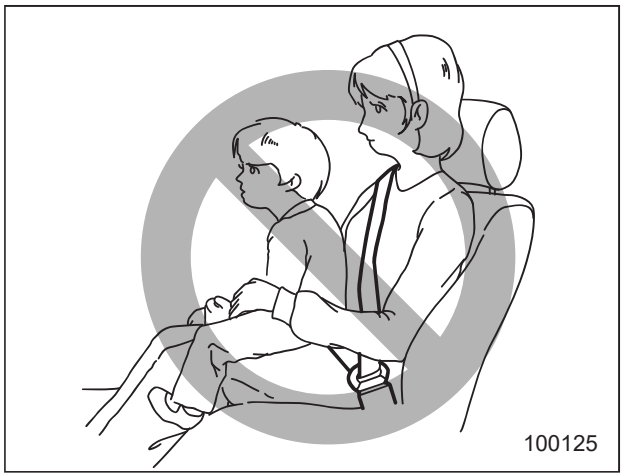

⚠ WARNING

Never let a passenger hold a child on his or her lap or in his or her arms while the vehicle is moving. The passenger cannot protect the child (or infant) from injury in a collision, because the child will be caught between the passenger and objects inside the vehicle. Additionally, holding a child in your lap or arms in the front seat exposes that child to another serious danger. Since the SRS airbag deploys with considerable speed and force, the child could be injured or even killed.

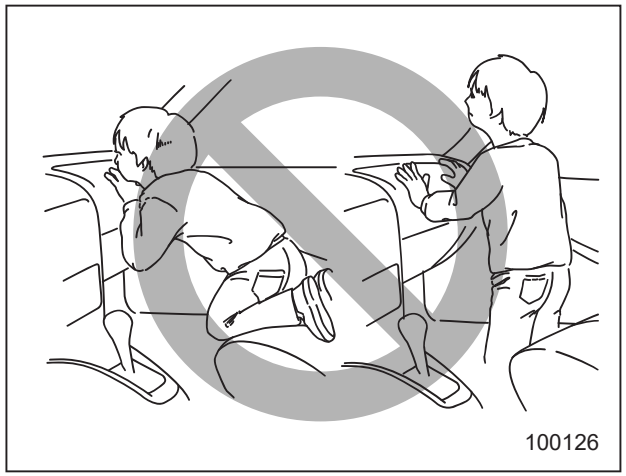

⚠ WARNING

- **Children should be properly restrained at all times. Never allow a child to stand up, or to kneel on any seat. Unrestrained children will be thrown forward during sudden stop or in an accident and can be injured seriously.**
- **Never allow a child to stand up or to kneel on the front passenger's seat, or never hold a child on your lap or in your arms. The SRS airbag deploys with considerable force and can injure or even kill the child.**

■ Safety Tips for Installing child Restraint Systems

⚠ WARNING

- **Child restraint systems and seatbelts can become hot in a vehicle that has been closed up in sunny weather; they could burn a small child. Check the child restraint system before you place a child in it.**

- **Attach the child restraint system to the anchors properly. When using the ISOFIX anchors, be sure that there are no foreign objects around the anchors. Also, the seatbelts should not be caught behind the child restraint system. Make sure the child restraint system is securely attached. Otherwise it may cause death or serious injury to children or other passengers in sudden braking, swerving, or accidents.**
- **Do not leave an unsecured child restraint system in your vehicle. Unsecured child restraint systems can be thrown around inside of the vehicle in a sudden stop, turn or accident; they can strike and injure vehicle occupants as well as result in serious injuries or death to the child.**

⚠ CAUTION


When you install a child restraint system, follow the manufacturer's instructions supplied with it. After installing the child restraint system, check to ensure that it is held securely in position. If it is not held tight and secure, the danger of your child suffering personal injury in the event of an accident may be increased.

■ Where to Place a Child Restraint System

The following descriptions are SUBARU's recommendations on where to place a child restraint system in your vehicle.


⚠ WARNING

- **Several types of child restraint systems may conceal the buckle of the neighboring seat. If the occupant of the neighboring seat cannot correctly fasten the seatbelt, that person must move to a different seat. If the seatbelt cannot be correctly fastened, there is the risk of serious injury or death in the event of sudden braking or a collision.**
- **If the child restraint system cannot be correctly installed because it contacts the driver's seat, move the child restraint system to a different seat. If it cannot be installed in a different seat (other than the driver's seat), adjust the front seat so that contact does not occur.**

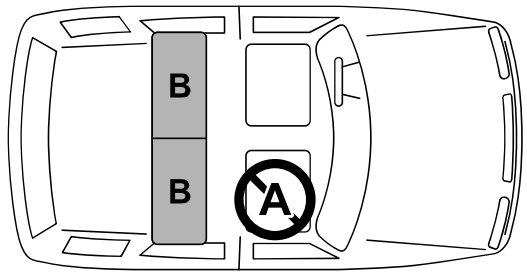

Left-hand drive models

– CONTINUED –

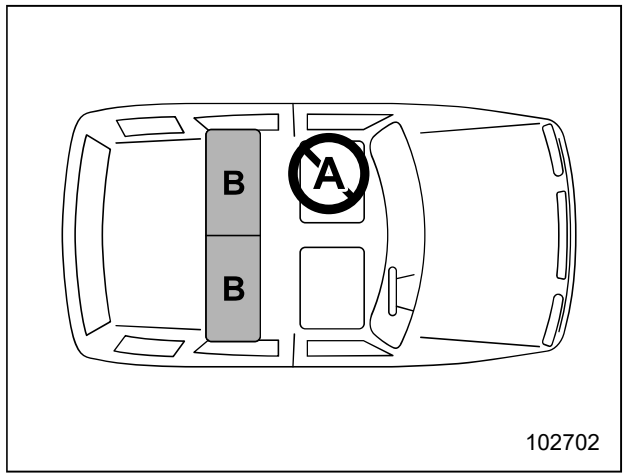

Right-hand drive models

A: Front passenger's seat

Do not install a child restraint system (including a booster seat) due to the hazard to children posed by the passenger's airbag.

B: Rear seat

Recommended positions for all types of child restraint systems.

In these positions, the following equipment is provided for installing a child restraint system.

- Emergency Locking Retractor (ELR) seatbelts
- Automatic Locking Retractor/Emergency Locking Retractor (ALR/ELR) seatbelts (Australia models)
- ISOFIX anchor bars
- Top tether anchorages

Some types of child restraint systems might not be able to be secured firmly due to projection of the seat cushion.

In this seating position, you should use only a child restraint system that has a bottom base that fits snugly against the contours of the seat cushion and can be securely retained using the seatbelt.

⚠ WARNING

- **Secure ALL types of child restraint systems (including forward facing child restraint systems) in the REAR seats at all times. The SRS airbag deploys with considerable speed and force and can injure or even kill children, especially if they are 12 years of age and under or 1.5 m (4 feet 11 inches) tall or less and are not restrained or improperly restrained. Because children are lighter and weaker than adults, their risk of being injured from deployment is greater. According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.**
- **NEVER INSTALL A CHILD RESTRAINT SYSTEM IN THE FRONT PASSENGER'S SEAT. DOING SO RISKS SERIOUS INJURY OR DEATH TO THE CHILD BY PLACING THE CHILD'S HEAD TOO CLOSE TO THE SRS AIRBAG.**
- **Never install a child restraint system in the front passenger's seat. The force of the rapid deployment of the front passenger's SRS frontal airbag can cause death or serious injury to the child in the event of an accident.**

▼ Warning label

⚠ WARNING

- **Warning labels are located on both sides of the front passenger's sun visor. The warning label indicates that it is forbidden to install a rearward facing child restraint system in the front passenger's seat.**


- **NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.**



Warning label

A) AIRBAG

■ Choosing a Child Restraint System

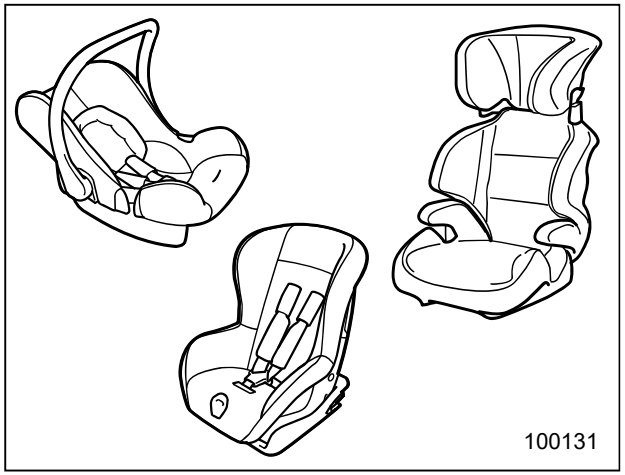

NOTE

Some sizes of child restraint systems may not fit the vehicle seat. Before purchasing a child restraint system, check whether it fits on the vehicle seat.

Choose a child restraint system that is appropriate for the child's size and age to provide the child with proper protection. Also it is important that the child restraint system meets safety standards applicable to your country.

In most European countries, child restraint systems must meet the requirement of ECE regulation No. 44. It can be identified by looking for the approval label on the child restraint system or the manufacturer's statement of compliance on the box and the system.

According to the ECE regulation No. 44, child restraint systems are classified into the following five "mass groups".

Group 0: for children of a mass less than 10 kg

Group 0+: for children of a mass less than 13 kg

Group I: for children of mass from 9 to 18 kg

Group II: for children of mass from 15 to 25 kg

Group III: for children of mass from 22 to 36 kg

For European countries, refer to the following table for the recommended child restraint system.

– CONTINUED –

▼ Child Restraint System


Child restraint system suitability for each seating position

				Left-hand drive models		Right-hand drive models	
Seat position number	1			2	3	2	3
Seat position	Front passenger			2nd row left[*1]	2nd row right[*1]	2nd row left[*1]	2nd row right[*1]
	Without occupant detection system	With occupant detection system					
		Airbag ON	Airbag OFF				
Seating position suitable for universal belted	Not applicable	Not applicable	Not applicable	Forward facing only	Forward facing only[*2]	Forward facing only[*2]	Forward facing only
i-Size seating position	—	—	—	Not applicable	Not applicable	Not applicable	Not applicable
Seating position suitable for lateral fixture (L1/L2)	—	—	—	Not applicable	Not applicable	Not applicable	Not applicable
Largest suitable rearward facing fixture (R1/R2X/R2/R3)	—	—	—	Not applicable	R1[*2]	R1[*2]	Not applicable
Largest suitable forward facing fixture (F2X/F2/F3)	—	—	—	F2X	F2X	F2X	F2X
Largest suitable booster fixture (B2/B3)	—	—	—	Not applicable	Not applicable	Not applicable	Not applicable

						Left-hand drive models		Right-hand drive models	
Seat position number			1			2	3	2	3
Recommend child restraint system	Belted	Childseat SUBARU Baby Safe i-Size	Not applicable	Not applicable	Not applicable	Not applicable	*2	*2	Not applicable
		Childseat SUBARU Kidfix 2 R	Not applicable	Not applicable	Not applicable	Applicable	Applicable	Applicable	Applicable
	ISOFIX	Childseat SUBARU Baby Safe i-Size with Childseat SUBARU Baby Safe i-Size FLEX base	—	—	—	Not applicable	*2	*2	Not applicable
		Childseat SUBARU Trifix 2 i-Size	—	—	—	Applicable	Applicable	Applicable	Applicable
		Childseat SUBARU Kidfix 2 R	—	—	—	Applicable	Applicable	Applicable	Applicable


*1: If the front seat contacts the child restraint system or support leg, the child restraint system cannot be used in this position.
*2: A rear facing child restraint system can be installed only if the front passenger's seat does not contact it.
When installing a rear facing child restraint system, move the front passenger's seat to the forward most position, adjust the seatback to the upright position, and do not allow anyone to sit in the front passenger's seat.
—: Seats that are not equipped with the lower anchorages for child restraint systems.

– CONTINUED –

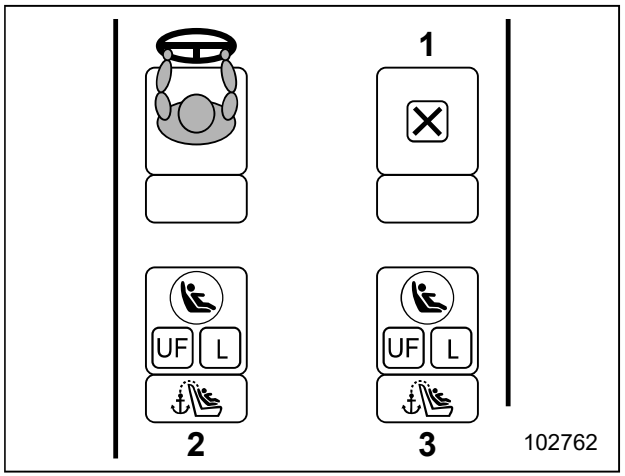

Left-hand drive models

1) Front passenger
2) 2nd row left
3) 2nd row right

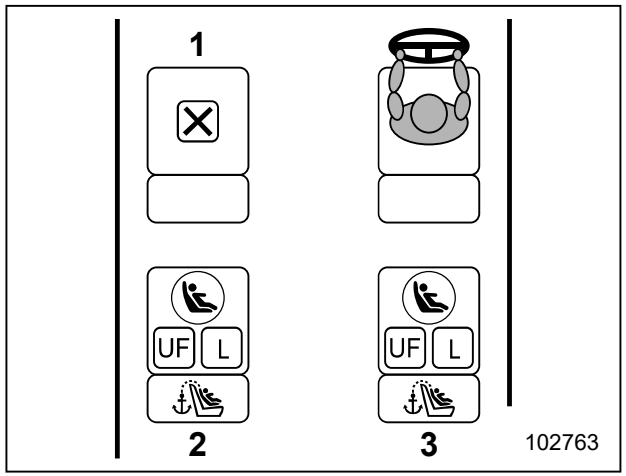

Right-hand drive models

1) Front passenger
2) 2nd row left
3) 2nd row right

Mark	Description
	Not suitable for child restraint systems.
	Suitable for forward facing universal category child restraint systems that are installed using the seatbelt.
	Child seats permitted to install in your SUBARU (refer to applicable vehicle models list attached the child seat products).
	Suitable for ISOFIX child restraint systems.
	Top tether anchorages are equipped.

Recommend Child Restraint System suitability for mass group

Mass Group		Child Restraint System
0	up to 10 kg	Childseat SUBARU Baby Safe i-Size
0+	up to 13 kg	
I	9 to 18 kg	Not applicable
II	15 to 25 kg	Childseat SUBARU Kidfix 2 R
III	22 to 36 kg	

– CONTINUED –

Recommend Child Restraint System suitability for mass group (with ISOFIX rigid anchors)

Mass Group		Size class	Fixture	Child Restraint System*
carrycot		F	ISO/L1	Not applicable
		G	ISO/L2	
0	up to 10 kg	E	ISO/R1	Childseat SUBARU Baby Safe i-Size with Childseat SUBARU Baby Safe i-Size FLEX base
0+	up to 13 kg	E	ISO/R1	
		D	ISO/R2	
		C	ISO/R3	
I	9 to 18 kg	D	ISO/R2	Not applicable
		C	ISO/R3	
		B	ISO/F2	
		B1	ISO/F2X	Childseat SUBARU Trifix 2 i-Size
		A	ISO/F3	Not applicable
II	15 to 25 kg			Childseat SUBARU Kidfix 2 R
III	22 to 36 kg			

*: For SUBARU recommended child restraint systems, we recommend that you contact your SUBARU dealer. For other child restraint systems, refer to the applicable vehicle model list for the child restraint system or the child restraint system manufacturer's web site for details.

■ Installing Child Restraint Systems with Seatbelt

▼ Preparation for installing child restraint system

First check if the Automatic Locking Retractor (ALR) is equipped for the seatbelts of the vehicle according to the following procedure.

1. Draw out the seatbelt completely.
2. Retract the seatbelt even slightly and try to draw out the seatbelt again.
3. If the seatbelt is locked in that position and cannot be extended, it indicates that an ALR is equipped for the seatbelt.

When the seatbelt is retracted fully, the ALR mode is canceled and the Emergency Locking Retractor (ELR) mode is restored.

If the ALR is not equipped for the seatbelt, refer to "Models without ALR" ☞P56.

If the ALR is equipped for the seatbelt, refer to "Models with ALR" ☞P58.

NOTE

- **For details about the ELR, refer to "Emergency Locking Retractor (ELR)" ☞P39.**
- **For details about the ALR, refer to "Automatic Locking Retractor/Emergency Locking Retractor (ALR/ELR) (if Equipped)" ☞P39.**

▼ Installing a rearward facing child restraint system


⚠ WARNING

- **NEVER INSTALL A CHILD RESTRAINT SYSTEM IN THE FRONT PASSENGER'S SEAT. DOING SO RISKS SERIOUS INJURY OR DEATH TO THE CHILD BY PLACING THE CHILD'S HEAD TOO CLOSE TO THE SRS AIRBAG.**
- **Before installing a child restraint system, be sure to confirm that the seatback is securely locked into place. Otherwise, in an accident, serious injury or death could result.**

NOTE

For models with ALR:

- **If using ALR mode is recommended by the manufacturer's instructions supplied with the child restraint system, use ALR mode.**

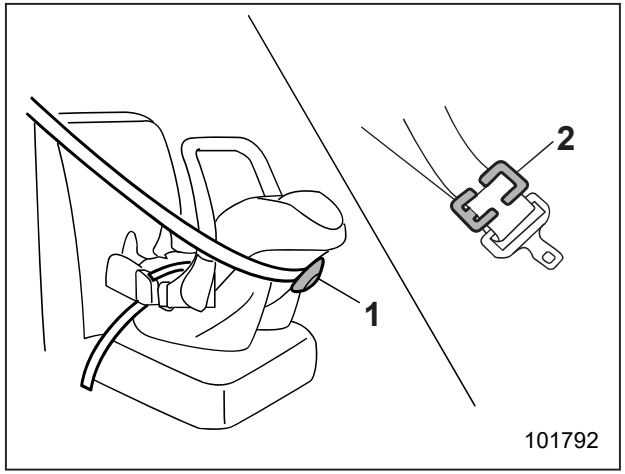


1) Lock-off device
2) Locking clip

- **If using the lock-off device or the locking clip is recommended by the manufacturer's instructions supplied with the child restraint system, use the lock-off device or the locking clip to secure the child restraint system.**

Through the following steps, the child restraint system is fastened with a seatbelt that is set to ELR mode.


– CONTINUED –

1. Place the child restraint system in the rear seating position.

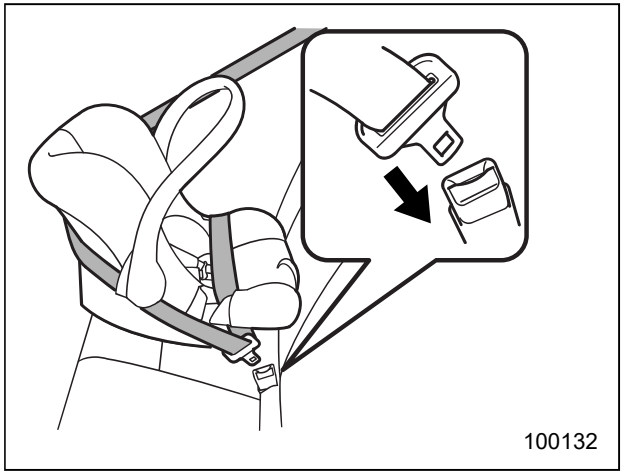


2. Run the lap and shoulder belt through or around the child restraint system following the instructions provided by its manufacturer.

3. Insert the tongue plate into the buckle until you hear a click.

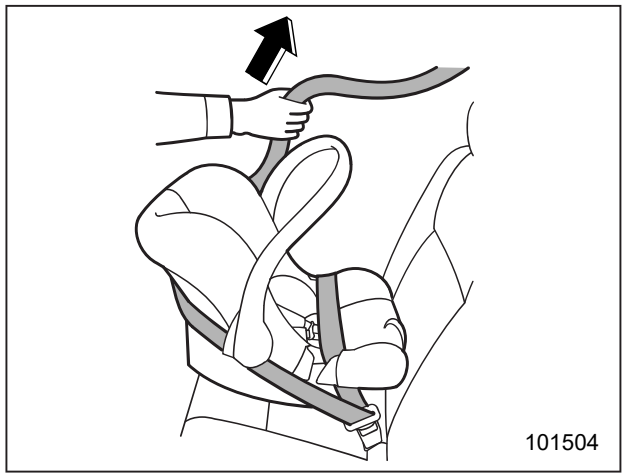

4. Take up the slack in the lap belt.

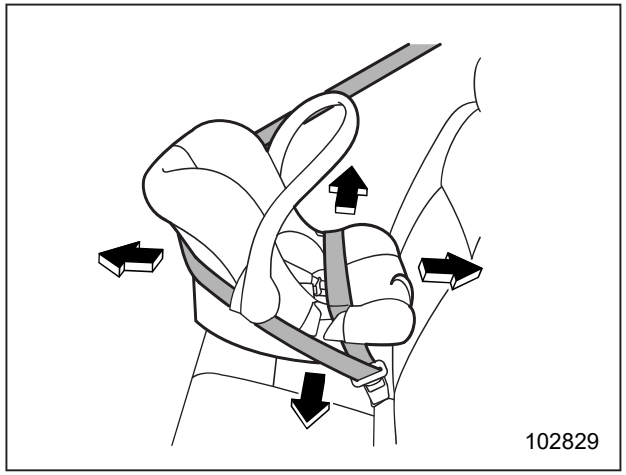


5. Before having a child sit in the child restraint system, try to move it back and forth and right and left to check if it is firmly secured. Sometimes a child restraint system can be more firmly secured by pushing it down into the seat cushion and then tightening the seatbelt.

6. To remove the child restraint system, press the release button on the seatbelt buckle.

▼ Installing a forward facing child restraint system


▽ Models without ALR

1. Place the child restraint system in the rear seating position.

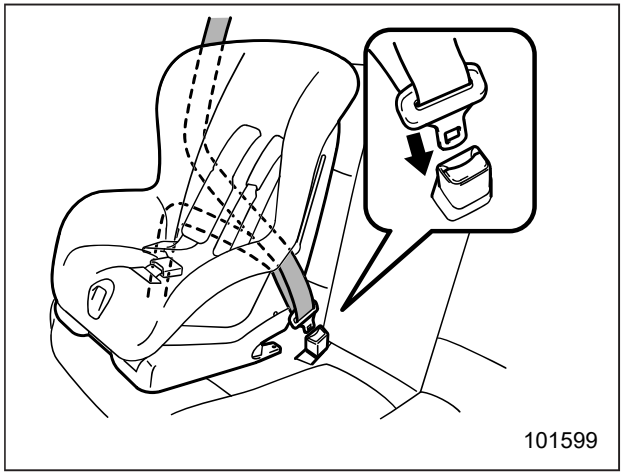

2. Run the lap and shoulder belt through or around the child restraint system following the instructions provided by its manufacturer.


3. Insert the tongue plate into the buckle until you hear a click.

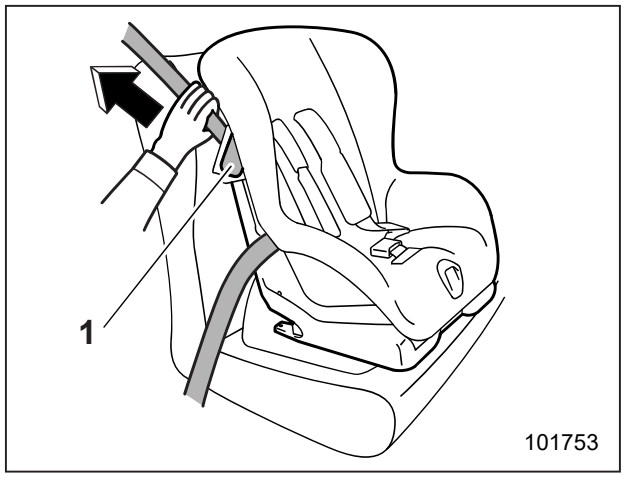

1) Lock-off lever


4. Release the child restraint system lock-off lever and pass the shoulder belt through the lock-off lever.

5. Take up the slack in the lap belt. At this time, to secure the child restraint system more firmly, apply your weight to push it down into the seat cushion as you tighten the seatbelt.

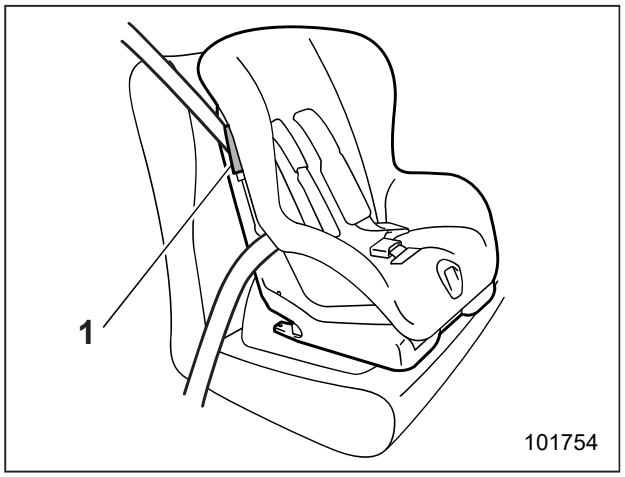


1) Lock-off lever

6. Lock the child restraint system lock-off lever to fix the shoulder belt.

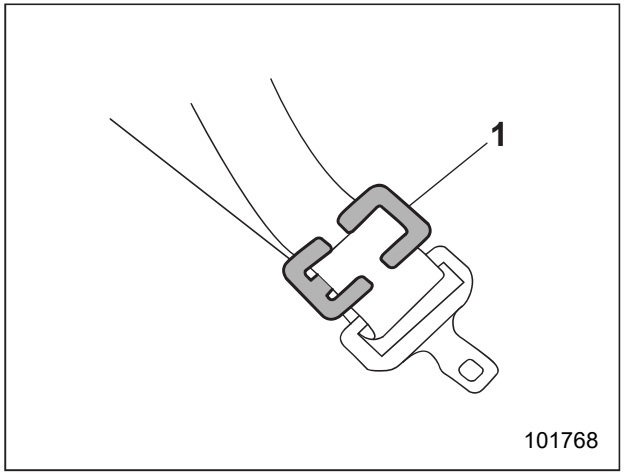


1) Locking clip

7. If your child restraint system is not equipped with a lock-off (a seatbelt locking feature), secure the child restraint system using a locking clip.

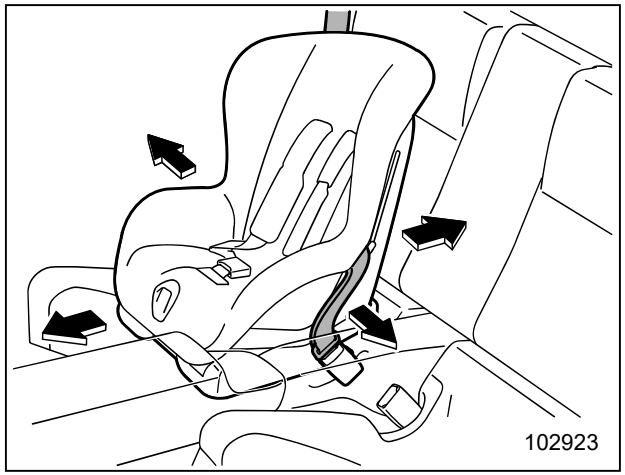

8. Before having a child sit in the child restraint system, try to move it back and forth and right and left to check if it is firmly secured. Sometimes a child restraint system can be more firmly secured by pushing it down into the seat cushion and then tightening the seatbelt.

– CONTINUED –

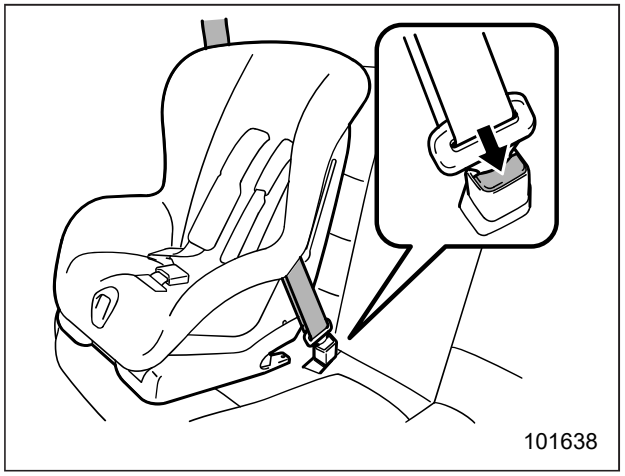


9. To remove the child restraint system, press the release button on the seatbelt buckle and allow the belt to retract completely.

▽ **Models with ALR**

NOTE


If using ALR mode is not recommended by the manufacturer's instructions supplied with the child restraint system, use the lock-off lever or the locking clip instead of using ALR mode.

1. Place the child restraint system in the rear seating position.

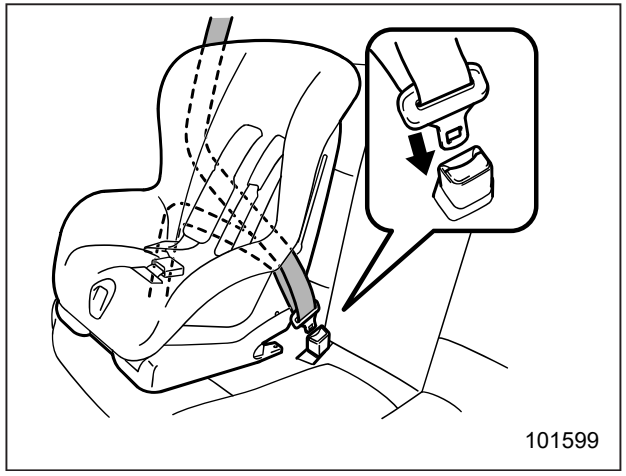


2. Run the lap and shoulder belt through or around the child restraint system following the instructions provided by its manufacturer.

3. Insert the tongue plate into the buckle until you hear a click.

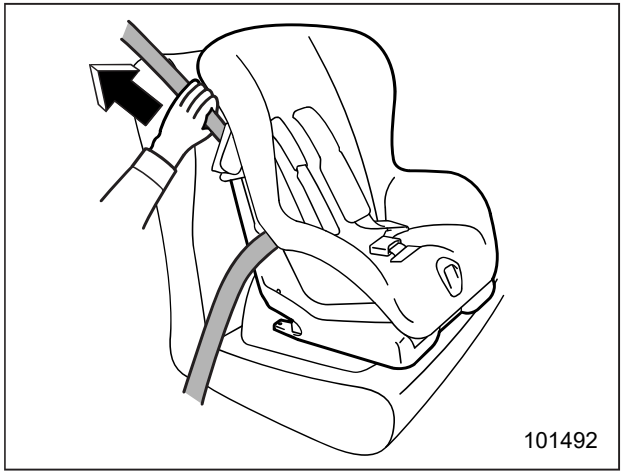


4. Take up the slack in the lap belt.

5. Pull out the seatbelt fully from the retractor to change the retractor over from the Emergency Locking Retractor (ELR) to the Automatic Locking Retractor (ALR) function. Then, allow the belt to rewind into the retractor. As the belt is rewinding, clicks will be heard which indicate the retractor functions as ALR.

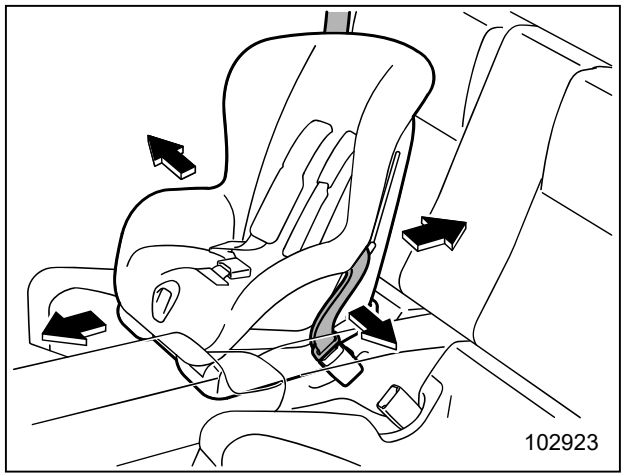


6. Before having a child sit in the child restraint system, try to move it back and forth and right and left to check if it is firmly secured. Sometimes a child restraint system can be more firmly secured by pushing it down into the seat cushion and then tightening the seatbelt.

7. Pull at the shoulder portion of the belt to confirm that it cannot be pulled out (ALR properly functioning).

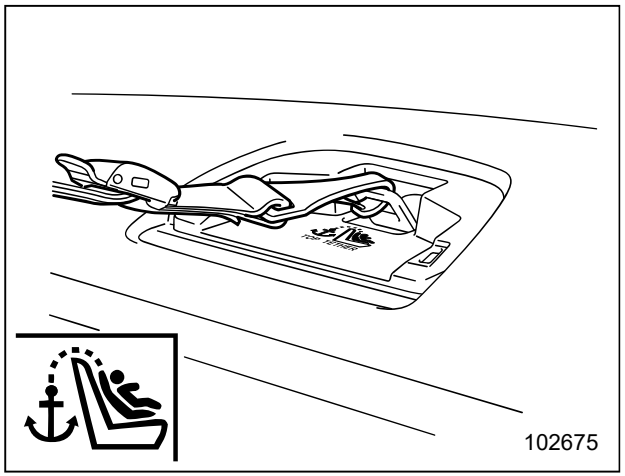

8. If the child restraint system requires a top tether, latch the hook onto the top tether anchorage and tighten the top tether. For additional instructions, refer to "Top Tether Anchorages" ☞P62.

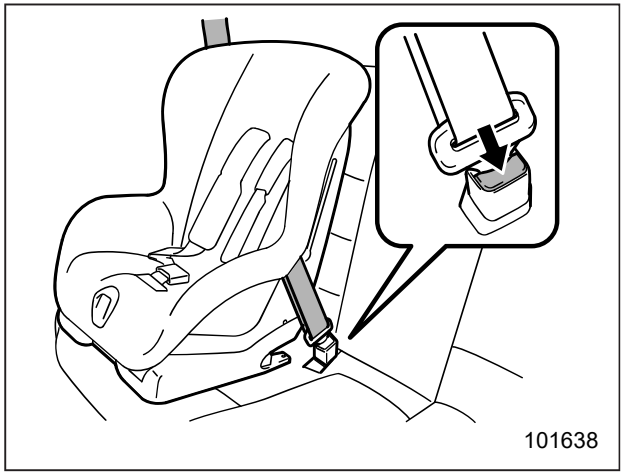

9. To remove the child restraint system, press the release button on the seatbelt buckle and allow the belt to retract completely. The belt will return to the ELR mode.

NOTE


When the child restraint system is no longer in use, remove it and restore the ELR function of the retractor. That function is restored by allowing the seatbelt to retract fully.

■ Installing a Booster Seat or Booster Cushion




Booster seat

– CONTINUED –

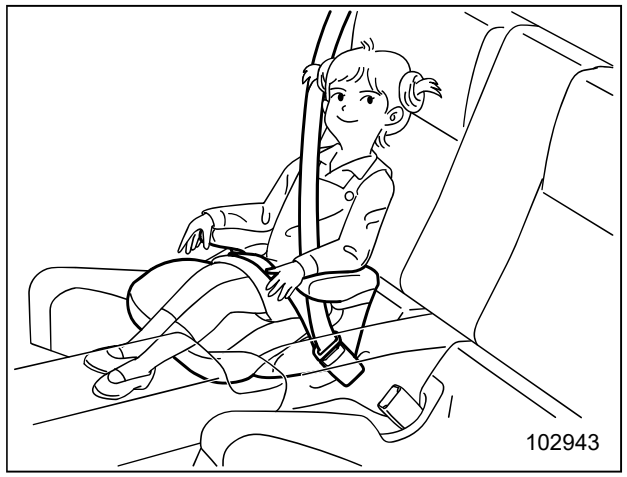

Booster cushion

1. Place the booster seat/cushion in the rear seating position and sit the child on it. The child should sit well back on the booster seat/cushion.
2. Run the lap and shoulder belt through or around the booster seat/cushion and the child following the instructions provided by its manufacturer. For booster seat/cushion with a belt guide, use the seatbelt through the belt guide.
3. Insert the tongue plate into the buckle until you hear a click. Take care not to twist the seatbelt. Make sure the shoulder belt is positioned across the center of child's shoulder and that the lap belt is positioned as low as possible on the child's hips.

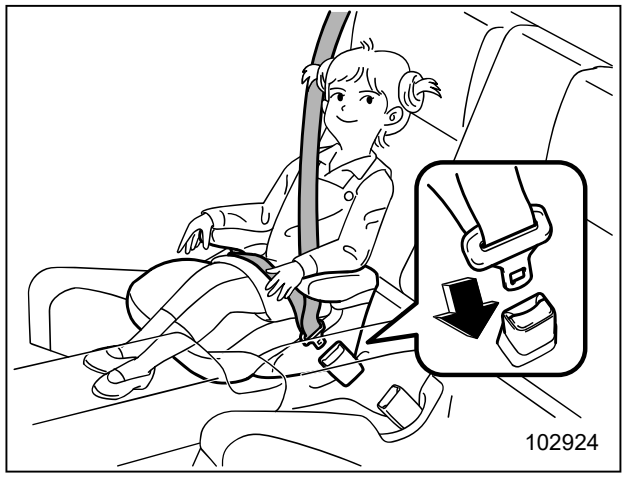


4. To remove the booster seat/cushion, press the release button on the seatbelt buckle and allow the belt to retract.


⚠ WARNING

- **Never use a belt that is twisted or reversed. In an accident, this can increase the risk or severity of injury to the child.**
- **Never place the shoulder belt under the child's arm or behind the child's back. If an accident occurs, this can increase the risk or severity of injury to the child.**
- **The seatbelt should fit snugly in order to provide full restraint. Loose fitting belts are not as effective in preventing or reducing injury.**
- **Place the lap belt as low as possible on the child's hips. A high-positioned lap belt will increase the risk of sliding under the lap belt and of the lap belt sliding up over the abdomen, and both can result in serious internal injury or death.**
- **Make sure the shoulder belt is positioned across the center of child's shoulder. Placing the shoulder belt over the neck may result in neck injury during sudden braking or in a collision.**


■ Installation of Child Restraint Systems Using ISOFIX Anchor Bars

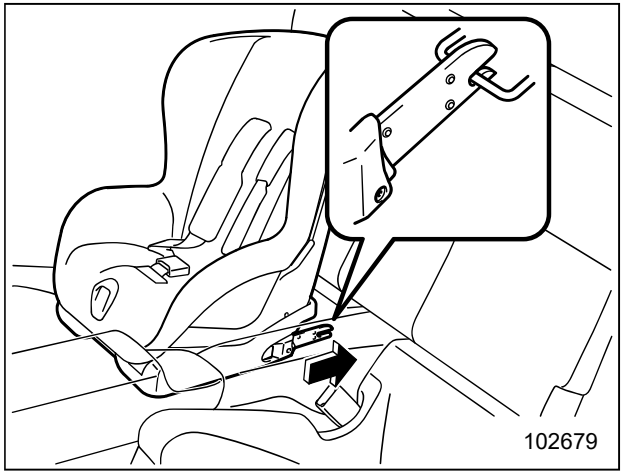


Your vehicle is equipped with ISOFIX anchor bars that allow an approved ISOFIX child restraint system to be installed on the rear seat without use of a seatbelt.

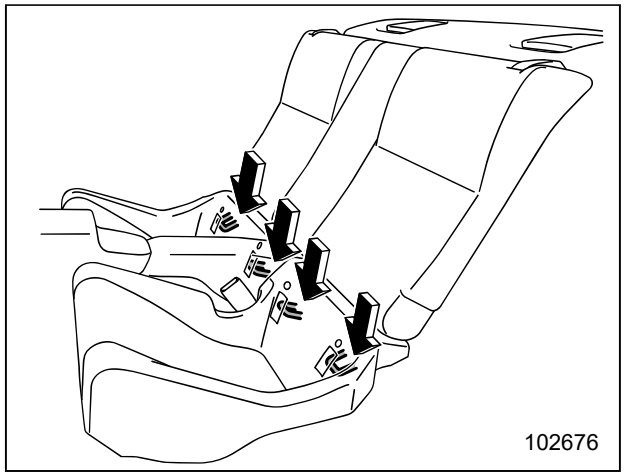


The ISOFIX anchor bars allow you to install a child restraint system only in the rear seat positions. For each seating position, two anchor bars are provided.

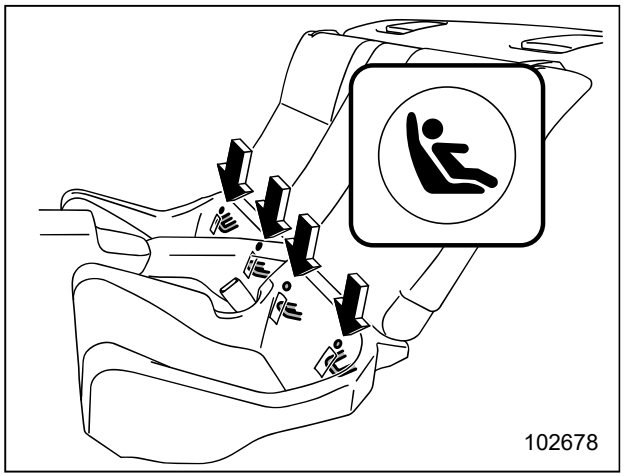

You will find "" marks at the bottom of the rear seat seatbacks. These marks indicate the positions of the ISOFIX anchor bars.

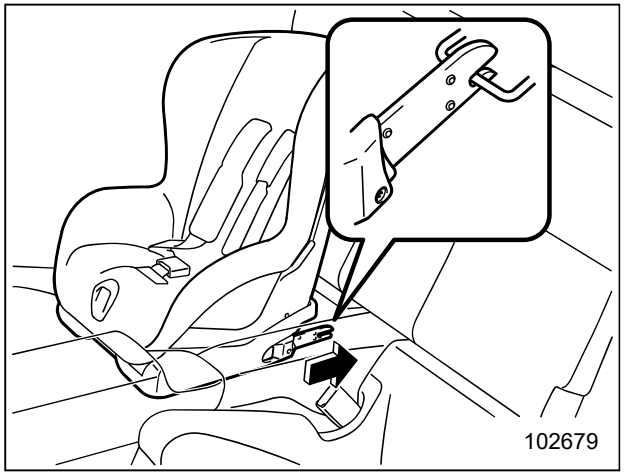


1. While following the instructions supplied by the child restraint system manufacturer, connect the connectors of the child restraint system to the anchor bars. When the connectors are fastened, make sure that the adjacent seatbelts are not caught.

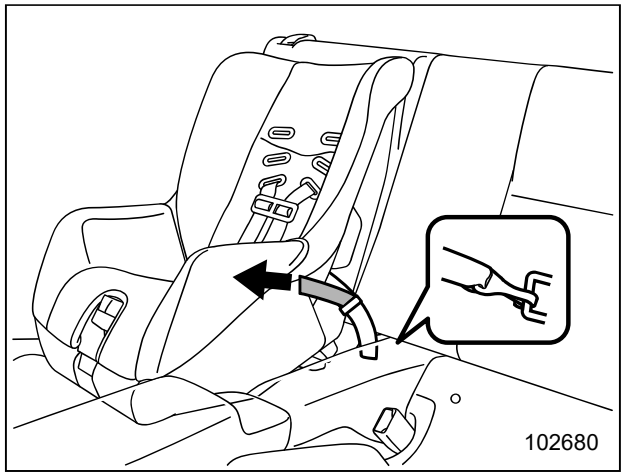

2. If your child restraint system is a flexible attachment type (which uses tether belts), push the child restraint system into the seat cushion and pull both left and right lower tether belts up to secure the child restraint system by taking up the slack in the belt.

3. Latch the top tether hook onto the tether anchorage that is located on the rear shelf and tighten the top tether firmly. For additional instructions, refer to "Top Tether Anchorages" ☞P62.

– CONTINUED –

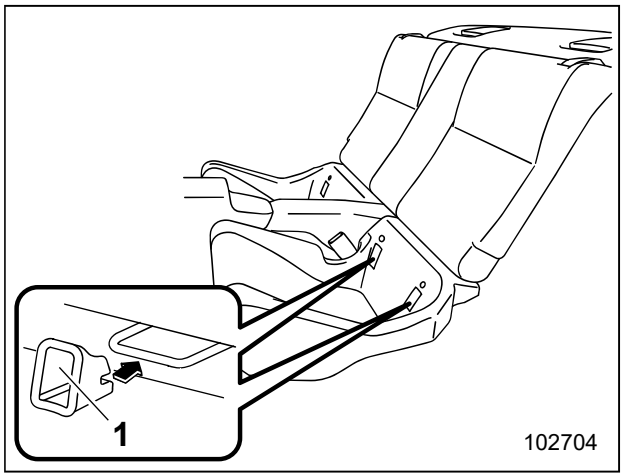


1) Inserting aid

NOTE

If your child restraint system is provided with inserting aids, clip them to the two ISOFIX anchor bars (or put them between the seatback and the seat cushion at the two ISOFIX fastening points) before connecting the child restraint system.

Position the two connectors just in front of the two inserting aids. Then insert the two connectors into the inserting aids to connect the connectors to the anchor bars.

The inserting aids make it easier to fit the child restraint system with ISOFIX and avoid damage to the seat.

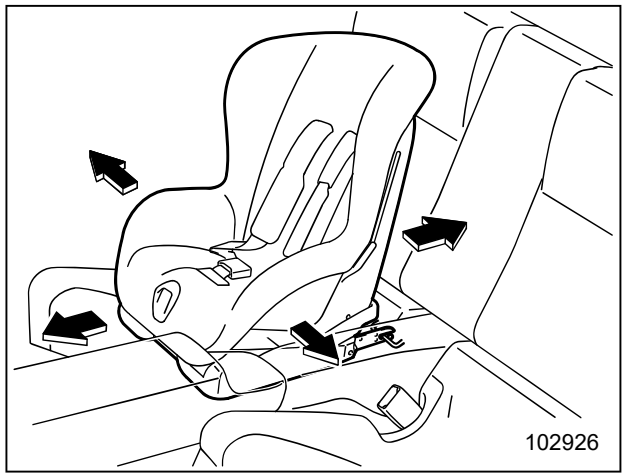

4. Before having a child sit in the child restraint system, try to move it back and forth and right and left to check if it is firmly secured. Sometimes a child restraint system can be more firmly secured by pushing it down into the seat cushion.

5. If the child restraint system requires a top tether, latch the hook onto the top tether anchorage and tighten the top tether. For additional instructions, refer to "Top Tether Anchorages" ☞P62.

For further information, refer to the instruction manual supplied by the child restraint system manufacturer.

⚠ CAUTION

When you install a child restraint system, follow the manufacturer's instructions supplied with it. After installing the child restraint system, check to ensure that it is held securely in position. If it is not held tight and secure, the danger of your child suffering personal injury in the event of an accident may be increased.

NOTE

Before installing a child restraint system, ask the manufacturer of the system to confirm that it is one approved for your vehicle.

■ Top Tether Anchorages


Your vehicle is provided with two top tether anchorages so that a child restraint system having a top tether can be installed in the rear seat. When installing a child restraint system using top tether, proceed as follows, while observing the instructions from the child restraint system manufacturer.

Since a top tether can provide additional stability by offering another connection between a child restraint system and the vehicle, we recommend that you use a top

tether whenever one is required or available.

▼ Anchorage location


Anchorages are installed as shown in the following illustration.

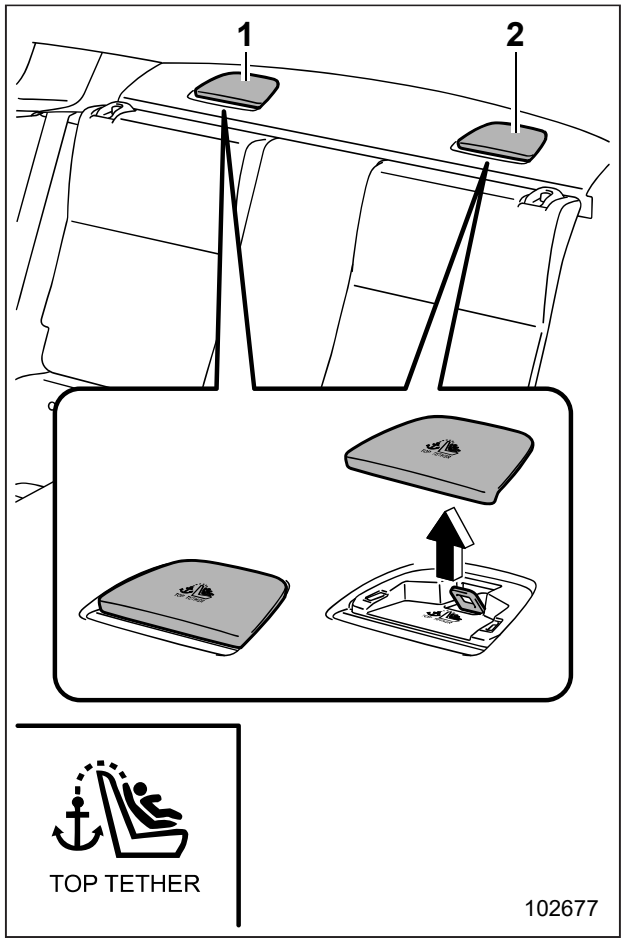


1) For left seat

2) For right seat

▼ To hook the top tether

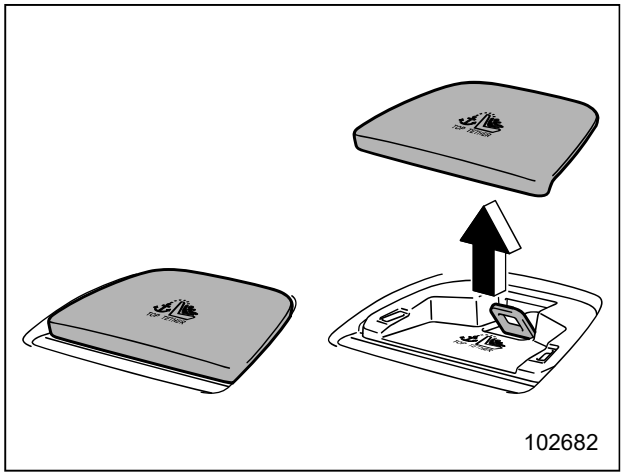

1. Remove the cover flaps to use the anchorages.

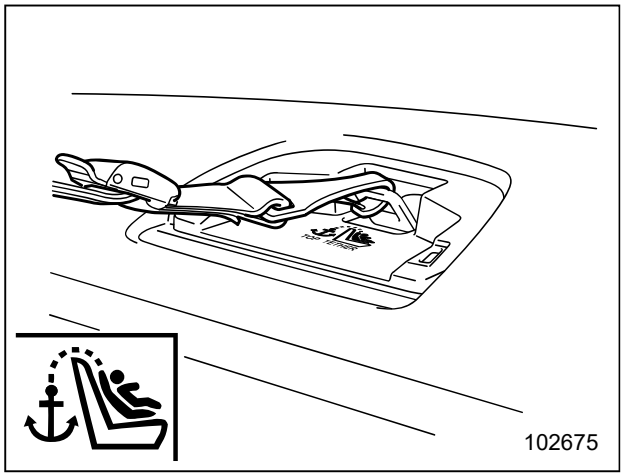

2. Fasten the top tether hook of the child restraint system to the appropriate upper anchorage.
3. Tighten the top tether securely. We recommend that contact your SUBARU dealer if you have any questions regarding the installation of a child restraint system.

After removing a child restraint system, make sure to install the top tether cover to its original position.

1-7. SRS Airbag (Supplemental Restraint System Airbag)

Supplemental Restraint System (SRS) name is used because the airbag system supplements the vehicle's seatbelts.

This vehicle is equipped with a supplemental restraint system which consists of seven airbags.
The configurations are as follows.

- Driver's and front passenger's **frontal airbags**
- Driver's and front passenger's **side airbags**
- **Curtain airbags** (for driver, front passenger, and rear passengers)
- **Knee airbag** for driver

These SRS airbags are designed only as a supplement to the primary protection provided by the seatbelt.

The system also controls seatbelt pretensioners. For operation instructions and precautions concerning the seatbelt pretensioner, refer to "Seatbelt Pretensioners" ☞P42.

■ General Precautions regarding SRS Airbag System


⚠ WARNING

- **To obtain maximum protection in the event of an accident, the driver and all passengers must always wear seatbelts when in the vehicle. The SRS airbags are designed only to be a supplement to the primary protection provided by the seatbelt. They do not eliminate the need to fasten seatbelts. In combination with the seatbelts, they offer the best combined protection in case of a serious accident.**

  Not wearing a seatbelt increases the chance of severe injury or death in a crash even when the vehicle has the SRS airbags.

  For instructions and precautions concerning the seatbelt system, refer to "Seatbelts" ☞P37.

- **The SRS side airbag and SRS curtain airbag are designed only to be a supplement to the primary protection provided by the seatbelt. They do not eliminate the need to fasten seatbelts. It is also important to wear your seatbelt to help avoid injuries that can result when an occupant is not seated in a proper upright position.**

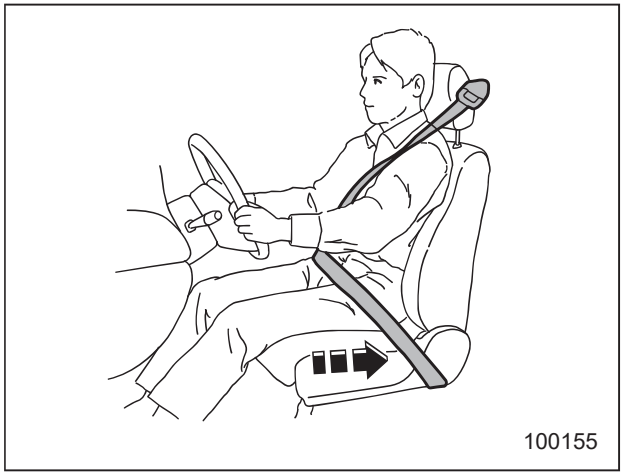

⚠ WARNING

The SRS airbags deploy with considerable speed and force. Occupants who are out of the proper position when the SRS airbags deploy could suffer very serious injuries. Because the SRS airbags need enough space for deployment, the driver should always sit upright and well back in the seat as far from the steering wheel as practical while still maintaining full vehicle control and the front passenger should move the seat as far back as possible and sit upright and well back in the seat.




⚠ WARNING

- **Do not sit or lean unnecessarily close to either door. The SRS side airbags are stored in both front seat seatbacks next to the door, and they provide protection by deploying rapidly (faster than the blink of an eye) in the event of a side impact collision. However, the force of SRS side airbag deployment may cause injuries if the head or other parts of the body are too close to the SRS side airbag.**
- **Do not sit or lean unnecessarily close to the door, windows or pillars on either side. Also, do not put your head, arms or hands out of the window. The curtain airbags on both sides of the cabin are stored in the roof side (between the front pillar and a point over the rear seat), and they provide protection by deploying rapidly (faster than the blink of an eye) in the event of a side impact or an offset frontal collision.**
- **Do not sit or lean unnecessarily close to the SRS airbag. Because the SRS airbag deploys with considerable speed – faster than the blink of an eye – and force to protect in high speed collisions, the force of an airbag can injure an occupant whose body is too close to SRS airbag.**

  It is also important to wear your seatbelt to help avoid injuries that can result when the SRS airbag contacts an occupant not in the proper position such as one thrown forward during pre-accident braking.


  Even when properly positioned, there remains a possibility that an occupant may suffer minor injury such as abrasions and bruises to the face or arms because of the SRS airbag deployment force.


– CONTINUED –

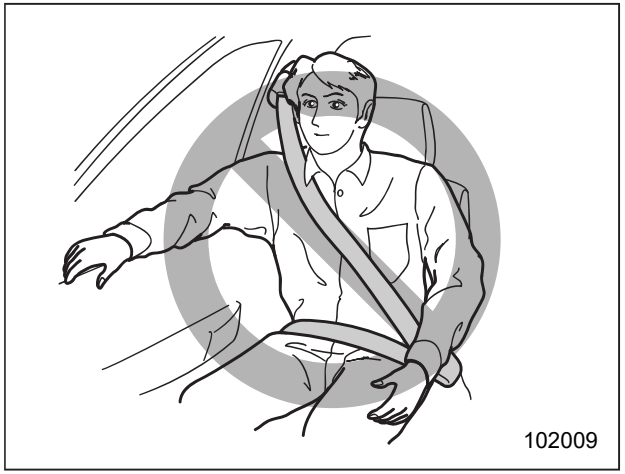

⚠ WARNING


- **Do not rest your arm on either door or its internal trim. You could be injured in the event of SRS side airbag deployment.**
- **Do not place any objects over or near the SRS airbag cover or between you and the SRS airbag. If the SRS airbag deploys, those objects could interfere with its proper operation and could be propelled inside the vehicle and cause injury.**

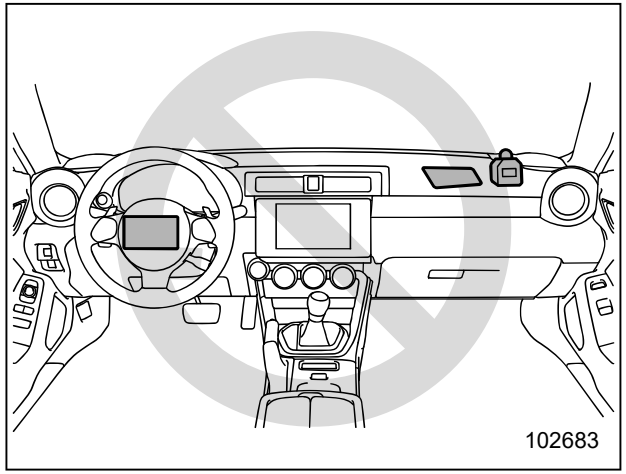

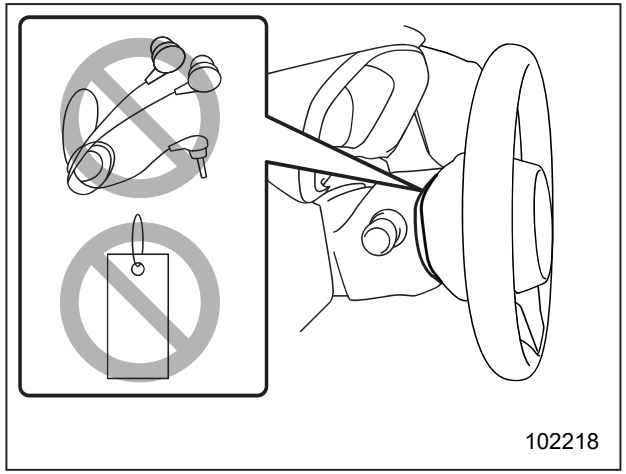


⚠ WARNING

- **Do not put any objects (including straps or cords) over the steering wheel pad, column cover, or dashboard.**
  - **These objects could be entangled with the steering wheel, preventing the SRS frontal airbag, etc. from operating properly.**
  - **If the SRS frontal airbag deploys, these objects could be propelled inside the vehicle, causing injury.**
- **Do not put any objects under the driver's side of the instrument panel. If the SRS knee airbag deploys, those objects could interfere with its proper operation and could be propelled inside the vehicle and cause injury.**

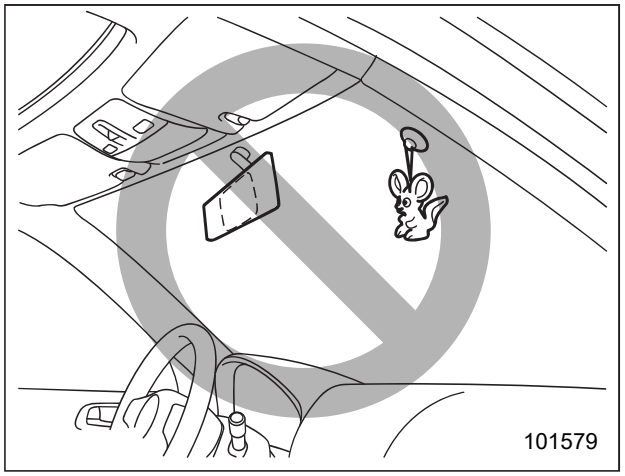


⚠ WARNING

Do not attach accessories to the windshield, or fit an extra-wide mirror over the inside rear view mirror. If the SRS airbag deploys, those objects could become projectiles that could seriously injure vehicle occupants.

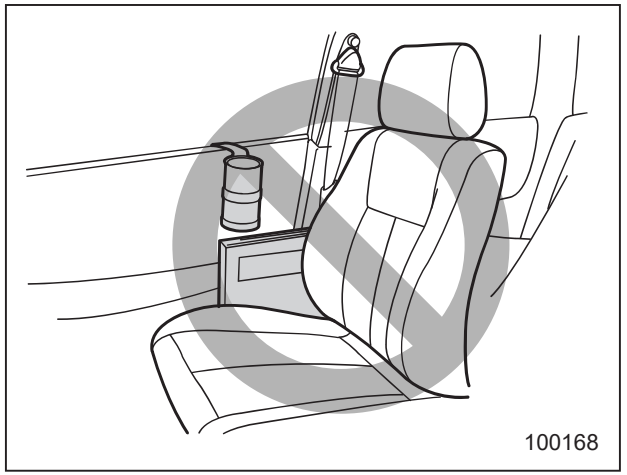

⚠ WARNING

- **Do not attach accessories to the door trim or near either SRS side airbags and do not place objects near the SRS side airbags. In the event of SRS side airbag deployment, they could be propelled dangerously toward the vehicle's occupants and cause injuries.**
- **Do not attach a hands-free microphone or any other accessory to a front pillar, a center pillar, a rear pillar, the windshield, a side window, or any other cabin surface that would be near a deploying SRS curtain airbag. A hands-free microphone or other accessory in such a location could be propelled through the cabin with great force by the curtain airbag, or it could prevent correct deployment of the curtain airbag. In either case, the result could be serious injuries.**
- **Never hang or place coat hangers or other hard or pointed objects near the side windows. If such items are present when the SRS curtain airbags deploy, they could be thrown through the passenger compartment and cause serious injuries. They could also prevent proper operation of the SRS curtain airbags.**

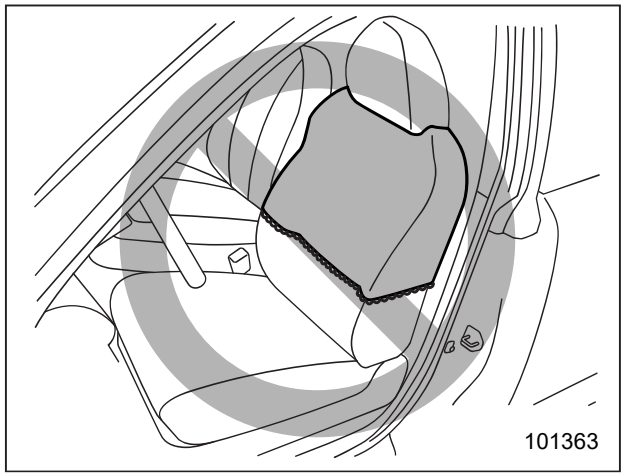

– CONTINUED –

⚠ WARNING

- **Do not put any kind of cover or clothes or other objects over either front seatback and do not attach labels or stickers to the front seat surface on or near the SRS side airbag. They could prevent proper deployment of the SRS side airbag, reducing protection available to the front seat's occupant.**
- **Do not install a seat cover unless it is a genuine SUBARU seat cover exclusively designed for use with the SRS airbag. Even when using a genuine SUBARU seat cover, the SRS side airbag system may not function normally if the seat cover is not installed correctly.**



100082


⚠ WARNING

Put children in the REAR seat properly restrained at all times in a child restraint device or in a seatbelt, whichever is appropriate for the child's age, height and weight. The SRS airbag deploys with considerable speed and force and can injure or even kill children, especially if they are not restrained or improperly restrained. Because children are lighter and weaker than adults, their risk of being injured from deployment is greater.

Secure ALL types of child restraint devices (including forward facing child seats) in the REAR seats at all times.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.


For instructions and precautions concerning the child restraint system, refer to "Child Restraint Systems" ☞P45.

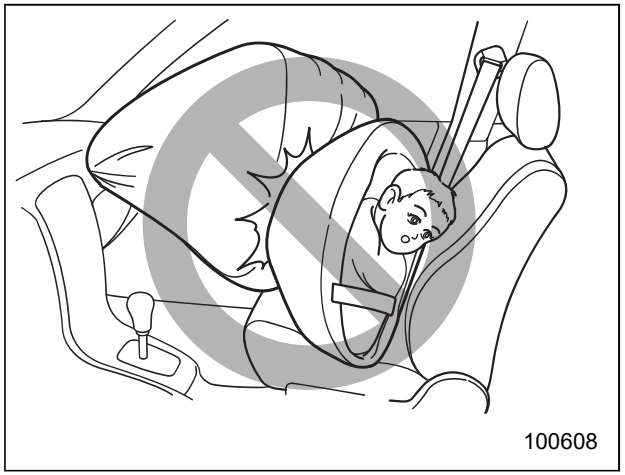

100608


⚠ WARNING

NEVER INSTALL A CHILD SEAT IN THE FRONT SEAT. DOING SO RISKS SERIOUS INJURY OR DEATH TO THE CHILD BY PLACING THE CHILD'S HEAD TOO CLOSE TO THE SRS AIRBAG.

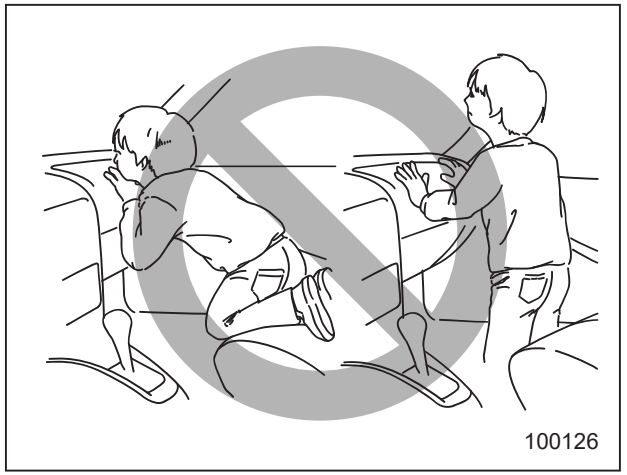
100126


⚠ WARNING


Never allow a child to stand up or kneel on the front passenger's seat. The SRS airbag deploys with considerable force and can injure or even kill the child.

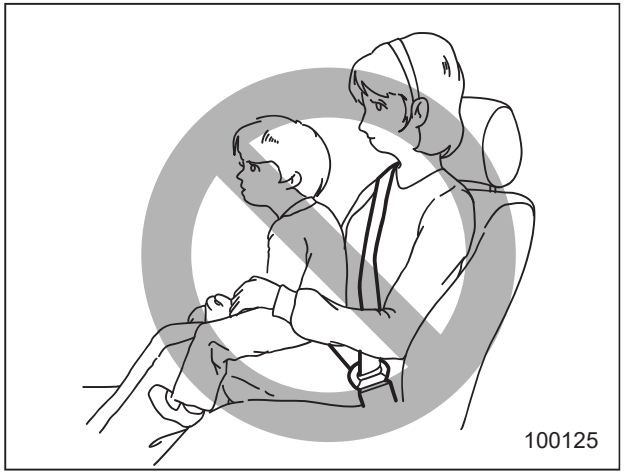
100125

⚠ WARNING

Never hold a child on your lap or in your arms. The SRS airbag deploys with considerable force and can injure or even kill the child.

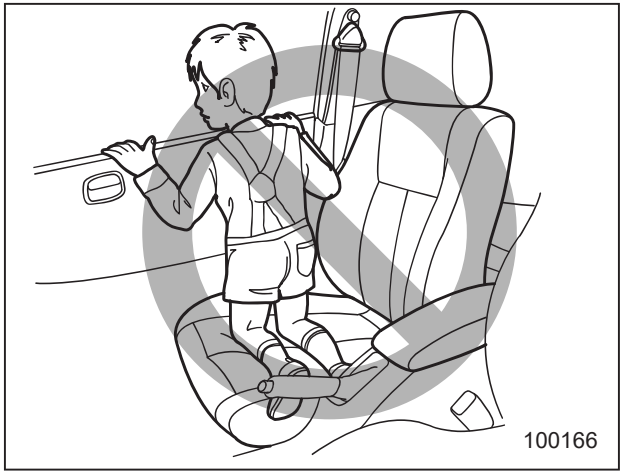
100166

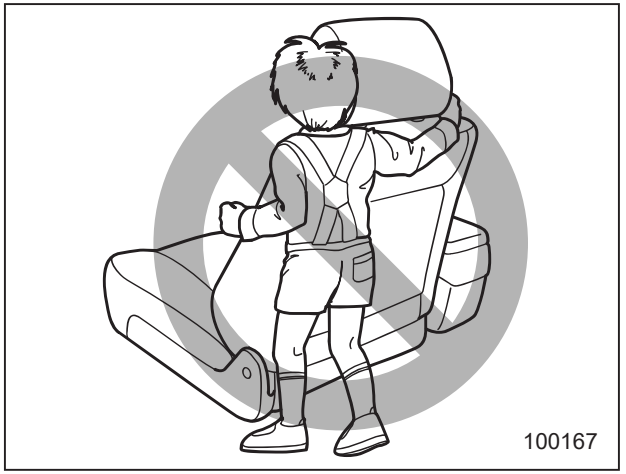
100167

⚠ WARNING

- **Never allow a child to do the following.**
  - **– Kneel on any passenger's seat facing the side window.**

– CONTINUED –

– Wrap his/her arms around the front seat seatback.
– Put his/her head, arms or other parts of the body out of the window.

In the event of an accident, the force of SRS side airbag and/or SRS curtain airbag deployment could injure the child seriously because his/her head, arms or other parts of the body are too close to the SRS side airbag and/or SRS curtain airbag.

- Since your vehicle is also equipped with a front passenger's SRS frontal airbag, children aged 12 and under or 1.5 m (4 feet 11 inches) tall or less should be placed in the rear seat anyway and should be properly restrained at all times.


⚠ CAUTION

- When the SRS airbag deploys, some smoke will be released. This smoke could cause breathing problems for people with a history of asthma or other breathing trouble. If you or your passengers have breathing problems after SRS airbag deploys, get fresh air promptly.
- A deploying SRS airbag releases hot gas. Occupants could get burned if they come into direct contact with the hot gas.

NOTE

- When you sell your vehicle, we urge you to inform the buyer that the vehicle is equipped with SRS airbags. Also, notify the buyer of the applicable section in this Owner's Manual.
- If the SRS airbag deploys, the fuel supply will be cut off to reduce the risk of fire caused by leaking fuel. For details about restarting of the engine, refer to "If Your Vehicle Is Involved in an Accident" ☞P317.

■ Components

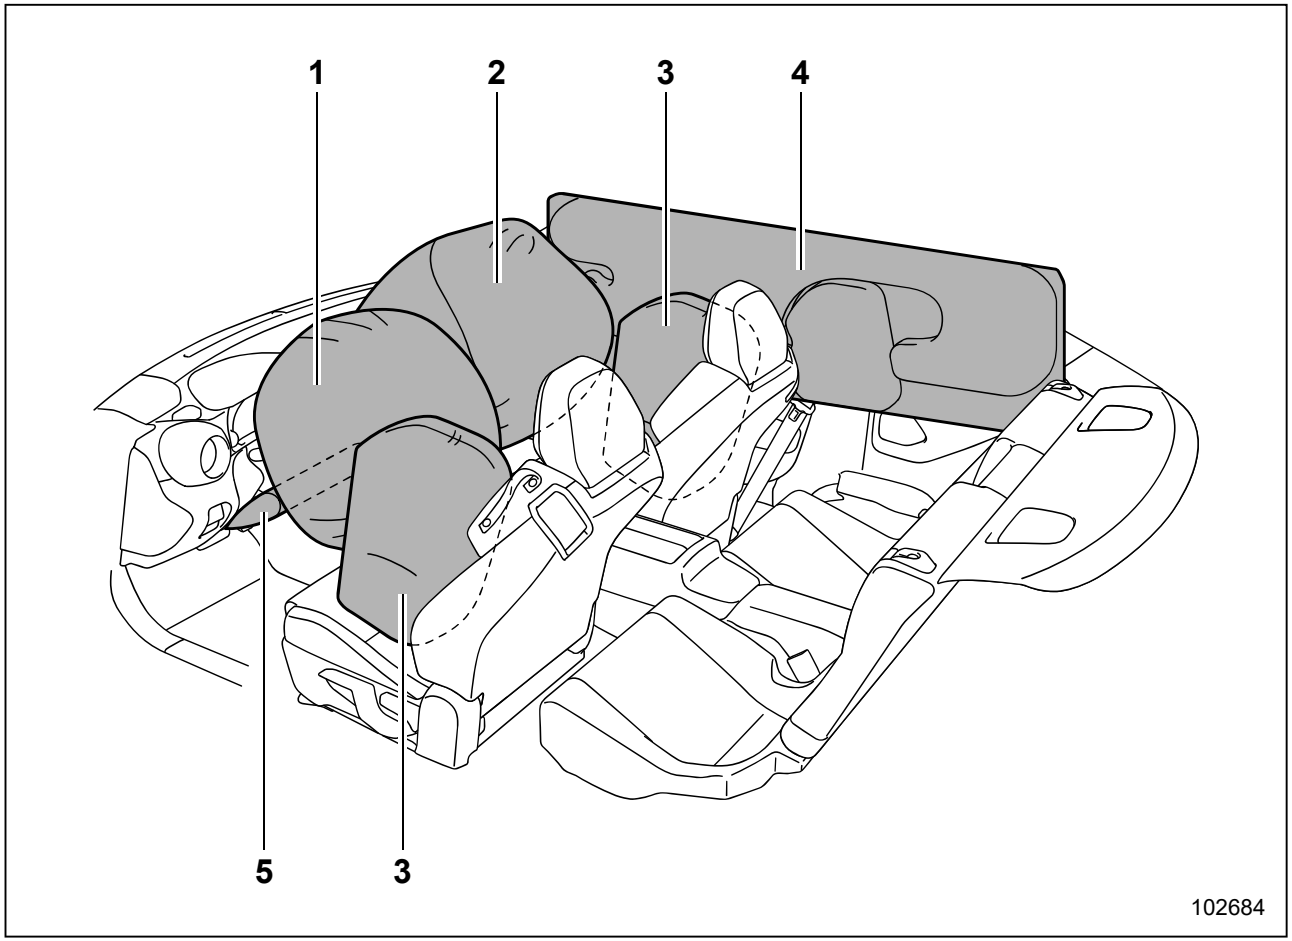

1) Driver's SRS frontal airbag
2) Front passenger's SRS frontal airbag
3) SRS side airbag
4) SRS curtain airbag
5) SRS knee airbag

The SRS airbags are stowed in the following locations.

Driver's SRS frontal airbag: in the center portion of the steering wheel

An "SRS AIRBAG" mark is located on the pad of the airbag.

Front passenger's SRS frontal airbag: near the top of the right side of dashboard
An "SRS AIRBAG" mark is located on the right corner of the dashboard.

SRS side airbag: in the door side of each front seat seatback
An "SRS AIRBAG" marks are located on the door side of each front seat cushion.


SRS curtain airbag: in the roof side (between the front pillar and a point over the rear seat)

"SRS AIRBAG" marks are located at the top of each center pillar.

SRS knee airbag: under the steering column


An "SRS AIRBAG" mark is located at the door of the airbag.

– CONTINUED –

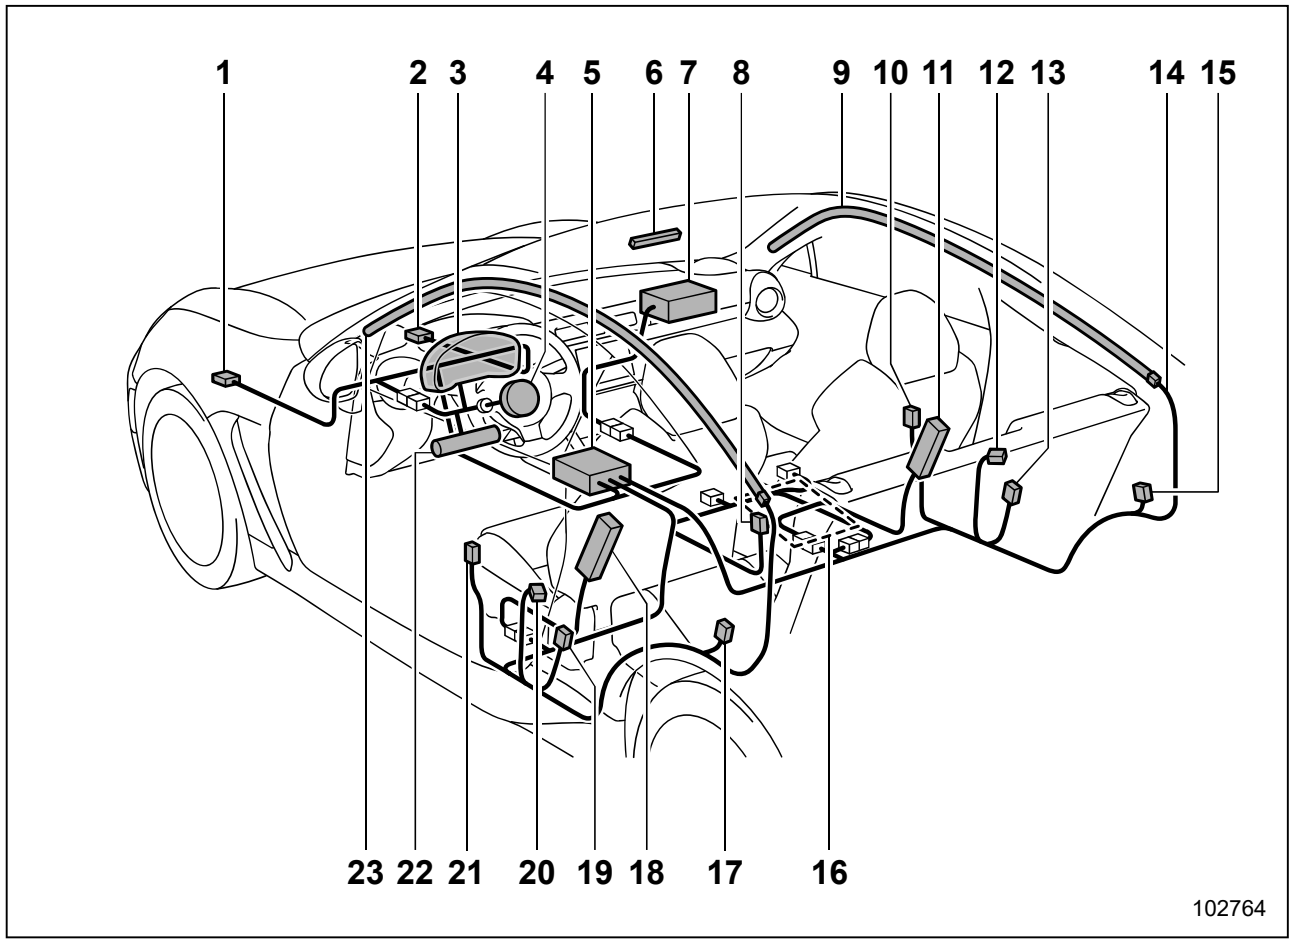

Left-hand drive models

1) Front impact sensor (left-hand side)
2) Front impact sensor (right-hand side)
3) SRS airbag system warning light
4) Frontal airbag module (driver's side)
5) Airbag control module (including impact sensors)
6) Front passenger's frontal airbag ON and OFF indicator (if equipped)
7) Frontal airbag module (front passenger's side)
8) Seatbelt buckle switch (front passenger's side) (if equipped)
9) Curtain airbag module (right-hand side)
10) Side impact sensor (door right-hand side)
11) Side airbag module (front passenger's side)
12) Seatbelt pretensioner and adaptive force limiter (if equipped) (front passenger's side)
13) Side impact sensor (center pillar right-hand side)
14) Airbag wiring
15) Side impact sensor (rear wheel house right-hand side)
16) Front passenger's occupant detection sensors (if equipped)
17) Side impact sensor (rear wheel house left-hand side)
18) Side airbag module (driver's side)
19) Side impact sensor (center pillar left-hand side)
20) Seatbelt pretensioner (driver's side)
21) Side impact sensor (door left-hand side)
22) Knee airbag module (driver's side)
23) Curtain airbag module (left-hand side)

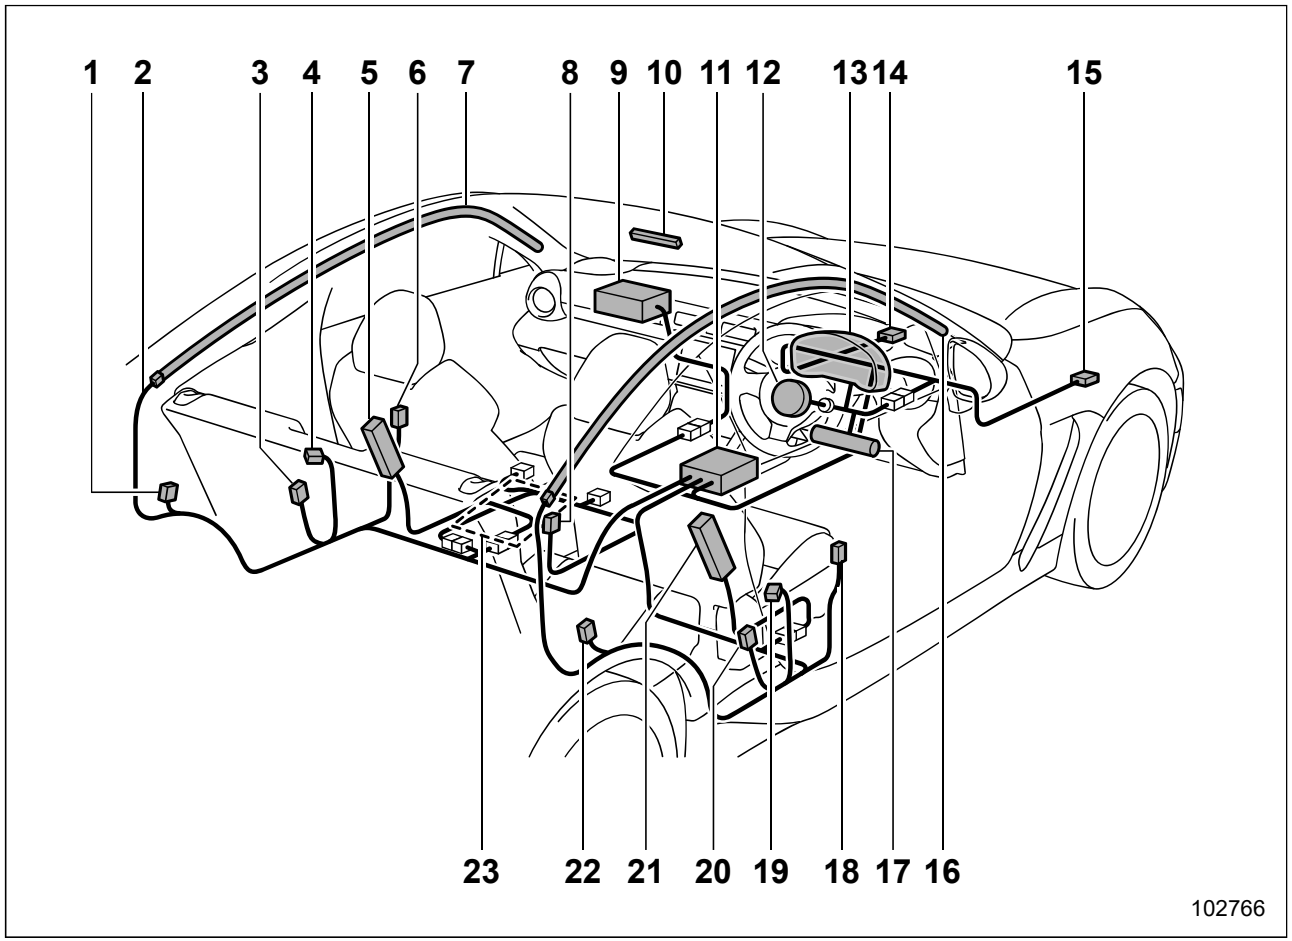

Right-hand drive models

1) Side impact sensor (rear wheel house left-hand side)
2) Airbag wiring
3) Side impact sensor (center pillar left-hand side)
4) Seatbelt pretensioner and adaptive force limiter (if equipped) (front passenger's side)
5) Side airbag module (front passenger's side)
6) Side impact sensor (door left-hand side)
7) Curtain airbag module (left-hand side)
8) Seatbelt buckle switch (front passenger's side) (if equipped)
9) Frontal airbag module (front passenger's side)
10) Front passenger's frontal airbag ON and OFF indicator (if equipped)
11) Airbag control module (including impact sensors)
12) Frontal airbag module (driver's side)
13) SRS airbag system warning light
14) Front impact sensor (left-hand side)
15) Front impact sensor (right-hand side)
16) Curtain airbag module (right-hand side)
17) Knee airbag module (driver's side)
18) Side impact sensor (door right-hand side)
19) Seatbelt pretensioner (driver's side)
20) Side impact sensor (center pillar right-hand side)
21) Side airbag module (driver's side)
22) Side impact sensor (rear wheel house right-hand side)

– CONTINUED –

23) Front passenger's occupant detection sensors (if equipped)

■ SRS airbag

⚠ WARNING

Warning labels are located on both sides of the front passenger's sun visor. Carefully read the description in "Child Restraint Systems" ☞P45.

For the locations of the SRS airbags, refer to "SRS Airbag (Supplemental Restraint System Airbag)" ☞P64.

In a moderate to severe frontal collision, the following components deploy.

- SRS frontal airbag for driver
- SRS frontal airbag for front passenger
- SRS curtain airbag*
- SRS knee airbag for driver


*: When an offset frontal collision that is severe enough to deploy the front airbag occurs.

These components supplement the seatbelts by reducing the impact to the occupant's head, chest and knees.

In a moderate to severe side impact collision, the SRS side airbag on the impacted side of the vehicle deploys between the occupant and the door panel and supplements the seatbelt by reducing the impact to the occupant's chest and waist. The SRS side airbag operates only for front seat occupants.

In a moderate to severe side impact collision, the SRS curtain airbag on the impacted side of the vehicle deploys between the occupant and the side window and supplements the seatbelt by reducing the impact to the occupant's head.

▼ Occupant detection system (if equipped)

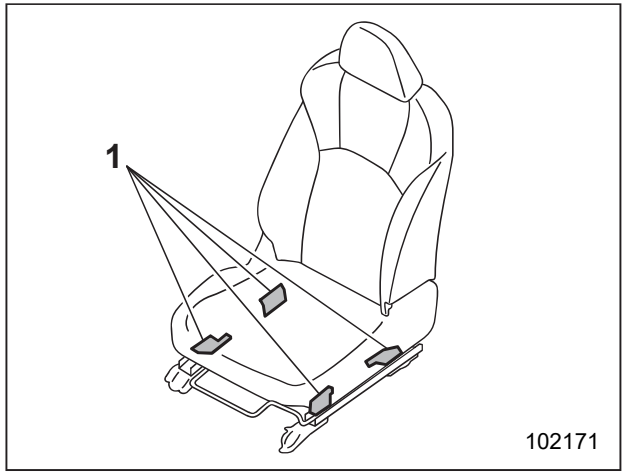


1) Occupant detection sensors

The occupant detection system sensors are installed between the seat and seat rails, and monitors the physique and posture of the front passenger. The occupant detection system determines whether the front passenger's SRS frontal airbag should be deployed or not from the physique and posture of the front passenger.

The occupant detection system may not inflate the front passenger's SRS frontal airbag even when the driver's SRS frontal airbag deploys. This is normal.

⚠ WARNING

Do not kick the front passenger seat or subject it to severe impact. Otherwise, the SRS airbag system warning light may illuminate to indicate a malfunction of the front passenger occupant detection system. In this case, contact your SUBARU dealer immediately.

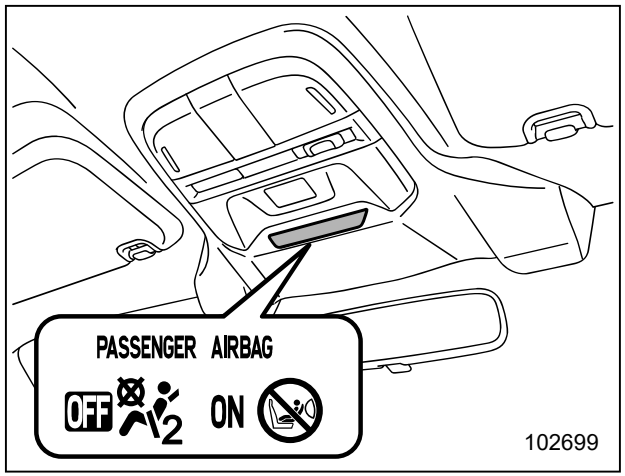

ON : Front passenger's frontal airbag ON indicator

OFF : Front passenger's frontal airbag OFF indicator

If the front passenger's frontal airbag ON and OFF indicators do not work properly, do not allow anyone to sit on the front passenger's seat and have the occupant detection system checked by your SUBARU dealer.

Also, if luggage is placed on the front passenger's seat, this may adversely affect the ability of the occupant detection system. This may prevent the front passenger's frontal airbag ON and OFF indicators from working properly. Check that the indicators work properly.

When the OFF indicator turns off and the ON indicator illuminates, the front passenger's SRS frontal airbag may deploy during a collision. Remove luggage and electronic devices from the front passenger's seat.

▼ Front passenger's SRS frontal airbag for models with occupant detection system

⚠ CAUTION

Observe the following precautions. Failure to do so may prevent the front passenger's SRS frontal airbag from functioning correctly or cause the system to fail.

- **Do not apply any strong impact to the front passenger's seat such as by kicking.**
- **Do not let rear passengers rest their feet between the front seatback and seat cushion.**
- **Do not spill liquid on the front passenger's seat. If liquid is spilled, wipe it off immediately.**
- **Do not remove or disassemble the front passenger's seat.**
- **Do not install any accessory (such as an audio amplifier) other than a genuine SUBARU accessory or an equivalent under the front passenger's seat.**
- **Do not place anything (shoes, umbrella, etc.) under the front passenger's seat.**
- **Do not place any objects (books, etc.) around the front passenger's seat.**
- **Do not use the front passenger's seat with the head restraint removed.**
- **Do not leave any articles on the front passenger's seat or the seatbelt tongue and buckle engaged when you leave your vehicle.**
- **Do not put sharp object(s) on the seat or pierce the seat upholstery.**
- **Do not place a magnet near the seatbelt buckle and the seatbelt retractor.**
- **Do not use front seats with their forward-backward position and seatback not being locked into place securely. If any of them are not locked securely, adjust them again. For adjusting procedure, refer to "Forward and backward adjustment" ☞P31 and "Reclining the seatback" ☞P31.**

– CONTINUED –

If the seatbelt buckle switch and/or front passenger's occupant detection system have failed, the SRS airbag system warning light will illuminate. We recommend that you have the system inspected by your SUBARU dealer immediately if the SRS airbag system warning light illuminates.

If your vehicle has sustained impact, this may affect the proper function of the front passenger's SRS frontal airbag system. We recommend that you have your vehicle inspected at your SUBARU dealer. Do not use the front passenger's seat while driving the vehicle to your SUBARU dealer or another service center.

NOTE

The front passenger's SRS side airbag and SRS curtain airbag are not controlled by the SRS frontal airbag system.

▼ Passenger's frontal airbag ON and OFF indicators (if equipped)

Refer to "Front Passenger's Frontal Airbag ON and OFF Indicators (If Equipped)" ☞P128.

▼ Conditions in which front passenger's SRS frontal airbag is not activated (models with occupant detection system)

The front passenger's SRS frontal airbag will not be activated when any of the following conditions are met regarding the front passenger's seat:

- The seat is empty.
- The seat is equipped with an appropriate child restraint system and an infant is restrained in it. (See WARNING that follows.)
- The system is being checked after the ignition switch is turned to the "ON" position.
- The front passenger's occupant detection system is malfunctioning.

⚠ WARNING


NEVER INSTALL A CHILD SEAT IN THE FRONT SEAT EVEN IF THE FRONT PASSENGER'S SRS FRONTAL AIRBAG IS DEACTIVATED. Be sure to install it in the REAR seat in a correct manner. Also, it is strongly recommended that any forward facing child seat or booster seat be installed in the REAR seat, and that even children who have outgrown a child restraint system be also seated in the REAR seat. This is because children sitting in the front passenger's seat may be killed or severely injured should the front passenger's SRS frontal airbag deploy. REAR seats are the safest place for children.

⚠ CAUTION

Observe the following precautions as it increase the load on the front passenger's seat and not work properly.

- **Do not install any accessory such as a table or TV onto the seatback.**

- **Do not allow the rear seat occupant to place his/her hands or legs on the front passenger's seatback, or allow him/her to pull the seatback.**

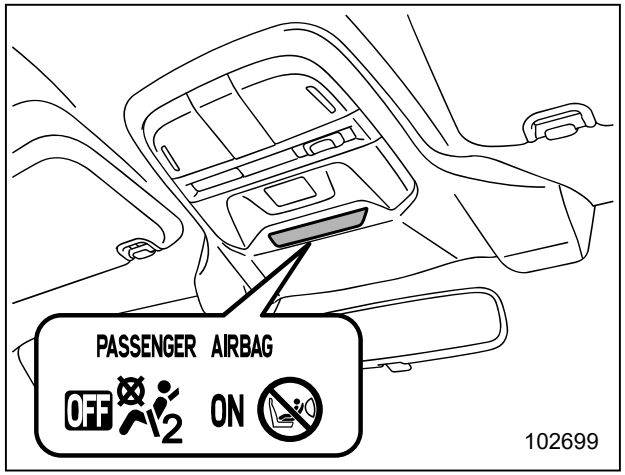

: Front passenger's frontal airbag ON indicator

: Front passenger's frontal airbag OFF indicator

If you think that the Front passenger's frontal airbag ON/OFF indicator is incorrect, take the following actions.

- Ensure that no article is placed on the seat other than the occupant.
- Ensure that the backward-forward position and seatback of front passenger's seat are locked into place securely by moving the seat back and forth (models with manual seat only).

If the ON indicator still remains illuminated while the OFF indicator turns off after taking relevant corrective actions described above, we recommend that you immediately contact your SUBARU dealer for an inspection.

Even if the system has passed the dealer inspection, it is recommended that on subsequent trips the small adult always take the rear seat.

NOTE

When a small adult is seated in the front passenger's seat, the SRS frontal airbag system may or may not activate the front passenger's SRS frontal airbag depending on the occupant's seating posture. If the OFF indicator remains illuminated while the ON indicator turns off when a small adult is seated in the front passenger's seat, see next section "Conditions in which front passenger's SRS frontal airbag is activated."

▼ Conditions in which front passenger's SRS frontal airbag is activated (models with occupant detection system)

The front passenger's SRS frontal airbag will be activated for deployment upon impact when any of the following conditions are met regarding the front passenger's seat.

- When the seat is occupied by an adult.
- When certain items (e.g. jug of water) are placed on the seat.

⚠ CAUTION

When the front passenger's seat is occupied by an adult, do not place anything (shoes, umbrella, etc.) under the front passenger's seat. Doing so may deactivate the front passenger's SRS frontal airbag despite the fact that the seat is occupied by an adult. This may result in personal injury.

- **Do not allow the rear seat occupant to lift the front passenger's seat cushion using his/her feet.**
- **Do not squeeze any article between the front passenger's seat and side trim/pillar, door or center console box. This may lift the seat cushion.**

– CONTINUED –

▽ **If the passenger's frontal airbag OFF indicator illuminates and the ON indicator turns off even when the front passenger's seat is occupied by an adult**

This can be caused by the adult incorrectly sitting in the front passenger's seat.

1. Turn the ignition switch to the "OFF" position.
2. Ask the front passenger to set the seatback to the upright position, sit up straight in the center of the seat cushion, correctly fasten the seatbelt, position his/her legs out forward, and adjust the seat to the rearmost position.
3. Turn the ignition switch to the "ON" position.

If the OFF indicator remains illuminated while the ON indicator remains off, take the following actions.

1. Turn the ignition switch to the "OFF" position.
2. Make sure that the front passenger does not use a blanket, seat cushion, seat cover, seat heater or massager, etc.
3. If wearing excessive layers of clothing, the front passenger should remove any unnecessary items before sitting in the front passenger's seat, or should sit in a rear seat.
4. Turn the ignition switch to the "ON" position and wait 6 seconds to allow the system to complete self-checking. Following the system check, both indicators turn off for 2 seconds. Now, the ON indicator should illuminate while the OFF indicator remains off.

If the OFF indicator still remains illuminated while the ON indicator remains off, ask the occupant to move to the rear seat. We recommend that you immediately contact your SUBARU dealer for an inspection.

■ System operation


⚠ CAUTION

Do not touch the SRS airbag system components with bare hands right after deployment. Doing so can cause burns because the components can be very hot as a result of deployment.

The SRS airbags can function only when the ignition switch is in the "ON" position.

When SRS airbags deploy, a sudden, fairly loud inflation noise will be heard and some smoke will be released. These occurrences are a normal result of the deployment. This smoke does not indicate a fire in the vehicle.

▼ SRS frontal airbag operation

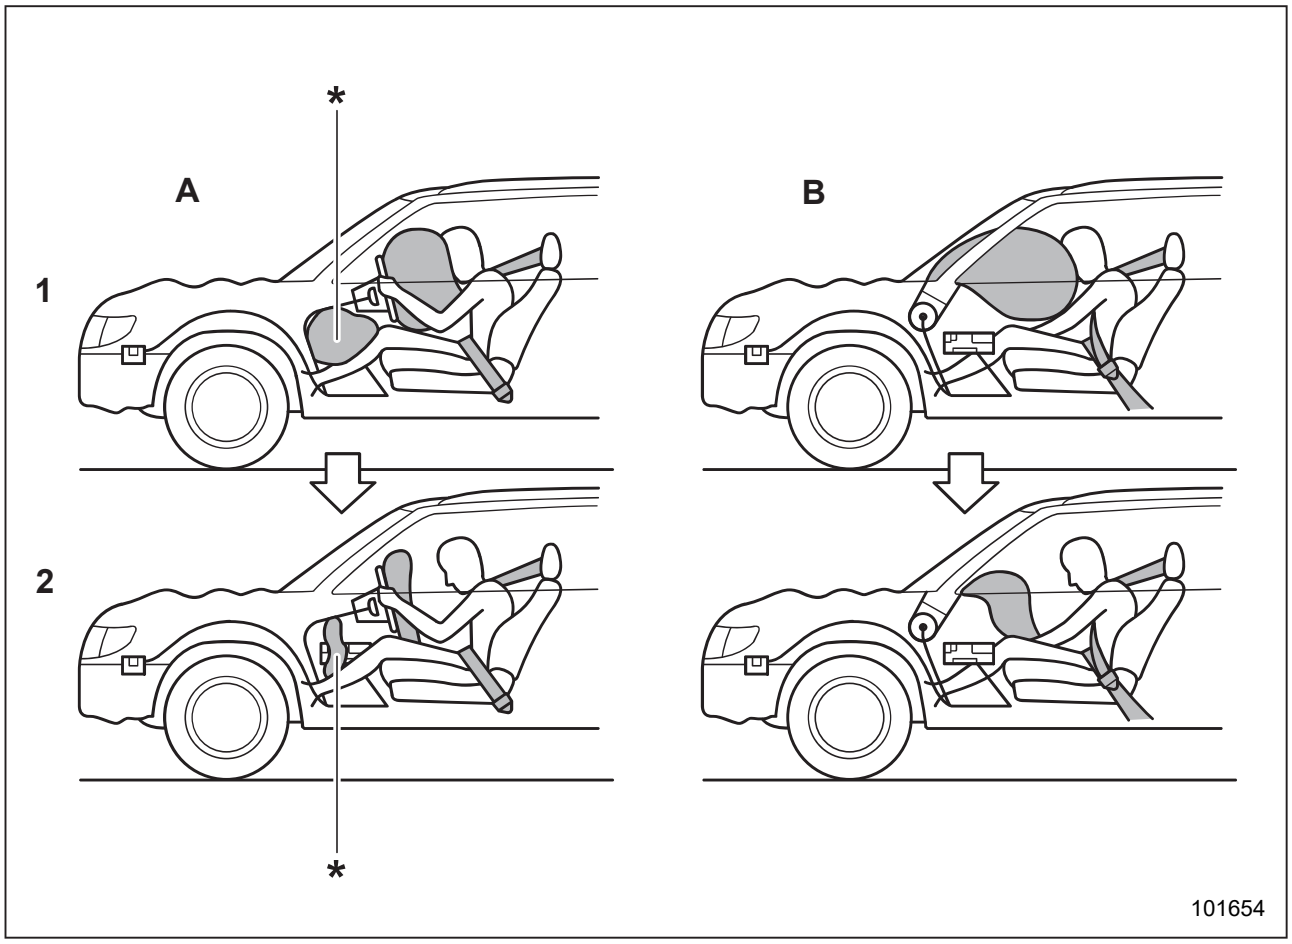

A) Driver's side
B) Passenger's side
1) SRS AIRBAGs deploy as soon as a collision occurs.
2) After deployment, SRS AIRBAGs start to deflate immediately so that the driver's vision is not obstructed.
*: Knee airbag

If the front impact sensors located on both the right and left sides at the front of the vehicle and the impact sensors in the airbag control module detect a certain predetermined amount of force during a frontal collision, the control module sends signals to the frontal airbag modules instructing them to inflate the SRS frontal airbags. Then both airbag modules produce gas, which instantly inflates driver's and passenger's SRS frontal airbags. The SRS knee airbag is also inflated in combination with the SRS frontal airbags.

After deployment, the SRS airbags immediately start to deflate so that the driver's vision is not obstructed and the driver's ability to maintain control of the vehicle is not interfered with. The time required from detecting impact to the deflation of the SRS airbag after deployment is shorter than the blink of an eye.

– CONTINUED –


If the vehicle is equipped with the occupant detection system for the front passenger's seat, the SRS system detects whether the front passenger's seat is occupied by a passenger or not. If the seat is not occupied, the system does not inflate the front passenger's SRS airbag.

The SRS frontal airbag (and also the knee airbag) is designed to deploy in the event of an accident involving a moderate to severe frontal collision. It is not designed to deploy in most lesser frontal impacts because the necessary protection can be achieved by the seatbelt alone. Also, it is not designed to deploy in most side or rear impacts or in most roll-over accidents because deployment of the SRS frontal airbag would not help the occupant in those situations.

The SRS airbag is designed to function on a one-time-only basis.


SRS airbag deployment depends on the level of force experienced in the passenger compartment during a collision. That level differs from one type of collision to another, and it may have no bearing on the visible damage done to the vehicle itself.

▽ When will the SRS frontal airbag most likely deploy?

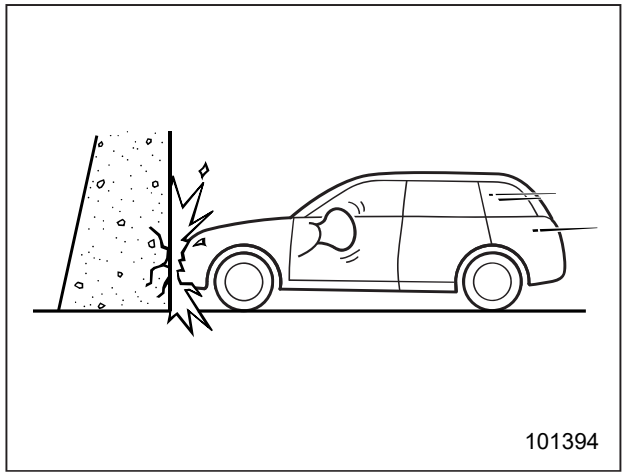

A head-on collision against a thick concrete wall at a vehicle speed of 20 to 30 km/h (12 to 19 mph) or higher activates the SRS frontal airbag. The SRS frontal airbag will also be activated when the vehicle is exposed to a frontal impact similar in fashion and magnitude to the collision described above.

▽ At what other times might the SRS frontal airbag deploy?

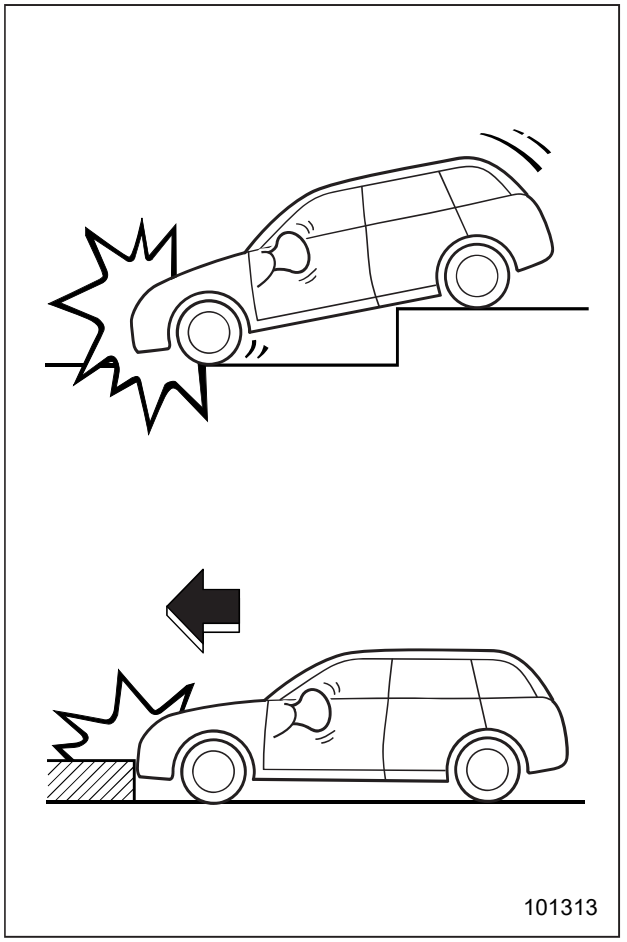


The SRS frontal airbag may be activated when the vehicle sustains a hard impact in the undercarriage area from the road surface (such as when the vehicle plunges into a deep ditch, is severely

impacted or knocked hard against an obstacle on the road such as a curb).

– CONTINUED –


▽ When is the SRS frontal airbag unlikely to deploy?

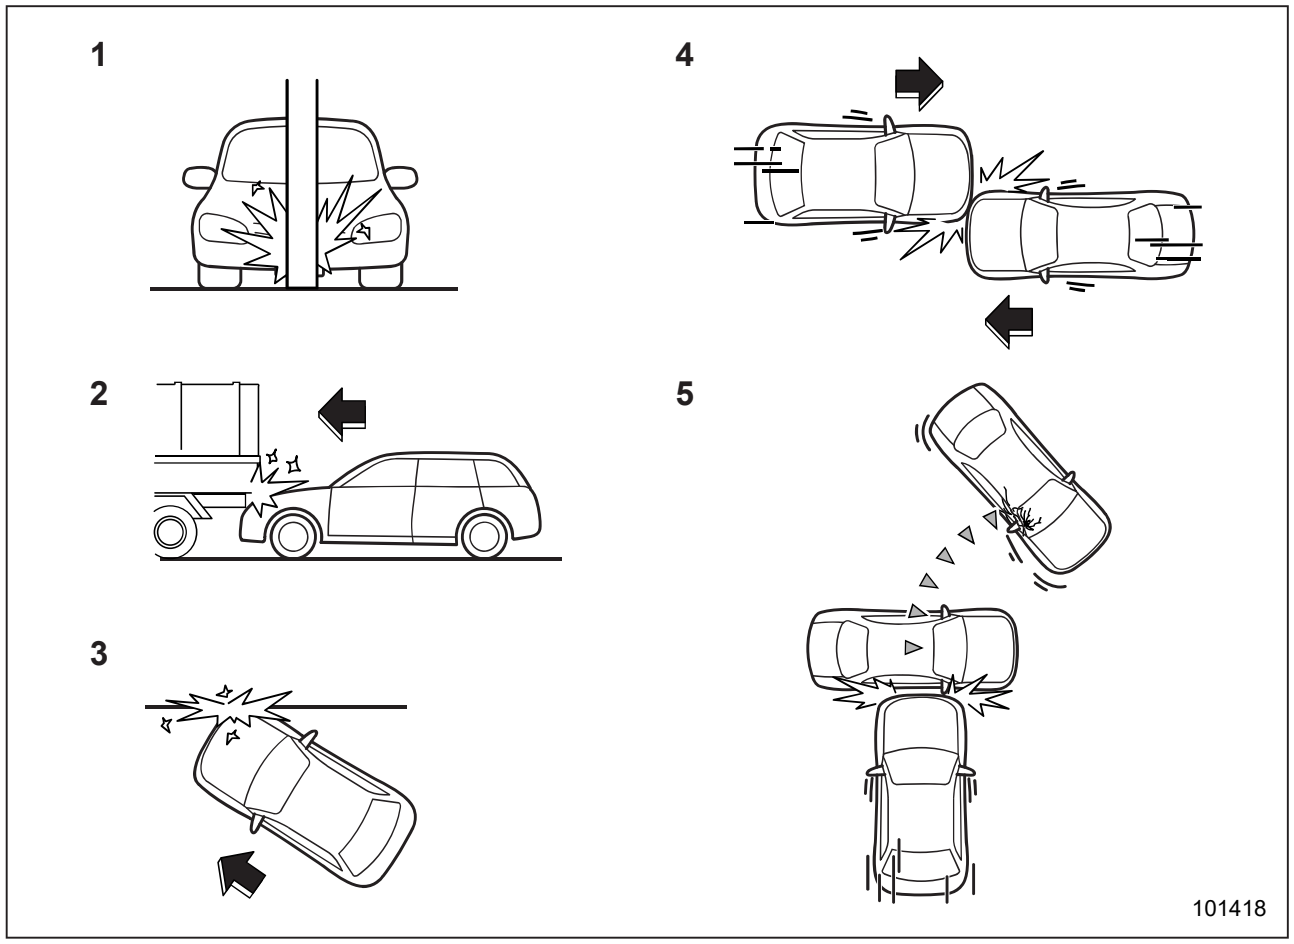


1) The vehicle strikes an object, such as a telephone pole or sign pole.
2) The vehicle slides under the load bed of a truck.
3) The vehicle sustains an oblique offset frontal impact.
4) The vehicle sustains an offset frontal collision.
5) The vehicle strikes an object that can move or deform, such as a parked vehicle.

There are many types of collisions which might not necessarily require SRS frontal airbag deployment. In the event of accidents like those illustrated, the SRS frontal airbag may not deploy depending on the level of accident forces involved.

▽ When will the SRS frontal airbag not deploy?

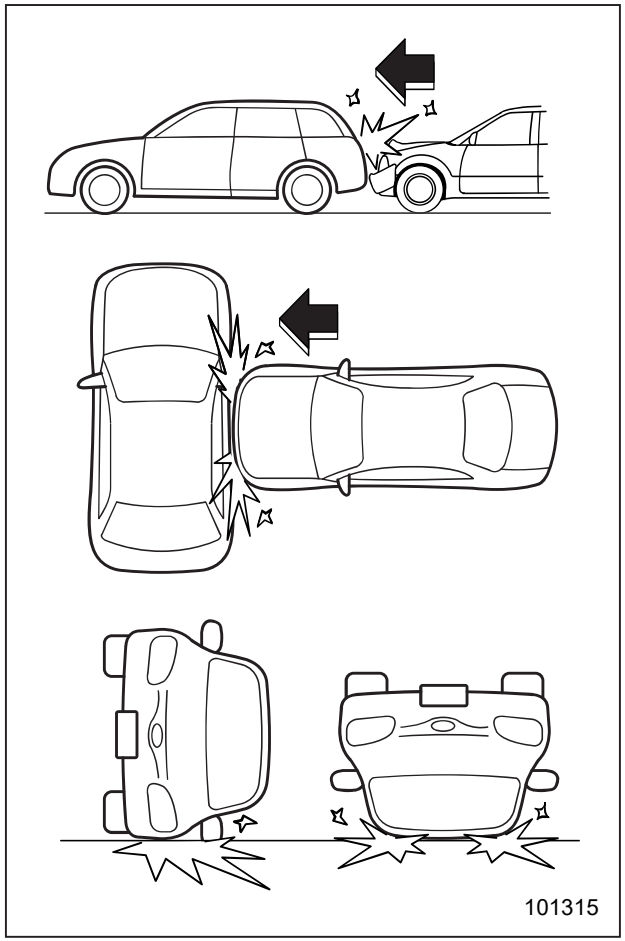

The SRS frontal airbag is not designed to deploy in most cases if the vehicle is struck from the side or from behind, or if it rolls onto its side or roof, or if it is involved in a low-speed frontal collision.

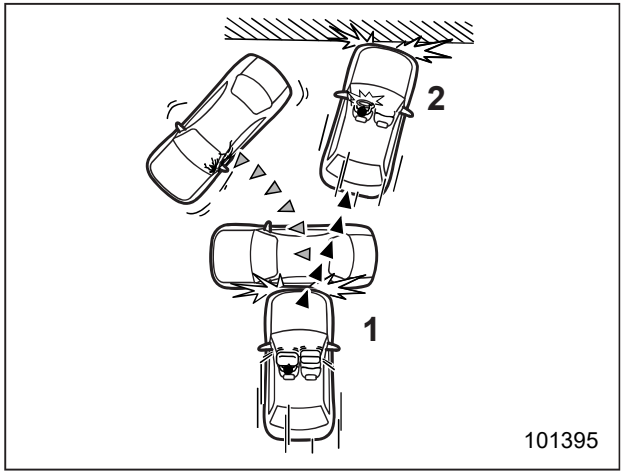


1) First impact
2) Second impact

In an accident where the vehicle is impacted more than once, the SRS frontal airbag deploys only once on the first impact.

Example: In the case of a double collision, first with another vehicle, then against a concrete wall in immediate succession, once the SRS frontal airbag is activated on the first impact, it will not be activated on the second.

▼ SRS side airbag and SRS curtain airbag operation

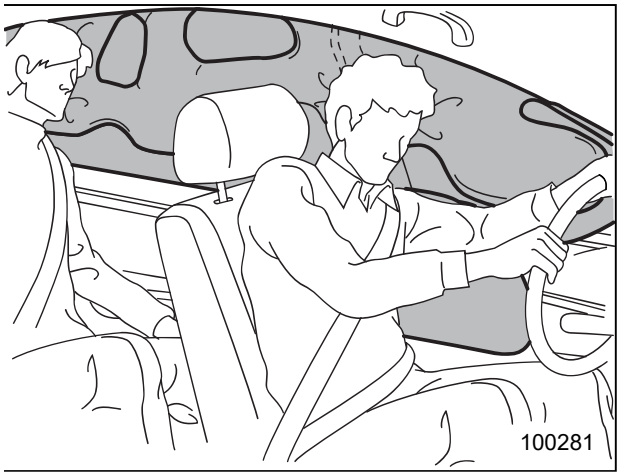

The driver's and front passenger's SRS side airbags and SRS curtain airbags deploy independently of each other since each has its own impact sensor. Therefore, they may not both deploy in the same accident. Also, the SRS side airbag and SRS curtain airbag deploy independently of the driver's and front passenger's SRS frontal airbags in the steering wheel and instrument panel.

An impact sensor, which senses impact force, is located in each of the following locations.

- In the left and right center pillars
- In the left and right rear wheel houses
- In the left and right doors
- In the airbag control module

– CONTINUED –

After the deployment, the SRS side airbag immediately starts to deflate. The time required from detection of an impact to deflation of an SRS side airbag after deployment is shorter than the blink of an eye. The SRS curtain airbag remains inflated for a while following deployment then slowly deflates.


The SRS side airbag and SRS curtain airbag deploy even when no one occupies the seat on the side on which an impact is applied.

The SRS side airbag and SRS curtain airbag are designed to deploy in the event of an accident involving a moderate to severe side impact collision. They are not designed to deploy in most lesser side impacts. Also, they are not designed to deploy in most frontal or most rear impacts because SRS side airbag and SRS curtain airbag deployment would not help the occupant in those situations.

Each SRS side airbag and SRS curtain airbag are designed to function on a onetime- only basis.

SRS side airbag and SRS curtain airbag deployment depend on the level of force experienced in the passenger compartment during a side impact collision. That level differs from one type of collision to another, and it may have no bearing on the visible damage done to the vehicle itself.

▽ When will the SRS side airbag and SRS curtain airbag most likely deploy?

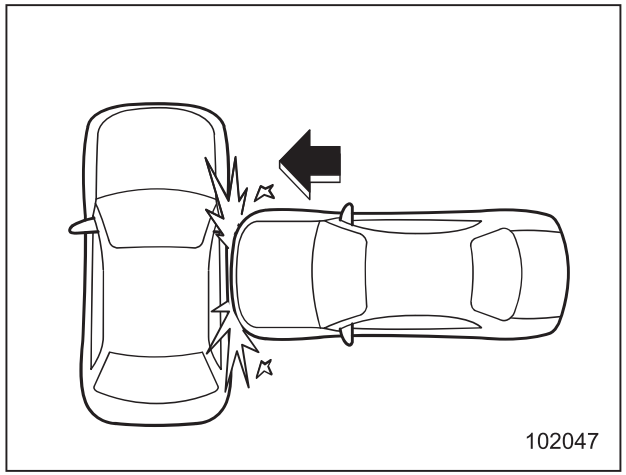


A severe side impact near the front seat activates the SRS side airbag and SRS curtain airbag.

▽ Examples of the types of accidents in which it is possible that the SRS side airbag and the SRS curtain airbag will deploy.

- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or vehicle falling

It is possible that the SRS side and curtain airbags will deploy if a serious impact occurs to the underside of your vehicle.

▽ When are the SRS side airbags unlikely to deploy?

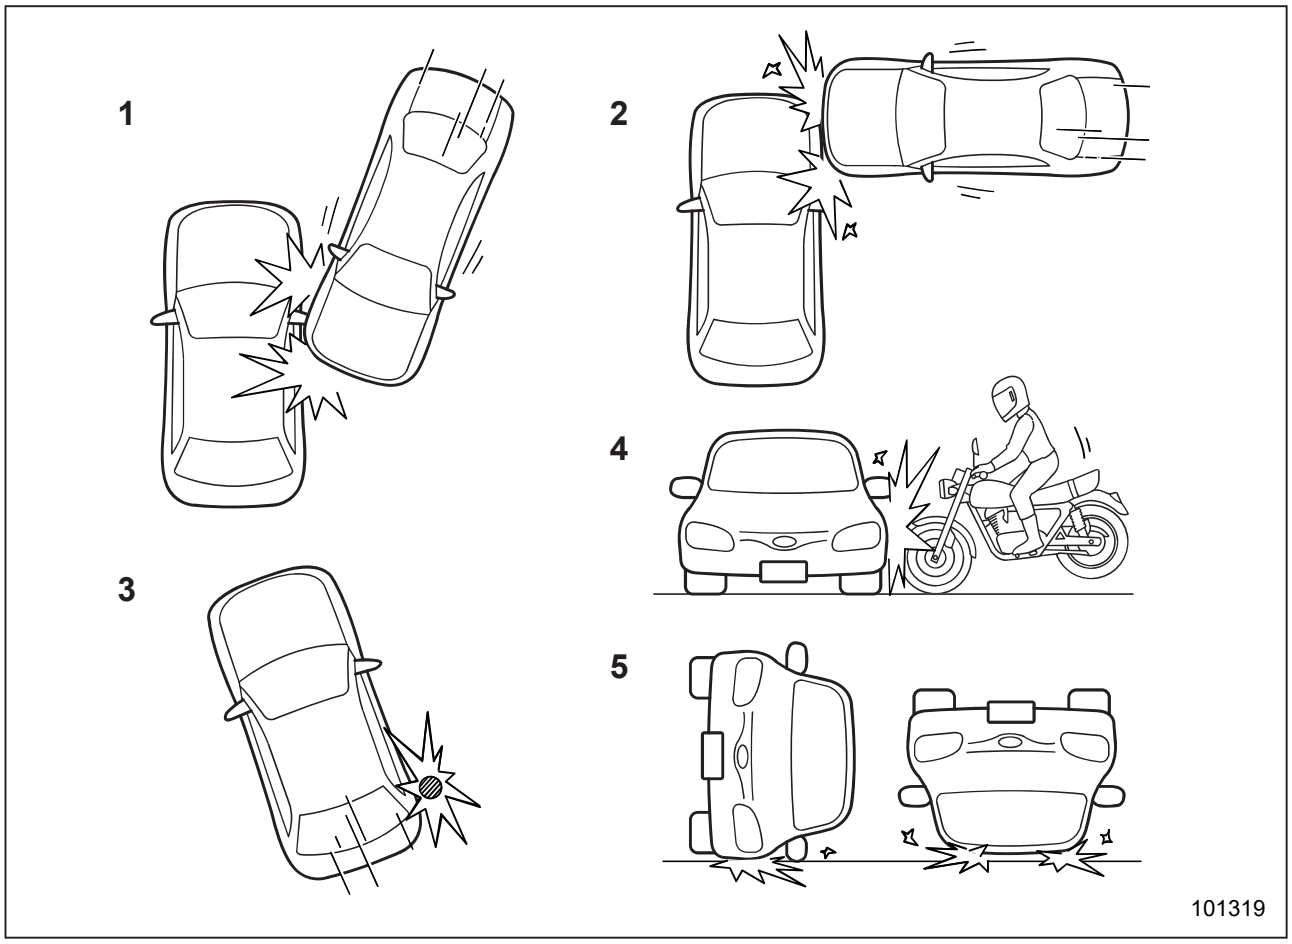


1) The vehicle is involved in an oblique side-on impact.
2) The vehicle is involved in a side-on impact in an area outside the vicinity of the passenger compartment.
3) The vehicle strikes a telephone pole or similar object.
4) The vehicle is involved in a side-on impact from a motorcycle.
5) The vehicle rolls onto its side or roof.

There are many types of collisions which might not necessarily require SRS side airbag deployment. In the event of accidents like those illustrated, the SRS side airbag may not deploy depending on the level of accident forces involved.

– CONTINUED –


▽ When is the SRS curtain airbag unlikely to deploy?

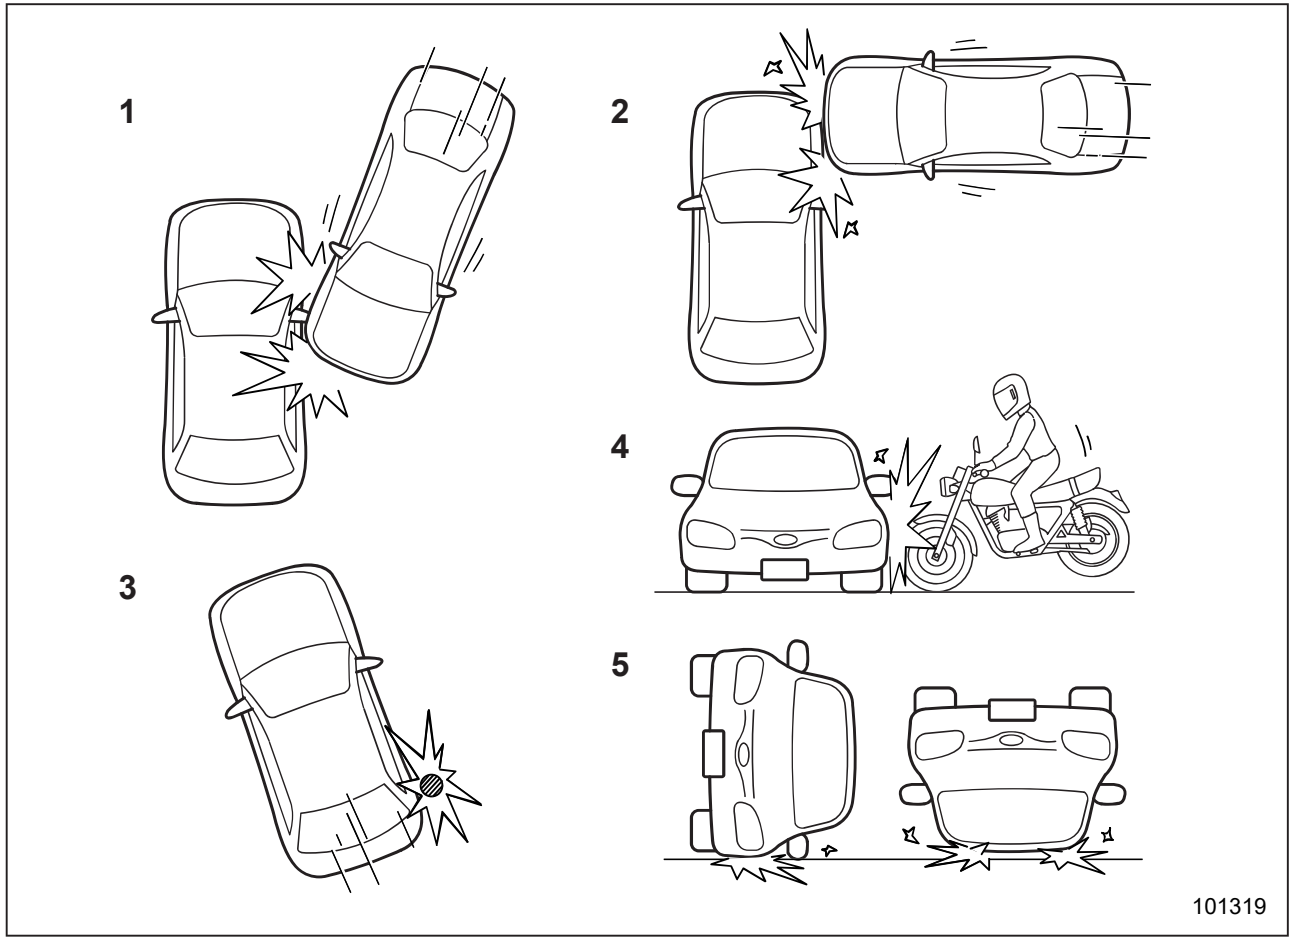

1) The vehicle is involved in an oblique side-on impact.
2) The vehicle is involved in a side-on impact in an area outside the vicinity of the passenger compartment.
3) The vehicle strikes a telephone pole or similar object.
4) The vehicle is involved in a side-on impact from a motorcycle.
5) The vehicle rolls onto its side or roof.


There are many types of collisions which might not necessarily require SRS curtain airbag deployment. In the event of accidents like those illustrated, the SRS curtain airbag may not deploy depending on the level of accident forces involved.

▽ When will the SRS side airbag and SRS curtain airbag not deploy?

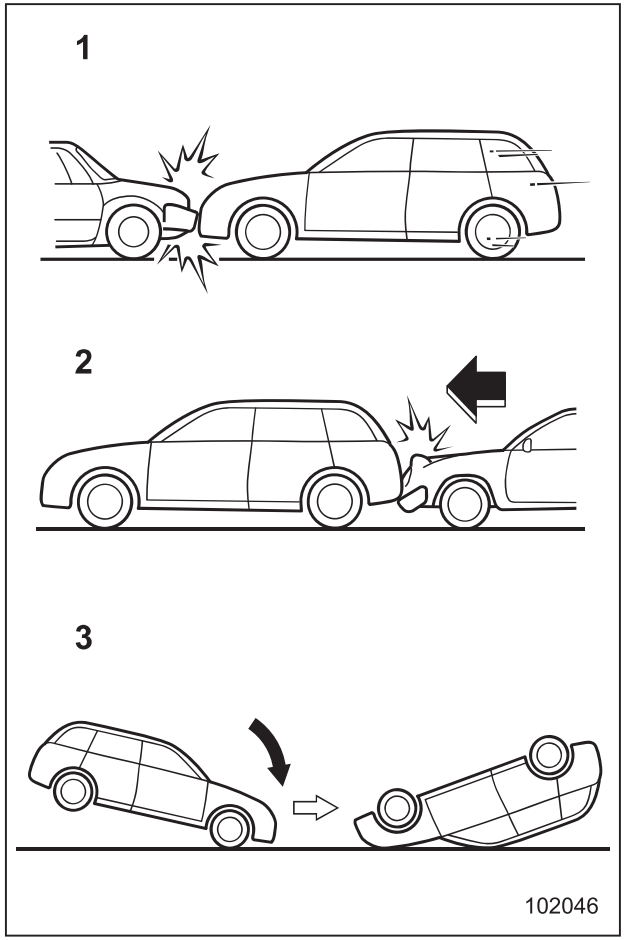

1) The vehicle is involved in frontal collision with another vehicle (moving or stationary).
2) The vehicle is struck from behind.
3) The vehicle pitches end over end.

In the event of accidents like those illustrated, the SRS side airbag and SRS curtain airbag are not designed to deploy in most cases.

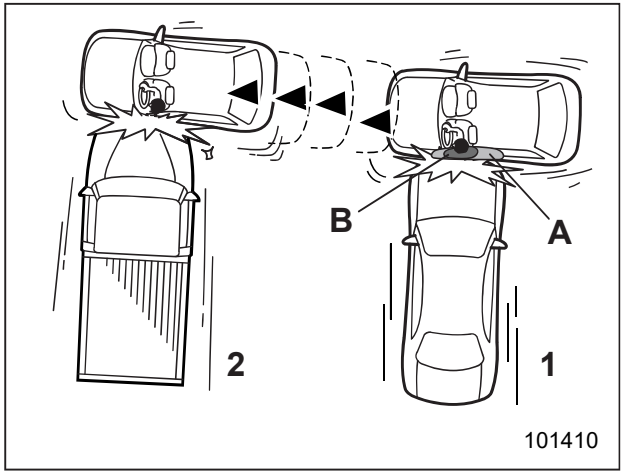


1) First impact
2) Second impact
A) SRS curtain airbag
B) SRS side airbag

In an accident where the vehicle is struck from the side more than once, the SRS side airbag and SRS curtain airbag deploy only once on the first impact.

Example: In the case of a double side impact collision, first with one vehicle and immediately followed by another from the same direction, once the SRS side airbag and SRS curtain airbag are activated on the first impact, they will not be activated on the second.

■ SRS airbag system monitor

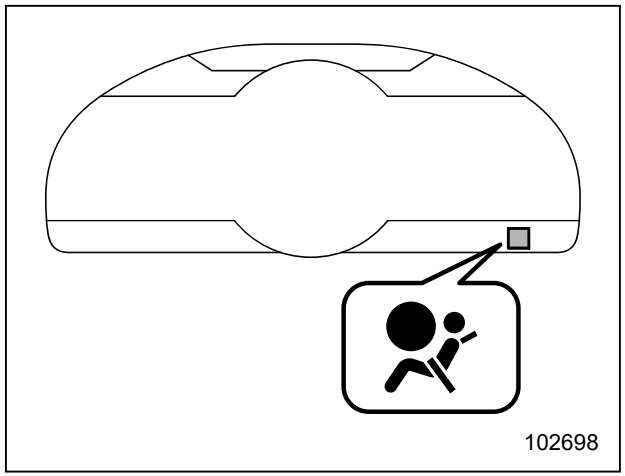

A diagnostic system continually monitors the readiness of the SRS airbag system (including front seatbelt pretensioners) with the ignition switch in the “ON” position. The SRS airbag system warning light will show normal system operation by illuminating for approximately 6 seconds when the ignition switch is turned to the “ON” position.

The following components are monitored by the indicator.

- Front impact sensor
  - Right-hand side
  - Left-hand side

– CONTINUED –

- Airbag control module (including impact sensor)
- Frontal airbag module
  - Driver's side
  - Front passenger's side
- Knee airbag module (driver's side)
- Side impact sensor
  - Center pillar right-hand side
  - Center pillar left-hand side
  - Door right-hand side
  - Door left-hand side
  - Rear wheel house right-hand side
  - Rear wheel house left-hand side
- Side airbag module
  - Driver's side
  - Front passenger's side
- Front passenger's occupant detection sensors (if equipped)
- Seatbelt buckle switch (front passenger's side) (if equipped)
- Curtain airbag module
  - Right-hand side
  - Left-hand side
- Seatbelt pretensioner (all models) and adaptive force limiter (if equipped)
  - Driver's side
  - Front passenger's side
- Front passenger's frontal airbag ON and OFF indicator (if equipped)
- All related wiring

⚠ WARNING

If the warning light exhibits any of the following conditions, immediately stop the vehicle in a safe place, and we recommend that you consult a SUBARU dealer. Unless a technician checks and repairs the system as needed, the seatbelt pretensioners and/or the SRS airbag will not operate properly in the event of a collision, which may result in injury.

- **Flashing or flickering of the warning light**
- **No illumination of the warning light when the ignition switch is first turned to the "ON" position**
- **Continuous illumination of the warning light**
- **Illumination of the warning light while driving**

■ SRS airbag system servicing

⚠ WARNING

- **When discarding an airbag module or scrapping the entire vehicle damaged by a collision, we recommend that you consult your SUBARU dealer.**
- **The SRS airbag has no user-serviceable parts. Do not use electrical test equipment on any circuit related to the SRS airbag system. For required servicing of the SRS airbag, we recommend that you consult your nearest SUBARU dealer. Tampering with or disconnecting the system's wiring could result in accidental inflation of the SRS airbag or could make the system inoperative, which may result in serious injury.**

⚠ CAUTION

If you need service or repair in areas indicated in the following list, we recommend that you have the work performed by an authorized SUBARU dealer. The SRS airbag control module, impact sensors and airbag modules are stored in the following areas.

- **Under the center of the instrument panel**
- **On both the right and left sides at the front of the vehicle**
- **Steering wheel and column and nearby areas**

- **Bottom of the steering column and nearby areas**
- **Top of the dashboard on front passenger's side and nearby areas**
- **Each front seat and nearby area**
- **Inside each center pillar**
- **Inside each door**
- **In each roof side (from the front pillar to a point over the rear seat)**
- **Between the rear seat cushion and rear wheel house on each side**

In the event that the SRS airbag system is deployed, we recommend that you have the system replaced with genuine SUBARU parts at an authorized SUBARU dealer.

NOTE

In the following cases, we recommend that you contact your SUBARU dealer as soon as possible.

- **The front part of the vehicle was involved in an accident in which the SRS frontal airbags did not deploy.**
- **The pad of the steering wheel, the cover over the front passenger's frontal airbag, or either roof side (from the front pillar to a point over the rear seat) is scratched, cracked, or otherwise damaged.**
- **The center pillar, rear wheel house or rear sub frame, or an area near these parts, was involved in an accident in which the SRS side airbag and SRS curtain airbag did not deploy.**
- **The fabric or leather of either front seatback is cut, frayed, or otherwise damaged.**
- **The rear part of the vehicle was involved in an accident.**

■ Precautions against vehicle modification

⚠ WARNING

To avoid accidental activation of the system or rendering the system inoperative, which may result in serious injury, no modifications should be made to any components or wiring of the SRS airbag system. This includes the following modifications.

- **Installation of custom steering wheels**
- **Attachment of additional trim materials to the dashboard**
- **Installation of custom seats**
- **Replacement of seat fabric or leather**
- **Installation of additional fabric or leather on the front seat**
- **Attachment of a hands-free microphone or any other accessory to a front pillar, a center pillar, a rear pillar, the windshield, a side window or any other cabin surface that would be near a deploying SRS curtain airbag.**
- **Installation of additional electrical/electronic equipment such as a mobile two-way radio on or near the SRS airbag system components and/or wiring is not advisable. This could interfere with proper operation of the SRS airbag system.**
- **Modifications on or inside the front door panels for the purpose of a speaker replacement or sound insulation.**
  - **The impact sensors, which detect the pressure of an impact, are located in the doors.**

– CONTINUED –

⚠ CAUTION

Do not perform any of the following modifications. Such modifications can interfere with proper operation of the SRS airbag system.


- **Attachment of any equipment (bush bar, bullbar, winches, snow plow, skid/sump plate, etc.) to the front end other than genuine SUBARU accessory parts or parts that match the quality of genuine SUBARU accessory parts.**
- **Modification of the suspension system or front end structure.**
- **Installation of a tire of different size and construction from the tires specified on the vehicle placard attached to the driver's center pillar or specified for individual vehicle models in this Owner's Manual.**
- **Attachment of any equipment (side steps or side sill protectors, etc.) other than genuine SUBARU accessory parts to the side body.**

We recommend that you always consult your SUBARU dealer if you want to install any accessory parts on your vehicle.

2-1. Keyless Access with Push-Button Start System 92
Safety Precautions 92
Locking and Unlocking with “Keyless Access” Entry Function 95
Unlock Using PIN Code Access 98
Power Saving Function 100
Power Saving Function of Access Key Fob 101
Disabling Keyless Access Function 101
Selecting Hazard Warning Flasher Operation 104
Warning Chimes and Warning Indicator 104
When Access Key Fob Does Not Operate Properly 104
Replacing Battery of Access Key Fob 104
Replacing Access Key Fob 104
Key Number Plate 104
Technical Information for Europe Models 104
2-2. Immobilizer 105
Immobilizer Indicator Light 105
Key Replacement 105
Technical Information of the Radio Wave Regulation 105
2-3. Remote Keyless Entry System 106
Locking the Doors 107
Unlocking the Doors 107
Automatic Locking 107
Opening the Trunk Lid 107
Opening/Closing the All Windows (except Australia models) 107
Selecting Hazard Warning Flasher Operation 107
Replacing the Battery 107
Replacing Lost Transmitters 107
2-4. Door Locks 108
Locking and Unlocking from the Outside 108
Locking and Unlocking from the Inside 108
Key Lock-In Prevention Function 109
Battery Drainage Prevention Function 109
2-5. Windows 110
Power Window Operation 111
Initialization of Power Window 113
2-6. Trunk Lid 113
To Open and Close the Trunk Lid from Outside 114
To Open the Trunk Lid from Inside 115

2-1. Keyless Access with Push-Button Start System

The following access key fobs are provided with the vehicle.

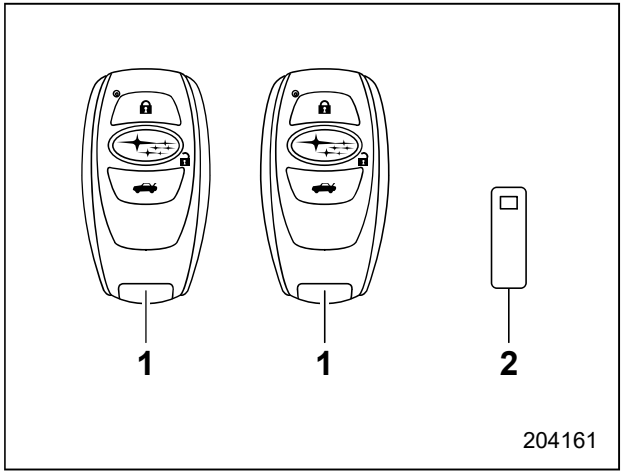

1) Access key fob
2) Key number plate

The keyless access with push-button start system allows you to perform the following functions when you are carrying the access key fob.

- Locking and unlocking of the doors, fuel filler lid
- Opening the trunk
- Starting and stopping the engine. For detailed information, refer to "Starting and Stopping Engine" ☞P216.


NOTE

- **The remote keyless entry system can be used to control the following functions.**
  - **Locking/unlocking the doors, trunk lid and fuel filler lid**
  - **Opening/closing the windows (except Australia models)**

For detailed information, refer to "Remote Keyless Entry System" ☞P106.

- **Carefully store the key number plate supplied with the access key fob. It is necessary for vehicle repair and additional registration of access key fobs. For details, refer to "Key Replacement" ☞P105.**

An emergency key is attached to each access key fob.

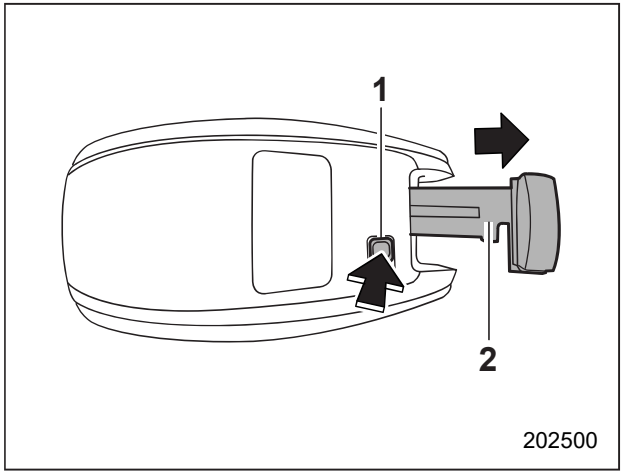

1) Release button
2) Emergency key

While pressing the release button of the access key fob, take out the emergency key.

The emergency key is used for locking and unlocking the driver's door.

■ Safety Precautions

⚠ WARNING

If you wear an implanted pacemaker or an implanted defibrillator, stay at least 22 cm (8.7 in) away from the transmitting antennas installed on the vehicle.


The radio waves from the transmitting antennas on the vehicle could adversely affect the operation of implanted pacemakers and implanted defibrillators.

If you wear electronic medical equipment other than an implanted pacemaker or an implanted defibrillator, before using the keyless access with push-button start system, refer to "Radio waves used for the keyless access with push-button start system" mentioned later, and contact the electronic medical equipment manufacturer for more information. The radio waves from the transmitting antennas on the vehicle could adversely affect the operation of the electronic medical equipment.

"Radio waves used for the keyless access with push-button start system"

- **The keyless access with push-button start system uses radio waves of the following frequency* in addition to the radio waves used for the remote keyless entry system. The radio waves are periodically output from the antennas installed on the vehicle as shown in the following illustrations.**

  ***: Radio frequency: 134.2 kHz**

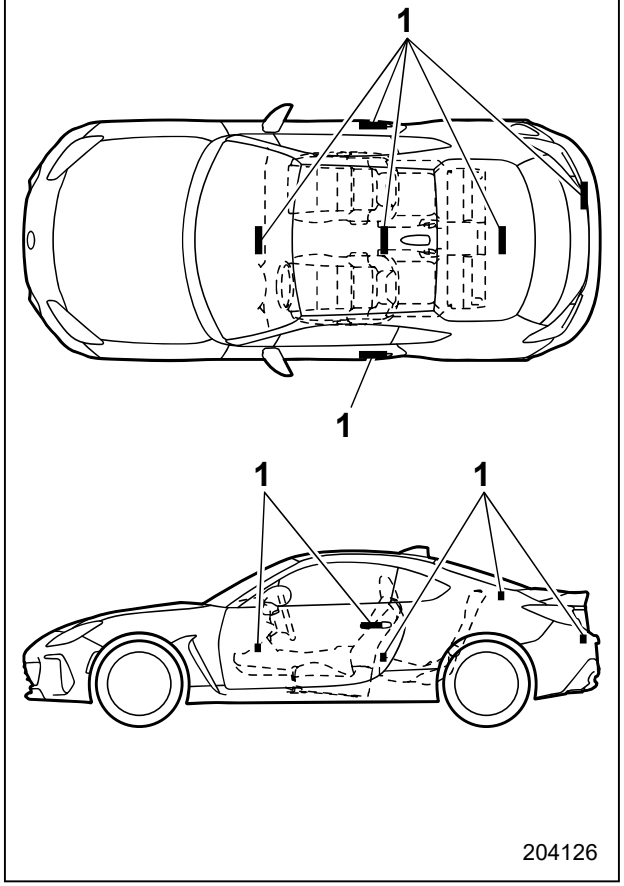

1) Antenna

– CONTINUED –

⚠ CAUTION

- **Never leave or store the access key fob inside the vehicle or within 2 m (6.6 ft) around the vehicle (e.g., in the garage). The access key fob may be locked inside the vehicle, or the battery may discharge rapidly. Note that the push-button ignition switch may not turn on in some cases depending on the location of the access key fob.**
- **The access key fob contains electronic components. Observe the following precautions to prevent malfunctions.**
  - **It is recommended to have the access key fob battery replaced at an authorized SUBARU dealer to avoid the risk of damage.**
  - **Do not get the access key fob wet. If the access key fob gets wet, wipe it off immediately and let it dry completely.**
  - **Do not apply strong impacts to the access key fob.**
  - **Never leave the access key fob in direct sunlight or anywhere that may become hot, such as on the dashboard. It may damage the battery or cause circuit malfunctions.**
  - **Do not wash the access key fob in an ultrasonic washer.**
  - **Do not leave the access key fob in humid or dusty locations. Doing so may cause malfunctions.**
  - **Keep the access key fob away from magnetic sources.**
  - **Do not leave the access key fob near a personal computer or home electrical appliance.**
  - **Do not leave the access key fob near a battery charger or any electrical accessories.**
  - **Do not apply metallic window tint or attach metallic objects to the windows.**
  - **Do not fit non genuine accessories or parts.**
- **If the access key fob is dropped, the integrated emergency key inside may become loose. Be careful not to lose the emergency key.**
- **When traveling in an airplane, do not press the button of the access key fob. If any button of the access key fob is pressed, radio waves are emitted and may affect the operation of the airplane. In a bag, take measures to prevent the buttons from being pressed accidentally.**

NOTE

- **The operational/non-operational setting for the keyless access function can be changed. For the setting procedure, refer to "Disabling Keyless Access Function" ☞P101.**
- **For detailed information about the operation method for the push-button ignition switch while the keyless access function is switched to the non-operational mode, refer to "Access Key Fob – If Access Key Fob Does Not Operate Properly" ☞P314.**
- **The keyless access with push-button start system uses weak radio waves. The status of the access key fob and environmental conditions may interfere with the communication between the access key fob and the vehicle under the following conditions, and it may not be possible to lock or unlock the doors or start the engine.**

- When operating near a facility where strong radio waves are transmitted, such as a broadcast station and power transmission lines.
- When products that transmit radio waves are used, such as an access key fob or a remote transmitter key of another vehicle.
- When carrying the access key fob of your vehicle together with the access key fob or the remote transmitter of another vehicle.
- When the access key fob is placed near wireless communication equipment such as a cell phone.
- When the access key fob is placed near a metallic object.
- When metallic accessories are attached to the access key fob.
- When carrying the access key fob with an electronic appliance such as a laptop computer.
- When the battery of the access key fob is discharged.

• The access key fob is always communicating with the vehicle and is continuously using the battery. Although the life of the battery varies depending on the operating conditions, it is approximately 1 to 2 years. If the battery becomes fully discharged, replace it with a new one.

• If an access key fob is lost, it is recommended that all of the remaining access key fobs be reregistered. For reregistration of an access key fob, we recommend that you contact a SUBARU dealer.

• For a spare access key fob, we recommend that you contact a SUBARU dealer.

• Up to 7 access key fobs can be registered for one vehicle.

• Do not leave the access key fob in the storage spaces inside the vehicle, such as the door pocket, dashboard or inside the corner of the trunk. Vibrations may damage the access key fob or turn on the switch, possibly resulting in a lockout.

• After the vehicle battery is discharged or replaced, initialization of the steering lock system may be required to start the engine. In this case, perform the following procedure to initialize the steering lock.

(1) Turn the push-button ignition switch to the “OFF” position. For details, refer to "Switching Power Status" ☞P119.

(2) Open and close the driver’s door.

(3) Wait for approximately 10 seconds.

When the steering is locked, the initialization is completed.

• Do not leave the access key fob in the following places.
- On the instrument panel
- On the floor
- Inside the glove box
- Inside the door trim pocket
- On the rear seat
- On the rear shelf
- Inside the trunk

• If you do, the following situations may occur.
- The access key fob is mistakenly locked inside the vehicle.
- A false warning issues although no malfunction actually occurs.
- No warning issues even when a malfunction occurs.

■ Locking and Unlocking with “Keyless Access” Entry Function


When the access key fob is carried within the operating range, the doors, the fuel filler lid can be locked/unlocked just by touching the door handle.

NOTE


The vehicle can also be locked/unlocked with the remote keyless entry system. For details, refer to "Remote Keyless Entry System" ☞P106.

– CONTINUED –

▼ Operating ranges

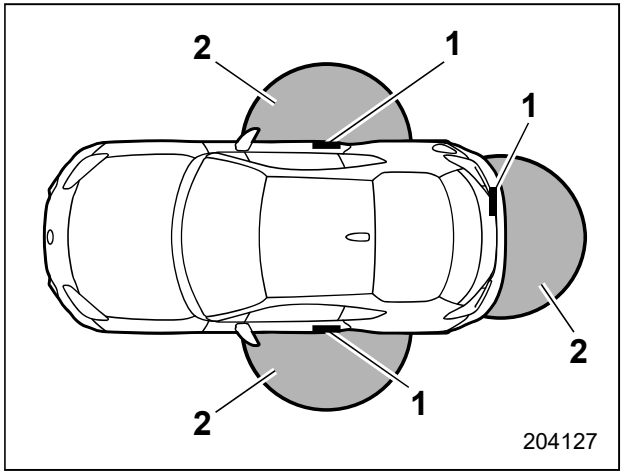

1) Antenna
2) Operating range (approximately 40 to 80 cm (16 to 32 in))

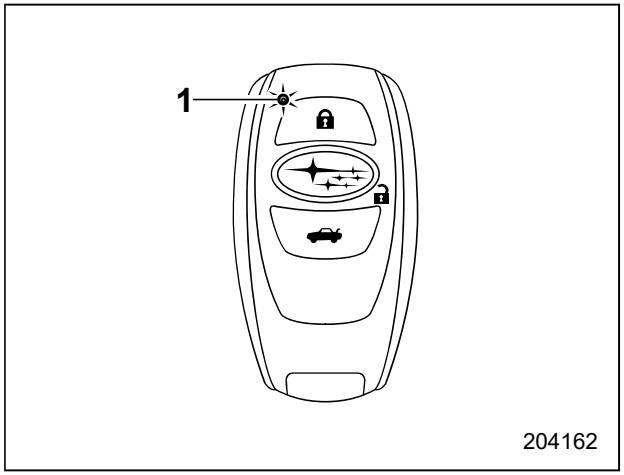

1) LED indicator

When the access key fob is within either of the operating ranges of the doors, the LED indicator on the access key fob flashes. When the keyless access functions are disabled, the LED indicator does not flash unless a button on the access key fob is pressed.

NOTE

• If the access key fob is placed too close to the vehicle body, the keyless access functions may not operate properly. If it does not operate properly, repeat the operation from farther away.

• If the access key fob is placed near the ground or in an elevated location from the ground, even if it is in the indicated operating range, the keyless access function may not operate properly.

• When the access key fob is within the operating range, it is possible for anyone, even someone who is not carrying the access key fob, to operate the keyless access function. Note that the keyless access function can be operated only by the door handle, door lock sensor or trunk opener button in the operating range in which the access key fob is detected.

• It is not possible to lock the doors, trunk lid and fuel filler lid using the keyless access function when the access key fob is inside the vehicle. However, depending on the status of the access key fob and the environmental conditions, the access key fob may be locked inside the vehicle. Before locking the vehicle, make sure that you have the access key fob.

• When the battery of the access key fob is discharged, or when operating it in a location with strong radio waves or noise (e.g., near a radio tower, power plant, broadcast station or an area where wireless equipment is used), or while talking on a cell phone, the operating ranges may be reduced, or the keyless access function may not operate.
In such a case, perform the procedure described in "Locking and Unlocking" ☞P314.

• The doors may lock or unlock when the car is being washed or exposed to a significant amount of water that touches the door handle while the key fob is still in the operating range.

▼ How to lock and unlock


It is possible to perform the following operations when you are carrying the access key fob.

- Lock and unlock the doors and the fuel filler lid
- Unlock the trunk lid

NOTE

- **It is not possible to lock the doors and fuel filler lid using the keyless access function when the push-button ignition switch is in the “ACC” or “ON” position. Refer to "Switching Power Status" ☞P119.**
- **If the door handle is gripped with a gloved hand, the door lock may not be released.**
- **If the door lock sensor is touched four times or more repeatedly, the system will ignore the sensor operation.**
- **When performing the locking procedure too quickly, locking may not complete.**
- **If any of the doors are not fully closed, an electronic chirp sounds 5 seconds to alert you that the doors are not properly closed.**
- **If any of the doors are open, the doors and the fuel filler lid cannot be locked.**
- **Within 3 seconds after locking the doors using the keyless access function, it is not possible to unlock doors using the keyless access function.**
- **When locking, be sure to carry the access key fob to prevent locking the access key fob in the vehicle.**
- **The setting of the hazard warning flasher operation can be changed by your SUBARU dealer. We recommend that you contact your SUBARU dealer for details. The setting of the hazard warning flasher operation can be changed by operating the center information display. For details, refer to "Car settings" ☞P159.**

▽ Locking with the door lock sensor

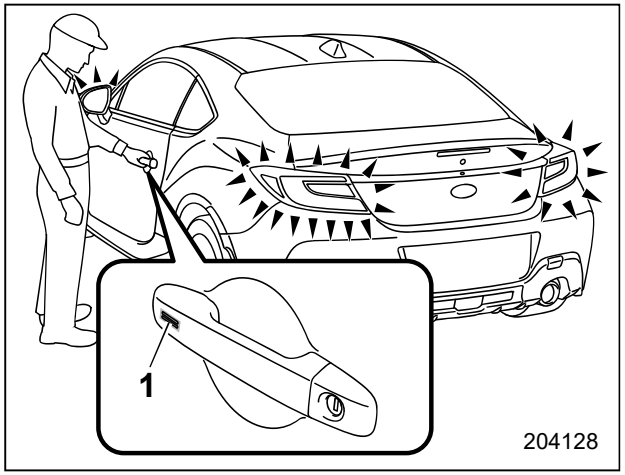


1) Door lock sensor

Carry the access key fob, close all doors and touch the door lock sensor on the door handle. All doors including the fuel filler lid will be locked. Also, The hazard warning flashers will flash once.

NOTE

After touching the door lock sensor to lock all of the doors, if you touch the door lock sensor twice more to attempt the lock operation without first unlocking the doors, nothing will happen, even if the door lock sensor is touched. In this case, perform the unlocking operation once first. You can then touch the door lock sensor to lock the doors.

▽ Unlocking

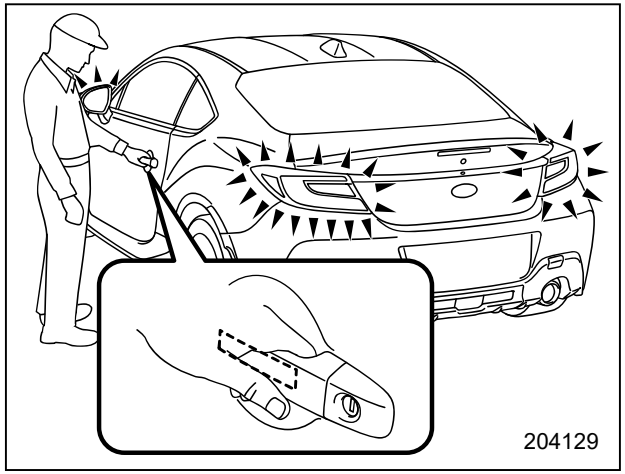


– CONTINUED –

Carry the access key fob, and touch the sensor behind the door handle.

All doors (including the fuel filler lid) will be unlocked. Also, the hazard warning flashers will flash twice.

▽ Opening trunk

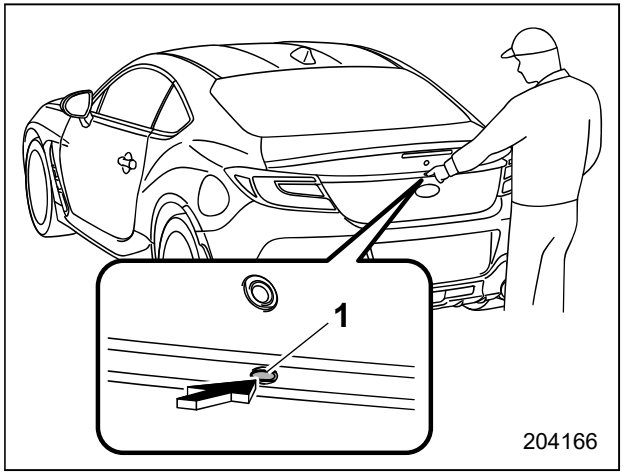

1) Trunk opener button

Carry the access key fob, and press the trunk opener button. The trunk will open.

NOTE

Under the following conditions, the trunk can be opened without the key fob.

- **The trunk lock/unlock setting is on.**
- **All doors are unlocked.**

The trunk lock/unlock setting can be changed by a SUBARU dealer. We recommend that you contact your SUBARU dealer to change the setting.


▼ Automatic locking

If any of the doors was not opened within 30 seconds after unlocking, they will be automatically locked again.

The function's operational/non-operational setting and the time until automatic locking takes place can be changed by a SUBARU dealer. For more details, we recommend that you contact a SUBARU dealer.

The setting and the time can be changed by operating the center information display. For details, refer to "Car settings" ☞P159.

■ Unlock Using PIN Code Access

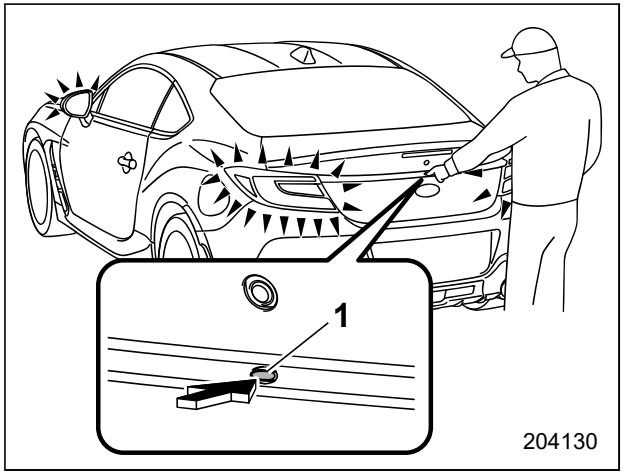

1) Trunk opener button

While all doors are locked, you can unlock the doors without a key by operating the trunk opener button.

NOTE

PIN Code Access will be helpful if the key is accidentally left in the vehicle. It is recommended that a 5-digit security code (PIN code) is registered.

▼ Registration for a PIN code

Steps		Operation	Time from the previous step
1		Turn off the ignition switch.	—
2		Close all doors (including trunk).	—
3		Press and hold the “🔒” button on the access key fob, then press and hold the trunk opener button until a chirp sounds intermittently.	—
4		Press the “🔓” button on the access key fob.	Within 30 seconds
5		Input the PIN code using the trunk opener button within 30 seconds after the chirp sound of step 4. For example, to register “32468” as the PIN code, perform the following procedure.	Within 30 seconds
	(1)	Press the button three times.	
	(2)	After a chirp sounds once, press the button twice.	
	(3)	After a chirp sounds once, press the button four times.	
	(4)	After a chirp sounds once, press the button six times.	
	(5)	After a chirp sounds once, press the button eight times.	
6		Perform step 5 again within approximately 30 seconds after the chirp starts sounding intermittently.	—
7		All doors will be unlocked and locked. Then the PIN code will be registered.	—

– CONTINUED –

NOTE

• Press the trunk opener button ten times to enter “0”.
• Change the PIN code frequently to protect your vehicle from theft.
• If you have lent your vehicle to another person, confirm that the PIN code has not been changed or deleted. If the PIN code has been changed or deleted, reregister a new PIN code.
• If you make an error during the registration procedure, press the “” or “” button on the access key fob. Then, start over from the procedure described in “Registration for a PIN code”.
• To protect your vehicle from theft, you cannot register “00000” to “99999” or “12345” as a PIN code.
• Do not register your vehicle license plate number or simple numbers such as “11122” or “12121” as a PIN code. Doing so will increase the risk of vehicle theft.
• When you try to register “22222”, the registered PIN code will be deleted. You cannot unlock the doors by PIN Code Access until a new code is registered.
• After registering a new PIN code, make sure that you can unlock the doors using the PIN code.
• The PIN code cannot be deleted while the keyless access function is disabled by operating the access key fob.
• Reregister the PIN code in the following case.
- When you forget the PIN code
- When you want to change the PIN code

▼ Unlocking

Perform steps (1) to (5) of step 5 described in “Registration”.

NOTE

• You cannot unlock by PIN Code Access in the following cases.
- When the access key fob is within the operating ranges
- When the ignition switch is in the “ACC” or “ON” position
• If you make an operation error during the unlocking procedure, start over with the unlocking procedure after waiting for 5 seconds or longer.
• To protect your vehicle from theft, a buzzer will sound if incorrect PIN codes are entered five times continuously. If this occurs, you cannot unlock the doors by PIN Code Access for 5 minutes.

■ Power Saving Function

To protect the access key fob battery and the vehicle battery, the keyless access function will be disabled as follows.

• When the keyless access function and the remote keyless entry system have not been used:

(1) 5 days after the push-button ignition switch has been turned off, communication between the antennas and the access key fob will be stopped.
(2) 9 days after step (1), the sensors (both lock sensor and unlock sensor) on the passenger’s door will be disabled.

• When the access key fob has been left in the operating range for 10 minutes or longer while all doors are locked, the keyless access function will be disabled.

▼ Recovery from power saving mode

When one of the following operations is performed, the keyless access function will be recovered.

• Unlock by gripping the door handle (only when the sensors on the passenger’s door are not disabled) or pressing the trunk opener button on the trunk lid


• Lock or unlock by the remote keyless entry system

- Open a door and then close it
- Turn the push-button ignition switch to the “ON” position

■ Power Saving Function of Access Key Fob

This function stops the access key fob from receiving signals and helps minimize the battery consumption of the access key fob.

1. Press the “” button twice while holding the “” button.

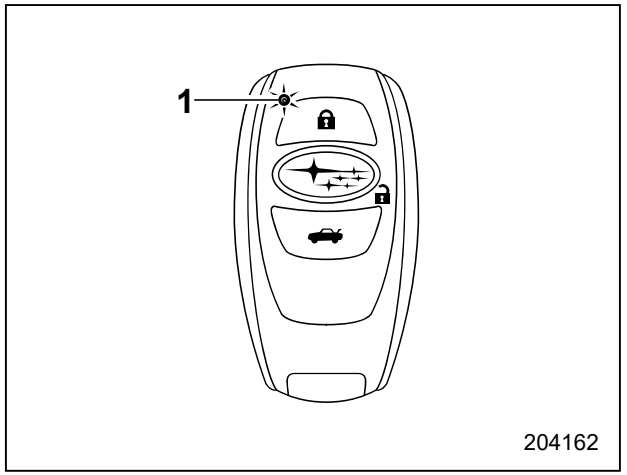

1) LED indicator

2. Confirm that the LED indicator blinks 4 times to notify that the setting is complete.

When the access key fob is in the power save mode, the keyless access function and push-button start system will not be available.

To cancel the power save mode, press one of the buttons on the access key fob.

■ Disabling Keyless Access Function

⚠ WARNING

If you have an implanted pacemaker or an implanted defibrillator, perform the procedure "By operating the driver’s door" ☞P102 to disable the keyless access function. If you perform the procedure "By operating the access key fob" ☞P101, the operation of an implanted pacemaker or implanted defibrillator may be affected by the radio waves from the transmitter antenna.

When the vehicle is not going to be used for a long time, or when you choose not to use the keyless access function, the keyless access function can be disabled.

NOTE


- **The locking and unlocking function by the remote keyless entry system is not disabled.**
- **To start the engine while the functions are disabled, perform the procedure described in "Starting Engine" ☞P315.**

▼ Disabling functions

▽ By operating the access key fob


To disable the keyless access function by operating the access key fob, register a PIN code for PIN Code Access. For details about registering a PIN code, refer to "Unlock Using PIN Code Access" ☞P98.

1. Open the driver’s door.

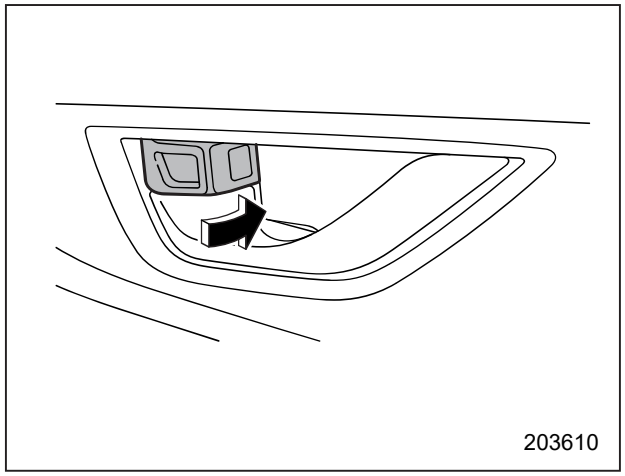

2. Rotate the lock lever forward.


– CONTINUED –

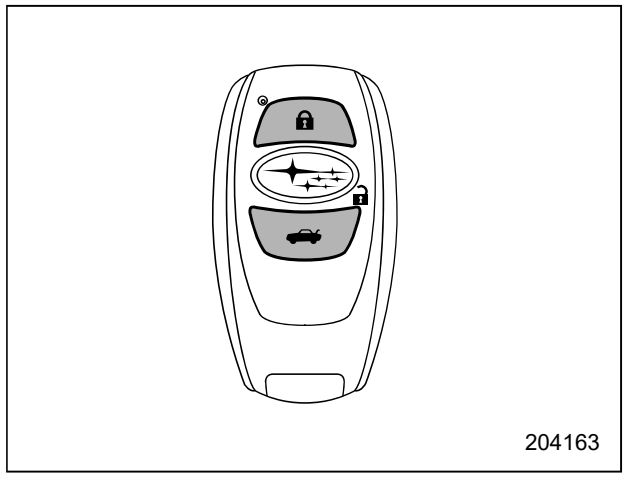

3. Press and hold the "🔓" button and "🚗" button on the access key fob simultaneously for more than 5 seconds.

A chirp sound will be heard, and the function will be disabled.

▽ By operating the driver's door

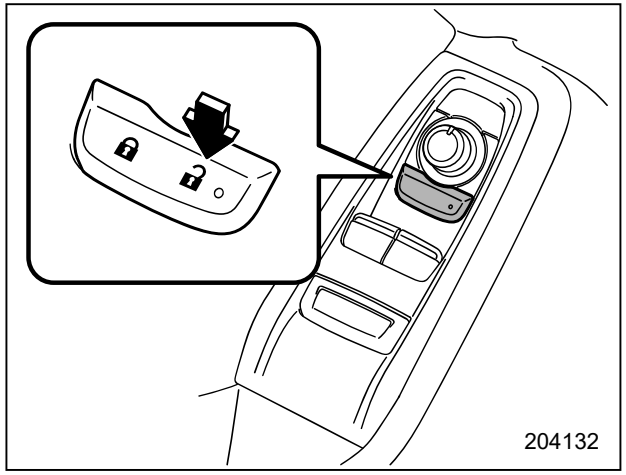

To disable the keyless access function by operating the driver's door, perform the following procedures.

Steps	Operation	Time	Status
1	Sit in the driver's seat, and close the door.	—	Close
2	Push "🔓" on the power door locking switch.	—	Close
3	Open the driver's door.	Within 5 sec.	Close→Open
4	Push "🔓" on the power door locking switch twice.	Within 5 sec.	Open
5	Close and open the driver's door twice.	Within 10 sec.	Open→Close→Open→Close→Open
6	Push "🔓" on the power door locking switch twice while the door is open.	Within 10 sec.	Open
7	Close and open the driver's door once.	Within 10 sec.	Open→Close→Open
8	Close the door.	Within 5 sec.	Open→Close

A chirp will sound and the functions will be disabled.

NOTE

In steps 4 and 6, press the power door locking switch firmly. If the switch is not pressed firmly, the functions may not be disabled.

▼ Enabling functions

When the procedure to disable the functions is performed again, a chirp sound will be heard, and the functions are enabled.

NOTE

- **The keyless access function will be enabled only if you perform the procedure in the same manner you disabled the function (for example, when disabling by operating the driver's door, the function will not be enabled even if you operate the access key fob).**
- **Press the push-button ignition switch if you do not know the procedure in which the keyless access function was disabled.**
  - **When disabling by operating the driver's door: a chirp will not be heard**
  - **When disabling by operating the access key fob: a chirp will be heard**

– CONTINUED –

■ Selecting Hazard Warning Flasher Operation

Using the hazard warning flasher, the system will give you a visible signal when the doors are locked or unlocked. If desired, you can turn the hazard warning flashers off by operating the center information display. For details, refer to "Car settings" ☞P159. The setting can also be changed by a SUBARU dealer. We recommend that you consult your SUBARU dealer for details.

■ Warning Chimes and Warning Indicator

The keyless access with push-button start system is equipped with a warning chime and the access key warning indicator in order to minimize improper operations and help protect your vehicle from theft.

For details, refer to "Warning Chimes and Warning Indicator of the Keyless Access with Push-Button Start System" ☞P137.

■ When Access Key Fob Does Not Operate Properly

Refer to "Access Key Fob – If Access Key Fob Does Not Operate Properly" ☞P314.

■ Replacing Battery of Access Key Fob

Refer to "Replacing Battery of Access Key Fob" ☞P369.

■ Replacing Access Key Fob

Access key fobs can be replaced at SUBARU dealers. For more details, we recommend that you contact a SUBARU dealer.

■ Key Number Plate

The key number is stamped on the key number plate attached to the key set. Write down the key number and keep it in another safe place, not in the vehicle. This number is needed to make a replacement key if you lose your key or lock it inside the vehicle.

For information on making replacement keys, refer to "Key Replacement" ☞P105.

■ Technical Information for Europe Models

- This device complies with the essential requirements of Directive 2014/53/EU. A copy of the original Declaration of Conformity and the CE marking are found in chapter 13.
- Hereby, DENSO CORPORATION declares that this SU19S-1/14AHK is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

2-2. Immobilizer

The immobilizer system is designed to prevent an unauthorized person from starting the engine. Only keys registered with your vehicle's immobilizer system can be used to operate your vehicle. If engine start is attempted with an unregistered access key fob or key, the engine will not start. Even if the engine does start, it will stop after a few seconds. This system, however, is not a 100% anti-theft guarantee.

⚠ CAUTION

- **Do not place the key under direct sunlight or anywhere it may become hot.**
- **Do not get the key wet. If the key gets wet, wipe it dry with a cloth immediately.**
- **Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.**

NOTE

• To protect your vehicle from theft, please pay close attention to the following security precautions:

- Never leave your vehicle unattended with its keys inside.

- Before leaving your vehicle, close all windows and lock the doors.

- Do not leave spare keys or any record of your key number in the vehicle.

• The vehicle has a maintenance-free type immobilizer system.

■ Immobilizer Indicator Light

Refer to "Immobilizer Indicator Light" ☞P141.

■ Key Replacement

Your key number plate will be required if you ever need a replacement key made. Any new key must be registered for use with your vehicle's immobilizer system before it can be used. The maximum number of keys that can be registered for use with one vehicle is seven.

One key that has already been registered is required in order to register a new key.

NOTE

If you lose a key, the lost key's ID code still remains in the memory of the vehicle's immobilizer system. For security reasons, the lost key's ID code should be erased from the memory. To erase the lost key's ID code, all keys that will be used are required.

For details about new key registration and erasing the lost key's ID code, we recommend that you contact your SUBARU dealer.

■ Technical Information of the Radio Wave Regulation

These devices comply with the essential requirements and provisions such as the Radio and Telecommunications Terminal Equipment Directive 1999/5/EC and Radio Equipment Directive 2014/53/EU.


Requirements and provisions differ depending on the country.

See chapter 13 to confirm the information relevant to each country (e.g., a copy of the original Declaration of Conformity and the CE marking are required for the EU).

2-3. Remote Keyless Entry System

⚠ CAUTION

- **Do not expose the remote transmitter to severe shocks, such as those experienced as a result of dropping or throwing.**
- **Do not take the remote transmitter apart except when replacing the battery.**
- **Do not get the remote transmitter wet. If it gets wet, wipe it dry with a cloth immediately.**
- **When you carry the remote transmitter on an airplane, do not press the button of the remote transmitter while in the airplane. When any button of the remote transmitter is pressed, radio waves are sent and may affect the operation of the airplane. When you carry the remote transmitter in a bag on an airplane, take measures to prevent the buttons of the remote transmitter from being pressed.**

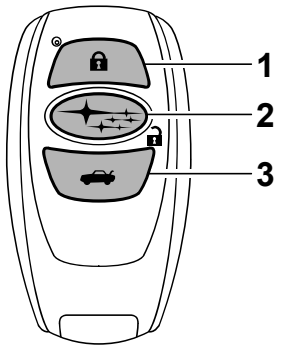

204164

Access key fob
1) Lock
2) Unlock
3) Trunk lid opener button

The remote keyless entry system has the following functions.

- Locking and unlocking the doors and fuel filler lid
- Opening the trunk lid
- Operate all windows (except Australia models)*.

*: To use this function, it must first be activated by your SUBARU dealer.

The operable distance of the remote keyless entry system is approximately 10 meters (30 feet). However, this distance will vary depending on environmental conditions. The system's operable distance will be shorter in areas near a facility or electronic equipment emitting strong radio waves such as a power plant, broadcast station, TV tower, or remote controller of home electronic appliances.

NOTE

• The remote keyless entry system will not be activated when the push-button ignition switch is in any position other than the "OFF" position.

• The hazard warning flashers will flash once or twice when the access key fob button is pressed in the following cases.

- When locking the doors
- When unlocking the doors

If desired, you can turn the hazard warning flashers off by operating the center information display. For details, refer to "Car settings" ☞P159. The setting can also be changed by a SUBARU dealer. We recommend that you consult your SUBARU dealer for details.

The setting of the Remote Keyless Entry System operation can be changed by your SUBARU dealer. We recommend that you contact your SUBARU dealer for details. For details, refer to "Function Settings and Adjustments Performed by a Dealer" ☞P382.

■ Locking the Doors

Press the “” button to lock all doors and fuel filler lid. The hazard warning flashers will flash once.

If any of the doors are not fully closed, an electronic chirp sounds 5 seconds to alert you that the doors are not properly closed.

■ Unlocking the Doors

Press the “” button to unlock all doors and the fuel filler lid. Also, the hazard warning flashers will flash twice.

■ Automatic Locking

When the unlock button is pressed, all of the doors and the fuel filler lid are automatically locked 30 seconds later unless any one of the two doors are opened during that period.

The automatic locking function’s operational/non-operational setting and the setting for the locking time period (the time period after which locking takes place) can be changed by a SUBARU dealer. We recommend that you contact the nearest SUBARU dealer for details.

This setting can be changed by operating the combination meter display (color TFT). For details, refer to "Settings Display" ☞P150.

■ Opening the Trunk Lid

Press and hold the “” button to open the trunk lid. An electronic chirp will sound once.

This operation setting can be changed by a SUBARU dealer. We recommend that you consult your SUBARU dealer for details.

■ Opening/Closing the All Windows (except Australia models)

⚠ WARNING

The remote keyless entry system should only be used to open and close the all windows when the area around the all windows is clearly visible and when you have checked that there is no danger of people being caught in the all windows.

With the engine turned off, you can open and close the all windows by using the remote keyless entry system from outside the vehicle. Operate the all windows in the following way.

- Press and hold the lock button to close the all windows.
- Press and hold the unlock button to open the all windows.

NOTE

We recommend that you consult your SUBARU dealer to have this function set to enabled or disabled.

■ Selecting Hazard Warning Flasher Operation

Using the hazard warning flasher, the system will give you a visible signal when the doors are locked or unlocked. If desired, you can turn the hazard warning flashers off by operating the center information display. For details, refer to "Car settings" ☞P159. The setting can also be changed by a SUBARU dealer. We recommend that you consult your SUBARU dealer for details.

■ Replacing the Battery

Refer to "Replacing Battery" ☞P368.


■ Replacing Lost Transmitters

If you lose a transmitter or want to purchase additional transmitters (up to four can be programmed), you should reprogram all of your transmitters for security reasons. For details, we recommend that you contact your SUBARU dealer and have the transmitters programmed into the remote keyless entry system.

2-4. Door Locks

■ Locking and Unlocking from the Outside

▼ How to lock and unlock the vehicle using the emergency key

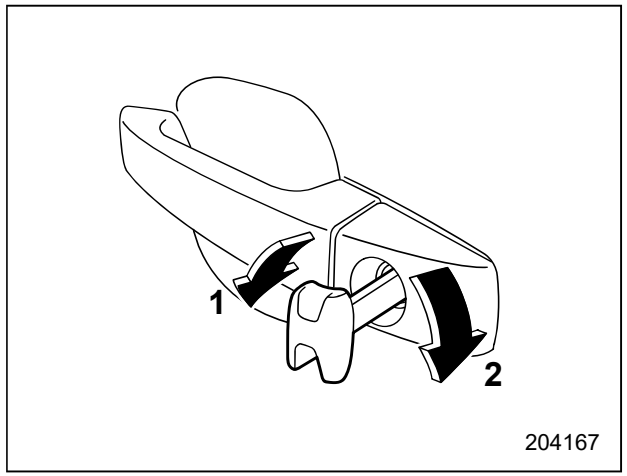

1) Rotate the key toward the front to lock.
2) Rotate the key toward the rear to unlock.

In this case, only the driver's side door is locked or unlocked.


NOTE

The emergency key is directional. If the key cannot be inserted, change the direction that the grooved side is facing and insert it again.

▼ How to lock the vehicle without using the key

To lock the door from outside without the key, the following methods are available.

▽ Locking using lock lever

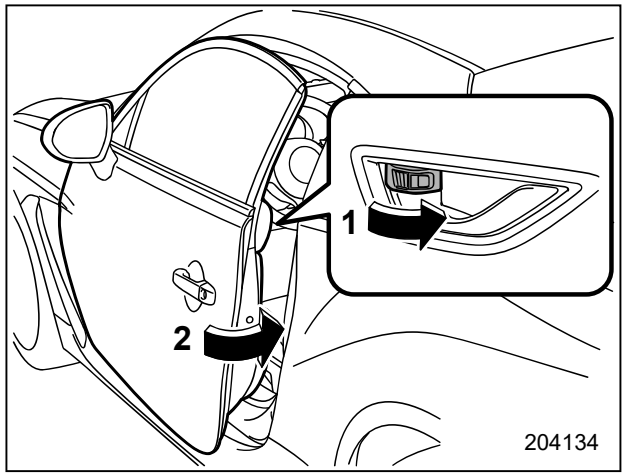

1) Rotate the lock lever forward.
2) Hold the outside door handle pulled while closing the doors.


In this way, only the door that was operated will be locked.

NOTE

Make sure that you do not leave the key inside the vehicle before locking the doors from the outside without the key.

■ Locking and Unlocking from the Inside

▼ How to use the lock lever

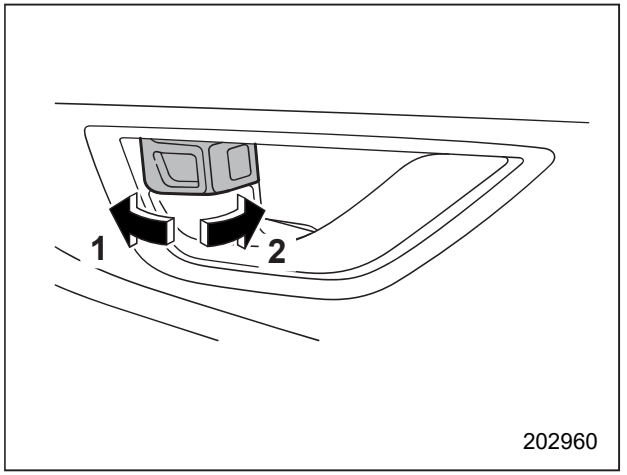

1) Rotate the lock lever rearward to unlock.
2) Rotate the lock lever forward to lock.

To lock the door from the inside, rotate the lock lever forward. To unlock the door from the inside, rotate the lock lever rearward.

The red mark on the lock lever appears when the door is unlocked.

Pull the inside door handle to open an unlocked door.

Always make sure that all doors and the trunk lid are closed before starting to drive.

⚠ WARNING


Keep all doors locked when you drive, especially when small children are in your vehicle.

Along with the proper use of seatbelts, locking the doors reduces the chance of being thrown out of the vehicle in an accident.

It also helps prevent passengers from falling out by preventing a door from being accidentally opened, and intruders from unexpectedly opening doors and entering your vehicle.

▼ How to operate the power door locking switches

All doors and the fuel filler lid can be locked and unlocked by the power door locking switch located at the driver's side door.

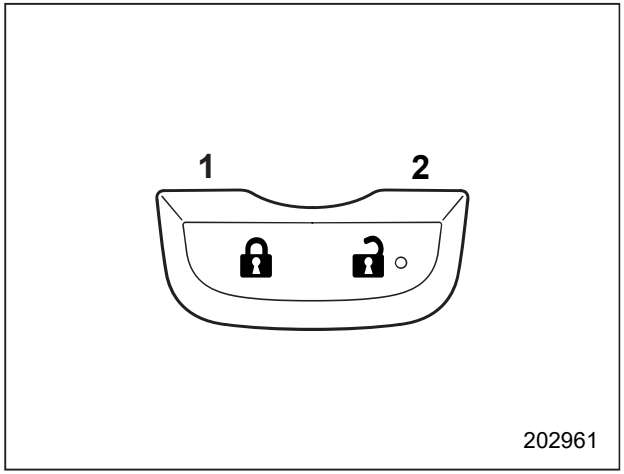

1) Lock
2) Unlock

■ Key Lock-In Prevention Function

All the doors will not lock when the power door locking switch is pushed with a driver's door open while the ignition switch is in the "ACC" or "ON" position.

NOTE

- **When leaving the vehicle, make sure you are holding the key before locking the doors.**
- **The factory setting (default setting) for this function is set as "operational". This function's operational/non-operational setting can be changed by a SUBARU dealer. We recommend that you contact your SUBARU dealer for details.**

▼ Non-operation of key lock-in prevention function

When the system is set so that it does not operate, the doors are locked by the following operation.

- If the lock lever is turned to the front ("LOCK") position with the driver's door open and the driver's door is then closed with the lock lever in that position, the driver's door is locked.
- If the spare key is used to lock the driver's door from the outside of the vehicle, the door is locked.

■ Battery Drainage Prevention Function

If a door is not completely closed, the interior lights will remain illuminated as a result. However, several lights are automatically turned off by the battery drainage prevention function to prevent the battery from going dead. The following interior lights are affected by this function.

Item	Switch position	Automatically turning off
Map lights	DOOR	Approximately 20 minutes later

– CONTINUED –

Item	Switch position	Automatically turning off
Ignition switch light	—	Approximately 20 minutes later

NOTE

- The default setting for this function is set as “operational”. The operational/non-operational setting of this function can be changed by a SUBARU dealer. We recommend that you contact your SUBARU dealer to change the setting.
- When leaving the vehicle, please make sure that all doors are completely closed.
- The battery drainage prevention function does not operate when the ignition switch is in “ACC” or “ON” position.
- The battery drainage prevention function for the push-button ignition switch. For details, refer to "Battery drainage prevention function" ☞P120.

2-5. Windows

⚠ WARNING

To avoid serious personal injury caused by entrapment, always conform to the following instructions without exception.

- When operating the power windows, be extremely careful to prevent anyone’s fingers, arms, neck, head or other objects from being caught in the window.
- Always lock the passengers’ windows using the lock switch when children are riding in the vehicle.
- Always carry the key when you leave the vehicle for safety reasons and never allow an unattended child to remain in the vehicle. Failure to follow this procedure could result in injury to a child operating the power window.


NOTE

- In order to make opening and closing the doors easier, completely closed windows are linked to door operations. Therefore, when a door is opened, its window opens slightly. When a door is closed, its window closes completely. However, if the battery has discharged or is disconnected, this function will not operate.
- If the power window system detects resistance, an impact or abnormality, the window operation may be automatically stopped to prevent further jamming, entrapment or malfunction.
  - The closing window slides down slightly and stops.
  - The opening window stops sliding down.
- The power window system may detect resistance, an impact or an abnormality in the following cases.
  - A substantial sized object is caught between the window and the roof side (between the front pillar and a point over the rear seat).
  - A foreign object is caught between the window and the roof side (between the front pillar and a point over the rear seat).
  - The vehicle drives over a deep pothole.
- The window cannot be closed for a few seconds after the window is automatically stopped by the system.

■ Power Window Operation

▼ Power window switches


- Driver's side power window switches:

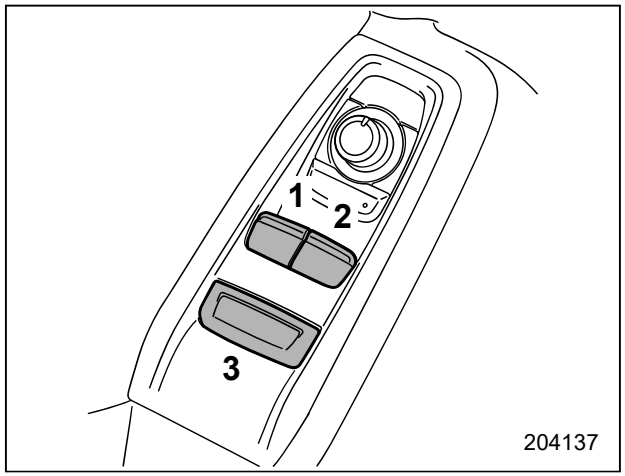

1) For left window
2) For right window
3) Lock switch


All door windows can be controlled by the power window switch cluster on the driver side door.

- Passenger's side power window switches:

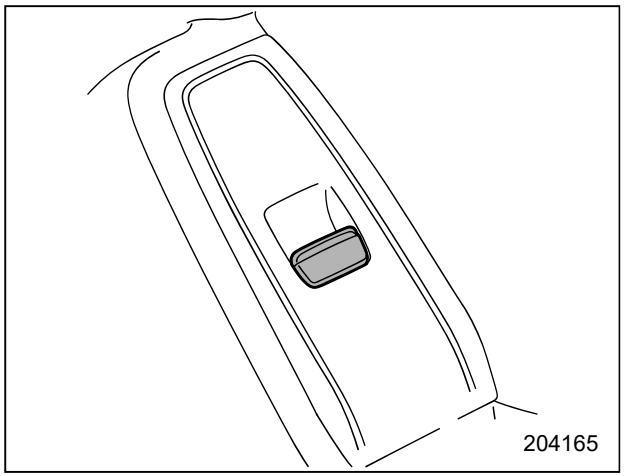

Passenger's window can be controlled by the power window switch located on the door.

▼ Operating the window

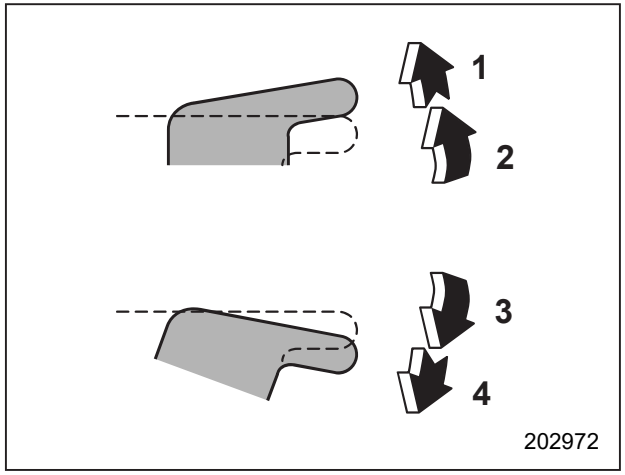

With one-touch auto up and down feature

1) Automatically close*
2) Close
3) Open
4) Automatically open*

*: To stop the window halfway, operate the switch to the opposite side.

NOTE

Avoid the following.

- **Continuously operating a switch in the same direction after the window is fully closed or fully opened.**
- **After the windows are fully opened or closed, if both switches of the power window switch on the driver's side are operated continuously, a fuse may blow and the windows will not be able**

– CONTINUED –

to be opened or closed. If the windows cannot be opened or closed, check the fuses and replace them as necessary. Refer to "Fuses" ☞P364.
Also, after replacing a fuse, make sure to initialize the power windows. Refer to "Initialization of Power Window" ☞P113.

▼ Anti-entrapment function

While closing the window automatically, if the window senses a substantial enough object trapped between the window and the roof side (between the front pillar and a point over the rear seat), it automatically moves down slightly and stops.

If a foreign object is caught while window is opening automatically, the window will stop.

⚠ CAUTION

- **Never attempt to test the power window operation using body parts fingers, hands or other parts of your body.**
- **If an object is caught just before the window fully closes, the system may not operate properly.**


NOTE

- **If a window detects an impact similar to that caused by trapping an object (for example, when the vehicle encounters a deep pothole), the anti-entrapment function may operate.**
- **You cannot close the window for a few seconds after the anti-entrapment function operates.**

▼ Off delay function

The windows can be operated for approximately 40 seconds even after the ignition switch is turned to the “ACC” or “OFF” position. If a door is opened within 40 seconds, the off delay function is canceled.

▼ Locking the passenger’s window

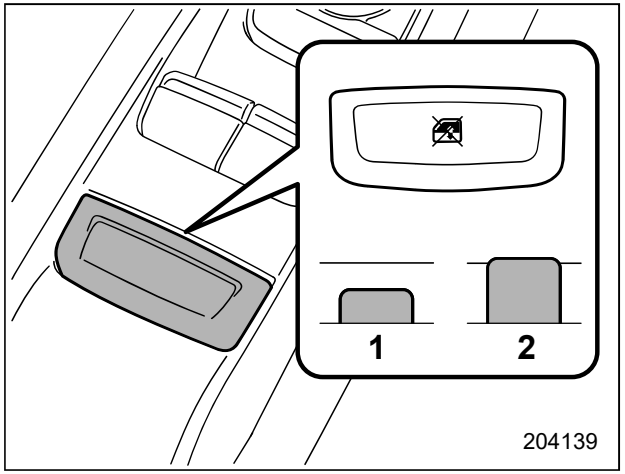

1) Lock
2) Unlock

When the lock switch is in the lock position, the passenger’s window cannot be opened or closed.

■ Initialization of Power Window

If the one-touch auto up and down function or off delay function does not operate properly, operate each window according to the following procedure in order to initialize the power window system.

1. Close the door.
2. Turn the ignition switch to the “ON” position.
3. Open the window completely and then press and hold down the power window switch for approximately 1 second.
4. Close the window completely and then pull and hold the power window switch for approximately 1 second.

2-6. Trunk Lid

⚠ WARNING

- **To prevent dangerous exhaust gas from entering the vehicle, always keep the trunk lid closed while the engine is running.**
- **Check that the trunk is completely closed before driving. If it is not, it may suddenly open, which could lead to an accident.**
- **Help prevent children, adults or animals from locking themselves in the trunk. On hot or sunny days, the temperature in the trunk could quickly become high enough to cause death or serious heat-related injuries including brain damage to anyone locked inside, particularly for small children.**
- **When leaving the vehicle, close all windows and lock all doors. Also make certain that the trunk is closed.**


⚠ CAUTION

- **Be extremely careful not to catch fingers or other objects when closing the trunk lid.**
- **Before opening and closing the trunk, carefully check your surroundings to make sure it will not strike any people or objects.**
- **When loading and unloading cargo, be careful not to come in contact with the hot engine exhaust gas or the exhaust pipe, because they could burn you.**
- **Be careful opening the trunk when the wind is strong. The trunk lid could close or open suddenly, possibly causing injuries.**
- **Make sure that the trunk is completely open when using it. If it is not, the trunk lid may suddenly drop and cause serious injury.**
- **Remove snow and ice from the trunk lid before opening it. Not doing so could cause the trunk lid to fall after it is opened.**
- **Under the following conditions, the trunk lid may close unexpectedly, striking people or objects in its path:**

– CONTINUED –

- **Parking on a slope, with the rear of the vehicle lower than its front. In this case, make sure the trunk lid is fully open and secure before loading or unloading cargo.**
- **Installing parts or accessories that place excess weight on the trunk lid. Install only genuine SUBARU parts and accessories.**
- **Loading baggage or other heavy items by throwing or otherwise forcefully loading them into the trunk. Always load cargo with care.**

- **Do not push the trunk lid forcibly to close it. It could deform the metal.**
- **The trunk lid is equipped with damper stays that hold the trunk lid in place. Observe the following precautions.**
  Failure to do so may cause damage to trunk lid damper stays, resulting in a malfunction.
  - **Do not attach any foreign objects such as stickers, plastic sheets and adhesives to damper stay rods.**
  - **Do not touch damper stay rods with gloves or other fabric items.**
  - **Do not attach any accessories other than genuine parts to the trunk lid.**
  - **Do not apply lateral force to damper stays or place your hand on it.**
- **Do not pull on or disassemble the trunk lid damper stays, or dispose of them in a fire. Illustrations on the trunk lid damper stays indicate the following:**
  - **: Do not pull**
  - **: Do not disassemble**
  - **: Do not dispose of in fire**

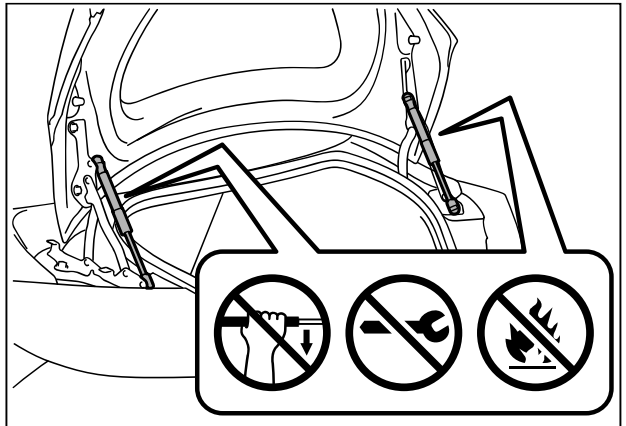

■ To Open and Close the Trunk Lid from Outside

The trunk lid can be opened using the keyless access function or remote keyless entry system. For details, refer to the following section.

Refer to "Opening trunk" ☞P98, or "Automatic Locking" ☞P107.


To close the trunk lid, lightly press the trunk lid down until the latch engages.

NOTE

- **Do not leave your valuables in the trunk when you leave your vehicle.**
- **Under the following conditions, the trunk can be opened without the access key fob.**
  - **The trunk lock/unlock setting is set to on.**
  - **All doors are unlocked.**

The trunk lock/unlock setting can be changed by a SUBARU dealer. We recommend that you contact your SUBARU dealer to change the setting.

■ To Open the Trunk Lid from Inside

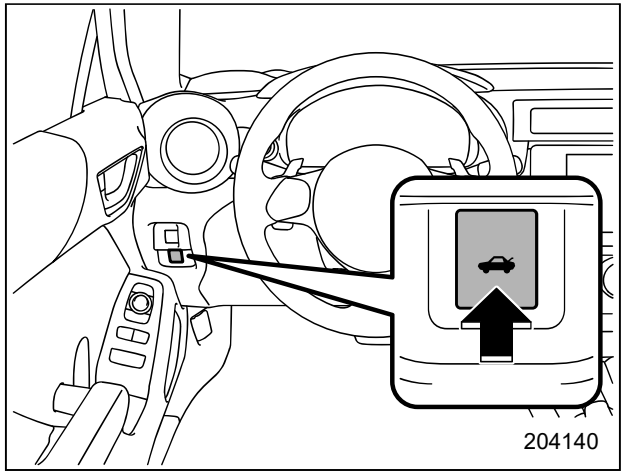

Press and hold the trunk lid opener button for more than 1 second.

3-1. Push-Button Ignition Switch 119
Safety Precautions 119
Operating Range for Push-Button Start System 119
Switching Power Status 119
When Access Key Fob Does Not Operate Properly 120
3-2. Hazard Warning Flasher 121
3-3. Meters and Gauges 121
Speedometer 121
Digital Speed Screen 121
Tachometer 121
Odometer and Double Trip Meter 122
Fuel Gauge 123
Engine Coolant Temperature Gauge 123
Outside temperature 123
Combination Meter Settings 124
3-4. REV indicator light and buzzer 124
3-5. Illumination Brightness Control 124
Auto Dimmer Cancel Function 125
3-6. Warning and Indicator Lights 125
Seatbelt Warning Light and Chime 126
Rear Seatbelt Indicator Light and Chime 127
SRS Airbag System Warning Light 128
Front Passenger's Frontal Airbag ON and OFF Indicators (If Equipped) 128
Malfunction Indicator Light (Check Engine Light) 129
Coolant Temperature Low Indicator Light/ Coolant Temperature High Warning Light 130
Charge Warning Light 131
Oil Pressure Warning Light 131
AT OIL TEMP Warning Light (AT Models) 131
Low Tire Pressure Warning Light (If Equipped) 131
ABS Warning Light 133
Brake System Warning Light (Red) 134
Vacuum Pressure System Warning Light (Yellow) 134
Low Fuel Warning Light 134
Door Open Indicator 134
Power Steering Warning Light 135
TRC OFF indicator light 135
Vehicle Stability Control (VSC) Warning Light/ Vehicle Stability Control (VSC) Operation Indicator Light 135
Vehicle Stability Control (VSC) OFF Indicator Light 136
Warning Chimes and Warning Indicator of the Keyless Access with Push-Button Start System 137
Immobilizer Indicator Light 141
Drive Mode Indicator Light (If Equipped) 141
Select Lever (AT Models Only)/Gear Position Indicator 141
Cruise Control Indicator Light (White/Green)/ Cruise Control Warning Light (Yellow) (Models Without The EyeSight System) 142
Turn Signal Indicator Lights 142
High Beam Indicator Light 142
High Beam Assist Indicator (If Equipped) 142
Automatic Headlight Beam Leveler Warning Light 142
LED Headlight Warning Light 143
Steering Responsive Headlight OFF Indicator Light 143
Steering Responsive Headlight Warning Light 143
Headlight Indicator Light 143
Rear Fog Light Indicator Light (If Equipped) 143
Hill Start Assist Indicator Light 143


Subaru Rear Vehicle Detection Warning Indicator (If Equipped) 143
Subaru Rear Vehicle Detection OFF Indicator (If Equipped) 143
Icy Road Surface Warning Indicator 143
RAB Warning Indicator (If Equipped) 144
RAB OFF Indicator (If Equipped) 144
Gasoline Particulate Filter Warning Light (If Equipped) 144
Vehicle Speed Warning Light (If Equipped) 144
Master Warning Light 144
3-7. Combination Meter Display (Color TFT) 145
Basic Operation 145
Meter Information Screen 145
Drive Information 146
Exclusive Content for SUBARU BRZ 148
Navigation System-Linked Display 149
Audio System-Linked Display 150
Driving Support System Settings Display 150
Settings Display 150
Warning Message Display 152
Telltale Screen 152
3-8. Center Information Display (CID) 153
Features 153
Touch Screen Operations 154
Main Screen 154
3-9. Clock 166
Setting the Clock Manually 166
Setting the Clock Automatically 167
3-10. Light Control Switch 168
Headlights 168
High/Low Beam Change (Dimmer) 170
Headlight Flasher 171
High Beam Assist Function (If Equipped) 171
Daytime Running Light System 173
3-11. Steering Responsive Headlight (SRH) 174
3-12. Headlight Beam Leveler 175
3-13. Rear Fog Light Switch (If Equipped) 175
3-14. Turn Signal Lever 176
One-Touch Lane Changer 177
3-15. Wiper and Washer 177
Windshield Wiper and Washer Switches 178
3-16. Headlight Washer 180
3-17. Defogger 181
3-18. Mirrors 182
Inside Mirror 182
Outside Mirrors 182
3-19. Tilt/Telescopic Steering Wheel 183
3-20. Horn 184

3-1. Push-Button Ignition Switch

■ Safety Precautions

Refer to "Safety Precautions" ☞P92.

■ Operating Range for Push-Button Start System

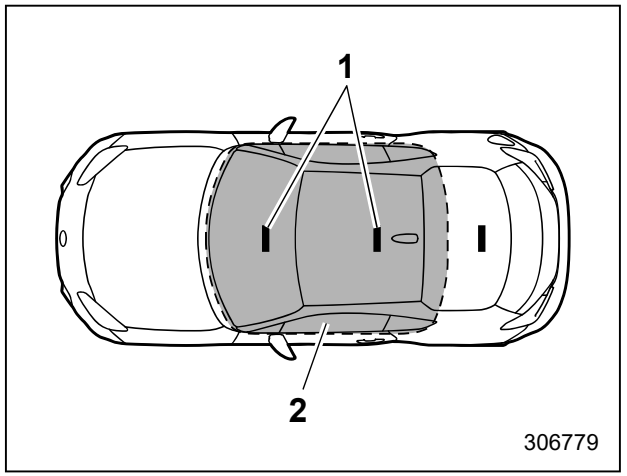

1) Antenna
2) Operating range

NOTE

• If the access key fob is not detected within the operating range of the antennas inside the vehicle, the push-button ignition switch and the engine start cannot be operated.


• Even when the access key fob is outside the vehicle, if it is placed too close to the glass, it may be possible to switch the power or to start the engine.

• Do not leave the access key fob in the following places. It may become impossible to operate the push-button ignition switch and the engine start.

- **On the instrument panel**
- **On the floor**
- **Inside the glove box**
- **Inside the door trim pocket**
- **On the rear seat**
- **On the rear shelf**

• When operating the push-button ignition switch or starting the engine, if the access key fob battery is discharged, perform the procedure described in "Access Key Fob – If Access Key Fob Does Not Operate Properly" ☞P314. In such a case, replace the battery immediately. Refer to "Replacing Battery of Access Key Fob" ☞P369.

■ Switching Power Status

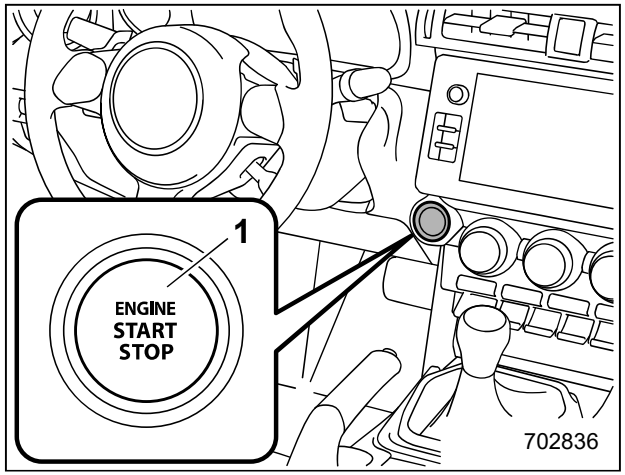

1) Push-button ignition switch

The power status is switched every time the push-button ignition switch is pressed.

1. Carry the access key fob, and sit in the driver's seat.
2. Shift the shift lever in neutral (MT models) or the select lever in the "P" position (AT models).
3. Press the push-button ignition switch without depressing the clutch pedal (MT models) or the brake pedal (AT models). Every time the button is pressed, the power is switched in the sequence of "OFF", "ACC", "ON" and "OFF".

– CONTINUED –

Power status	Combination meter display	Operation
OFF	—	Power is turned off.
ACC	“ACCESSORY”	The following systems can be used: audio and accessory power outlet.
ON	“IGNITION ON”	All electrical systems can be used.

⚠ CAUTION

- **To prevent the vehicle battery from discharging, do not leave the push-button ignition switch in the “ON” or “ACC” position for a long time.**
- **If the vehicle was left in the hot sun for a long time, the surface of the push-button ignition switch may get hot. Be careful not to burn yourself.**
- **To avoid a malfunction, observe the following precautions.**
  - **Do not spill drinks or other liquids on the push-button ignition switch.**
  - **Do not touch the push-button ignition switch with a hand that is soiled with oil or other contaminants.**
- **If the push-button ignition switch does not operate smoothly, stop the operation. We recommend that you contact a SUBARU dealer immediately.**
- **If the vehicle was left in the hot sun for a long time, the surface of the push-button ignition switch may get hot. Be careful not to burn yourself.**

NOTE

• When operating the push-button ignition switch, firmly press it all the way.

• If the push-button ignition switch is pressed quickly, the power may not turn on or off.

• When the steering lock cannot be released, the message appears on the combination meter. When this occurs, press the push-button ignition switch while turning the steering wheel left and right.


▼ Battery drainage prevention function

When the push-button ignition switch is left in the “ACC” for more than 20 minutes or “ON” position for approximately 1 hour, the push-button ignition switch will be automatically switched to “OFF” to prevent the battery from going dead. (In AT models, this function is activated when the select lever is in the “P” position.)

■ When Access Key Fob Does Not Operate Properly

Refer to "Access Key Fob – If Access Key Fob Does Not Operate Properly" ☞P314.

3-2. Hazard Warning Flasher

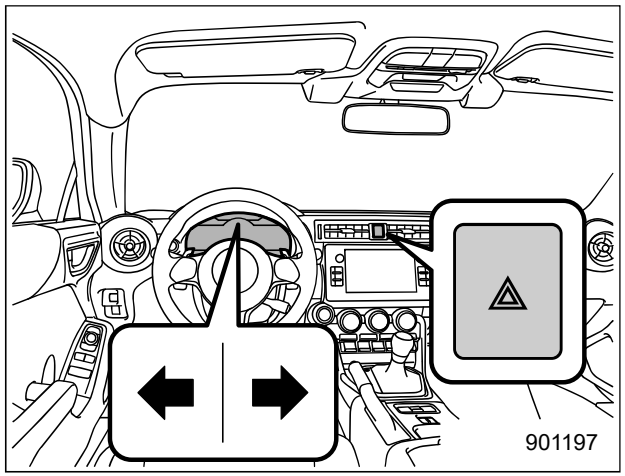

The hazard warning flasher is used to warn other drivers when you have to park your vehicle under emergency conditions. The hazard warning flasher works with the ignition switch in any position.

To turn on the hazard warning flasher, press the hazard warning button on the instrument panel. All the turn signal lights and the turn signal indicator lights will flash. To turn off the flasher, press the button again.

NOTE

When the hazard warning flasher is on, the turn signals do not work.

3-3. Meters and Gauges

NOTE

Liquid crystal displays are used in some of the meters and gauges in the combination meter. You will find their indications hard to see if you wear polarized glasses.


■ Speedometer

The speedometer shows the vehicle speed.

▼ Speed warning chime (if equipped)

When the speed is over approximately 120 km/h (75 mph), a chime sounds.

■ Digital Speed Screen

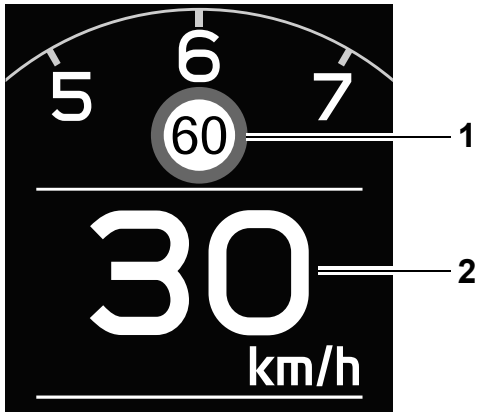

1) Speed limit indicator (if equipped)
2) Vehicle speed

This screen displays the current vehicle speed.

■ Tachometer

The tachometer shows the engine speed in thousands of revolutions per minute.

⚠ CAUTION


- **Do not operate the engine with the pointer of the tachometer in the red zone. In this range, fuel injection will be cut by the engine control module to protect the engine from overrevving. The engine will resume running normally after the engine speed is reduced below the red zone.**
- **Pay extra attention to the engine speed when the engine is cold, as the red zone will be lower than normal.**

NOTE

The initial movement of the bar display that occurs when the ignition switch is turned to the "ON" position can be activated or deactivated.
For details, refer to "General settings" ☞P155.

– CONTINUED –


■ Odometer and Double Trip Meter

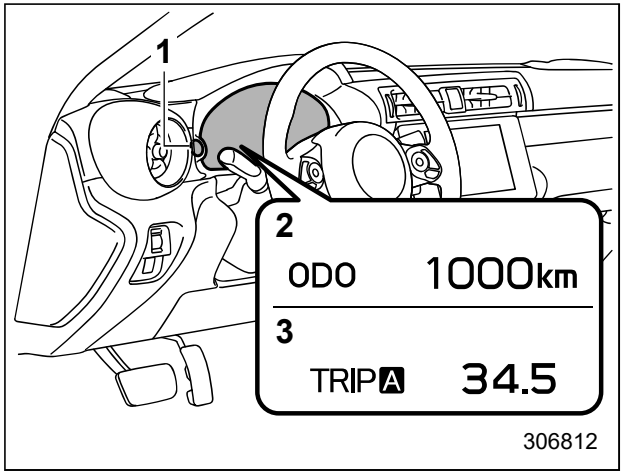

1) TRIP RESET switch
2) Odometer
3) Trip meter

This meter displays the odometer/trip meter when the ignition switch is in the "ON" position.

The display can be switched as shown in the following sequence by pressing the TRIP RESET switch.

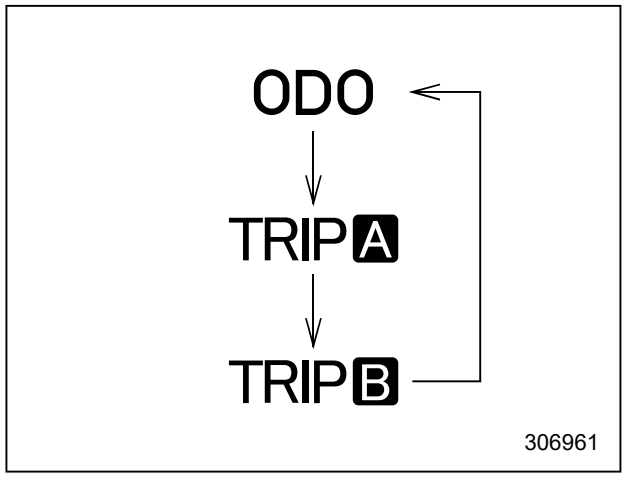

To reset the trip meter, select either the A trip or B trip meter, then press and hold the TRIP RESET switch.

▼ Odometer

The odometer shows the total distance that the vehicle has been driven.

NOTE

If you press the TRIP RESET switch when the ignition switch is in the "OFF" or "ACC" position, the odometer/trip meter will light up. The indicators will turn off when the TRIP RESET switch is not operated for approximately 10 seconds.

▼ Double trip meter

The trip meter shows the distance that the vehicle has been driven since you last set it to zero.

⚠ CAUTION


To ensure safety, do not attempt to change the function of the indicator during driving, as an accident could result.

NOTE


- **If the connection between the combination meter and battery is broken for any reason such as vehicle maintenance or fuse replacement, the data recorded on the trip meter will be lost.**
- **If you press the TRIP RESET switch when the ignition switch is in the "OFF" or "ACC" position, the odometer/trip meter will light up. It is possible to switch between the A trip meter and B trip meter indications while the odometer/trip meter is lit up.**

■ Fuel Gauge

▼ Except Europe Models

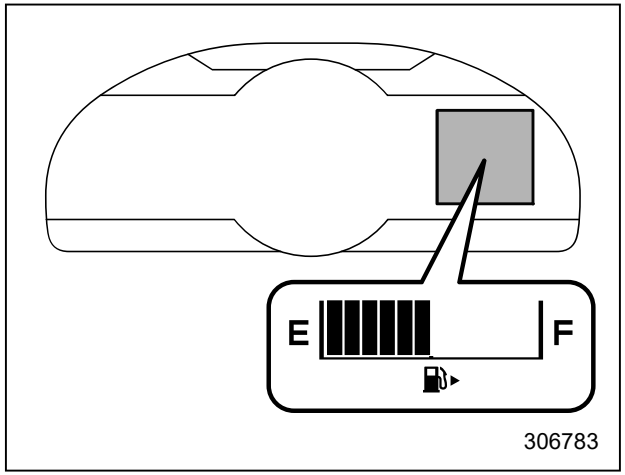

▼ Europe Models

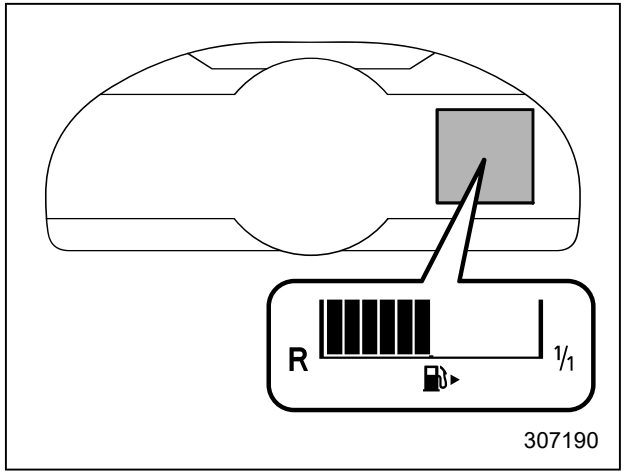

The fuel gauge shows the approximate amount of fuel remaining in the tank.


When the ignition switch is in the “OFF” or “ACC” position, the fuel gauge shows “E” or “R” even if the fuel tank contains fuel.

The gauge may move slightly due to fuel level movement in the tank (e.g., during braking, turning or acceleration).

NOTE

You will see the “⛽▶” sign in the fuel gauge. This indicates that the fuel filler lid is located on the right side of the vehicle.

■ Engine Coolant Temperature Gauge

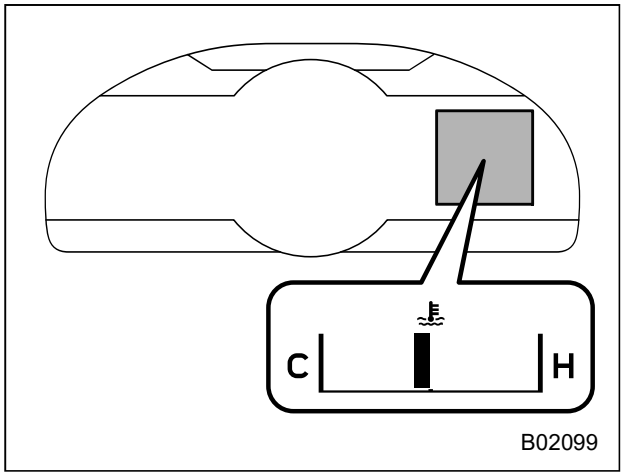

The temperature gauge shows engine coolant temperature when the ignition switch is in the “ON” position.

The coolant temperature will vary in accordance with the outside temperature and driving conditions.

We recommend that you drive moderately until the pointer of the temperature gauge reaches near the middle of the range. Engine operation is optimum with the engine coolant at this temperature range and high revving operation when the engine is not warmed up enough should be avoided.

⚠ CAUTION

If the pointer exceeds the normal operating range, safely stop the vehicle as soon as possible.

Refer to "Engine Overheating" ☞P308.

■ Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F). Low outside temperature indicator comes on when the ambient temperature is 3°C (37°F) or lower.

– CONTINUED –

NOTE

The outside temperature indicator shows the temperature around the sensor. However, the temperature may not be indicated correctly or the update may be delayed in the following conditions.

– While parking or driving at low speeds


– When the outside temperature changes suddenly (example: when going in and out of an underground parking area or when passing through a tunnel)

– When starting the engine after being parked for a certain period of time

■ Combination Meter Settings

Some meter settings can be set on the center information display. For details, perform the procedures described in "General settings" ☞P155.

3-4. REV indicator light and buzzer

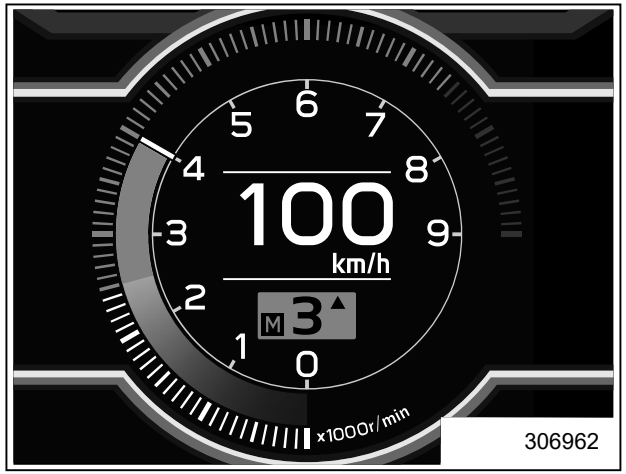


The REV alarm system has the following functions.

- When the engine speed reaches a set speed, the select lever/gear position indicator will illuminate in orange and a buzzer will sound.
- If the engine speed enters the red zone, the select lever/gear position indicator will illuminate in red.

The factory setting (default setting) for this function is set as “OFF”.

To change the REV indicator light and buzzer settings, perform the procedures described in "Settings Display" ☞P150

3-5. Illumination Brightness Control

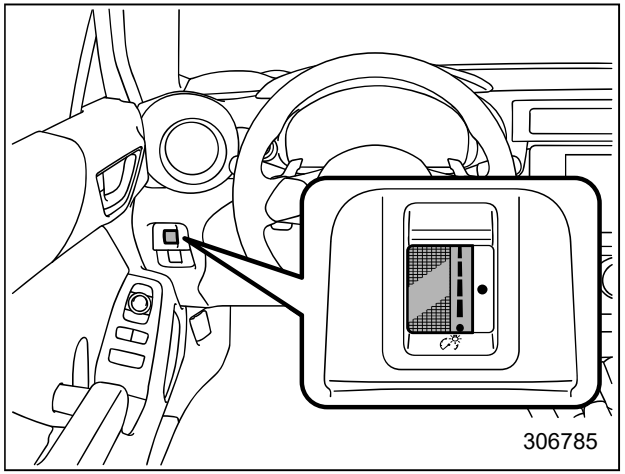

The illumination brightness of the combination meter and center information display dims under the following conditions.

- The light switch is in the “≡DC≡” or “≡D” position when the ambient light is dark.
- The light switch is in the “AUTO” position and the headlights illuminate automatically.

You can adjust the illumination brightness for better visibility.

To brighten, turn the control dial upward.

To darken, turn the control dial downward.

NOTE

- **When the control dial is turned fully upward, the illumination brightness becomes the maximum and the automatic dimming function does not work at all.**
- **The brightness setting is not canceled even when the ignition switch is turned to the "OFF" position.**

■ Auto Dimmer Cancel Function

When the ambient light is bright, the illumination brightness is set to the maximum regardless of the position of the control dial. In this case, you cannot adjust the illumination brightness by using the control dial. When the ambient light is dark, you can dim the illumination brightness as described above.

The operational/non-operational setting and sensitivity of the auto dimmer cancel function can be changed by your SUBARU dealer. We recommend that you contact your SUBARU dealer for details.

3-6. Warning and Indicator Lights

Several of the warning and indicator lights illuminate momentarily and then go out when the ignition switch is initially turned to the "ON" position. This permits checking the operation of the bulbs.

Apply the parking brake and turn the ignition switch to the "ON" position. For the system check, the following lights illuminate and turn off after several seconds or after the engine has started:

:Seatbelt warning light (The seatbelt warning light turns off only when the driver fastens the seatbelt.)

:Front passenger's seatbelt warning light (The seatbelt warning light turns off only when the front seat passenger fastens the seatbelt.)

:Rear passenger's seatbelt warning light (The seatbelt warning light turns off only when the rear seat passenger fastens the seatbelt.)

:SRS airbag system warning light

:Front passenger's frontal airbag ON indicator light (if equipped)

:Front passenger's frontal airbag OFF indicator light (if equipped)

:Malfunction indicator light (Check Engine light)

:Coolant temperature high warning light (red)

:Charge warning light

:Oil pressure warning light

(ABS):ABS warning light

:Vehicle Stability Control (VSC) warning light/Vehicle Stability Control (VSC) operation indicator light

:Vehicle Stability Control (VSC) OFF indicator light

TRC OFF :TRC OFF indicator light

:Brake system warning light (red)

:Vacuum pressure system warning light (yellow)

:Power steering warning light

:Low tire pressure warning light (if equipped)

:Low fuel warning light

:Master warning light

If any lights fail to illuminate, it indicates a burned-out bulb or a malfunction of the corresponding system.

We recommend that you consult your authorized SUBARU dealer for repair.

– CONTINUED –


■ Seatbelt Warning Light and Chime

NOTE

If your seatbelt warning device does not operate as described below, it may be malfunctioning. We recommend that you have the device inspected and, if necessary, repaired by the nearest SUBARU dealer.

▼ Seatbelt warning for driver's seat

Your vehicle is equipped with a seatbelt warning device for the driver's seat.

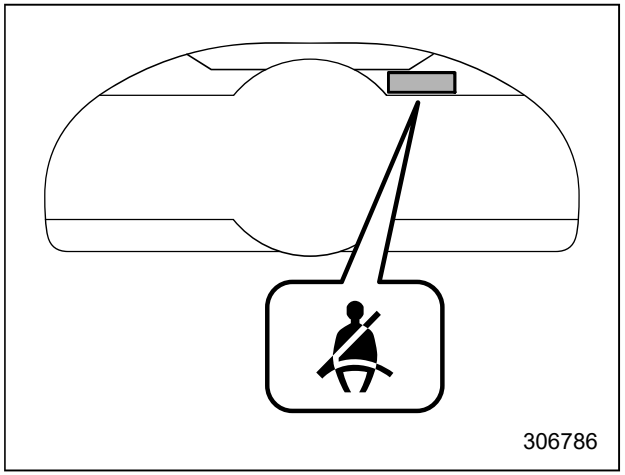

Driver's warning light

With the ignition switch turned to the "ON" position, this device reminds the driver to wear the seatbelt by illuminating the seatbelt warning light on the combination meter.


If the vehicle is driven at a speed no higher than approximately 20 km/h (13 mph) with the driver's seatbelt not fastened, the warning light will illuminate continuously.

If the vehicle reaches a speed of approximately 20 km/h (13 mph) with the driver's seatbelt not fastened, the warning light will flash and the chime will sound. If the seatbelt is fastened at this time, the warning light will turn off and the chime will stop sounding immediately.

This condition will continue for approximately 2 minutes. If the driver's seatbelt is still not fastened when the 2-minute period has elapsed, the warning light will stop flashing and the chime will stop sounding. The warning light, however, will remain illuminated continuously unless the seatbelt is fastened.

▼ Seatbelt warning for front passenger's seat

Your vehicle is equipped with a seatbelt warning device for the front passenger's seat.

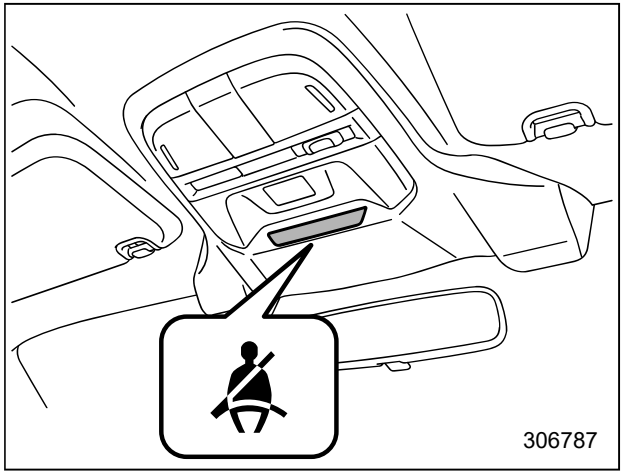

Front passenger's warning light

With the ignition switch turned to the "ON" position, this device reminds the front passenger to fasten his/her seatbelt by illuminating a warning light as shown in the illustration.

If the vehicle is driven at a speed no higher than approximately 20 km/h (13 mph) with the front passenger's seatbelt not fastened, the warning light(s) corresponding to the unfastened seatbelt(s) will illuminate continuously.

If the vehicle reaches a speed of approximately 20 km/h (13 mph) with the front passenger's seatbelt not fastened, the warning light will flash and the chime will sound.

If the seatbelt is fastened at this time, the warning light will turn off and the chime will stop sounding immediately.

⚠ WARNING


- **The driver must check that the all passengers have fastened their seatbelts properly since the seatbelt warning system may not detect passengers under the following circumstances.**
  - **When cushions, etc., are used.**
  - **When a child or small adult is sitting in the seat.**
- **Observe the following precautions. Failure to do so may prevent the front passenger's SRS frontal airbag from functioning correctly or cause the system to fail.**
  - **Do not apply any strong impact to the front passenger's seat.**
  - **Do not let rear passengers rest their feet between the front seatback and seat cushion.**
  - **Do not insert objects between the front seatback and seat cushion.**
  - **Do not spill liquid on the front passenger's seat. If liquid is spilled, wipe it off immediately.**
  - **Do not remove or disassemble the front passenger's seat.**
  - **Do not place any objects (shoes, umbrella, etc.) under the front passenger's seat.**

NOTE

- **If the driver's and front passenger's seatbelts are not fastened simultaneously (if one seatbelt is fastened significantly earlier or later than the other), the buzzer may sound longer (10 seconds maximum).**
- **The seatbelt warning system of the front passenger's seat detects if the seat is occupied by a passenger. However, if there is an object on the seat, the seatbelt warning system may be activated even the seat is not occupied.**

If the front passenger's seatbelt is still not fastened when the 2-minute period has elapsed, the warning light will stop flashing and the chime will stop sounding. The warning light, however, will remain illuminated continuously unless the corresponding seatbelt is fastened.

■ Rear Seatbelt Indicator Light and Chime

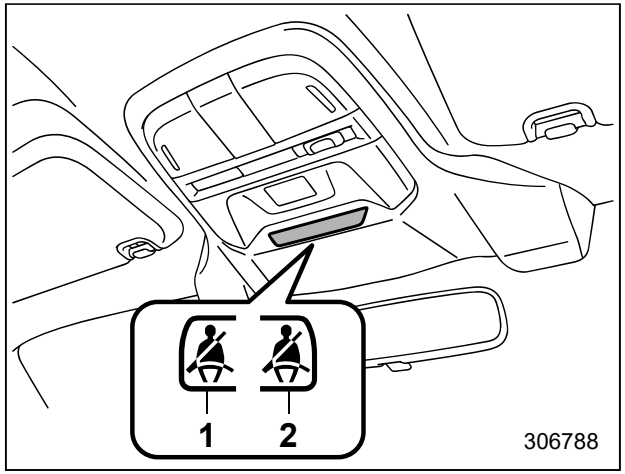

Rear seatbelt warning light
1) Rear seat (left position)
2) Rear seat (right position)

This indicator light is located as shown in the illustration. It illuminates to show only the seating positions in which seatbelts have not been fastened.

⚠ WARNING

- **The driver must check that the all passengers have fastened their seatbelts properly since the seatbelt warning system may not detect passengers under the following circumstances.**

– CONTINUED –

- When cushions or child restraint systems, etc., are used
- When a child or small adult is sitting in the seat

- Observe the following precautions.
  - Do not apply any strong impact to the rear seat.
  - Do not fold the seatback forward when objects are on the seat.
  - Do not spill liquid on the rear seat. If liquid is spilled, wipe it off immediately.
  - Do not remove or disassemble the rear seat.

NOTE

The seatbelt warning system of the rear seat detects if the seat is occupied by a passenger. However, if there is an object on the seat, the seatbelt warning system may be activated even the seat is not occupied.

■ SRS Airbag System Warning Light


⚠ WARNING

If the warning light exhibits any of the following conditions, immediately stop the vehicle in a safe place, and we recommend that you consult a SUBARU dealer. Unless a technician checks and repairs the system as needed, the seatbelt pretensioners and/or the SRS airbag will not operate properly in the event of a collision, which may result in injury.

- **Flashing or flickering of the warning light**
- **No illumination of the warning light when the ignition switch is first turned to the "ON" position**
- **Continuous illumination of the warning light**
- **Illumination of the warning light while driving**

For details about the components monitored by the warning light, refer to "SRS airbag system monitor" ☞P87

■ Front Passenger's Frontal Airbag ON and OFF Indicators (If Equipped)

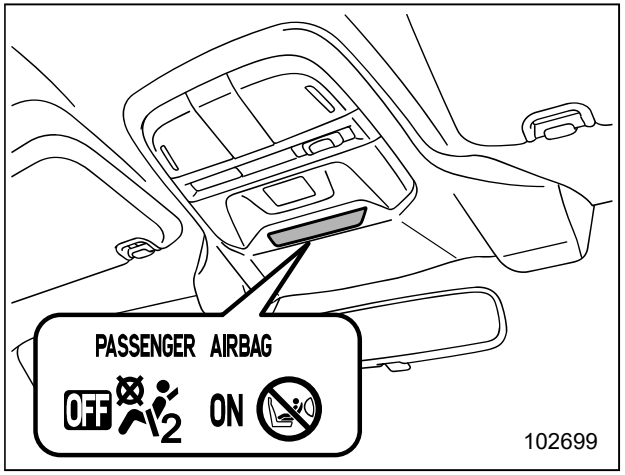

ON : Front passenger's frontal airbag ON indicator

OFF : Front passenger's frontal airbag OFF indicator

The front passenger's frontal airbag ON and OFF indicators show you the status of the front passenger's SRS frontal airbag.

The indicators are located as shown in the illustration.

When the ignition switch is turned to the "ON" position, both the ON and OFF indicators illuminate for 6 seconds during which time the system is checked. Following the system check, both indicators turn off for 2 seconds. After that, one of the indicators illuminates depending on

the status of the front passenger's SRS frontal airbag determined by the front passenger's SRS frontal airbag monitoring.

If the front passenger's SRS frontal airbag is activated, the passenger's frontal airbag ON indicator will illuminate while the OFF indicator will remain off.

If the front passenger's SRS frontal airbag is deactivated, the passenger's frontal airbag ON indicator will remain off while the OFF indicator will illuminate.

With the ignition switch turned to the "ON" position, if both the ON and OFF indicators remain illuminated or off simultaneously even after the system check period, the system is malfunctioning. We recommend that you consult your authorized SUBARU dealer for repair.

■ Malfunction Indicator Light (Check Engine Light)

▼ Models equipped with OBD system

Vehicles sold in some countries may be equipped with the OBD system. We recommend that you ask your SUBARU dealer to ascertain whether your vehicle has the OBD system.

If the malfunction indicator light illuminates steadily or blinks while the engine is running, it may indicate that there is at least one problem or potential problem somewhere in the emission control system and that service is required. The OBD system also assists your service technician in properly diagnosing any malfunction.

⚠ CAUTION

If the malfunction indicator light illuminates while you are driving, we recommend that you have your vehicle checked/repaired by your SUBARU dealer as soon as possible. Continued vehicle operation without having the emission control system checked and repaired as necessary could cause serious damage, which may not be covered by your vehicle's warranty.

▽ If the light illuminates steadily

If the light illuminates steadily while driving or does not turn off after the engine starts, an emission control system malfunction has been detected.

We recommend that you have your vehicle checked by an authorized SUBARU dealer immediately.

▽ If the light is blinking

If the light is blinking while driving, an engine misfire condition has been detected which may damage the emission control system.

To prevent serious damage to the emission control system, you should do the following:

- Reduce vehicle speed.
- Avoid hard acceleration.
- Avoid steep uphill grades.
- Reduce the amount of cargo, if possible.

The malfunction indicator light may stop blinking and illuminate steadily after several driving trips. We recommend that you have your vehicle checked by an authorized SUBARU dealer immediately.

▼ Models NOT equipped with OBD system

If the malfunction indicator light illuminates when the engine is running, it may indicate that there is a problem somewhere in the engine control system.

If the light illuminates while driving or does not turn off after the engine starts, we recommend that you contact your nearest SUBARU dealer immediately.

– CONTINUED –

■ Coolant Temperature Low Indicator Light/ Coolant Temperature High Warning Light

⚠ CAUTION

- **After turning the ignition switch to the “ON” position, if this indicator light/warning light behaves under any of the following conditions, the electrical system may be malfunctioning. We recommend that you contact your SUBARU dealer immediately for an inspection.**
  - **It remains blinking in RED.**
  - **It remains illuminated in RED for more than 2 seconds.**
  - **It remains blinking in RED and BLUE alternately.**
- **While driving, if this indicator light/warning light behaves under any of the following conditions, take the specified appropriate measure listed below.**
  - **Blinking or illuminated in RED:**
    Safely stop the vehicle as soon as possible, and refer to the emergency steps for the engine overheating. Afterward, we recommend that you have the system checked by your nearest SUBARU dealer. Refer to "Engine Overheating" ☞P308
  - **Blinking in RED and BLUE alternately:**
    The electrical system may be malfunctioning. We recommend that you contact your SUBARU dealer for an inspection.

This coolant temperature low indicator light/coolant temperature high warning light has the following three functions.

- Illumination in **BLUE** indicates insufficient warming up of the engine
- Blinking in **RED** indicates that the engine is close to overheating
- Illumination in **RED** indicates overheating condition of the engine

For the system check, this indicator light/warning light illuminates in **RED** for approximately 2 seconds when the ignition switch is turned to the “ON” position. After that, this indicator light/warning light changes to **BLUE** and maintains illumination in **BLUE**. This **BLUE** illuminated light turns off when the engine is warmed up sufficiently.

If the engine coolant temperature increases over the specified range, the indicator light/warning light blinks in **RED**. At this time, the engine is close to overheating.

If the engine coolant temperature increases further, the indicator light/warning light illuminates in **RED** continuously. At this time, the engine may be overheating.

When the indicator light/warning light blinks in **RED** or illuminates in **RED**, safely stop the vehicle as soon as possible, and refer to the emergency steps for the engine overheating. Refer to "Engine Overheating" ☞P308. Afterward, we recommend that you have the system checked by your nearest SUBARU dealer.

Also, if the indicator light/warning light often blinks in **RED**, the electrical system may be malfunctioning. We recommend that you contact your SUBARU dealer for an inspection.

NOTE

If the engine is restarted after a certain driving condition, this indicator light/

warning light may illuminate in RED. However, this is not a malfunction if the indicator light/warning light turns off after a short time.

■ Charge Warning Light



If this light illuminates when the engine is running, it may indicate that the charging system is not working properly.

If the light illuminates while driving or does not turn off after the engine starts, stop the engine at the first safe opportunity and check the drive belt. If the belt is loose, broken or if the belt is in good condition but the light remains illuminated, we recommend that you contact your nearest SUBARU dealer immediately.

■ Oil Pressure Warning Light



⚠ CAUTION

Do not operate the engine with the oil pressure warning light on. This may cause serious engine damage.

If this light illuminates when the engine is running, it may indicate that the engine oil pressure is low and the lubricating system is not working properly.

If the light illuminates while driving or does not turn off after the engine starts, stop the engine at the first safe opportunity and we recommend that you contact your nearest SUBARU dealer immediately.

■ AT OIL TEMP Warning Light (AT Models)



If this light illuminates when the engine is running, it may indicate that the transmission fluid temperature is too hot.

If the light illuminates while driving, immediately stop the vehicle in a safe place and let the engine idle until the warning light turns off.

■ Low Tire Pressure Warning Light (If Equipped)



When the ignition switch is turned to the “ON” position, the low tire pressure warning light will illuminate for approximately 2 seconds to check that the tire pressure monitoring system (TPMS) is functioning properly. If there is no problem and all tires are properly inflated, the light will go out.

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly underinflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly underinflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle’s handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver’s responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure tell-

– CONTINUED –

tale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

Should the warning light illuminate steadily after blinking for approximately one minute, we recommend that you have the system inspected by your nearest SUBARU dealer as soon as possible.

⚠ WARNING

If this light does not illuminate briefly after the ignition switch is turned on or the light illuminates steadily after blinking for approximately one minute, we recommend that you have your Tire Pressure Monitoring System checked at a SUBARU dealer as soon as possible.

If this light illuminates while driving, never brake suddenly. Instead, perform the following procedure. Otherwise an accident involving serious vehicle damage and serious personal injury could occur.

1) **Keep driving straight ahead while gradually reducing speed.**
2) **Slowly pull off the road to a safe place.**

If this light still illuminates while driving after adjusting the tire pressure, a tire may have significant damage and a fast leak that causes the tire to lose air rapidly. If you have a flat tire, refer to "Flat Tires" ☞P292.

When a spare tire is mounted or a wheel rim is replaced without the original pressure sensor/transmitter being transferred, the Low tire pressure warning light will illuminate steadily after blinking for approximately one minute. This indicates the TPMS is unable to monitor all four road wheels. We recommend that you contact your SUBARU dealer as soon as possible for tire and sensor replacement and/or system resetting. If the light illuminates steadily after blinking for approximately one minute, we recommend that you promptly contact a SUBARU dealer to have the system inspected.

⚠ CAUTION

The tire pressure monitoring system is NOT a substitute for manually checking tire pressure. The tire pressure should be checked periodically (at least monthly) using a tire gauge. After any change to tire pressure(s), the tire pressure monitoring system will not re-check tire inflation pressures until the vehicle is first driven more than 40 km/h (25 mph). After adjusting the tire pressures, increase the vehicle speed to at least 40 km/h (25 mph) to start the TPMS re-checking of the tire inflation pressures. If the tire pressures are now above the severe low pressure threshold, the low tire pressure warning light should turn off a few minutes later. Therefore, be sure to install the specified size for the front and rear tires.

■ ABS Warning Light



⚠ CAUTION

- **If any of the following conditions occur, we recommend that you have the ABS repaired at the first available opportunity by your SUBARU dealer.**
  - **The warning light does not illuminate when the ignition switch is turned to the "ON" position.**
  - **The warning light illuminates when the ignition switch is turned to the "ON" position, but it does not turn off even after starting the vehicle.**
  - **The warning light illuminates during driving.**
- **When the warning light is on (and brake system warning light is off), the ABS function shuts down; however, the conventional brake system continues to operate normally.**

The ABS warning light illuminates together with the brake system warning light if the EBD system malfunctions. For further details of the EBD system malfunction warning, refer to "Brake System Warning Light (Red)" ☞P134.

NOTE

If the warning light behavior is as described in the following conditions, the ABS may be considered normal.

- **The warning light illuminates right after the engine is started but turns off immediately, remaining off.**
- **The warning light remains illuminated after the engine has been started, but it turns off while driving.**
- **The warning light illuminates during driving, but it turns off immediately and remains off.**

When driving with an insufficient battery voltage such as when the engine is jump started, the ABS warning light may illuminate. This is due to the low battery voltage and does not indicate a malfunction. When the battery becomes fully charged, the light will turn off.

– CONTINUED –

■ Brake System Warning Light (Red)



⚠ WARNING

- **Driving with the brake system warning light on is dangerous. This indicates your brake system may not be working properly. If the light remains illuminated, we recommend that you have the brakes inspected by a SUBARU dealer immediately.**
- **If at all in doubt about whether the brakes are operating properly, do not drive the vehicle. We recommend that you have your vehicle towed to the nearest SUBARU dealer for repair.**

This light has the following functions.

▼ Parking brake warning

The light illuminates with the parking brake applied while the ignition switch is in the “ACC” or “ON” position. It turns off when the parking brake is fully released.

▼ Brake fluid level warning

This light illuminates when the brake fluid level has dropped to near the “MIN” level of the brake fluid reservoir with the ignition switch in the “ON” position and with the parking brake fully released.

If the brake system warning light should illuminate while driving (with the parking brake fully released and with the ignition switch positioned in “ON”), it could be an indication of leaking of brake fluid or worn brake pads. If this occurs, immediately stop the vehicle at the nearest safe place and check the brake fluid level. If the fluid level is below the “MIN” mark in the reservoir, do not drive the vehicle. We recommend that you have the vehicle towed to the nearest SUBARU dealer for repair.

▼ Electronic Brake Force Distribution (EBD) system warning

If the warning light remains on even though the parking brake is released, the brake fluid level may be low or there could be a problem with the EBD system. Park the vehicle in a safe place immediately and we recommend that you contact a SUBARU dealer.

■ Vacuum Pressure System Warning Light (Yellow)



The vacuum pressure system warning light will illuminate when the vacuum pressure sensor is malfunctioning or brake booster pressure is decreasing. If the vacuum pressure system warning light continues to illuminate for several minutes after starting the engine, there may be a malfunction in the vacuum system. In this case, drive the vehicle carefully and have the system inspected by a SUBARU dealer.

■ Low Fuel Warning Light



The low fuel warning light illuminates when the tank is nearly empty approximately 7.0 liters (1.8 US gal, 1.5 Imp gal). It only operates when the ignition switch is in the “ON” position.

⚠ CAUTION

Promptly put fuel in the tank whenever the low fuel warning light illuminates. Engine misfires as a result of an empty tank could cause damage to the engine.

■ Door Open Indicator



When any of the doors or the trunk lid is not fully closed, the door open indicator appears. This function is effective even if the ignition switch is in the “OFF” or “ACC” position.

The open door is indicated by the corresponding part of the door open indicator.

Always make sure this indicator does not appear before you start to drive.

■ Power Steering Warning Light



While the engine is running, a warning light illuminates and a buzzer sounds if a malfunction is detected in the electric power steering system.

⚠ CAUTION

When the power steering warning light is illuminated, there may be more resistance when the steering wheel is operated. We recommend that you drive carefully to the nearest SUBARU dealer and have the vehicle inspected immediately.

NOTE

If the steering wheel is operated in the following ways, the power steering control system may temporarily limit the power assist in order to prevent the system components, such as the control computer and drive motor, from overheating.

• The steering wheel is operated frequently and turned sharply while the vehicle is maneuvered at extremely low speeds, such as while frequently turning the steering wheel during parallel parking.

• The steering wheel remains in the fully turned position for a long period of time.

At this time, there will be more resistance when steering. However this is not a malfunction. Normal steering force will be restored after the steering wheel is not operated for a while and the power steering control system has an opportunity to cool down. However, if the power steering is operated in a non-standard way which causes power assist limitation to occur too frequently, that may result in a malfunction of the power steering control system.

■ TRC OFF indicator light

This light illuminates when the TRC system is off. For details, refer to "Vehicle Stability Control (VSC)/TRC System" ☞P234.

■ Vehicle Stability Control (VSC) Warning Light/Vehicle Stability Control (VSC) Operation Indicator Light



▼ Vehicle Stability Control (VSC) warning light

⚠ CAUTION

The Vehicle Stability Control (VSC) system provides its ABS control through the electrical circuit of the ABS. Accordingly, if the ABS is inoperative, the Vehicle Stability Control (VSC) system becomes unable to provide ABS control. As a result, the Vehicle Stability Control (VSC) system becomes inoperative, causing the warning light to illuminate. Although both the Vehicle Stability Control (VSC) and ABS are inoperative in this case, the ordinary functions of the brake system are still available. You will be safe while driving in this condition, but drive carefully and we recommend that you have your vehicle checked at a SUBARU dealer as soon as possible.

– CONTINUED –

NOTE

• If the electrical circuit of the Vehicle Stability Control (VSC) system itself malfunctions, the warning light only illuminates. At this time, the ABS (Anti-lock Brake System) remains fully operational.

• The warning light illuminates when the electronic control system of the ABS/Vehicle Stability Control (VSC) system malfunctions.

The Vehicle Stability Control (VSC) system is probably inoperative under any of the following conditions. We recommend that you have your vehicle checked at a SUBARU dealer immediately.

• The warning light does not illuminate when the ignition switch is turned to the "ON" position.

• The warning light illuminates while the vehicle is running.

NOTE

If the warning light behavior is as described in the following examples, the Vehicle Stability Control (VSC) system may be considered normal.

• The warning light illuminates right after the engine is started but turns off immediately and remains off.

• The warning light illuminates after the engine has started and turns off while the vehicle is subsequently being driven.

• The warning light illuminates during driving, but turns off immediately and remains off.

▼ Vehicle Stability Control (VSC) operation indicator light

The indicator light flashes during activation of the skid suppression function and during activation of the TRC system.

NOTE

• The light may remain illuminated for a short period of time after the engine has been started, especially in cold weather. This does not indicate the existence of a problem. The light should turn off as soon as the engine has warmed up.

• The indicator light illuminates when the engine has developed a problem and the malfunction indicator light/ CHECK ENGINE warning light is on.

The Vehicle Stability Control (VSC) system is probably malfunctioning under the following condition. We recommend that you have your vehicle checked at a SUBARU dealer as soon as possible.

• The light does not turn off even after the lapse of several minutes (the engine has warmed up) after the engine has started.

■ Vehicle Stability Control (VSC) OFF Indicator Light




The light illuminates when "Vehicle Stability Control (VSC)" is selected to deactivate the Vehicle Stability Control (VSC) system.

The Vehicle Stability Control (VSC) system is probably malfunctioning under any of the following conditions. We recommend that you have your vehicle checked at a SUBARU dealer immediately.

• The light does not illuminate while the system check.

• The light does not turn off even after a period of approximately 2 seconds after the ignition switch has been turned to the "ON" position.

■ Warning Chimes and Warning Indicator of the Keyless Access with Push-Button Start System

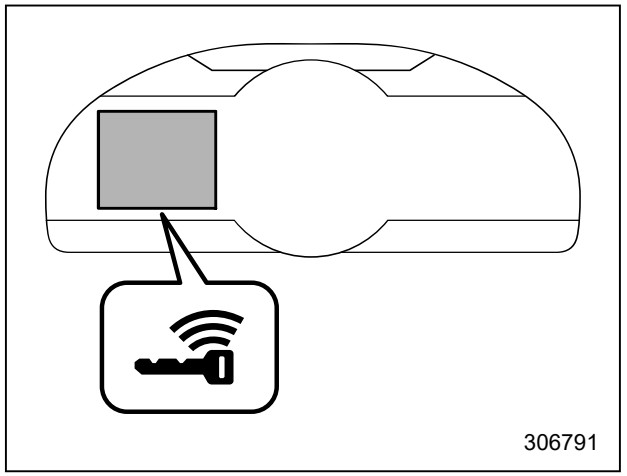

Access key warning indicator

The keyless access with push-button start system is equipped with a warning chime and the access key warning indicator in order to minimize improper operations and help protect your vehicle from theft.

When the warning chime sounds and/or the warning indicator appears, take the appropriate action.

You cannot turn the warning chimes off. However, the volume setting of the outside warning chime can be changed by a SUBARU dealer. We recommend that you consult your SUBARU dealer for details.

⚠ WARNING

Never drive the vehicle if a steering lock warning message is displayed on the combination meter when starting the engine. This indicates the status that the steering lock is not released and could result in an accident involving serious injury or death.

⚠ CAUTION

- **If a steering lock system malfunction warning message is displayed on the combination meter, there could be a steering lock malfunction. We recommend that you contact your SUBARU dealer as soon as possible.**
- **When the keyless access system warning message is displayed on the combination meter, we recommend that you contact a SUBARU dealer immediately.**

NOTE

• Even when the access key fob is within the operating ranges inside the vehicle, the access key warning for engine start may be provided depending on the status of the access key fob and the environmental conditions.

• When the access key fob is taken out of the vehicle through an open window, the access key takeout warning or passenger access key takeout warning will not be provided.

▼ List of warnings

⚠ CAUTION

When any of the following warnings occurs even if the access key warning indicator does not appear, take the appropriate action.

– CONTINUED –

Inside warning chime	Outside warning chime	Status	Action
Ding, ding ... (intermittent)	—	The driver's door is opened while the push-button ignition switch is "ACC". (in AT models, when the select lever is in the "P" position.)	Switch the push-button ignition switch to "OFF", or close the driver's door. When exiting the vehicle, be sure to switch the push-button ignition switch to "OFF".
		The push-button ignition switch is switched to "OFF" while the driver's door is open.	Close the driver's door.
Ding	Short beep (2 seconds)	**Lockout warning:** The doors are locked by following methods when an access key fob is left in the car. • The door is closed when the lock lever of the door is in the lock position. • The door is closed when the power door locking switch is in the lock position.	Take out the access key fob from the vehicle, and lock the doors. The doors cannot be locked while the access key fob is inside the vehicle. A chirp sound will be heard, and all doors will be unlocked.
—	Short beep (2 seconds)	**Access key lock-in warning:** The door lock sensor is touched while the push-button ignition switch is "OFF" and the access key fob is inside the vehicle.	Take out the access key fob from the vehicle, and lock the doors. If the access key fob is inside the vehicle, the doors cannot be locked.
—	Short beep (5 seconds)	**Door ajar warning:** The door lock sensor is touched while the ignition switch is in the "OFF" position and one of the doors is opened.	Close the doors securely and lock them. If one of the doors is opened, the doors cannot be locked.
Ding	Long beep (60 seconds max.)	**Power warning:** For AT models, the door lock sensor is touched while you are carrying the access key fob, the push-button ignition switch is in a position other than "OFF" and the select lever is in the "P" position.	Return the access key fob inside the vehicle, or switch the push-button ignition switch to "OFF". If the push-button ignition switch is not switched to "OFF", the doors cannot be locked.
Ding, ding ... (7 seconds)	—	**Access key warning:** The vehicle is driven while the access key fob is not inside the vehicle.	Carry the access key fob, and drive the vehicle.

Inside warning chime	Outside warning chime	Status	Action
Ding	—	**Access key warning for engine start:** The push-button ignition switch is pressed while the access key fob is not inside the vehicle.	Carry the access key fob, and press the push-button ignition switch.
Ding	Beep, beep, beep (3 times)	**Access key takeout warning:** The driver exits the vehicle with the access key fob and closes the driver's door while the push-button ignition switch is in a position other than "OFF" and the select lever is in the "P" position.	Switch the push-button ignition switch to "OFF", and get out of the vehicle.
Ding	Beep, beep, beep (3 times)	**Passenger access key takeout warning:** A fellow passenger exits the vehicle with the access key fob and closes a door other than the driver's door while the push-button ignition switch is in a position other than "OFF".	Return the access key fob to inside the vehicle, or switch the push-button ignition switch to "OFF".
Long beep (continuous)	Long beep (continuous)	**Access key takeout without "P" position warning (AT models):** The driver exits the vehicle with the access key fob and closes the driver's door while the push-button ignition switch is in a position other than "OFF" and the select lever is in a position other than the "P" position.	Shift the select lever to the "P" position, switch the push-button ignition switch to "OFF" and exit the vehicle.
Long beep (continuous)	—	**Select lever position warning (AT models):** • Case 1: The engine is turned off by pressing the push-button ignition switch while the select lever is in a position other than the "P" position. • Case 2: The driver's door is opened while the push-button ignition switch is in a position other than "OFF" and the select lever is in a position other than the "P" position.	• Case 1: Start the engine, shift the select lever to the "P" position, switch the push-button ignition switch to "OFF" and exit the vehicle. • Case 2: Shift the select lever to the "P" position, switch the push-button ignition switch to "OFF" and exit the vehicle.
Ding	—	The battery of the access key fob is low.	Replace the battery of the access key fob.
Ding	—	**Steering lock warning:** The engine start procedure is performed, but the steering is still locked.	While turning the steering wheel right and left lightly, depress the brake pedal and press the push-button ignition switch.

– CONTINUED –

Inside warning chime	Outside warning chime	Status	Action
Ding	—	**System malfunction warning:** A malfunction is detected in the power system or steering lock.	We recommend that you contact a SUBARU dealer immediately and have the vehicle inspected.

■ Immobilizer Indicator Light

This indicator light indicates operation of the immobilizer system.

The immobilizer indicator light starts blinking in the following conditions.

- Immediately after the push-button ignition switch is turned to the “OFF” position.
- Immediately after the driver’s door is opened or closed when all of the following conditions are met.
  - The push-button ignition switch is in the “ON” or “ACC” position.
  - The engine is not running.

In the event that an unauthorized key is used (for example, the key is unregistered or the ID code does not match), the power is not switched to “ON” and the immobilizer indicator light continues blinking.


If the indicator light does not blink in the above conditions, it may indicate that immobilizer system may be malfunctioning. Contact your nearest SUBARU dealer immediately.

In the event that an unauthorized key (for example, an unauthorized duplicate) is used, the immobilizer indicator light illuminates. For details about the immobilizer system, refer to "Immobilizer" ☞P105.

NOTE

- The immobilizer indicator light remains off in the following conditions. It means that the matching of the ID code is completed and the immobilizer system is deactivated, and it does not indicate a malfunction.
  - While the engine is running
  - The push-button ignition switch has been turned to the “ON” or “ACC” position and the driver’s door has not been opened or closed
- Even if a malfunction occurs, such as the immobilizer indicator light flashes irregularly, it will not affect the functionality of the immobilizer system.

■ Drive Mode Indicator Light (If Equipped)

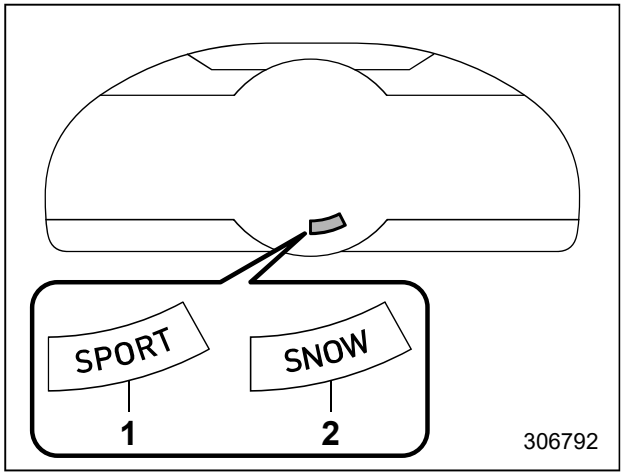


Drive mode indicator light
1) Sport mode
2) Snow mode

This light indicates the current drive mode.

For details of drive mode, refer to "Driving Mode Select Switch (If Equipped)" ☞P228.

■ Select Lever (AT Models Only)/Gear Position Indicator

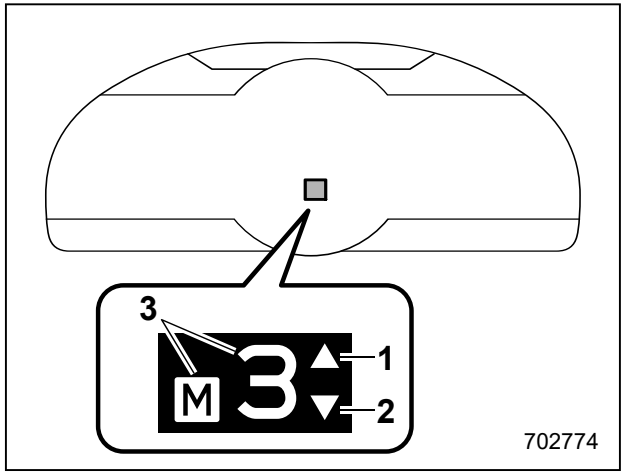

1) Upshift indicator
2) Downshift indicator (AT models only)
3) Select lever (AT models only)/gear position indicator

This indicator shows the position of the shift lever (MT models)/select lever (AT models).

– CONTINUED –

▼ **Gear shift indicator (MT models)**

When shifting up is recommended for good fuel economy, the upshift indicator blinks. Refer to "Gear shift indicator" ☞P221.

▼ **Upshift/downshift indicator (AT models)**

When the manual mode is selected, the gear position indicator (which shows the current gear selection) and the available upshift/downshift indicator light up. Refer to "Selection of Manual Mode" ☞P226.

■ Cruise Control Indicator Light (White/Green)/Cruise Control Warning Light (Yellow) (Models Without The EyeSight System)



This light illuminates in white when the “ON-OFF” switch is pressed to activate the cruise control function. When vehicle speed has been set to use the cruise control function, this indicator is lighting in green.

For details, refer to "Cruise Control (Models without the EyeSight system)" ☞P247.

If this light illuminates in yellow, do not use the cruise control. We recommend that you contact your SUBARU dealer for an inspection.

⚠ CAUTION

If the malfunction indicator light (Check Engine light) illuminates, the cruise control warning light (yellow) illuminates at the same time. At this time, avoid driving at high speeds and we recommend that you have your vehicle inspected at a SUBARU dealer as soon as possible.

NOTE

If this indicator light does not illuminate even when you press the cruise control switch, the “ON-OFF” switch may not operate properly. We recommend that you have your vehicle checked by your nearest SUBARU dealer.

■ Turn Signal Indicator Lights



These lights show the operation of the turn signal or lane change signal.

If the indicator lights do not blink or blink rapidly, the turn signal bulb may be burned out. We recommend that you have your vehicle inspected by your SUBARU dealer as soon as possible.

■ High Beam Indicator Light



This light shows that the headlights are in the high beam mode.

This indicator light also illuminates when operating the headlight flasher.

■ High Beam Assist Indicator (If Equipped)



This indicator appears when the high beam assist function is activated. For details about the high beam assist function, refer to "High Beam Assist Function (If Equipped)" ☞P171.

■ Automatic Headlight Beam Leveler Warning Light



This light illuminates when the automatic headlight beam leveler does not operate normally.

If this light illuminates while driving or does not turn off approximately 3 seconds after turning the ignition switch to the “ON” position, we recommend that you have your vehicle inspected at your SUBARU dealer.

■ LED Headlight Warning Light



This light illuminates if the LED headlights malfunction. We recommend that you have your vehicle inspected at a SUBARU dealer as soon as possible.

■ Steering Responsive Headlight OFF Indicator Light



This light illuminates when the Steering Responsive Headlight function is off. For details, refer to"Driving Support System Settings Display" ☞P150.

■ Steering Responsive Headlight Warning Light



The light illuminates when a malfunction occurs in the Steering Responsive Headlight. Refer to "Steering Responsive Headlight (SRH)" ☞P174.

■ Headlight Indicator Light



This indicator light illuminates under the following conditions.

- When the light switch is turned to the "≡D◯≡" or "≡D" position
- When the light switch is in the "AUTO" position and the headlights illuminate automatically

■ Rear Fog Light Indicator Light (If Equipped)



This indicator light illuminates while the rear fog light is illuminated.

■ Hill Start Assist Indicator Light



When the hill start assist function is enabled, this indicator light will be illuminated. It will disappear when the hill start assist function is deactivated.

■ Subaru Rear Vehicle Detection Warning Indicator (If Equipped)



This warning indicator appears on the combination meter display (color TFT) when the Subaru Rear Vehicle Detection (SRVD) is malfunctioning for any reason. For further details, refer to "SRVD Warning Indicator" ☞P261. If this indicator remains displayed, we recommend that you have your vehicle inspected by your SUBARU dealer as soon as possible.

■ Subaru Rear Vehicle Detection OFF Indicator (If Equipped)



This indicator appears on the combination meter display (color TFT) when "SRVD" is selected to deactivate the Subaru Rear Vehicle Detection (SRVD), or when the Subaru Rear Vehicle Detection is suspended temporarily. For details, refer to "SRVD OFF Indicator" ☞P261.

■ Icy Road Surface Warning Indicator



When the outside temperature is 3°C (37°F) or less, the icy road surface warning indicator will illuminate to inform the driver that the road surface may be frozen.

NOTE

- **The outside temperature indicator shows the temperature in the area around the sensor.**
- **The icy road surface warning indicator should be treated only as a guide. Be sure to check the condition of the road surface before driving.**
- **Once the icy road surface warning indicator appears, it will not disappear unless the outside temperature has increased to 5°C (41°F) or higher.**

– CONTINUED –

■ RAB Warning Indicator (If Equipped)

RAB

This indicator illuminates if the Reverse Automatic Braking (RAB) System malfunctions. Refer to "Reverse Automatic Braking (RAB) System (If Equipped)" ☞P263.

■ RAB OFF Indicator (If Equipped)

RAB OFF

This indicator illuminates when the Reverse Automatic Braking (RAB) System is turned OFF, or when the Reverse Automatic Braking (RAB) System is suspended temporarily. Refer to "Reverse Automatic Braking (RAB) System (If Equipped)" ☞P263.

■ Gasoline Particulate Filter Warning Light (If Equipped)

▼ When gasoline particulate filter warning light illuminates

The gasoline particulate filter warning light illuminates when the accumulated particulate matter exceeds the specified limit.

Drive the vehicle in the specified driving conditions to remove soot. The gasoline particulate filter warning light will turn off when the soot is removed. Refer to "Gasoline Particulate Filter (If Equipped)" ☞P278 for the specified driving conditions.

▼ When gasoline particulate filter warning light flashes

When the gasoline particulate filter warning light flashes, we recommend that you consult the nearest SUBARU dealer for an immediate inspection.

⚠ CAUTION

If a vehicle keeps running with the gasoline particulate filter warning light flashing, the engine power may be controlled to protect the engine and gasoline particulate filter. In this case, the vehicle speed will be controlled and its acceleration and hill-climbing performance may be decreased.

NOTE

Adaptive cruise control/cruise control cannot be used while the gasoline particulate filter warning light flashes or illuminates.

■ Vehicle Speed Warning Light (If Equipped)

120 km/h

The vehicle speed warning light blinks when your vehicle speed exceeds approximately 120 km/h (75 mph) .

■ Master Warning Light

⚠


A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction.

3-7. Combination Meter Display (Color TFT)

⚠ WARNING

Always pay adequate attention to safe driving when operating the combination meter display (color TFT) while the vehicle is in motion. When operation of the combination meter display (color TFT) interferes with your ability to concentrate on driving, stop the vehicle before performing operations on the screen. Also, do not concentrate on the display while driving. Doing so may cause you to look away from the road and could result in an accident.


Various information will be shown on the combination meter display (color TFT). Also, a warning message will appear on the display if a malfunction is detected. In addition, several settings for the displayed content can be performed.

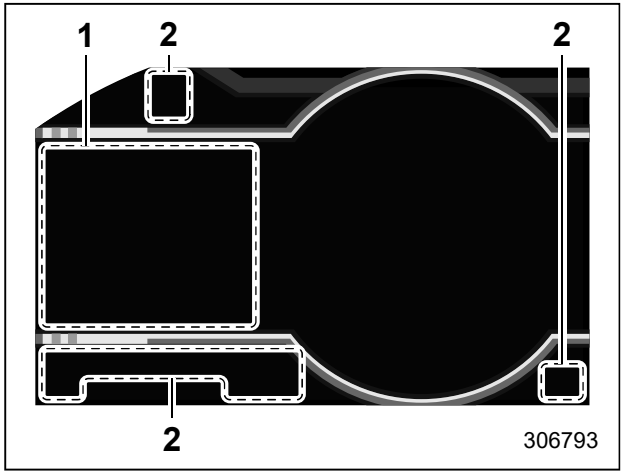

Combination meter display (color TFT)

1) Meter information screen (Refer to "Meter Information Screen" ☞P145.)
2) Telltale screen (Refer to "Telltale Screen" ☞P152.)

■ Basic Operation

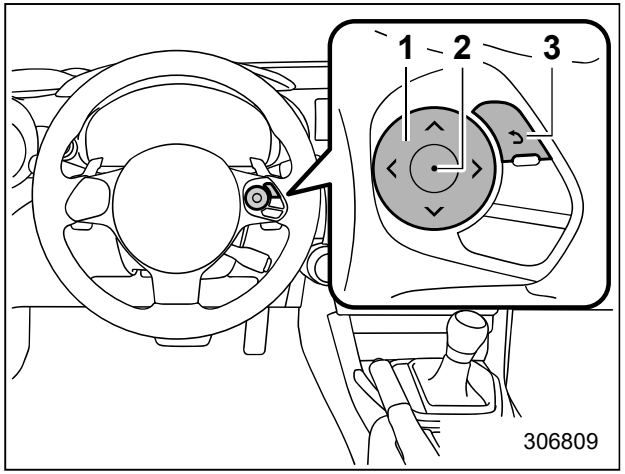

Control switches

1) ‹ / › : Select menu icons
   ^ / v : Change displayed content, scroll up/down the screen and move the cursor up/down
2) Press: Enter
   Press and hold: Reset
3) Return to the previous screen

For information pertaining to the content of each menu icon, refer to the explanation of each item under the heading of the relevant menu icon.

■ Meter Information Screen

The meter information screen can be changed.

▼ Menu icons

Select a menu icon to display its content.

Icons	Page
Drive information	146
Exclusive content for SUBARU BRZ	148
Navigation system-linked display*1	149 and refer to the separate navigation/ audio Owner's Manual.


– CONTINUED –

Icons	Page
Audio system-linked display	150
EyeSight screen (if equipped)	Refer to the Owner's Manual supplement for the EyeSight system.
Driving support system settings display	150
Settings display	150
Warning message display	152

*1: Displayed when the Apple CarPlay, Android Auto or navigation system (if equipped) is operating. For details, refer to the separate navigation/audio Owner's Manual.

■ Drive Information

▼ Drive information (page 1)

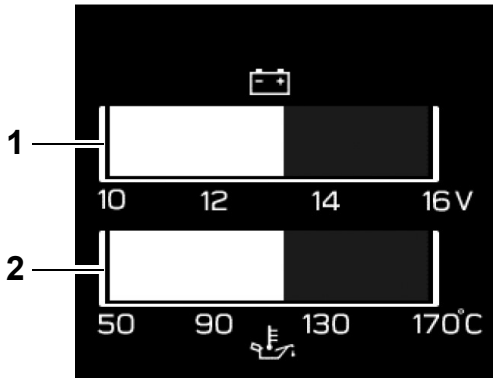


1) Voltmeter
2) Engine oil temperature gauge

This screen displays the charging voltage and engine temperature.

As voltage displayed may be different from the actual battery voltage, use the voltmeter as a guideline.

▼ Drive information (page 2)

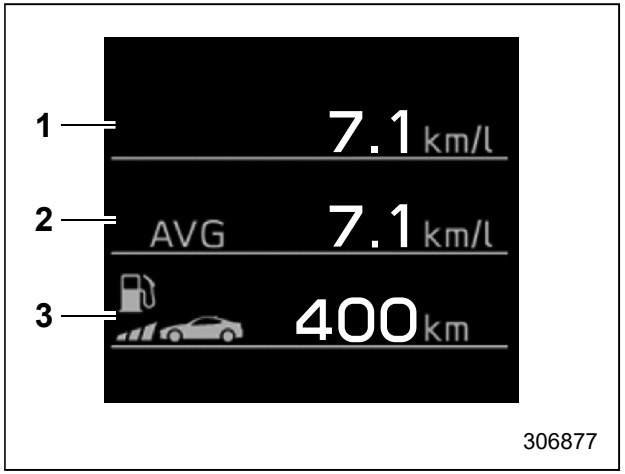

1) Current fuel consumption
2) Average fuel consumption
3) Driving range

This screen displays the current rate of fuel consumption, average fuel consumption since the function was reset and estimated maximum distance that can be driven with the quantity of fuel remaining.


- Pressing and holding ⊙ will reset the average fuel consumption.
- Use the displayed fuel consumption as a reference.
- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

• When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the push-button ignition switch off. If the vehicle is refueled without turning the push-button ignition switch off, the display may not be updated.

NOTE

The driving range on the remaining fuel is only a guide. The indicated value may differ from the actual driving range on the remaining fuel, so you must immediately fill the tank when the low fuel warning light illuminates.

▼ Drive information (page 3)

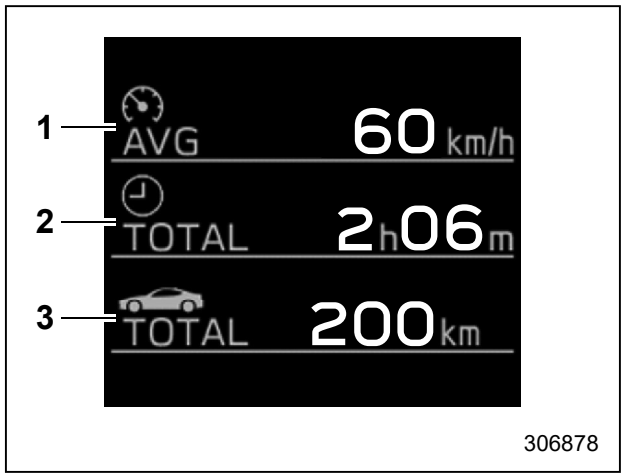


1) Average vehicle speed
2) Driving time
3) Driving distance

This screen displays the average vehicle speed since display was reset, cumulative time the vehicle has been driven since display was reset and the cumulative distance the vehicle has been driven since display was reset.

Pressing and holding ⊙ will reset the average vehicle speed/driving time/driving distance.

▼ Drive information (page 4) (if equipped)

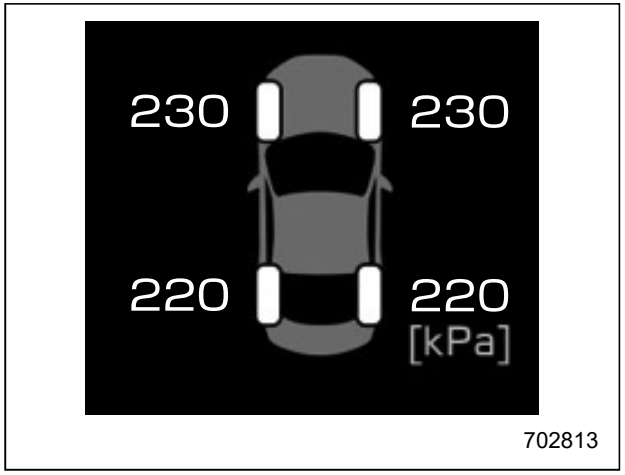

This screen displays each tire pressure.

When a tire is deflated, the deflated tire and the tire pressure will be displayed on the screen in yellow.

NOTE

• The tire pressure values are displayed several minutes after driving.

• Once the tire pressure monitoring system detects the low tire pressure, the tire pressure values will display in yellow until the system detects the normal tire pressure.


• Immediately adjust the tire pressure when the warning light illuminates. When the tire pressure monitoring system detects the adjusted tire pressure, the warning light will turn off and the tire pressure values will turn to white.

• For information about the specified value of the air pressure, refer to "Tires" ☞P377.

– CONTINUED –

■ Exclusive Content for SUBARU BRZ

▼ G-force

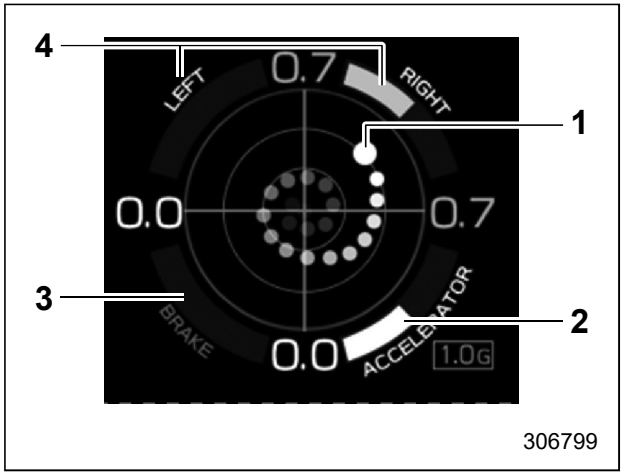

1) Acceleration G-force on the vehicle
2) Accelerator pedal input
3) Brake fluid pressure
4) Steering amount


This screen displays lateral G-forces on the vehicle.

Also displays, around the periphery of the G-force display, the left and right steering amount, accelerator pedal input, and brake fluid pressure.

This display is intended for use as a guide-line. Depending on factors such as the road surface condition, temperature and vehicle speed, the display may not show the actual condition of the vehicle.

Press and hold ⊙ to change the range of the acceleration G-force display between 1.0 G and 0.5 G.

▼ G-force (peak hold function)

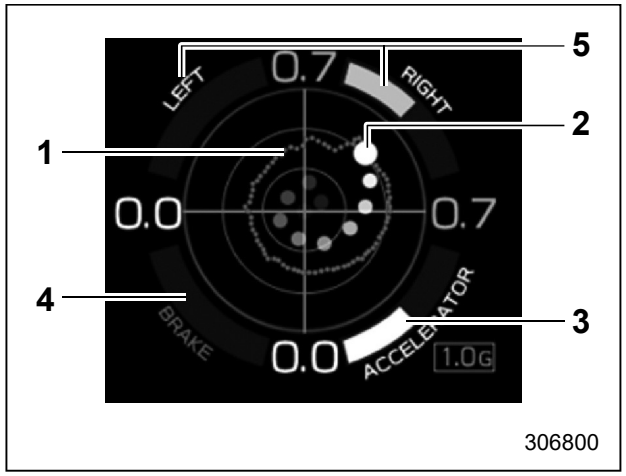

1) Record of the maximum G-forces
2) Acceleration G-force on the vehicle
3) Accelerator pedal input
4) Brake fluid pressure
5) Steering amount


This screen displays lateral G-forces on the vehicle

Also displays, around the periphery of the G-force display, the left and right steering amount, accelerator pedal input, and brake fluid pressure

This display is intended for use as a guide-line. Depending on factors such as the road surface condition, temperature and vehicle speed, the display may not show the actual condition of the vehicle.

Press and hold ⊙ to reset the record of maximum G-forces.

▼ Power and torque curve

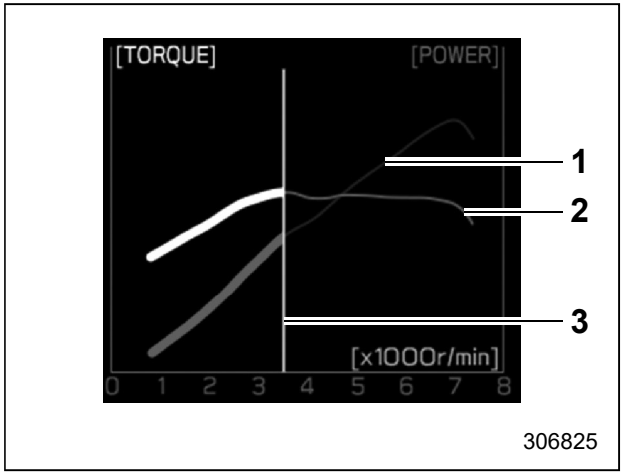


1) Power output
2) Torque
3) Current engine speed


The vertical bar will slide laterally according to the current engine speed.

This chart is intended for reference only and does not show the actual engine torque or output.

▼ Stopwatch

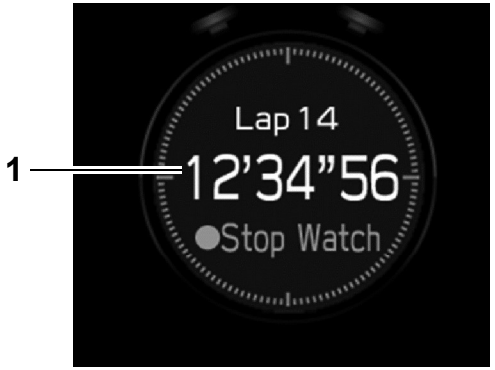

Top screen

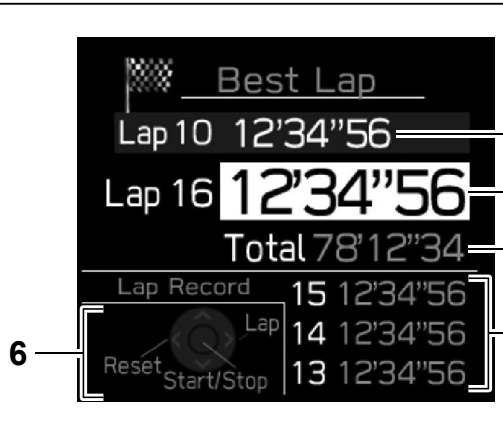

Measurement screen

1) Fastest lap time (top screen)
2) Fastest lap time (measurement screen)
3) Current lap time
4) Total lap time
5) Past lap times
6) Meter control switch operation guide

When the timer is reset, "– –'– –"– –" will be displayed.

A maximum of 50 lap times can be recorded.

- Changing between the stopwatch screens

To change to the measurement screen: Press ⊙.

To change to the top screen: Press ⮌.

- Operating the measurement screen

⊙ : Start/stop measurement
› : Mark off one lap
‹ : Reset measured lap times
^ / v : Scroll through the lap times


- Resetting measured lap times

After stopping the measurement, press ‹.

- To display other content while the stopwatch is operating

If the measurement screen is displayed, press ⮌ to display the top screen. Then operate the meter control switches to display other content. While other items are displayed, the measurement will continue but the stopwatch cannot be operated.

■ Navigation System-Linked Display

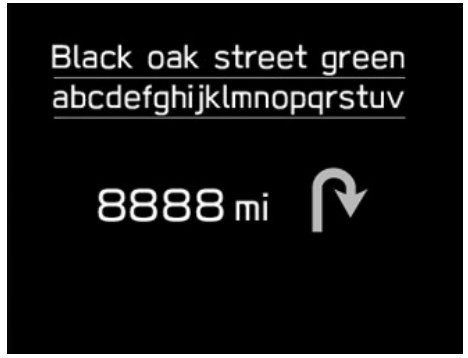

Navigation screen:

When the route guidance is set in the navigation system (if equipped), this item shows the navigation route information. For details about the navigation/audio system, refer to the separate navigation/audio Owner's Manual.

– CONTINUED –



306813

Compass screen (if equipped):

The direction of the vehicle is displayed.

■ Audio System-Linked Display



306879

This screen displays the status of audio information. For details about the audio system, refer to the separate navigation/ audio Owner's Manual.

■ Driving Support System Settings Display

The setting adjustments to the following systems can be changed to meet your personal requirements.

- LDW (Lane Departure Warning)*1*2
- PCB (Pre-Collision Braking)*1*2
- SRVD*1
- RAB (Reverse Automatic Braking system)*1
- (Sonar Audible Alarm)*1
- SRH (Steering Responsive Headlight)

*1: If equipped

*2: For details about EyeSight system, refer to the Owner's Manual supplement for the EyeSight system.

■ Settings Display

Use the meter control switches on the steering wheel to change settings.


1. Press ‹ or › to select .
2. Operate the switches to select a desired item.
3. Press ^ / v or ‹ / › to change the setting and then press ⊙ to confirm the change.

Item			Settings	Page reference for the vehicle system operation
EyeSight *1	Acquisition Sound		ON/OFF	*2
	Start Alert		ON/OFF	
	Accel Lv.		Lv.1 (Eco)/Lv.2 (Comfort)/Lv.3 (Standard)/Lv.4 (Dynamic)	
	Select Drive Lane		Right Lane/Left Lane	
Warning Volume *1			Max/Mid/Min	263 and *2
Screen Settings	Startup Scrn		ON/OFF	-
	GSI (MT models)		ON/OFF	221
	Turn-by-Turn *1		ON/OFF	149
	REV.	Indicator	ON/OFF	124
		RPM	**00rpm	
		Buzzer	ON/OFF	
Car settings	Keyless Entry	Hazard Flasher	ON/OFF	104 and 107
		Security Relocking *1	30 seconds/60 seconds/120 seconds/OFF	107
	Defogger		15 minutes/Continuous	181
	Interior Light		7.5 seconds/15 seconds/30 seconds	200
	1-Touch LN CHGR		ON/OFF	177

*1: If equipped
*2: For details about EyeSight system, refer to the Owner's Manual supplement for the EyeSight system.

– CONTINUED –


■ Warning Message Display

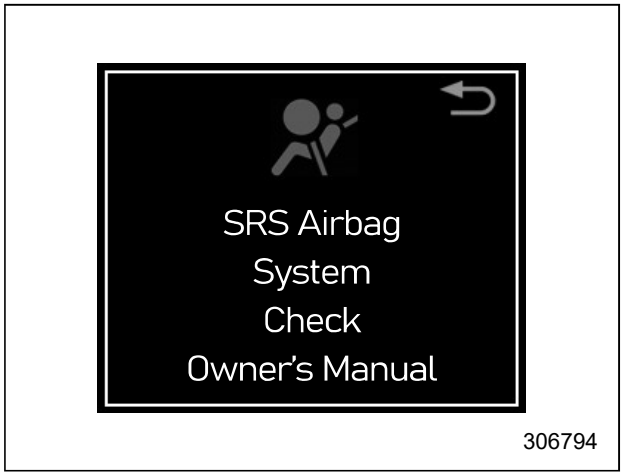

Example of warning

If there is a warning message or a maintenance notification, it will appear on combination meter display (color TFT). Take the appropriate actions based on the messages indicated.

■ Telltale Screen

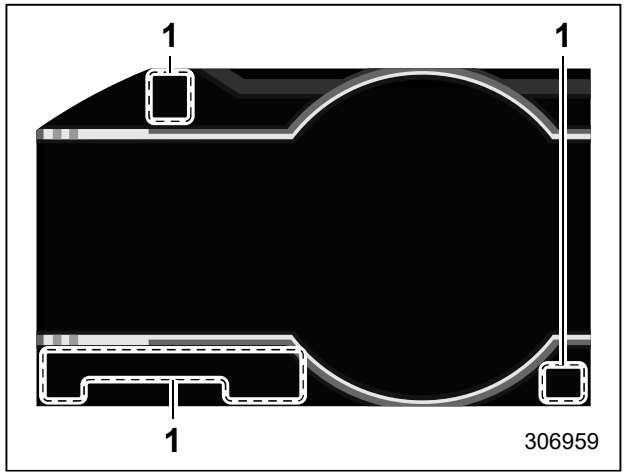

1) Telltale screen

When the corresponding situation occurs, the following telltales will be displayed on the telltale screen.

Mark	Name	Page
	Door open indicator	134
	Low tire pressure warning light (if equipped)	131
A/T OIL TEMP	AT OIL TEMP warning light (AT models)	131
	LED headlight warning light	143
	High beam assist indicator light (if equipped)	142
SRH OFF	Steering Responsive Headlight OFF indicator light	143
SRH	Steering Responsive Headlight warning light	143
RAB	RAB warning light (if equipped)	144
RAB OFF	RAB OFF indicator (if equipped)	144
	Vacuum pressure system warning light (yellow)	134
	Subaru Rear Vehicle Detection warning indicator (if equipped)	143
OFF	Subaru Rear Vehicle Detection OFF indicator (if equipped)	143
	Automatic headlight beam leveler warning light	142
	Gasoline particulate filter warning light (if equipped)	144
	Hill start assist indicator light	143

Mark	Name	Page
	Cruise control indicator light (white/green)/ Cruise control warning light (yellow) (models without the EyeSight system)	142
	Icy road surface warning light	143
	Vehicle speed warning light (if equipped)	144

3-8. Center Information Display (CID)

⚠ WARNING

Always pay attention to safe driving when operating the center information display while the vehicle is in motion. When operation of the center information display is disturbing your awareness and ability to concentrate on driving, stop the vehicle in a safe place before performing operations on the display. Also, do not concentrate on the display while driving. Doing so could result in an accident.

■ Features

All information is displayed on the center information display, including vehicle settings, vehicle status, navigation system (if equipped) operation, and audio operation.

Items	Page
Maintenance information	165
Vehicle settings	155
Rear view camera (if equipped)	251
Navigation system (if equipped)	Refer to the separate navigation/ audio Owner's Manual.
Audio/telephone	Refer to the separate navigation/ audio Owner's Manual.
EyeSight (if equipped)	Refer to the Owner's Manual supplement for the EyeSight system.

The center information display can also be used to set and initialize the center information display itself.

NOTE

- **When the vehicle is in motion, certain functions and selections may not be available.**
- **The language and units for both the center information display and the**

– CONTINUED –


combination meter display (color TFT) can be changed. For details, refer to "Car settings" ☞P159.

• The images displayed in this Owner's Manual are sample images. The actual image may vary depending on the region and vehicle specifications.

■ Touch Screen Operations


The center information display has a touch screen. Operations are performed by touching the touch screen directly.

▼ Touch

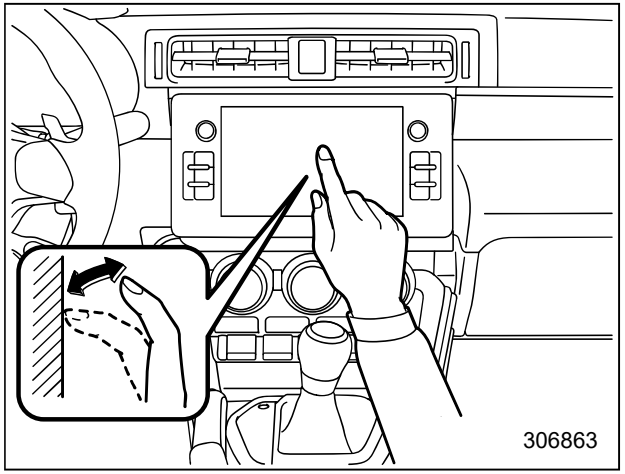


Quickly touch and release once.

▼ Drag

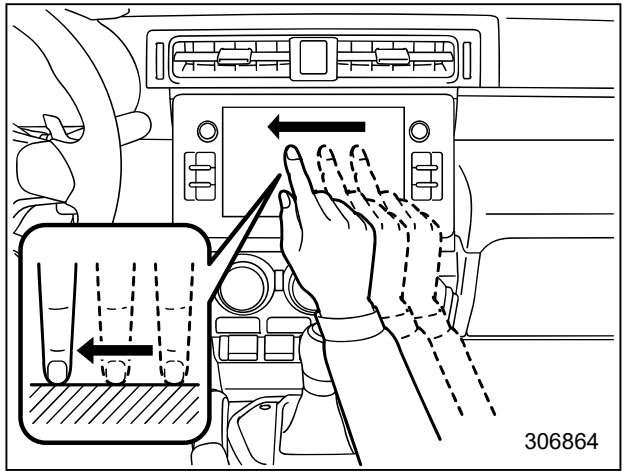

Touch the screen and move the screen to the desired position.

▼ Swipe

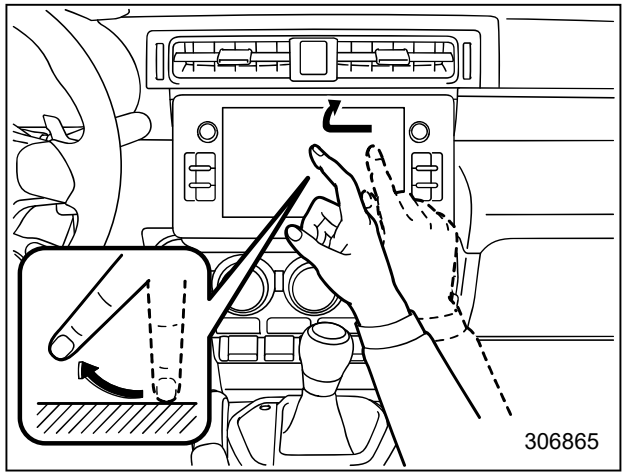


Quickly move the screen by swiping with your finger.

NOTE

Swipe operations may not be performed smoothly in high altitudes.

■ Main Screen

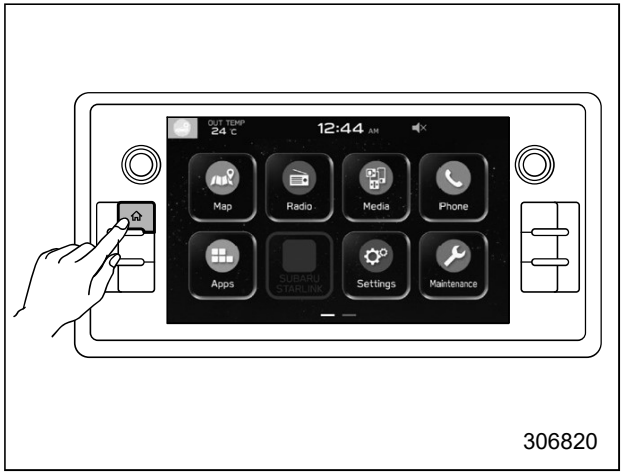


To display the main screen, press ⌂ (HOME).

In this Owner's Manual, the following settings will be explained. For details about other items, refer to the separate navigation/audio Owner's Manual.

– "Settings"→"General"
– "Settings"→"Car"
– ⚙ (Car settings icon)

▼ General settings

Set the time and display general items.

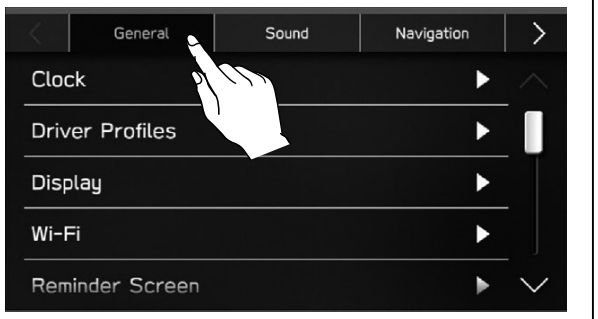

1. Press ⌂ (HOME).
2. →⚙ (Settings)
3. →“General”
4. Select the preferred menu.

– CONTINUED –

The setting adjustments to the following items can be manually changed to meet your personal requirements.

Item			Available settings	Page reference for the vehicle system operation	Page reference for the setting procedure
1st menu	**2nd menu**	**3rd menu**			
General	Clock	Time Setting *1	Auto/Manual	166	166
		Time Setting *2	Sync With Phone/Manual		166
		Time Zone	Display time zone depends on the market		164
		Daylight Saving Time	AUTO/ON/OFF		164
		Clock Format	12H/24H		164
	Driver Profiles	—	Default/4 users	*4	—
	Display	Display Off	Turn the screen off.	—	164
		Brightness Dial	ON/OFF	124	164
		Brightness/Contrast	Set and adjust the brightness and contrast of the display.	164	164
	Wi-Fi	Wi-Fi	ON/OFF	*4	—
		Connected to:	Select the registered devise.		
		Available Wi-Fi Networks	Add		
		Wi-Fi Protected Setup	PIN Setup/Push Button Setup		
		Registered Wi-Fi Networks	—		

Item			Available settings	Page reference for the vehicle system operation	Page reference for the setting procedure
1st menu	2nd menu	3rd menu			
General	Reminder Screen	Maintenance	ON/OFF	—	164
		Birthday	ON/OFF		164
		Anniversary	ON/OFF		164
	Meter Screen	Startup Screen	ON/OFF	121	164
		Gear Shift Indicator (MT models)	ON/OFF	221	164
		Turn by Turn Screen Interruption *3	ON/OFF	149	164
		Meter Rev. Indicator	Indicator/RPM/Buzzer	124	150
	Camera	Rear Camera Delay Control	ON/OFF	252	164
		Steering Angle Lines	ON/OFF	253	164
	Language *3	—	Display language depends on the market	145 and 153	164
	Home Screen Shortcuts	—	ON/OFF	*4	164
	Birthday List	—	Set a birthday.	—	164
	Anniversary List	—	Set an anniversary day.	—	165
	Periodic Rest Notification *3	—	ON/OFF	*4	—

– CONTINUED –

Item			Available settings	Page reference for the vehicle system operation	Page reference for the setting procedure
1st menu	**2nd menu**	**3rd menu**			
General	Software Update	Update	Check if a new software update	*4	—
		Automatically Check for Updates	ON/OFF		
		Automatically Download Updates	ON/OFF		
	Factory Data Reset	—	Reset/Cancel		
	System Information	—	—		
	Free/Open Source Software Information	—	—		

*1: Models with navigation system
*2: Models without navigation system
*3: If equipped
*4: For details about the audio and navigation system, refer to the Owner's Manual supplement for the audio and navigation system.

NOTE

Touch ⓘ to display the explanation of the items.

▼ Car settings

Perform the EyeSight system setting and vehicle setting.



1. Press ⌂ (HOME).
2. →⚙ (Settings)
3. →“Car”
4. Select the preferred menu.

– CONTINUED –

The setting adjustments to the following items can be manually changed to meet your personal requirements.

Item			Available settings	Page reference for the vehicle system operation	Page reference for the setting procedure
1st menu	**2nd menu**	**3rd menu**			
Car	EyeSight* [1]	Pre-Collision Braking	Setting ON/Setting OFF	*2	—
		Lane Departure Warning	ON/OFF		
		Cruise Control Acceleration Characteristics	Lv.1 (Eco)/Lv.2 (Comfort)/Lv.3 (Standard)/Lv.4 (Dynamic)		
		Lead Vehicle Acquisition Sound	ON/OFF		
		Lead Vehicle Moving Monitor	ON/OFF		
		Select Drive on Left/Drive on Right	Right Lane/Left Lane		
	Reverse Automatic Braking *1	Sonar Audible Alarm	ON/OFF	263	164
		Automatic Braking	ON/OFF	263	164
	Keyless entry system	Hazard Warning Flasher	ON/OFF	104 and 107	164
		Security Relocking	30 seconds/60 seconds/120 seconds/OFF	107	164
	Demister	—	15 minutes/Continuous	181	164
	Interior Light	—	7.5 seconds/15 seconds/30 seconds	200	164
	One-Touch Lane Changer	—	ON/OFF	177	164
	SUBARU Rear Vehicle Detection *1	—	ON/OFF	262	164
	Steering Responsive Headlights (SRH)	—	ON/OFF	174	164
	Warning Volume *1	—	Min/Mid/Max	260, 272 and *2	164

*1: If equipped
*2: For details about EyeSight system, refer to the Owner's Manual supplement for the EyeSight system.

NOTE

Touch ⓘ to display the explanation of the items.

– CONTINUED –

▼ Car settings icon

Touch to display the items that are changeable while driving.



307003


Item		Available settings	Page reference for the vehicle system operation	Page reference for the setting procedure
1st menu	2nd menu			
Vehicle Control	Cruise Control Acceleration Characteristics	Lv.1 (Eco)/Lv.2 (Comfort)/Lv.3 (Standard)/Lv.4 (Dynamic)	*2	—
	Steering Responsive Headlights (SRH)	ON/OFF	174	164
Driving Assistance	Pre-Collision Braking *1	Setting ON/Setting OFF	*2	—
	Lane Departure Warning *1	ON/OFF		
	SUBARU Rear Vehicle Detection *1	ON/OFF	255	164
Others	Warning Volume	Min/Mid/Max	255, 263 and *2	—

*1: If equipped
*2: For details about EyeSight system, refer to the Owner's Manual supplement for the EyeSight system.

– CONTINUED –

▼ How to select items on the screen

▽ ON/OFF setting

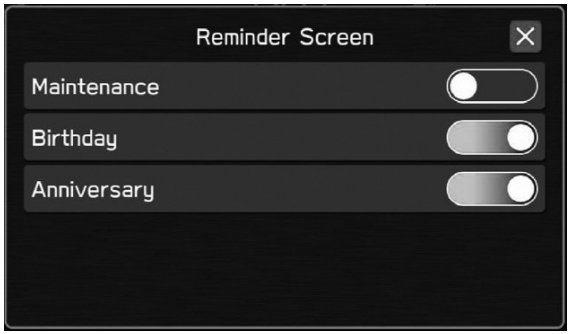

Example

Touch the changing menu and select ON or OFF .

▽ Selecting



Example

Touch the preferred item.

▼ How to set items on the screen

▽ Brightness/Contrast

Set and adjust the brightness and contrast of the center information display.

NOTE

“Brightness” can only be adjusted when “Brightness Dial” is off. Refer to "General settings" ☞P155.

1. Press ⌂ (HOME).
2. →⚙ (Settings)
3. →“General”
4. →“Display”
5. →“Brightness/Contrast”




6. Drag ● to adjust the brightness and contrast.

Touch “Default” to revert to the factory setting.

▽ Birthday List

If a birthday or anniversary is approaching, a message will be shown when the ignition switch is turned to the “ON” position. This function can be set to on or off by “Reminder screen”. For details, refer to "General settings" ☞P155

1. Press ⌂ (HOME).
2. →⚙ (Settings)
3. →“General”
4. →“Birthday List”

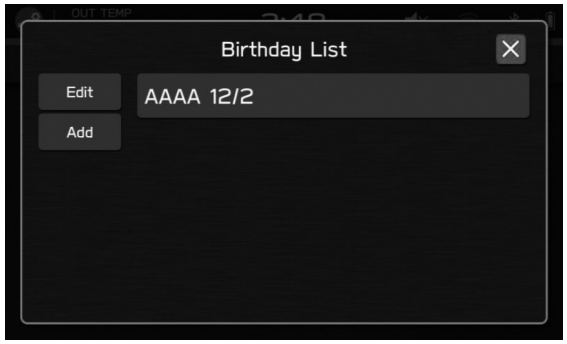


306999

5. →“Add”



307000

6. Enter the name.
7. →“Next”

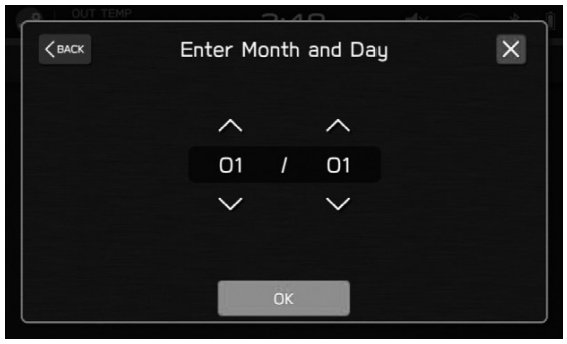

307001

8. Enter the date.
9. →“OK”

NOTE

A maximum of 5 birthdays can be stored.

▽ Anniversary List

The procedure for setting an anniversary is the same as "Birthday List" ☞P164, except that in step 4 “Anniversary List” is selected.

▼ Maintenance



306164

Maintenance reminders can be set.

Engine oil setting:

1. Touch (Maintenance).
2. →(Engine Oil)
3. Select “Notification Date” or “Notification Distance” of the reminder.
4. →“Set”
5. →

Oil Filter setting:

The setting procedure is the same as “Engine Oil” setting, but touch the “Oil Filter” item in step 2.

Tires setting:

The setting procedure is the same as “Engine Oil” setting, but touch the “Tires” item in step 2.

– CONTINUED –

Maintenance Schedule setting:

The setting procedure is the same as “Engine Oil” setting, but touch the “Maintenance Schedule” item in step 2.

NOTE

- **Touch “Reset” to reset each setting.**
- **Touch “Update” to revert to the default value.**

3-9. Clock

For models with a genuine SUBARU navigation and/or audio system, the clock can be adjusted using either auto mode or manual mode.


■ Setting the Clock Manually

1. Turn the ignition switch to the “ON” position.



306874

2. Press ⌂ (HOME).
3. Touch ⚙ (Settings).
4. →“General”
5. →“Clock”
6. →“Time Setting”

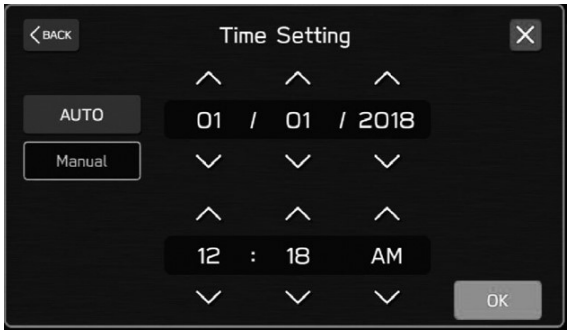

306875


7. →“Manual”
8. →∧ or ∨
9. →“OK”

NOTE

The clock setting screen can also be displayed by touching the clock on the status bar.


■ Setting the Clock Automatically

1. Turn the ignition switch to the “ON” position.

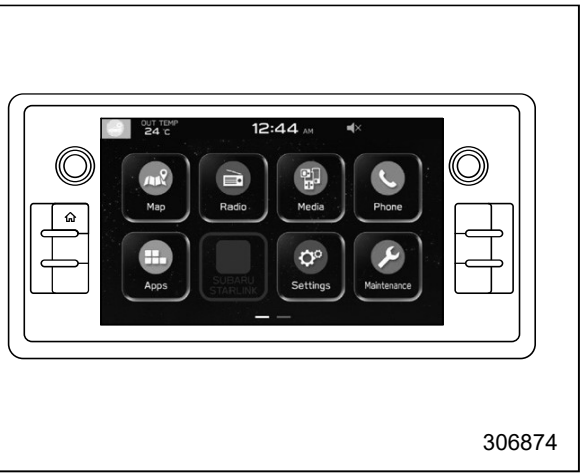

306874

2. Press ⌂ (HOME).
3. Touch ⚙ (Settings).
4. →“General”
5. →“Clock”
6. →“Time Setting”

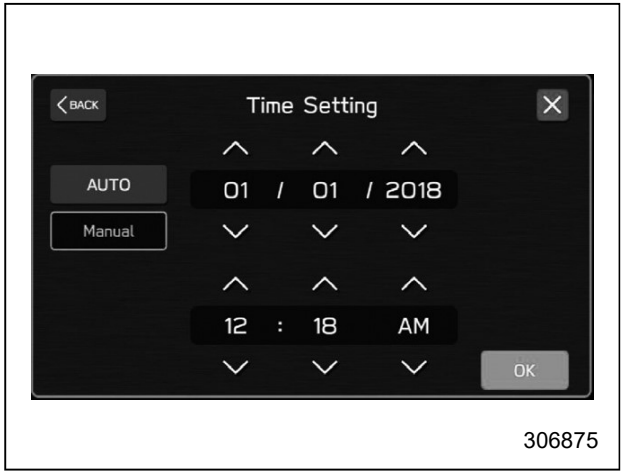

306875

7. Models with navigation system:
→“AUTO”
Models without navigation system:
→“Sync With Phone”

▼ Models without navigation system

The clock will be set and adjusted automatically when a smartphone is connected via Bluetooth® for transferring phonebook data.

1. Register the smartphone to the audio system. For details, refer to “Bluetooth SETTINGS” in the supplemental Owner’s Manual for the audio/navigation system.
2. Transfer phonebook data to the system. For details, refer to “Bluetooth SETTINGS” in the supplemental Owner’s Manual for the audio/navigation system. The clock will be adjusted automatically.

NOTE

For models without navigation system: Depending on the model of smartphone, the settings of the connected smartphone may need to be changed. (ex: For iOS or other models, notification settings may need to be activated.) For details, check the instructions on connecting smartphones.

▼ Models with navigation system

The clock will be set automatically where a GPS signal is available.

3-10. Light Control Switch

⚠ CAUTION

- **Use of any lights for a long period of time while the engine is not running can cause the battery to discharge.**
- **Before leaving the vehicle, make sure that the light control switch is turned to the off position. If the vehicle is left unattended for a long time with the light control switch set to a position other than the off position, the battery may be discharged.**

The light control switch operates when the push-button ignition switch is in the “ACC” or “ON” position.


Regardless of the position of the light control switch, the illuminated lights are turned off when the push-button ignition switch is turned off.

NOTE

The light control switch can be operated (except auto on/off headlights), even the push-button ignition switch is turned off.

If the driver’s door is opened while the headlights are illuminated under such conditions, a chirp sound will inform the driver that the lights are illuminated.

■ Headlights

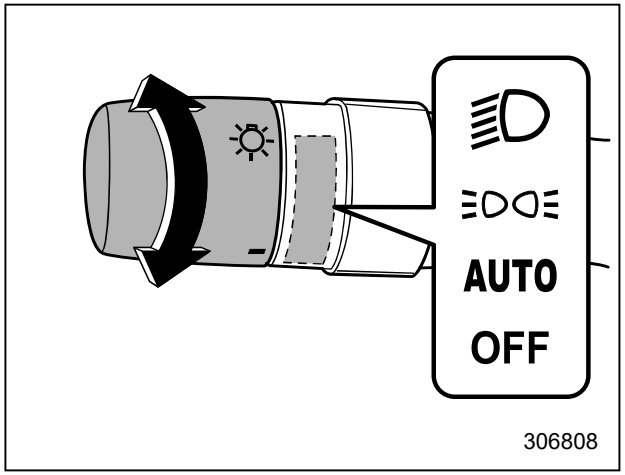

To turn on the headlights, turn the knob on the end of the light control switch.

“OFF” position:

The headlights are all off.

“≡D” **position:**

Instrument panel illumination, headlights, front personal lights, tail lights and license plate lights are on.

“≡DC≡” **position:**

Instrument panel illumination, front position lights, tail lights and license plate lights are on.

“AUTO” position: auto on/off headlights

When the ignition switch is in the “ON” position, the instrument panel illumination, headlights, front position lights, tail lights and license plate lights are **automatically on or off** depending on the level of the ambient light.

▼ Battery-saving function

If the headlights or tail lights are illuminated when the push-button ignition switch is off, in order to prevent the battery from becoming discharged, the lights will automatically be turned off after approximately 20 minutes.

If a door is opened or closed, the battery saving function will temporarily be canceled and the lights will automatically be turned off after approximately 20 minutes.

If the light control switch is in the “≡DC≡” position, the battery saving function will not function and the lights will not be turned off automatically.

▼ Auto-on/off wiper-linked headlights

While the light control switch is in the “AUTO” position, the headlights will automatically turn on when the windshield wipers operate several times. The head-

lights will automatically turn off approximately 1 minute after the wiper stops.

The ON/OFF setting of this function can be changed by a SUBARU dealer. We recommend that you consult your SUBARU dealer for details.

▼ Welcome lighting function

The welcome lighting function turns on the low beam headlight for smooth approaching to or exiting from the vehicle at night or in a dark place.

The function is activated while all of the following conditions are met.

- The light control switch is in the “AUTO” position
- It is dark enough to turn on the auto on/off headlights

▽ When approaching

While the welcome lighting function is activated, the low beam headlights will automatically illuminate when unlocking the doors by using the remote keyless entry system.

The low beam headlights will remain illuminated for 30 seconds and then turn off. However, if any of the following operations is done, the low beam headlights will turn off.


- The ignition switch is turned to the “ON” position.
- The doors are locked.
- The light control switch is turned to a position other than “AUTO”.

▼ Headlight off delay setting

The headlight off delay function turns on the headlights, etc. for smooth exiting from the vehicle at night or in a dark place.

NOTE

The factory setting (default setting) of the operation duration of the headlights and the exterior lights is 30 seconds. This setting can be changed to 30 seconds, 60 seconds, 90 seconds, or 120 seconds at SUBARU dealers. For more details, we recommend that you contact a SUBARU dealer.

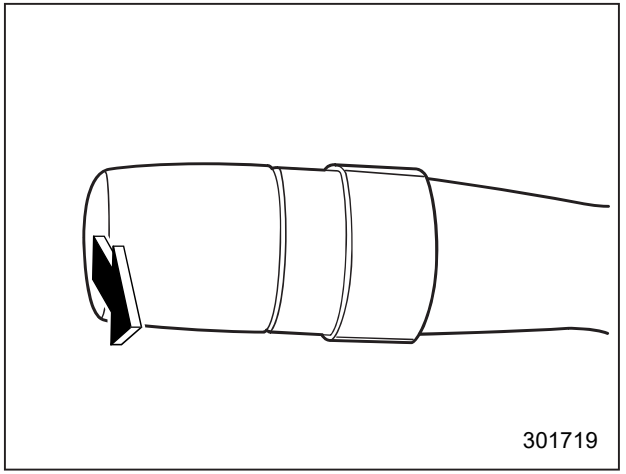

The headlight low beams and some exterior lights will illuminate, after following this procedure.

1. Turn off the ignition switch.
2. Place the light control switch to the “AUTO” or “OFF” position.
3. Pull the turn signal lever.

The headlights and exterior lights will turn off when any of the following conditions occur.

- 30 seconds have passed.
- You press the lock button on the access key fob/transmitter two times successively.
- You touch the door lock sensor on the door handle two times successively


– CONTINUED –

NOTE

While the headlight off delay function is operating, if you perform any of the following operation, the headlights and exterior lights will turn off.

- **Turn the ignition switch to the “ON” position.**
- **Set the headlight flasher to the “OFF” position.**
- **Set the light control switch to a position other than the “AUTO” or “OFF” position.**

▼ Sensor for the auto on/off headlights

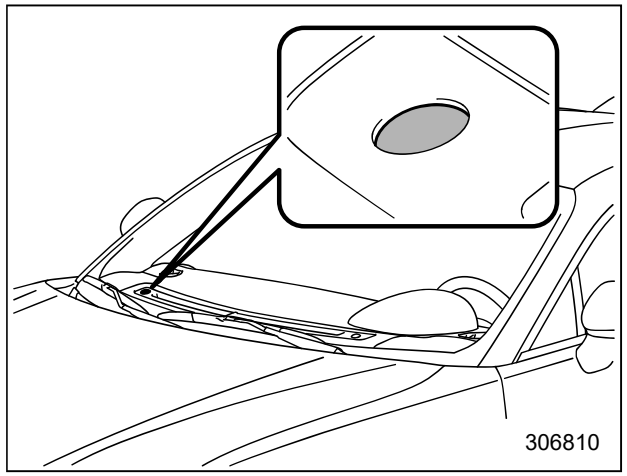

The sensor is on the instrument panel as shown in the illustration.


⚠ CAUTION

If any object is placed on or near the sensor, the sensor may not detect the level of the ambient light correctly and the auto on/off headlights may not operate properly.

NOTE

- **If the light control switch is in the “AUTO” position and the headlights do not turn on when it becomes dark outside, turn the light switch to “” position. If this happens, we recommend that you have your vehicle inspected by your SUBARU dealer as soon as possible.**
- **The light sensor may not operate correctly for light other than sunlight.**

■ High/Low Beam Change (Dimmer)

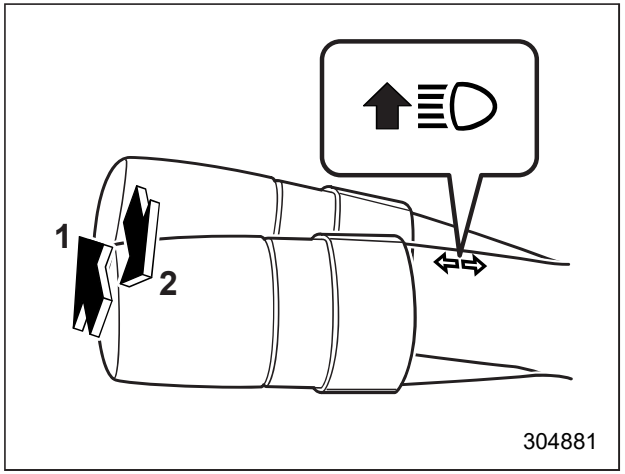


While the light control switch is in the “” or “AUTO” position in a dark place, the headlights will turn on.

Pushing the lever forward and releasing it will activate the high beam. Pulling the lever rearward and releasing it will switch the headlights to low beam.

For models with the High Beam Assist, when the light control switch is in the “AUTO” position, pushing the lever forward turns the High Beam Assist is on. Refer to "High Beam Assist Function (If Equipped)" ☞P171.

When the headlights are on high beam, the high beam indicator light “” on the combination meter is also on.

■ Headlight Flasher

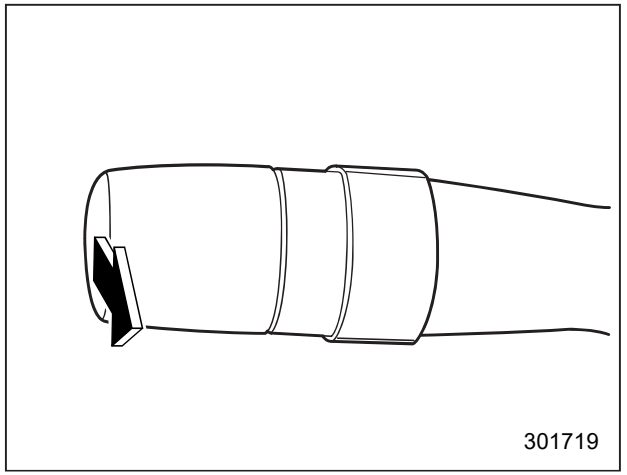

⚠ CAUTION

Do not hold the lever in the flashing position for more than just a few seconds.

To flash the headlights, pull the lever toward you and then release it. The high beam will stay on for as long as you hold the lever. The headlight flasher works even though the lighting switch is in the off position.

When the headlights are on high beam, the high beam indicator light "≡D" on the combination meter also illuminates.

■ High Beam Assist Function (If Equipped)

NOTE

- **The high beam assist function utilizes the stereo camera installed at the position of the front map lights.**
- **For details on how to handle the stereo camera, refer to the Owner's Manual supplement for the EyeSight system.**

The high beam assist function automatically changes the headlight from high beam to low beam (or vice versa).

When all of the following conditions are met, the headlight will change to high beam.

- When the vehicle speed increases to or above the preset level.
- There is no preceding or oncoming vehicle.
- The forward area of the vehicle is dark.
- The road does not have a sharp curve.

When any of the following conditions are met, the headlight will change to low beam.

- When the vehicle speed decreases to or below the preset level.
- When the forward area of the vehicle is bright.
- When there is a preceding or oncoming vehicle.
- When the EyeSight system is malfunctioning or is temporarily stopped.

NOTE


- **Do not overestimate the capacity of the high beam assist function. The driver always has the responsibility to understand the surrounding situation, to drive safely, and to change the headlight mode manually if necessary.**
- **The factory setting (default setting) for this function is set as "operational". This setting can be changed to OFF (non-operation) at SUBARU dealers. For more details, we recommend that you contact a SUBARU dealer for an inspection.**

▼ How to use the high beam assist function

The high beam assist function will be activated when all the following conditions are met.

- The light control switch is in the "AUTO" position and the low beam headlights are on automatically.
- The turn signal lever is pushed forward.

– CONTINUED –

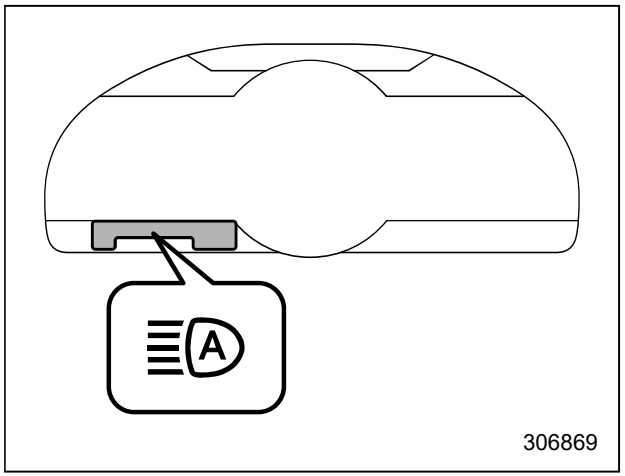

High beam assist indicator

When the high beam assist function is activated, the high beam assist indicator on the combination meter will illuminate.

NOTE

If the high beam assist function is malfunctioning or is temporarily stopped, the headlight will be fixed at low beam.

▼ How to change the headlight mode manually

Change to the low beam:

- Set the light control switch to "≡D".
- Pull the lever while the high beam is turning on and release it.

Change to the high beam:

Push the lever forward and release it.

At this time, the high beam assist function will turn off, the high beam assist indicator will turn off and the high beam indicator light will turn on.

NOTE

- **After manually changing the headlight mode to the high beam, if you turn on the high beam assist function, push the lever forward and release it.**
- **When manually changing the headlight mode to the high beam, if you turn the light control switch to the "≡DOE" position, the front position lights, tail lights and license plate lights will turn on.**

▼ Tips for the high beam assist system

- The high beam assist function recognizes the condition surrounding the vehicle based on the brightness of illumination ahead of your vehicle, etc. Therefore, the headlight mode may switch in some situations that do not match to the driver's sense.
- A bicycle or cargo cycle may not be detected.
- Under the following situations, the brightness of ambient illumination may not be detected correctly and the high beam assist function may not work properly. As a result, the glare of the high beam may disturb the oncoming vehicle or vehicle ahead. Also, the low beam mode may continue although there are no oncoming vehicles and vehicles ahead. In the such cases, change the headlight mode manually.
  - In bad weather (fog, snow, sand storm, heavy rain, etc.).
  - When the windshield glass is dirty or fogged.
  - When the windshield is cracked or damaged.
  - If there are lights similar to the headlights or the tail lights in the surrounding area.
  - When an oncoming vehicle or vehicle ahead is driven without its headlights and tail lights on.
  - If the headlights of an oncoming vehicle or the tail lights of a vehicle ahead are dirty or discolored, or if the light beams are not aimed correctly.
  - When a rapid change of brightness continues while driving.
  - When driving on a road with many ups and downs or uneven surfaces.
  - When driving on a road with many curves.
  - When there are some objects that reflect light strongly, such as a road sign or a mirror in vehicle ahead.

- When the rear part of the vehicle ahead, such as a container, reflects light strongly.
- When the headlights of your vehicle are damaged or dirty.
- When your vehicle is tilted, such as in case the vehicle has a flat tire or is being towed.
- When the stereo camera is deformed or the stereo camera lenses are dirty.
- Immediately after the engine has started.

• In the following conditions, the headlight mode will not be automatically changed from the high beam to the low beam.

- When your vehicle passes an oncoming vehicle suddenly in a blind curve.
- When another vehicle passes in front of your vehicle.
- When an oncoming vehicle or vehicle ahead comes in and out of view because of continuous curves, median strips, roadside trees, etc.

• If the stereo camera detects the light of the front fog lights of an oncoming vehicle, the headlight mode may change from the high beam to the low beam automatically.

• The headlight mode may change from the high beam to the low beam, or the low beam mode may continue, when affected by a street light, traffic signal, illumination of an advertisement board, or a reflective object such as a road sign and signboard.

• The timing of the change of headlight mode may differ due to the following factors.

- Color or brightness of the headlights of an oncoming vehicle or the tail lights of a vehicle ahead.
- The headlights of the oncoming vehicle or the tail lights of the vehicle ahead are covered with mud, snow, etc.
- Movement and direction of an oncoming vehicle or a vehicle ahead.
- When the headlights of an oncoming vehicle or the tail lights of a vehicle ahead illuminate on only one side.
- When the oncoming vehicle or vehicle ahead is a motorcycle.
- Conditions of a road (slope, curve, road surface, etc.).
- Number of passengers and weight of loaded cargo.
- Limitation of the detection ability of the stereo camera.

■ Daytime Running Light System

⚠ WARNING

When the daytime running lights are illuminated, the tail lights do not illuminate. When it becomes dark outside, turn the light switch to the "≡D" position to illuminate the headlights and tail lights. This will improve visibility and allow other drivers to see your vehicle more easily.

The daytime running lights will automatically illuminate when the following conditions are fulfilled.

• The engine is running.

• The parking brake is fully released.


• The light control switch is in the "AUTO" or "OFF" position.

NOTE

• When the headlight switch is in the "≡DOE" or "≡D" position, the daytime running light system is deactivated.

• While the headlight switch is in the "AUTO" position and the headlights turn on automatically, the daytime running light is deactivated.


3-11. Steering Responsive Headlight (SRH)

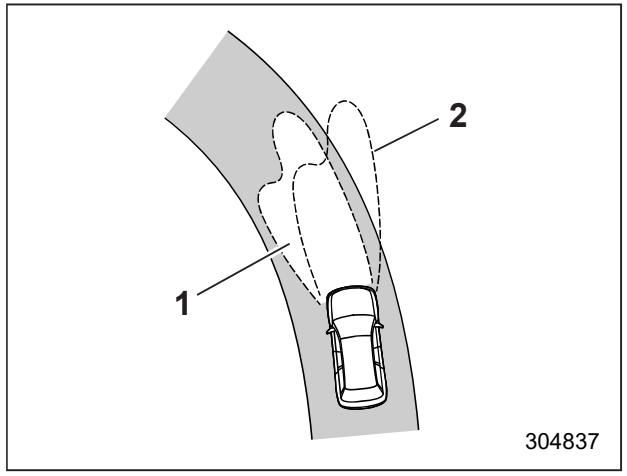

1) The target area of illumination when SRH is activated
2) The target area of illumination when SRH is not activated

SRH is a function that automatically moves the headlight beam to the left or right in accordance with the steering angle. This function helps to improve the visibility at night by illuminating the road ahead at corners and intersections.


You can turn the SRH function on or off. The settings can be changed by using the combination meter display (color TFT) or center information display. For details, refer to "Driving Support System Settings Display" ☞P150, "Car settings" ☞P159

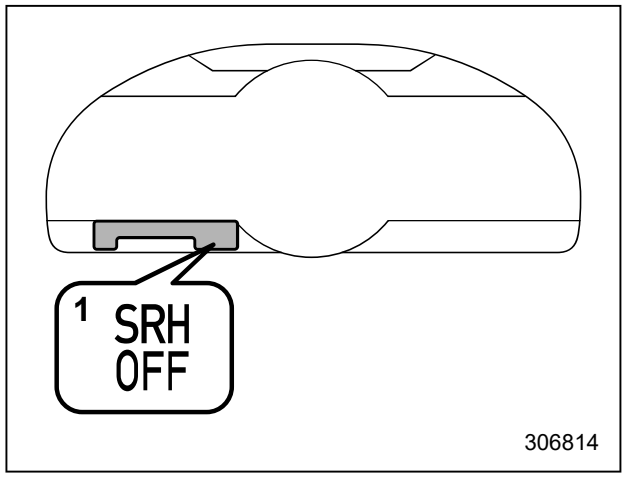

1) SRH OFF indicator

The SRH OFF indicator on the combination meter display (color TFT) turns off when SRH is turned on.

The SRH OFF indicator on the combination meter display (color TFT) illuminates when SRH is turned off.

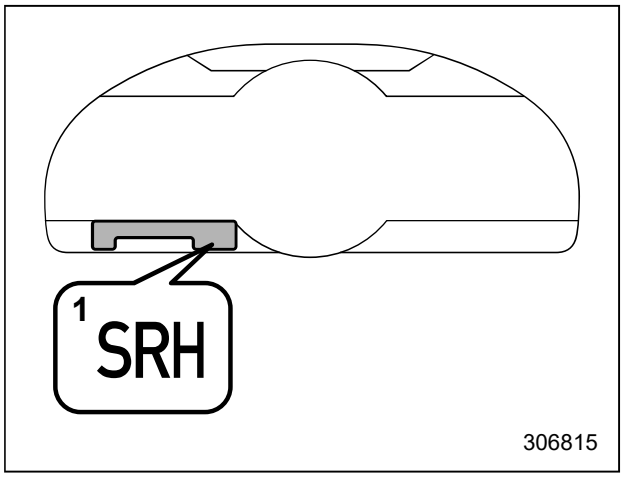

1) SRH warning indicator

If SRH is malfunctioning, the SRH warning indicator on the combination meter display (color TFT) illuminates and a message appears on the warning screen when the ignition switch is in the “ON” position. It indicates that SRH has been deactivated. Contact a SUBARU dealer for an inspection.

NOTE

- **The SRH function operative/non-operative status is kept when the engine is turned off, even if the engine is restarted.**
- **When you turn the ignition switch to the “ON” position, the SRH OFF indicator will illuminate and turn off after several seconds.**

- **SRH only activates when the vehicle is traveling forward at the speed of approximately 8 km/h (5 mph) or more.**

3-12. Headlight Beam Leveler

The LED headlights produce more light than conventional halogen headlights.


When the vehicle is carrying a heavy load and the headlight beams are angled upwards, the driver of an oncoming vehicle may experience glare.

To prevent this, the automatic headlight beam leveler adjusts the headlights to the optimum height automatically depending on the load the vehicle is carrying.

⚠ CAUTION

In certain circumstances, the headlights may become misaligned, and the headlight beam leveler will not reset them to the proper angle. This may occur after transporting your vehicle on a flat-bed truck, or if the vehicle is parked and restarted on different angles. In such cases, we recommend that you have the headlight alignment checked by a SUBARU dealer.

3-13. Rear Fog Light Switch (If Equipped)

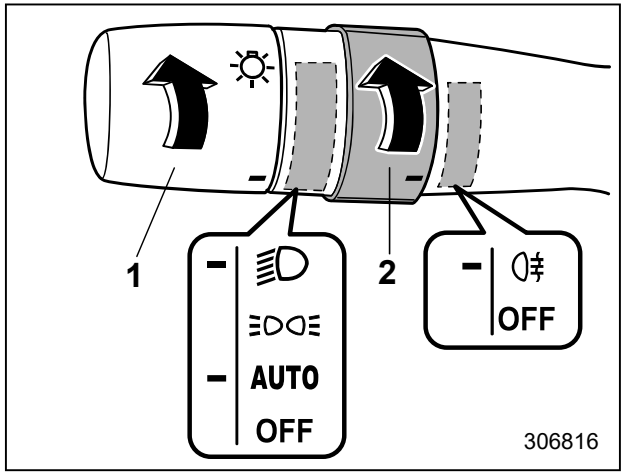

1) Headlight switch
2) Fog light switch

To turn on the rear fog light:


Turn the fog light switch to the “ ” position while the headlights are in either of the following conditions.

- The headlight switch is in the “” position with the low beam mode selected.
- The headlight switch is in the “AUTO” position and the low beam headlights turn on automatically.

To turn off the rear fog light:

Turn the fog light switch back down to the “OFF” position.

– CONTINUED –

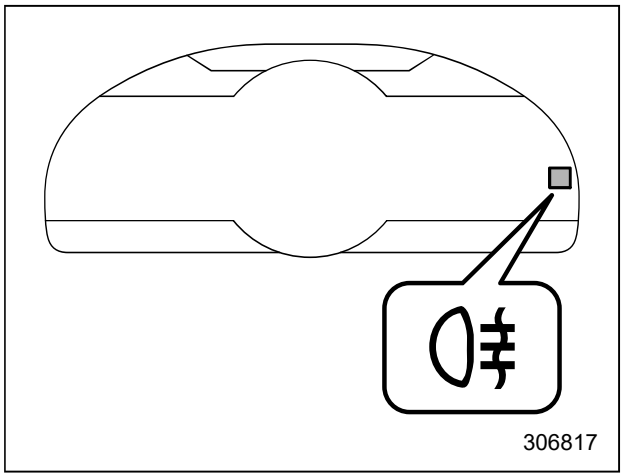

Indicator light

The indicator light located on the combination meter will illuminate when the rear fog light is on.


NOTE

To prevent switching off the rear fog light from being forgotten, the rear fog light circuit is designed so that it turns off whenever one of the following operations is performed.

- **The headlight switch is set to the "OFF" position.**
- **The headlight switch is set to the "AUTO" position and the headlights turn off.**
- **The push-button ignition switch is turned off.**

However, this does not mean that the rear fog light illuminates when the headlight switch is set to the "≣D" position or the ignition switch is turned to the "ON" position again. So, if you want to reilluminate the rear fog light, turn the fog light switch to the " ⧂ " position.

3-14. Turn Signal Lever

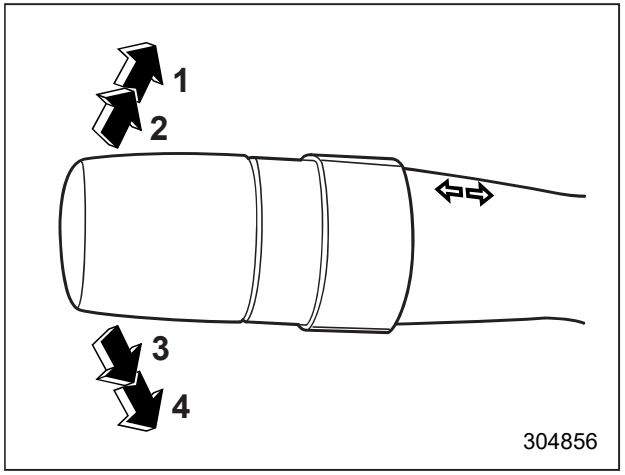

1) Right turn
2) Lane change right signal
3) Lane change left signal
4) Left turn

To activate the turn signal:

Pushing the turn signal lever up/down and releasing it activates the turn signal. Then the lever returns to its original position.

To cancel the turn signal:

Push and release the turn signal lever slightly in the opposite direction of the active turn signal.

To signal a lane change:

1. Push the turn signal lever up or down slightly.

2. Hold in the signal lever during the lane change.

The turn signal indicator lights will flash in the direction of the turn or lane change. The lever will return automatically to the neutral position when you release it.

■ One-Touch Lane Changer

To flash the turn signal and turn signal indicator light three times, push the turn signal lever up or down slightly and immediately release it.

NOTE

The operational/non-operational setting of the one-touch lane changer can be changed by a SUBARU dealer. We recommend that you contact the nearest SUBARU dealer for details. The setting can also be changed by operating the center information display. For details, refer to "Car settings" ☞P159

3-15. Wiper and Washer

⚠ WARNING

In freezing weather, do not use the windshield washer until the windshield is sufficiently warmed by the defroster.

Otherwise the washer fluid can freeze on the windshield, blocking your view.

⚠ CAUTION

- **Do not operate the washer continuously for more than 10 seconds, or when the washer fluid tank is empty. This may cause overheating of the washer motor. Check the washer fluid level frequently, such as at fuel stops.**
- **Do not operate the wipers when the windshield is dry. This may scratch the glass, damage the blade rubbers and cause the wiper motor to burn out. Before operating the wiper on a dry windshield always use the windshield washer.**
- **In freezing weather, be sure that the blade rubbers are not frozen to the windshield before switching on the wipers. Attempting to operate the wiper with the blade rubbers frozen to the window glass could cause not only the blade rubbers to be damaged but also might cause the wiper motor to fail. If the blade rubbers are frozen to the window glass, be sure to operate the defroster before turning on the wiper.**
- **If the wipers stop during operation because of ice or some other obstruction on the window, this might cause the wiper motor to fail even if the wiper switch is turned off. If this occurs, promptly stop the vehicle in a safe location, turn the ignition switch to the "OFF" position and clean the window glass to allow proper wiper operation.**

– CONTINUED –

- **Use clean water if windshield washer fluid is unavailable. In areas where water freezes in winter, use SUBARU Windshield Washer Fluid or the equivalent. Refer to "Windshield Washer Fluid" ☞P359.**
  Also, when driving the vehicle when there are freezing temperatures, use non-freezing type wiper blades.
- **Do not clean the wiper blades with fuel or a solvent, such as paint thinner or benzine. This will cause deterioration of the wiper blades.**


NOTE

• The windshield wiper motor is protected against overloads by a circuit breaker. If the motor operates continuously under an unusually heavy load, the circuit breaker may trip to stop the motor temporarily. If this happens, park your vehicle in a safe location, turn off the wiper switch, and wait for approximately 10 minutes. The circuit breaker will reset itself, and the wipers will again operate normally.
• Clean your blade rubbers and window glass periodically with a washer solution to prevent streaking, and to remove accumulations of road salt or road film. Operate the windshield washer for at least 1 second so that washer solution will be sprinkled all over the windshield or rear window.
• Grease, wax, insects, or other material on the windshield or the wiper blade results in jerky wiper operation and streaking on the glass. If you cannot remove the streaks after operating the windshield washer or if the wiper operation is jerky, clean the outer surface of the windshield and rear window using a sponge or soft cloth with a neutral detergent or mild-abrasive cleaner. Do not, however, use detergent to clean the blade rubbers. Use only a sponge or soft cloth (and no neutral detergent or mild abrasive cleaner) when you clean the blade rubbers. If you wipe the rubber of the blade strongly, the black coating component will peel off, which will cause the wiper to judder. Also, after wiping it off, check that the rubber has not come loose. After cleaning the window glass and wiper blade rubbers, be sure to rinse them with clean water. Rinse the window until the water does not form beads on the glass. This indicates that the glass is clean.
• If you cannot eliminate the streaking even after following this procedure, replace the wiper blades (or blade rubbers) with new ones. For replacement instructions, refer to "Replacement of Wiper Blades" ☞P360.
• If the wipers do not operate in the following conditions, turn the wiper switch to the "▼/HI" position.
- The wiper switch is in the "/INT" position, however, it does not work.
- The wiper switch is in the "▼/LO" position, however, it does not work.
In these cases, we recommend that you contact your SUBARU dealer.


■ Windshield Wiper and Washer Switches

The wiper operates only when the ignition switch is in the "ON" position.

▼ Windshield wipers

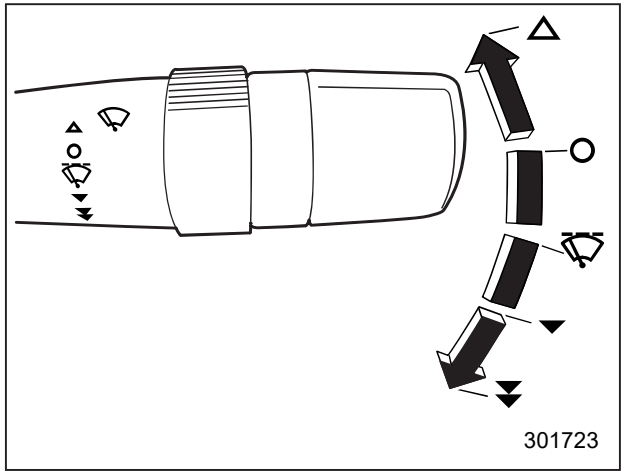

Except Australia models

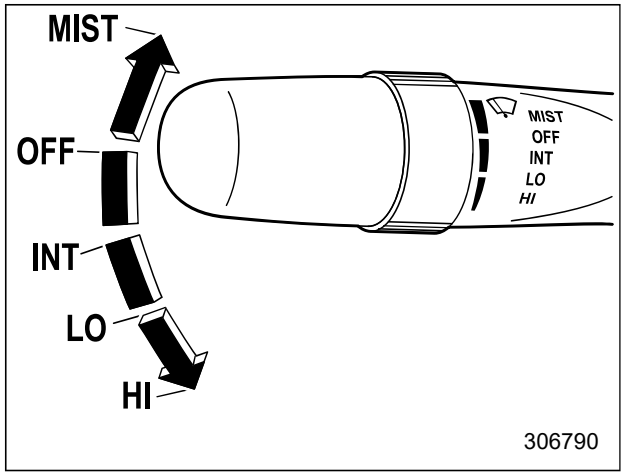

Australia models


△/MIST : Mist (for a single wipe)
○/OFF : Off
/INT : Intermittent
/LO : Low speed
/HI : High speed

To turn the wipers on, push the wiper control lever down.


To turn the wipers off, return the lever to the "○/OFF" position.

For a single wipe of the wipers, push the lever up. The wipers operate until you release the lever.

▼ Wiper intermittent time control

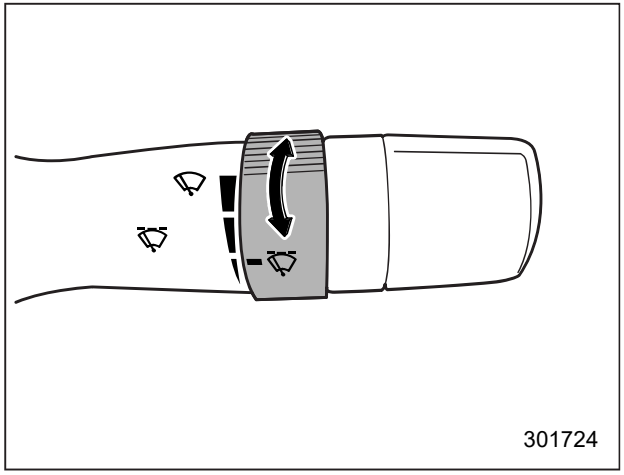

Except Australia models

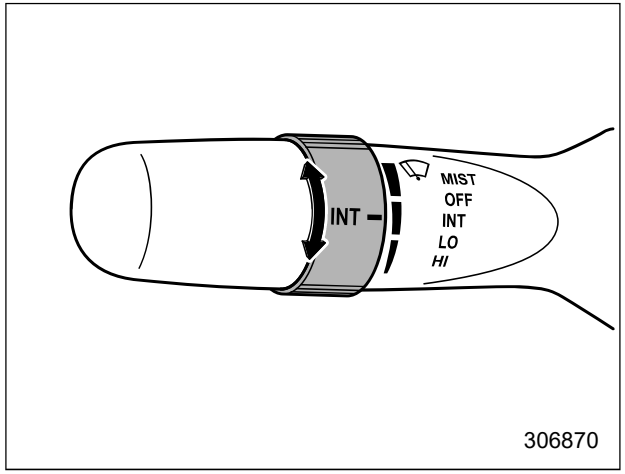


Australia models


When the wiper switch is in the "/INT" position, turn the dial to adjust the operating interval of the wiper. The operating interval can be adjusted in several steps from the shortest interval to the longest.

– CONTINUED –

▼ **Windshield washer**

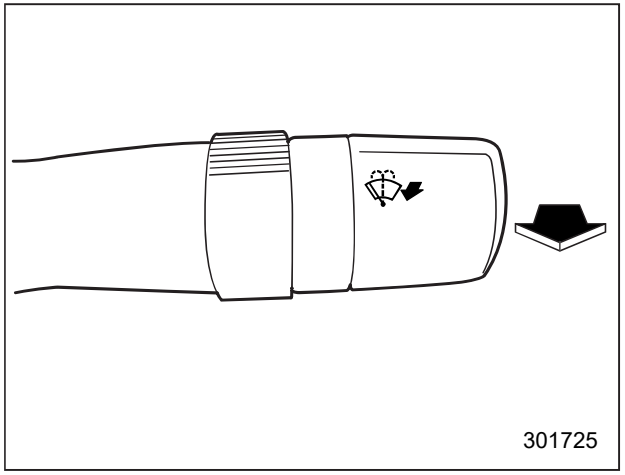


Except Australia models

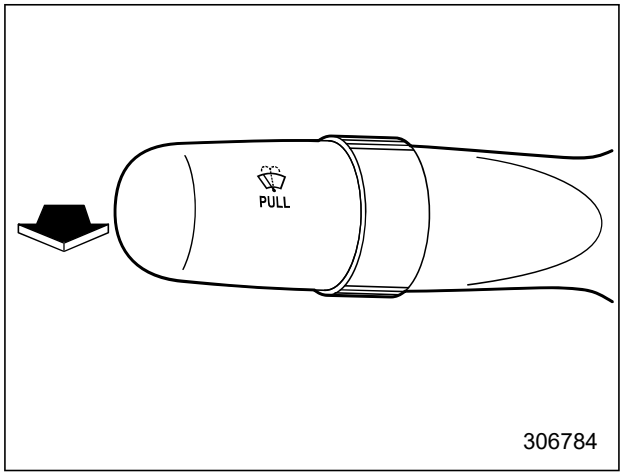

Australia models

To wash the windshield, pull the wiper control lever toward you. The washer fluid sprays until you release the lever. The wipers operate while you pull the lever.

3-16. Headlight Washer

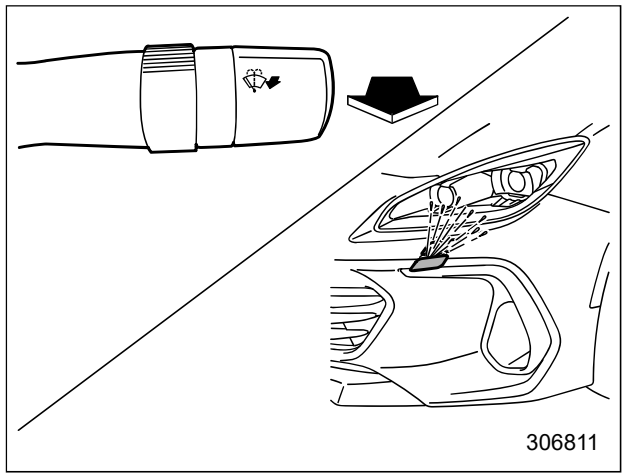

If you pull the wiper control lever toward you and hold it for more than 1 second with the ignition switch in the “ON” position, the headlight washer operates together with the windshield washer in the following conditions.

- The light switch is in the “≣D” position.
- The light switch is in the “AUTO” position and the headlights illuminate automatically.

The windshield washer stops spraying washer fluid as soon as you release the wiper control lever. The headlight washer sprays the washer fluid for approximately 1 second and then stops automatically.


⚠ CAUTION

Do not operate the washer if the washer fluid tank is empty. This may cause overheating of the washer motor. Check washer fluid level frequently, such as at fuel stops.

NOTE


When the area around the nozzle cover of the headlight washer is frozen, remove the ice before using.

3-17. Defogger

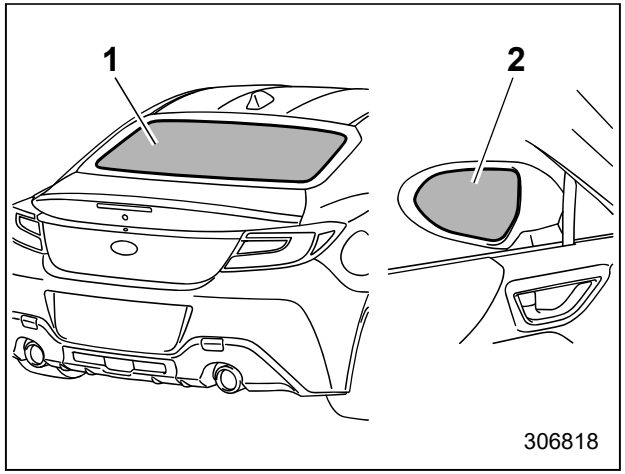

1) Rear window defogger
2) Outside mirror defogger (if equipped)

The defogger system is activated only when the ignition switch is in the “ON” position.

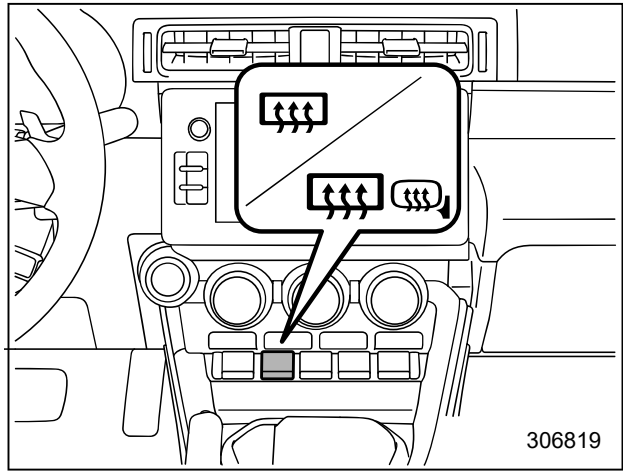

Rear window and outside mirror (if equipped) defogger button

To activate the defogger system, press the rear window and outside mirror defogger button. The rear window defogger and outside mirror defogger are activated simultaneously. The indicator light on the button illuminates while the defogger system is activated.

To turn them off, press the button again. They also turn off when the ignition switch is turned to the “ACC” or “OFF” position.

The defogger system will automatically shut off after approximately 15 minutes. If the rear window and outside mirrors have been cleared before that time, press the button to turn them off. If defrosting or defogging is not complete, you have to press the button to turn them on again.

It is possible to set the defogger system for the continuous operation mode by operating the center information display. For details, refer to "Car settings" ☞P159.

⚠ CAUTION

- **To prevent the battery from being discharged, do not operate the defogger system continuously for any longer than necessary.**
- **Do not use sharp instruments or window cleaner containing abrasives to clean the inner surface of the rear window. They may damage the conductors printed on the window.**


NOTE

While the defogger system is in the continuous operation mode, if the battery voltage drops below the permissible level, continuous operation of the defogger system is canceled and the system stops operating.

3-18. Mirrors

Always check that the inside and outside mirrors are properly adjusted before you start driving.

■ Inside Mirror

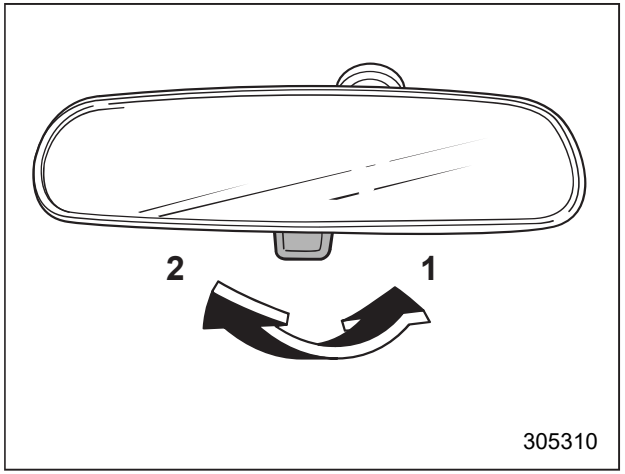


1) Normal position
2) Anti-glare position

Push the tab on the mirror for normal use. To reduce glare from the headlights of the vehicle behind you, pull the tab to the anti-glare position.

■ Outside Mirrors

▼ Remote control mirror switch

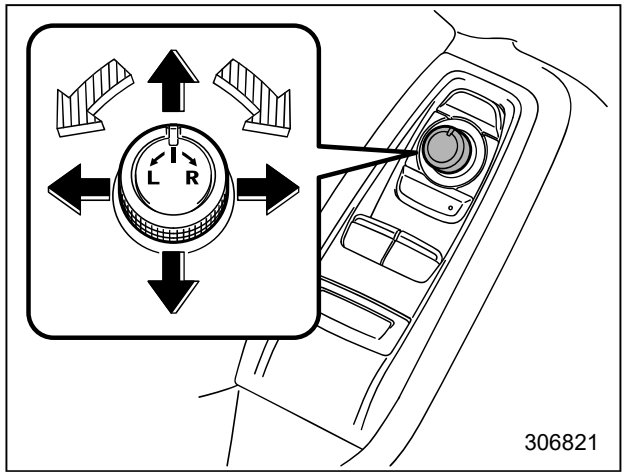

: Select side to adjust

: Direction control


The remote control mirrors operate when the ignition switch is in the “ON” or “ACC” position.

1. Turn the control switch to the side that you want to adjust. “L” is for the left mirror, “R” is for the right mirror.
2. Move the control switch in the direction you want to move the mirror.
3. Return the control switch to the neutral position to prevent unintentional operation.

NOTE

The mirrors can also be adjusted manually.

▼ Power folding mirror switch

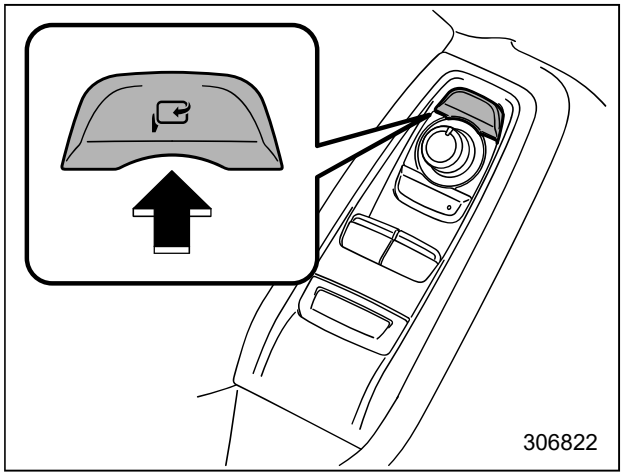

The power folding mirror switch operates when the ignition switch is in the “ON” or “ACC” position.

To fold the outside mirrors, press the power folding mirror switch. To unfold the mirrors, press the switch again.

NOTE

• If the outside mirrors have been operated (folded or unfolded) manually, when you turn the ignition switch from the “OFF” position to the “ACC” or “ON” position, the outside mirrors may be adjusted automatically


depending on the status of the power folding mirror switch.

- If the outside mirrors have been manually folded slightly forward of the regularly unfolded position, when you turn the ignition switch from the "OFF" position to the "ACC" or "ON" position, the outside mirrors may automatically fold further forward depending on the status of the power folding mirror switch. When this happens, press the power folding mirror switch. By doing so, the outside mirrors which have been folded to the furthest forward position will extend to the regularly unfolded position and then fold rearward in the usual way. In order to unfold the outside mirrors, press the switch again.
- When you fold the outside mirrors manually, the mirrors may not unfold when the switch is pressed, even though the motor operating sound is heard. When this happens, operate the power folding mirror switch again.
- When you unfold the outside mirrors manually, the mirrors may become wobbly. Be sure to unfold the mirrors by operating the switch. If the outside mirrors are still wobbly, fold the mirrors again and then unfold them by operating the switch again.
- When the temperature is low, the outside mirrors may stop during operation. Push the switch again. When the outside mirrors do not work by operating the switch, move the outside mirrors several times manually. This makes it possible to operate them by switch operation.
- When you operate the power folding mirror switch continuously, it may not work. This is not a malfunction. Operate after waiting for a short period of time.
- The outside mirrors can be operated (folded or unfolded) manually for approximately 45 seconds after the following conditions are met.
  - The ignition switch is turned to the "OFF" position.
  - The door is unlocked using the access key fob.

3-19. Tilt/Telescopic Steering Wheel

⚠ WARNING

- Do not adjust the steering wheel tilt/telescopic position while driving. This may cause loss of vehicle control and result in personal injury.
- If the lever cannot be raised to the fixed position, adjust the steering wheel again. It is dangerous to drive without locking the steering wheel. This may cause loss of vehicle control and result in personal injury.

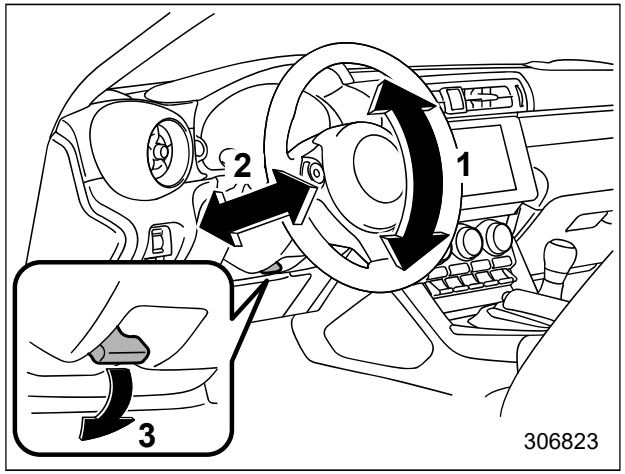


1) Tilt adjustment

– CONTINUED –

2) Telescopic adjustment
3) Tilt/telescopic lock lever

1. Adjust the seat position. Refer to "Front Seats" ☞P28.
2. Pull the tilt/telescopic lock lever down.
3. Move the steering wheel to the desired level.
4. Pull the lever up to lock the steering wheel in place.
5. Make sure that the steering wheel is securely locked by moving it up and down, and forward and backward.

3-20. Horn

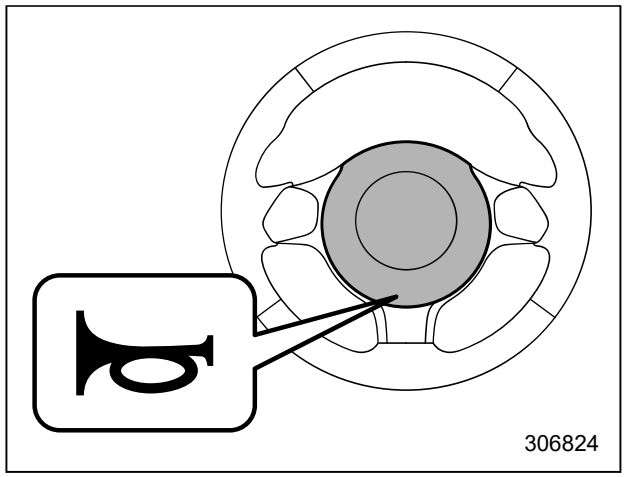


To sound the horn, push the horn pad.

4-1. Ventilator Control.....186
Center Ventilators.....186
Side Ventilators 186
4-2. Climate Control Panel.....186
4-3. Automatic Climate Control Operation.....188
Sensors 188
4-4. Manual Climate Control.....189
Airflow Mode Selection 189
Temperature Control 190
Fan Speed Control.....190
Air Conditioner Control.....190
Air Inlet Selection 191
To Turn Off the Climate Control System 191
4-5. Defrosting 191
4-6. Operating Tips for Heater and Air Conditioner 192
Cleaning Ventilator Grille..... 192
Efficient Cooling after Parking in Direct Sunlight 192
Lubrication Oil Circulation in the Refrigerant Circuit 192
Checking Air Conditioning System before Summer Season 192
Cooling and Dehumidifying in High Humidity and Low Temperature Weather Condition 193
Air Conditioner Compressor Shut-Off When Engine Is Heavily Loaded 193
Refrigerant for Your Climate Control System 193
4-7. Air Filtration System 194
Replacing the Cabin Air Filter 194

4-1. Ventilator Control

■ Center Ventilators

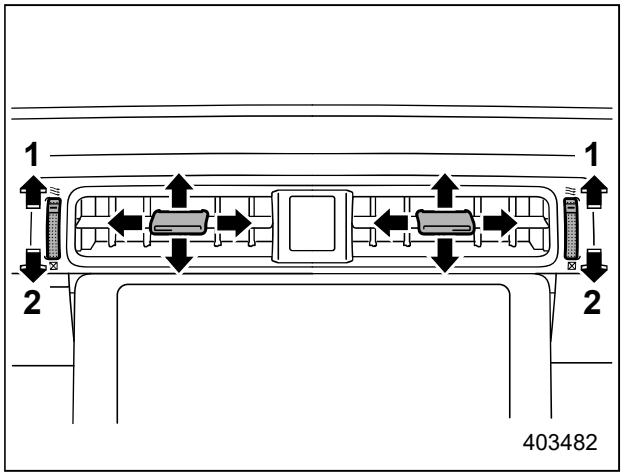


1) Open
2) Close

Move the tab to adjust the flow direction.

To open the ventilator, turn the center grille open/close wheel upward to the "≋" position.

To close it, turn the wheel downward to the "⊠" position.

■ Side Ventilators

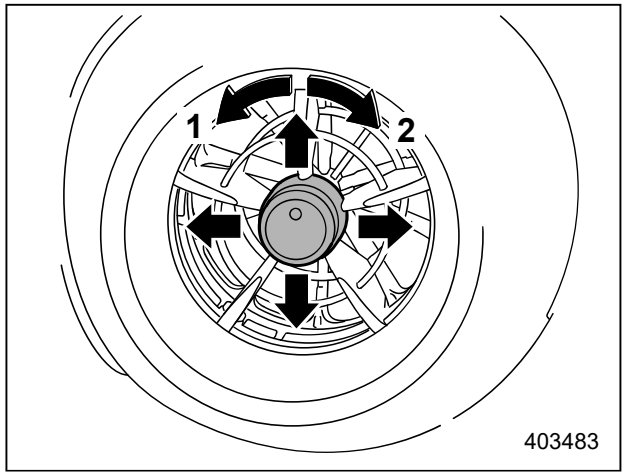


1) Open
2) Close

To adjust the flow direction, move the tab.

4-2. Climate Control Panel

⚠ WARNING

- **The cooling function operates only when the engine is running.**
- **Do not leave children or adults who would normally require the support of others alone in your vehicle. Pets should not be left alone either. On hot, sunny days, temperatures in a closed vehicle could quickly become high enough to cause severe or possibly fatal injuries to people or animals.**

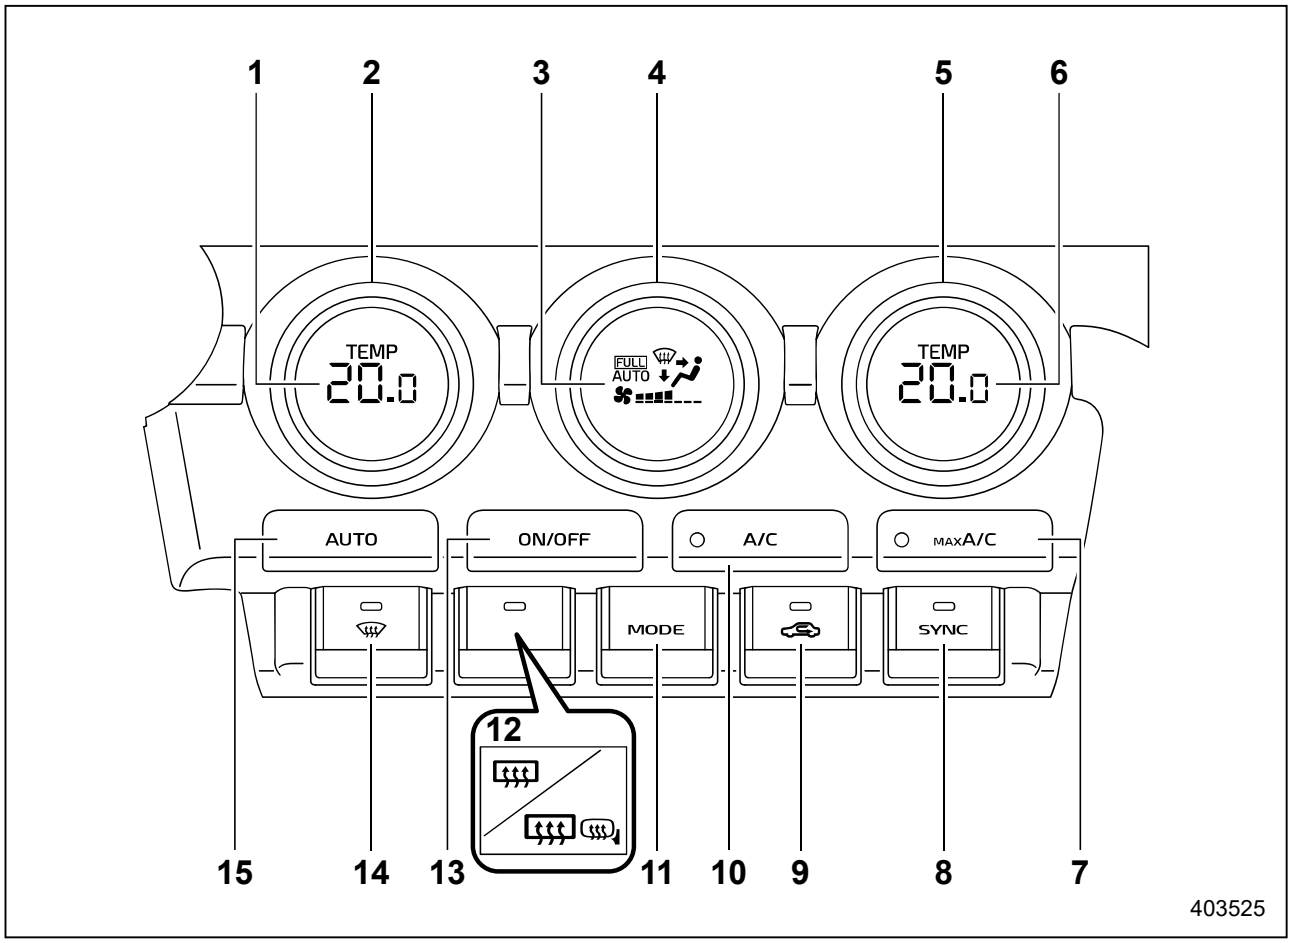

The illustration above is a typical example for left-hand drive models. For right-hand drive models, the locations of some switches/levers are different from those shown in the illustration.

1) Set temperature indicator (left-hand side)
2) Temperature control dial (left-hand side) (Refer to "Temperature Control" ☞P190.)
3) Climate control mode indicator
4) Fan speed control dial (Refer to "Fan Speed Control" ☞P190.)
5) Temperature control dial (right-hand side) (Refer to "Temperature Control" ☞P190.)
6) Set temperature indicator (right-hand side)
7) MAX A/C button (Refer to "MAX A/C mode" ☞P190.)
8) SYNC button (Refer to "SYNC mode" ☞P190.)
9) Air inlet selection button (Refer to "Air Inlet Selection" ☞P191.)
10) Air conditioner button (Refer to "Air Conditioner Control" ☞P190.)
11) Airflow mode selection button (Refer to "Airflow Mode Selection" ☞P189.)
12) Rear window defogger button and outside mirror defogger button (if equipped) (Refer to "Defogger" ☞P181.)
13) ON/OFF button (Refer to "To Turn Off the Climate Control System" ☞P191.)
14) Defroster button (Refer to "Defrosting" ☞P191.)
15) AUTO button (Refer to "Automatic Climate Control Operation" ☞P188.)

4-3. Automatic Climate Control Operation

When this mode is selected, the fan speed, airflow mode, air inlet selection, and air conditioner operation are automatically controlled. To activate this mode, perform the following.

1. Press the AUTO button. The FULL AUTO mode is selected and the “FULL AUTO” indicator light on the display illuminates.
2. Set the preferred temperature using the temperature control dial.


NOTE

- **Operate the automatic climate control system when the engine is running.**
- **Even when cooling is not necessary, the air conditioner will automatically turn on if the temperature is set much lower than the current outlet air temperature. Even in this case, the “A/C” indicator light on the control panel illuminates**
- **The air conditioner may not operate in the following cases:**
  - **When the cabin temperature is low**
  - **When the ambient temperature decreases close to 0°C (32°F)**
- **The controllable temperature range may vary depending on the regional specifications of the vehicle.**
- **If you operate any of the buttons on the control panel other than the ON/OFF button, rear window defogger button, SYNC button and temperature control dial(s) during FULL AUTO mode operation, the “FULL” indicator light on the control panel will turn off and the “AUTO” indicator light will remain illuminated. You can then manually control the system as desired using the button you operated. To change the system back to the FULL AUTO mode, press the AUTO button.**

To turn off the climate control system, press the ON/OFF button. Then the air inlet selection will be set to the following.

- When the air inlet selection is set to auto mode: Outside air circulation
- When the air inlet selection is set to manual mode: No change

■ Sensors

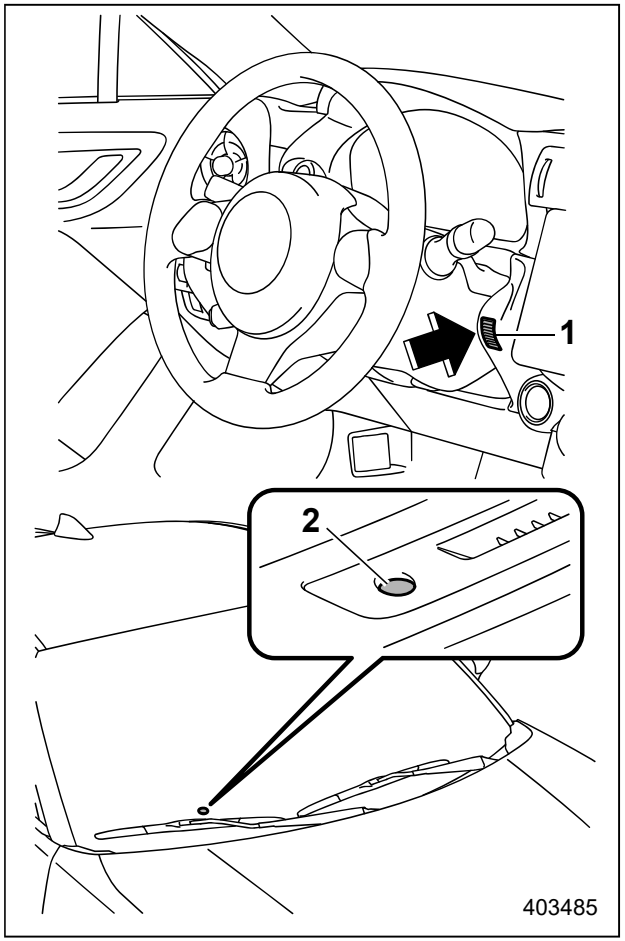

1) Interior air temperature sensor
2) Solar sensor

The automatic climate control system employs several sensors. These sensors are delicate. If they are treated incorrectly

and become damaged, the system may not be able to control the interior temperature correctly. To avoid damaging the sensors, observe the following precautions:


– Do not subject the sensors to impact.
– Keep water away from the sensors.
– Do not cover the sensors.

4-4. Manual Climate Control


■ Airflow Mode Selection

Select the airflow mode using the airflow mode selection button.


Airflow modes are as follows.

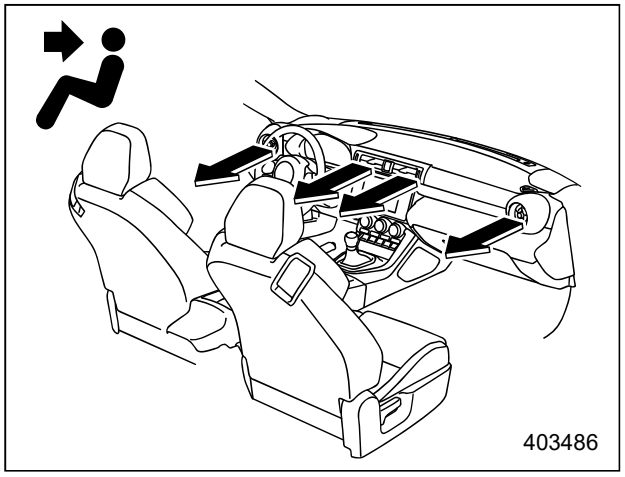

Ventilation: Instrument panel outlets

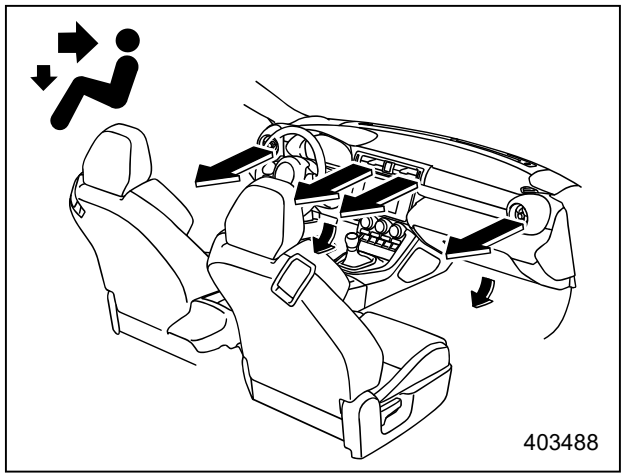


Ventilation 2: Instrument panel outlets and foot outlets

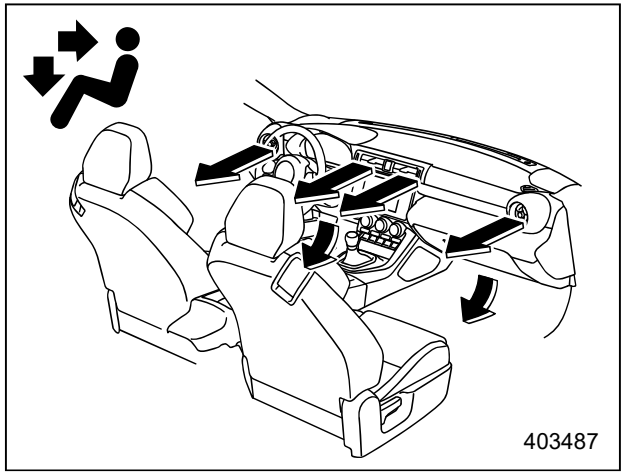


Bi-level: Instrument panel outlets and the foot outlets

– CONTINUED –

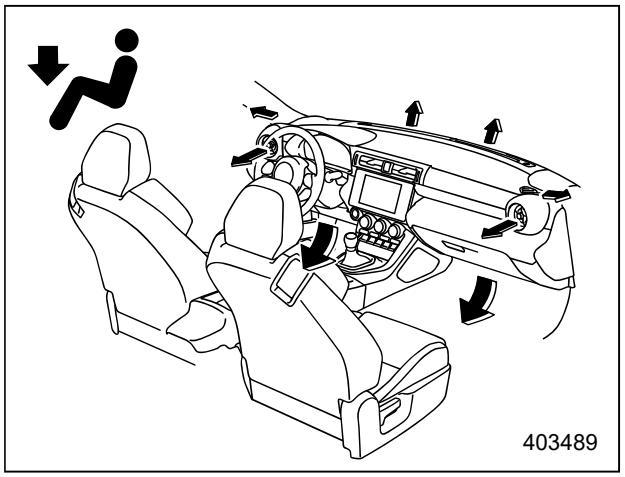

Heat: Foot outlets, both side outlets of the instrument panel and some through windshield defroster outlets (A small amount of air flows to the windshield and both side windows to prevent fogging.)

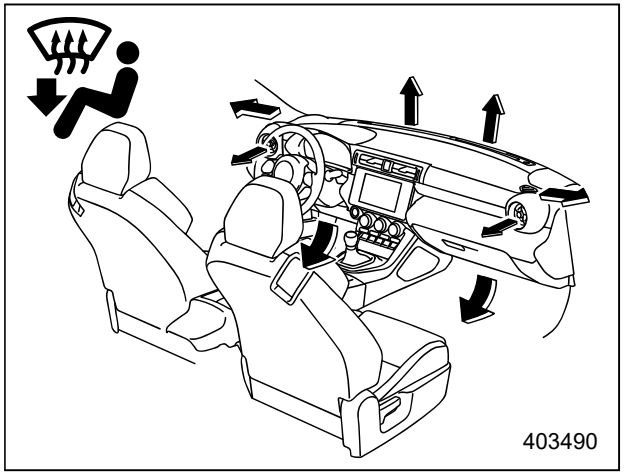

Heat-def: Windshield defroster outlets, foot outlets and both side outlets of the instrument panel

■ Temperature Control

Turn the temperature control dial to set the preferred interior temperature.

NOTE

The controllable temperature range may vary depending on the regional specifications of the vehicle.

▼ MAX A/C mode

For quicker cooling, press the MAX A/C button.

When the MAX A/C mode is on, the following settings will be changed automatically.

- The air conditioner will turn on.
- The temperature will be set on the lowest.
- The fan speed will be set on the maximum speed.
- The air inlet will be set to the recirculation mode.
- The airflow mode setting will be set to the ventilation mode.

To turn off MAX A/C mode and return the previous setting, press the MAX A/C button again.

▼ SYNC mode

When the SYNC mode is turned on, both the driver's and front passenger's side temperatures are synchronized using the driver's side temperature control dial.

Press the SYNC button to turn on the SYNC mode. The SYNC button indicator will illuminate.

Press the SYNC button again or turn the front passenger's side temperature control dial to cancel the SYNC mode. The SYNC button indicator will not illuminate. In this case, temperature control on the driver's side and front passenger's side is separated.

The temperature will be controlled individually using the driver's and front passenger's temperature control dials.

■ Fan Speed Control

Select the preferred fan speed by turning the fan speed control dial.

■ Air Conditioner Control

The air conditioner operates only when the engine is running.

Press the air conditioner button while the fan is in operation to turn on the air conditioner. When the air conditioner is on, the "A/C" indicator light illuminates.

To turn off the air conditioner, press the button again. The indicator light will turn off.

NOTE

For efficient defogging or dehumidifying in cold weather, turn on the air conditioner. However, if the ambient temperature decreases to approximately 0°C (32°F), the air conditioner and dehumidification system may not work properly.

■ Air Inlet Selection

Select the air inlet by pressing the air inlet selection button.

- Recirculation:

When the indicator light on the air inlet selection button illuminates, interior air is recirculated inside the vehicle. Press the air inlet selection button to the ON position in the following cases.

- When driving on a dusty road
- When you want cooling performance to increase (for example, in particularly hot weather)

- Outside air circulation:

When the indicator light on the air inlet selection button does not illuminate, outside air is drawn into the passenger compartment. Press the air inlet selection button to the OFF position in the following cases.

- When the road is no longer dusty
- When the interior has cooled to a comfortable temperature

⚠ CAUTION

Continued operation in the recirculation mode may fog up the windows. Switch to the outside air circulation mode as soon as the outside dusty condition clears.


NOTE

When outside air circulation is selected, the system may automatically adjust the air inlet setting depending on such factors as the temperature setting, the temperature inside the vehicle, or conditions outside the vehicle.

■ To Turn Off the Climate Control System

To turn off the climate control system, press the ON/OFF button.

4-5. Defrosting

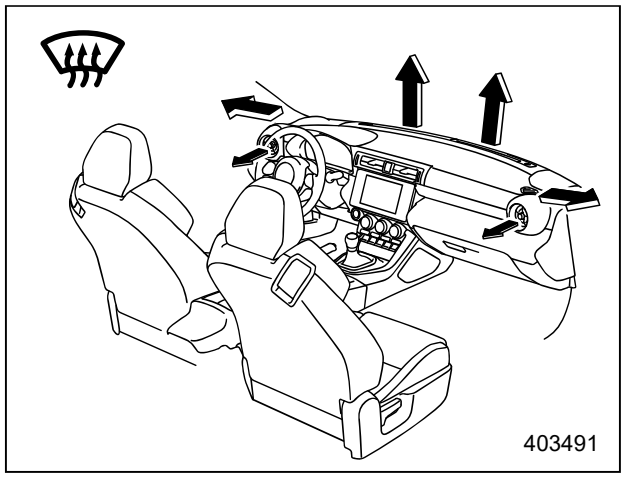

Select the “ ” or “ ” mode to defrost or dehumidify the windshield and the side door windows.

NOTE

• When the “ ” or “ ” mode is selected, the air conditioner operates automatically regardless of the position of the air conditioner button to defrost the windshield more quickly. At the same time, the air inlet selection is automatically set to the outside air circulation mode.


• After defrosting the windshield by pressing the defroster button “ ”, pressing the button again returns the system to the setting that had been

– CONTINUED –

selected before the defroster was activated.

4-6. Operating Tips for Heater and Air Conditioner

■ Cleaning Ventilator Grille

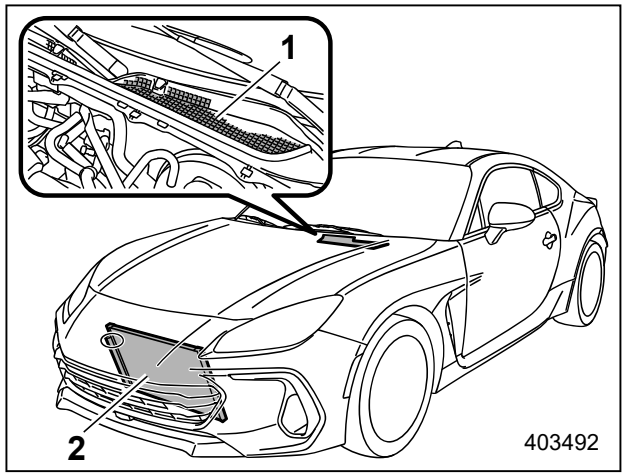

1) Front ventilator inlet grille
2) Condenser

Always keep the front ventilator inlet grille free of snow, leaves, or other obstructions to ensure efficient heating and defrosting. Since the condenser is located in front of the radiator, this area should be kept clean because cooling performance is impaired by any accumulation of insects and leaves on the condenser.

■ Efficient Cooling after Parking in Direct Sunlight

After parking in direct sunlight, drive with the windows open for a few minutes to allow outside air to circulate into the heated interior. This results in quicker cooling by the air conditioner. Keep the windows closed during the operation of the air conditioner for maximum cooling efficiency.

■ Lubrication Oil Circulation in the Refrigerant Circuit

Operate the air conditioner compressor at a low engine speed (at idle or low driving speeds) a few minutes each month during the off-season to circulate its oil.

■ Checking Air Conditioning System before Summer Season

Check the air conditioner unit for refrigerant leaks, hose conditions, and proper operation each spring. We recommend that have the air conditioning system checked by your SUBARU dealer.


■ Cooling and Dehumidifying in High Humidity and Low Temperature Weather Condition

Under certain weather conditions (high relative humidity, low temperatures, etc.) a small amount of water vapor emission from the air outlets may be noticed. This condition is normal and does not indicate any problem with the air conditioning system.

■ Air Conditioner Compressor Shut-Off When Engine Is Heavily Loaded

To improve acceleration and gas mileage, the air conditioner compressor is designed to temporarily shut off during air conditioner operation whenever the accelerator is fully depressed such as during rapid acceleration or when driving on a steep upgrade.

■ Refrigerant for Your Climate Control System

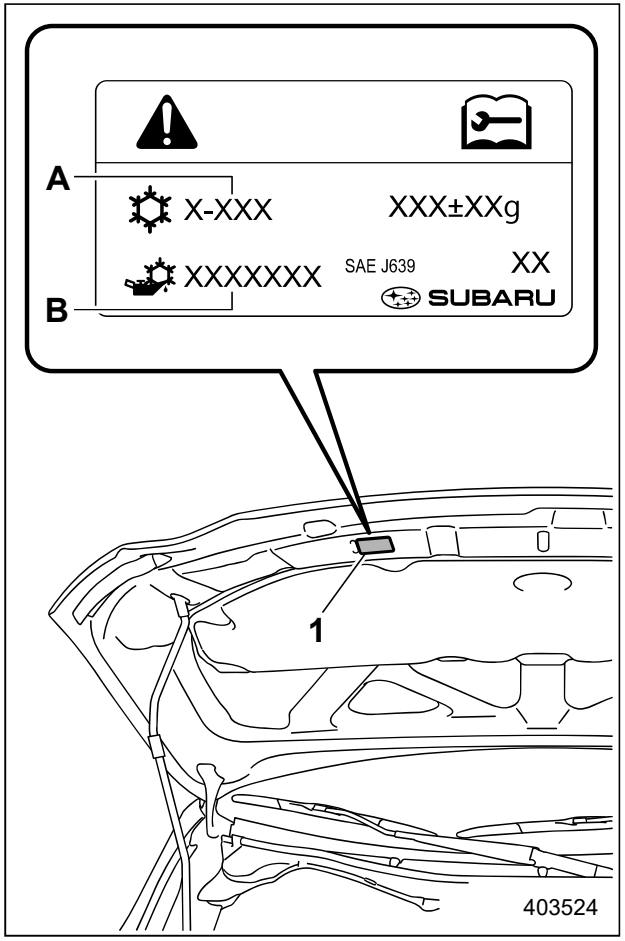

1) Air conditioner label
A) Name of refrigerant
B) Name of compressor oil

Your air conditioner uses ozone friendly refrigerant R-1234yf (HFO-1234yf) or R-134a (HFC-134a).

Check the air conditioner label in the location shown in the illustration to confirm which type of refrigerant is used in your vehicle.

We recommend that you consult your SUBARU dealer for service.

Repairs needed as a result of using the wrong refrigerant are not covered under warranty.

4-7. Air Filtration System

Replace the cabin air filter according to the maintenance schedule. Refer to "Maintenance Schedule" ☞P327.

The schedule should be followed to maintain the filter's dust collection ability. Under extremely dusty conditions, the filter should be replaced more frequently. It is recommended that you have your filter checked or replaced by your SUBARU dealer. For replacement, we recommend that you use only a genuine SUBARU air filter kit.

⚠ CAUTION

We recommend that you contact your SUBARU dealer if the following occurs, even if it is not yet time to change the filter.

- **Reduction of the airflow through the vents.**
- **Windshield gets easily fogged or misted.**


NOTE

The filter can influence the air conditioning, heating and defroster performance if not properly maintained.

■ Replacing the Cabin Air Filter


1. Remove the glove box.

(1) Open the glove box.

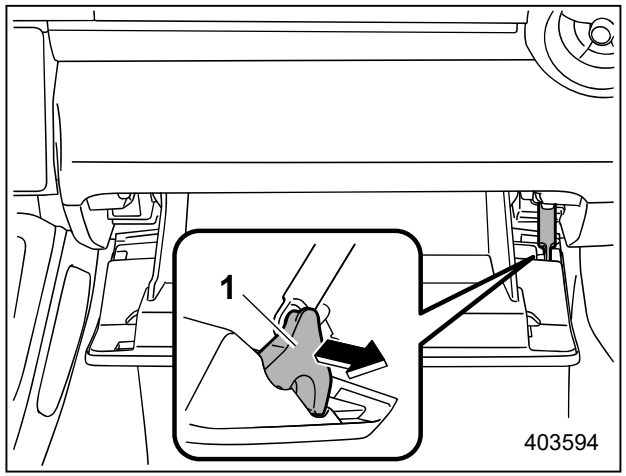


Left-hand drive models

1) Link pocket

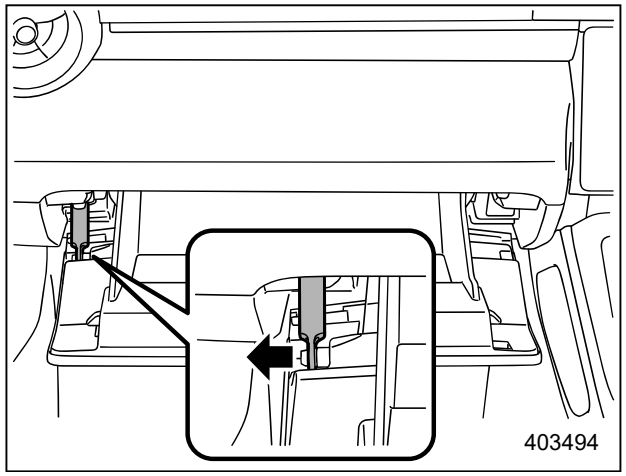


Right-hand drive models


(2) Remove the link pocket (Left-hand drive models) or damper shaft (Right-hand drive models) from the glove box.

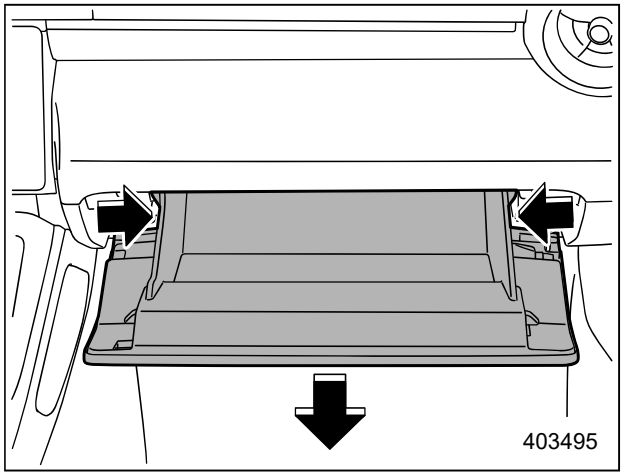

(3) Push both sides of the glove box inward to unlock the stoppers and then pull down the glove box as far as it will go.

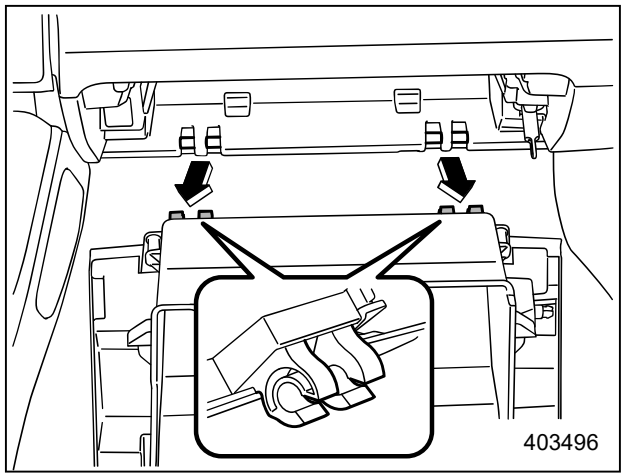


(4) Pull out the glove box horizontally and remove the hinge portion. When doing this, be careful not to damage the hinge.

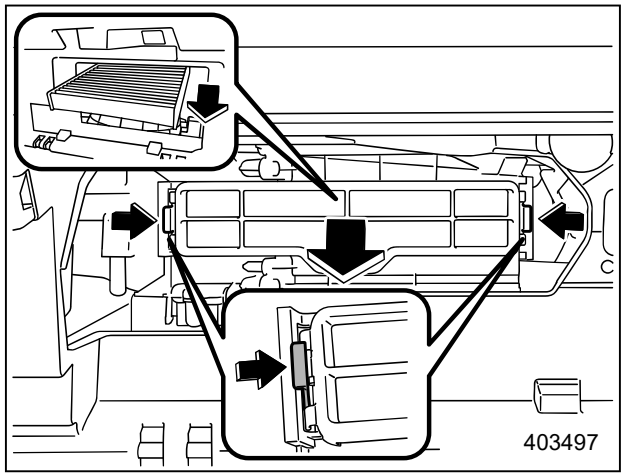

2. Remove the cabin air filter according to the following procedure in order to prevent dust on the air cleaner from falling to the inside of its housing.


(1) Pinch both tabs and remove the filter cover.
(2) Gently tilt down the end of the filter and slowly pull it out 1 cm (0.4 in).
(3) Slowly pull out the rest of the filter.

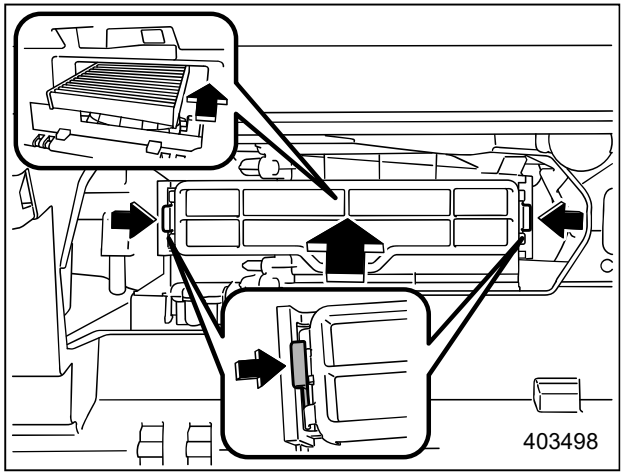

3. Replace the cabin air filter with a new one and then reinstall the cover.

⚠ CAUTION

The arrow mark on the filter must point UP.

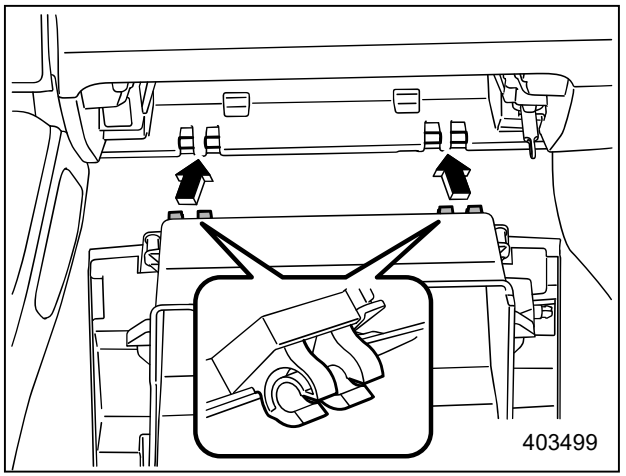


4. Reinstall the glove box in the reverse order of removal.
5. Close the glove box.

5-1. Antenna.....198
Roof Antenna.....198
5-2. Audio Set.....198

5-1. Antenna

■ Roof Antenna

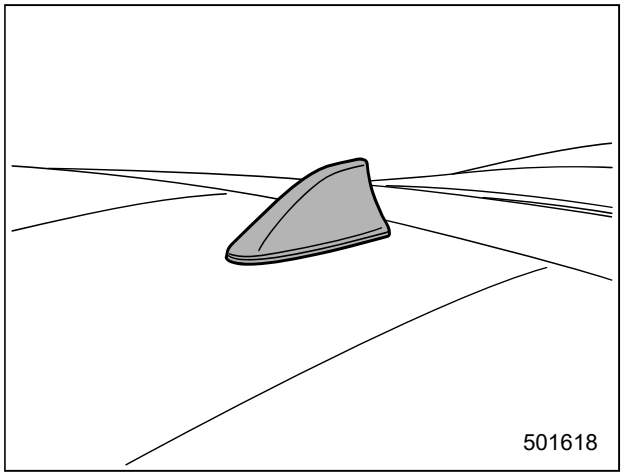

The roof antenna is installed on the roof.

5-2. Audio Set

⚠ CAUTION

- **We recommend that always consult your SUBARU dealer before installing a citizen band radio or other transmitting device in your vehicle. Such devices may cause the electronic control system to malfunction if they are incorrectly installed or if they are not suited for the vehicle.**
- **To prevent the battery from being discharged, do not leave the audio/visual system on when the engine is not running.**

If your vehicle is equipped with a genuine SUBARU navigation system (if equipped) or audio system, refer to the separate navigation system/audio Owner's Manual for details.

6-1. Interior Light 200
Map Lights 200
OFF Delay Timer 200
6-2. Sun Visors 201
Vanity Mirror with Light 201
6-3. Storage Compartment 201
Glove Box 202
Center Console 202
6-4. Bottle Holders 203
6-5. Accessory Power Outlets 203
6-6. USB Power Supply 204
How to Use the USB Power Supply 205
6-7. Ashtray (Dealer Option) 205
6-8. Floor Mat 206
6-9. Under-Floor Storage Compartment
(models with the flat tire repair kit) 207


6-1. Interior Light

⚠ CAUTION

When leaving your vehicle, make sure the lights are turned off to avoid battery discharge.

■ Map Lights


▼ Map light switches

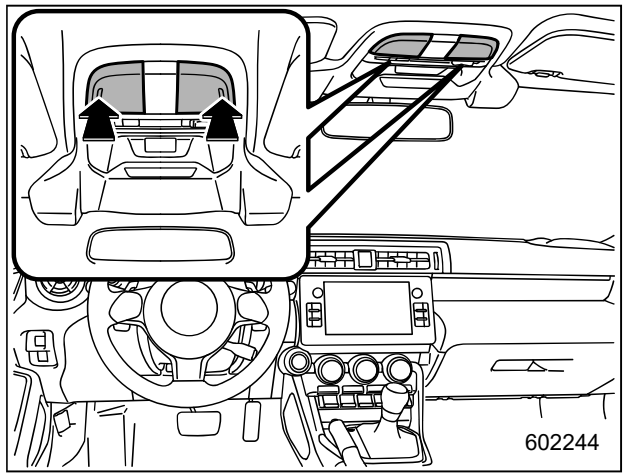

To turn on the map light, press the lens.

To turn it off, press the lens again.

▼ Door interlock switch

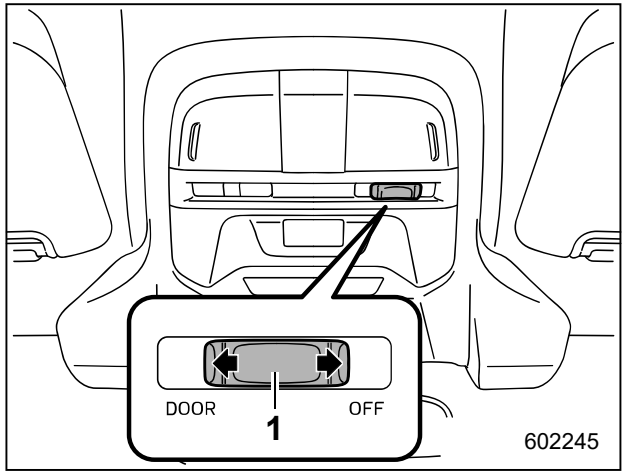

1) Door interlock switch

The door interlock switch has the following positions.

OFF: The map lights do not illuminate automatically in conjunction with a door opening. However, the lights can be turned on manually by pressing the map light lens.

DOOR: The map lights illuminate automatically when any of the doors (other than the trunk lid) is opened even while the map light is off. Several seconds after all of the doors (other than the trunk lid) are closed, the map lights gradually turn off. For details, refer to "OFF Delay Timer" ☞P200.

■ OFF Delay Timer


Map lights have an automatic illumination function.

When the interior light switch is set to the “DOOR” position, the light will automatically turn on and off depending on the locking and unlocking of the doors, the opening and closing of the doors, as well as the position of the ignition switch.

NOTE

The setting for the period of time in which the lights remain on (OFF delay timer) can be changed by a SUBARU dealer. We recommend that you contact your SUBARU dealer for details. Also, the setting can be changed by operating the center information display. For details, refer to "Car settings" ☞P159.

6-2. Sun Visors

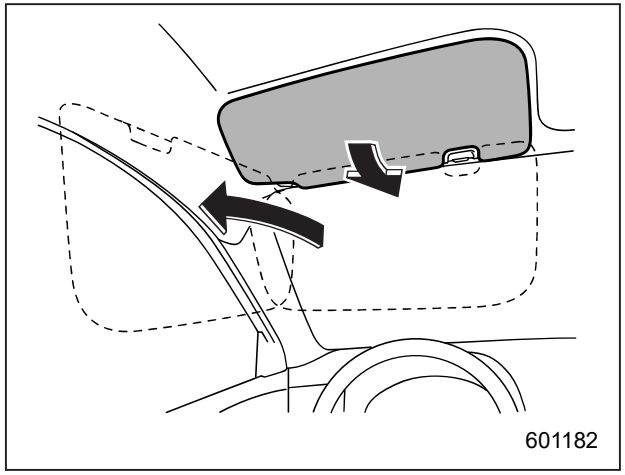


To block out glare, swing down the visors.

To use the sun visor at a side window, swing it down and move it sideways.

■ Vanity Mirror with Light

⚠ CAUTION

Keep the vanity mirror cover closed while the car is being driven to avoid being blinded by glare.

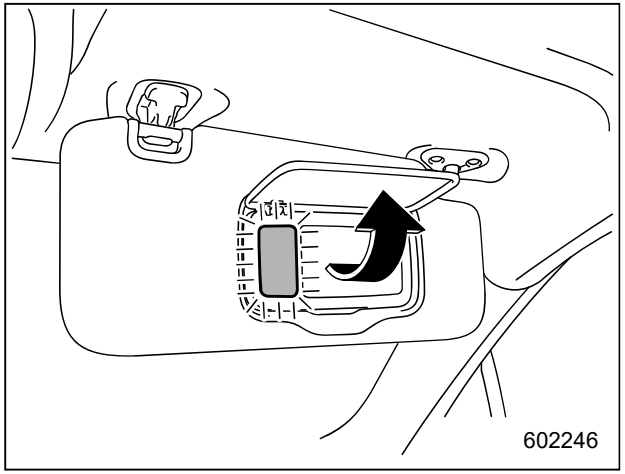

To use the vanity mirror, swing down the sun visor and open the vanity mirror cover.

The lights beside the vanity mirror illuminate when the mirror cover is opened.

NOTE

Use of the vanity mirror light for a long period of time while the engine is not running can cause battery discharge.


6-3. Storage Compartment

⚠ CAUTION

- **Keep the storage compartment closed when it is not being used. If left open, in the event of sudden braking, etc., stowed items may fly out, possibly leading to an accident.**
- **Do not store the following items in the storage compartment. Otherwise, it may cause a fire or accident.**
  - **Spray cans, containers with flammable or corrosive liquids or any other dangerous items.**
  - **Plastic or other heat-vulnerable or flammable articles such as a lighter.**


– CONTINUED –

■ Glove Box

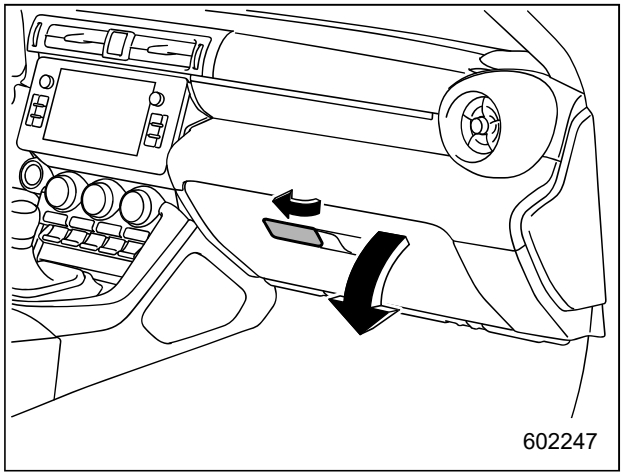

To open the glove box, pull the handle. To close it, push the lid firmly upward.

■ Center Console

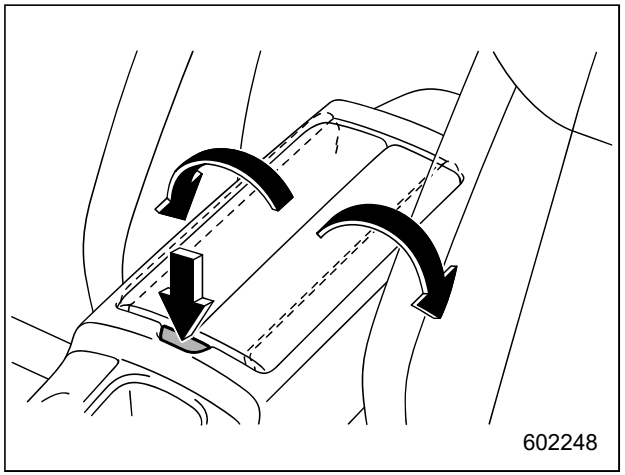


To open the center console, push on the button lightly and it will automatically open.


▼ Cup Holder and Console Tray

⚠ CAUTION

- **Take care to avoid spills. Beverages, if hot, might burn you and/or your passengers. Spilled beverages may also damage upholstery, carpets or audio equipment.**
- **Do not pick up a cup from the cup holder or put a cup in the holder while you are driving, as this may distract you and lead to an accident.**
- **Take care not to spill a beverage on the select lever/shift lever or any switch(es) in the adjacent area. If the beverage is spilled, it may cause a malfunction of the select lever/shift lever and/or switch(es).**

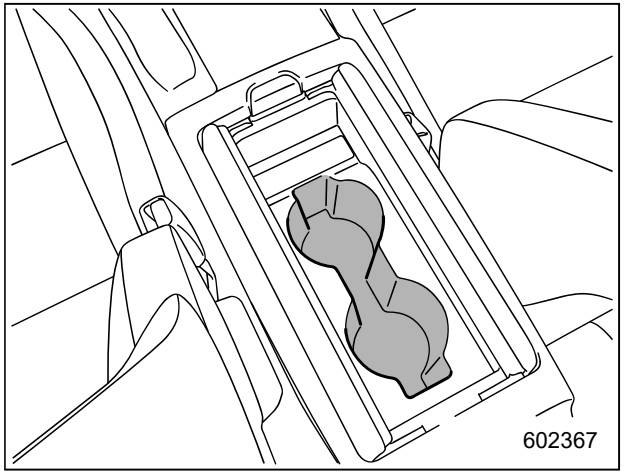

MT models

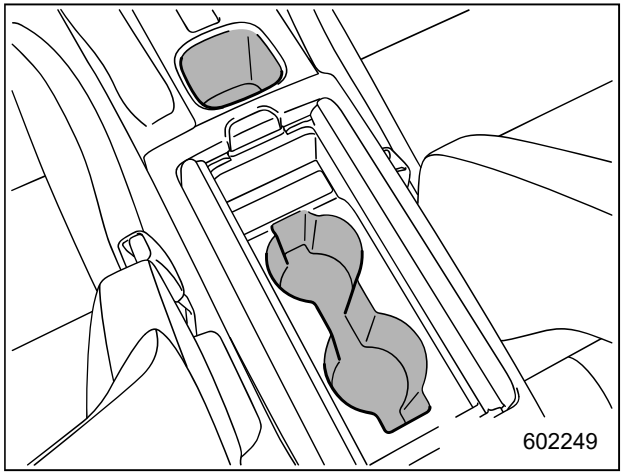


AT models

The cup holder and console tray is built into the center console.

6-4. Bottle Holders


⚠ CAUTION

- **Do not pick up a bottle from the bottle holder or put a bottle in the holder while you are driving, as this may distract you and lead to an accident.**
- **When placing a beverage in a bottle holder, make sure it is capped. Otherwise, the beverage could spill when opening/closing the door or while driving and, if the beverage is hot, it could burn you and/or your passengers.**

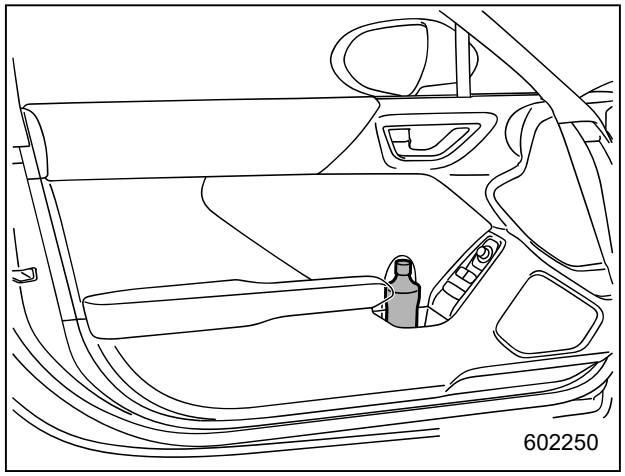

The bottle holder equipped on each door trim can be used to hold beverage bottles and other items.

6-5. Accessory Power Outlets

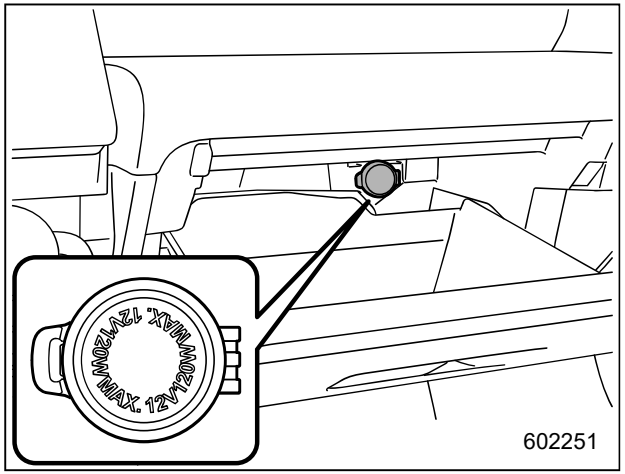

Power outlet in the glove box

Accessory power outlets are provided in the glove box. Electrical power (12 V DC) from the battery is available at any of the outlets when the ignition switch is in either the “ACC” or “ON” position.

You can use an in-vehicle electrical appliance by connecting it to an outlet.

The maximum power rating of an appliance that can be connected is **120 W**. Do not use an appliance which exceeds the indicated wattage for each outlet.

When using appliances connected to two or more outlets simultaneously, the total power consumed by them must not exceed 120 W.

⚠ CAUTION

- **Do not attempt to use a cigarette lighter in the accessory power outlet.**
- **Do not place any foreign objects, especially metal ones such as coins or aluminum foil, into the accessory power outlet. That could cause a short circuit. Always put the cap on the accessory power outlet when it is not in use.**
- **Use only electrical appliances which are designed for 12 V DC.**

  The maximum power rating of an appliance that can be connected is 120 W. Do not use an appliance which exceeds the indicated wattage for each outlet.

  When using appliances connected to two or more outlets simultaneously, the total power consumed by them must not exceed 120 W. Overloading the accessory power outlet can cause a short circuit. Do not use double adapters or more than one electrical appliance.

– CONTINUED –

- If the plug on your electric appliance is either too loose or too tight for the accessory power outlet, this can result in a poor contact or cause the plug to get stuck. Only use plugs that fit properly.
- Use of an electric appliance in the accessory power outlet for a long period of time while the engine is not running can cause battery discharge.
- Before driving your vehicle, make sure that the plug and the cord on your electrical appliance will not interfere with your shifting gears and operating the accelerator and brake pedals. If they do, do not use the electrical appliance while driving.

6-6. USB Power Supply

⚠ CAUTION

- The specification of a USB terminal that can be used is the A-type. If a different specification of terminal is connected, power supply or charging may not be possible, or the device may malfunction.
- There is a risk that a connected device may malfunction or data may be damaged. The connection of a device shall be performed at your responsibility.
- To avoid an electric shock or a malfunction, observe the following precautions.
  - Do not connect a USB hub.
  - Do not insert any metal or other foreign object into the USB terminal.
  - Do not spill water or other liquid on the USB terminal.
- Be careful not to pull the connected cable. Doing so could break the USB terminal and the connected device.
- If a device is connected for a long time when the engine is not running, doing so may cause the risk of a discharged battery. Even when the engine is running, we recommend that you do not connect a device for an unnecessarily long time.
- Do not connect a malfunctioning device. Doing so may cause the risk of smoke and fire.


NOTE

- The rated voltage of each USB terminal is 5 V/2.1 A (total 4.2 A). For details about the maximum rated power, refer to "How to Use the USB Power Supply" ☞P205. Before connecting a device, be sure to read the instruction manual of the device and check whether or not this specification of the output is supported by the device. If a device that requires power exceeding the maximum rating is connected, power supply or charging may not be possible. Even if charging could be completed, the time required for charging may be longer than when the genuine charger for that device is used.
- Depending on the device, charging may be possible only when a special

cable is used. In this case, be sure to connect the device using the special cable.

- **When a device that communicates with a PC is connected, power supply or charging may not be possible.**
- **When connect a device for charging, disconnect the device promptly after charging is completed.**

■ How to Use the USB Power Supply

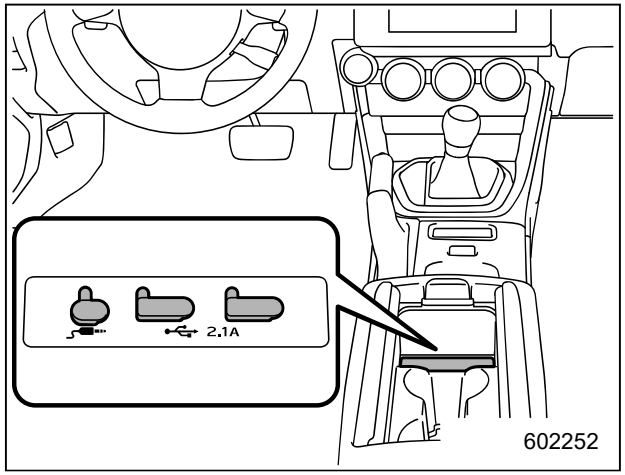

Console USB power supply (an audio device can be connected and used)

Use the USB terminal to use or charge an electronic device.

When using the USB, open the USB power supply cover. After use, close it.

When the ignition switch is in the “ACC” or “ON” position, the power can be supplied to the electronic device. Up to 5 V/2.1 A can be supplied from each terminal (total of 4.2 A).

6-7. Ashtray (Dealer Option)


⚠ CAUTION

- **Do not use ashtrays as waste receptacles or leave a lighted cigarette in an ashtray. This could cause a fire.**
- **Always extinguish matches and cigarettes before putting them into the ashtray, and then close the ashtray securely. If you keep the ashtray open, the fire of the cigarette may spread to another cigarette butt and start a fire.**
- **Do not put flammable material in the ashtray.**
- **Do not leave a lot of cigarette butts in the ashtray.**

NOTE

Particles of ash and tobacco will accumulate around the hinges of the ashtray’s inner lid. Clean them off using a toothbrush or a similar narrow-ended implement.


– CONTINUED –

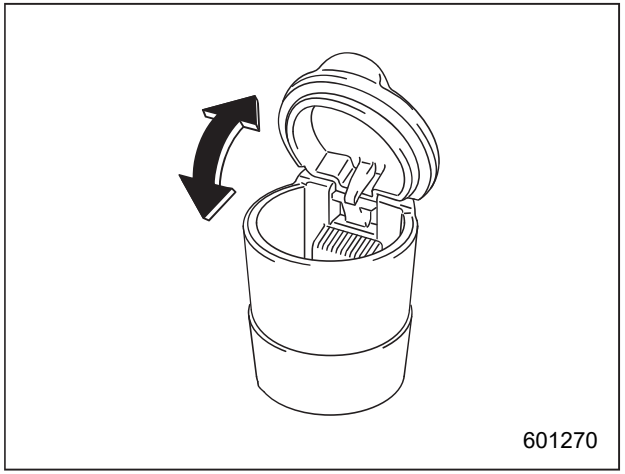
601270

The portable ashtray can be installed in each cup holder or bottle holder. For the locations of the cup holders, refer to "Cup Holder and Console Tray" ☞P202. For the locations of the bottle holders, refer to "Bottle Holders" ☞P203.

When using the ashtray, open the lid of the ashtray. Fully close the lid after using the ashtray to help reduce residual smoke.


6-8. Floor Mat

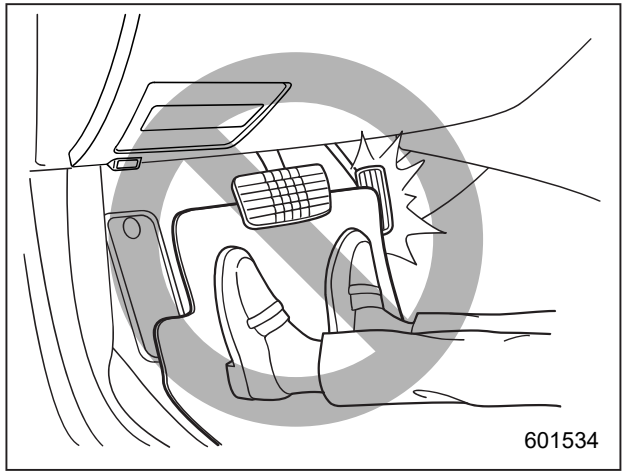
601534


⚠ CAUTION

If the floor mat slips forward and interferes with the movement of the pedals during driving, it could cause an accident. Observe the following precautions to prevent the floor mat from slipping forward.

- **Be sure to use a genuine SUBARU floor mat designed with grommets in the correct locations.**
- **Make sure that the driver's floor mat is placed back in its proper location and is correctly secured on its retaining pins.**
- **Do not use more than one floor mat.**

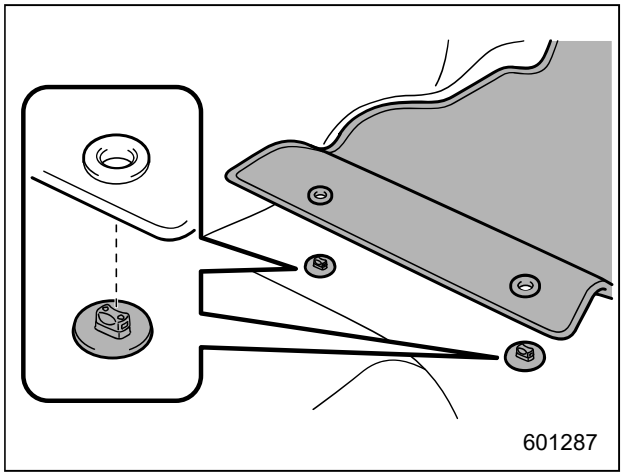
601287

1. Insert the retaining hooks (clips) into the floor mat eyelets.

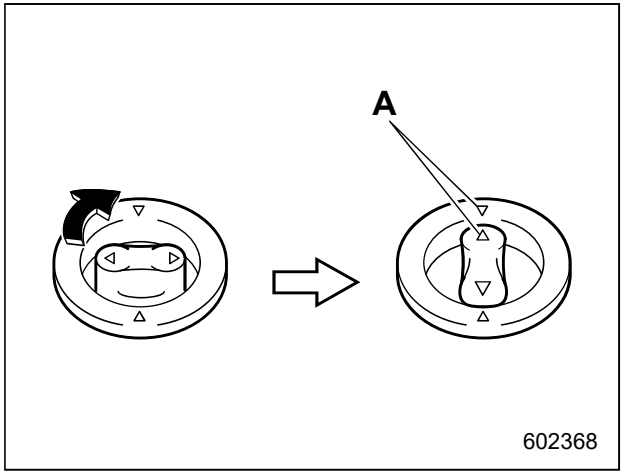


602368

2. Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

A: Always align the "△" marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration. For details on the fixing procedure, refer to the instructions supplied with the floor mat.

6-9. Under-Floor Storage Compartment (models with the flat tire repair kit)

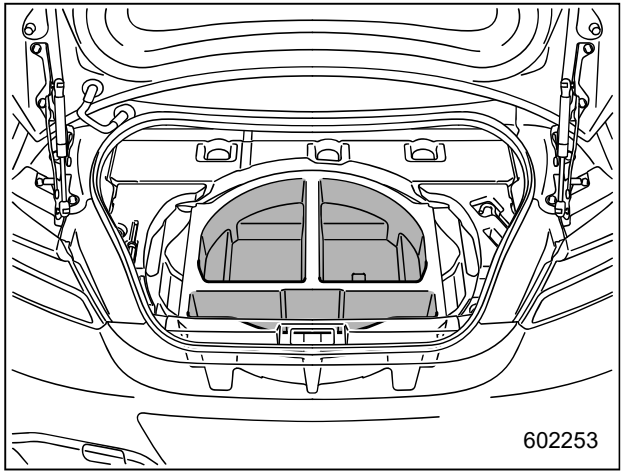

The subfloor storage compartment is located under the floor of the trunk and can be used to store small items. To open the lid, pull the tab or handle up.

NOTE

When storing a flat tire, put the subfloor storage in the trunk.

⚠ CAUTION

- **Always keep the lid of the subfloor storage compartment closed while driving to reduce the risk of injury in the event of sudden stop or an accident.**
- **Do not store spray cans, containers with flammable or corrosive liquids or any other dangerous items in the subfloor storage compartment.**

7-1. Fuel.....211
Fuel Requirements.....211
Fuel Filler Lid and Cap.....212
7-2. Preparing to Drive.....215
7-3. Starting and Stopping Engine.....216
Safety Precautions.....216
Operating Range for Push-Button Start System.....216
General Precautions When Starting Engine.....216
Starting Engine.....217
Stopping Engine.....219
When Access Key Fob Does Not Operate Properly.....219
Steering Lock.....219
7-4. Manual Transmission.....220
Shifting Speeds.....221
Driving Tips.....222
7-5. Automatic Transmission.....222
Select Lever.....223
Adaptive Control.....224
Shift Lock Function.....225
Selection of Manual Mode.....226
Driving Tips.....227
7-6. Driving Mode Select Switch (If Equipped).....228
Normal Mode.....228
Sport Mode.....228
Snow Mode.....228
Driving Mode Select Switch.....228
7-7. Active Sound Control.....229
7-8. Power Steering.....229
7-9. Braking.....230
Braking Tips.....230
Brake System.....231
Disc Brake Pad Wear Warning Indicators.....232
7-10.ABS (Anti-Lock Brake System).....232
ABS Self-Check.....233
ABS Warning Light.....233
7-11.Electronic Brake Force Distribution (EBD) System.....233
EBD System Malfunctions.....234
7-12.Vehicle Stability Control (VSC)/ TRC System.....234
Vehicle Stability Control (VSC) System.....234
TRC System.....235
Vehicle Stability Control (VSC) System Monitor.....236
Vehicle Stability Control (VSC) OFF Switch.....236
7-13.TRACK Mode.....238
TRACK Mode.....238
Selecting TRC Mode and Vehicle Stability Control (VSC) Mode.....239
7-14.Tire Pressure Monitoring System (TPMS) (If Equipped).....239
TPMS Screen.....241
Initializing the Tire Pressure Monitoring System.....241
How to Initialize the Tire Pressure Monitoring System (If Equipped).....241
If You Press the Tire Pressure Monitoring Reset Switch Accidentally.....242
Initialization Procedure.....242
When Initialization of the Tire Pressure Monitoring System has Failed.....242
Registering ID Codes.....242
Changing the ID code set.....242
7-15.Parking Your Vehicle.....243
Parking Brake.....243

Parking Tips....244
7-16.Hill Start Assist System....244
To Activate/Deactivate the Hill Start Assist System....246
Hill Start Assist Indicator Light....247
7-17.Cruise Control (Models without the EyeSight system)....247
To Set Cruise Control....248
To Temporarily Cancel the Cruise Control....249
To Turn Off the Cruise Control....249
To Change the Cruising Speed....250
Cruise Control Indicator Light....250
7-18.Rear View Camera....251
How to Use the Rear View Camera....252
Viewing Range on the Screen....252
Help Lines....253
7-19.Subaru Rear Vehicle Detection (SRVD) (If Equipped)....255
System Features....256
System Operation....258
SRVD Approach Indicator Light/ Warning Buzzer....259
SRVD OFF Indicator....261
SRVD Warning Indicator....261
To Turn On/Off the SRVD....262
Handling of Radar Sensors....262
7-20.Reverse Automatic Braking (RAB) System (If Equipped)....263
Reverse Automatic Braking (RAB) System Overview....264
Operating Conditions....265
Sonar Audible Alarm Function....268
Automatic Braking Function Operation....270
Canceling the Reverse Automatic Braking (RAB) System Operation....272
Reverse Automatic Braking (RAB) System ON/OFF Setting....272
RAB Warning Indicator....273
Handling of the Sonar Sensors....273

7-1. Fuel

■ Fuel Requirements

⚠ CAUTION

- **Use of a fuel which is low in quality or use of an inappropriate fuel additive may cause damage to the engine and/or fuel system.**
- **Do not let fuel spill on the exterior surfaces of the vehicle. Because fuel may damage the paint, be sure to wipe off any spilled fuel quickly. Paint damage caused by spilled fuel is not covered under the SUBARU Limited Warranty.**
- **The neck of the fuel filler pipe is designed to accept only an unleaded petrol filler nozzle. Under no circumstances should leaded petrol be used because it will damage the emission control system and may impair driveability and fuel economy. Also, this can increase maintenance costs.**
- **Do not use the methanol blended petrol such as M15, M85, M100. The use of petrol containing methanol may cause engine damage or failure.**
- **Bioethanol fuel sold under names such as "E50" or "E85" and fuel containing a large amount of ethanol should not be used. Your vehicle can use ethanol blended petrol with up to 10% maximum ethanol content. The use of fuel with more than 10% ethanol content (E10) will damage the vehicle's fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, we recommend that you consult your SUBARU dealer.**

▼ For Australia

▽ Fuel type

Unleaded petrol only.

▽ Required Research Octane Number (RON)

98 or higher is recommended.

For optimum engine performance and driveability, it is recommended that you use premium grade unleaded petrol.

▽ Use of ethanol blended petrol

SUBARU allows the use of ethanol blended petrol if the ethanol content is up to 10%. Make sure that the ethanol blended petrol to be used has a Research Octane Number that follows the above.

▼ For Europe

▽ Fuel type

Unleaded petrol only.


▽ Required Research Octane Number (RON)

98 or higher is recommended.

If unleaded petrol with an octane rating of 98 or higher is not available, unleaded petrol with an octane rating of 95 or higher may be used.

– CONTINUED –

▽ **Use of ethanol blended petrol**

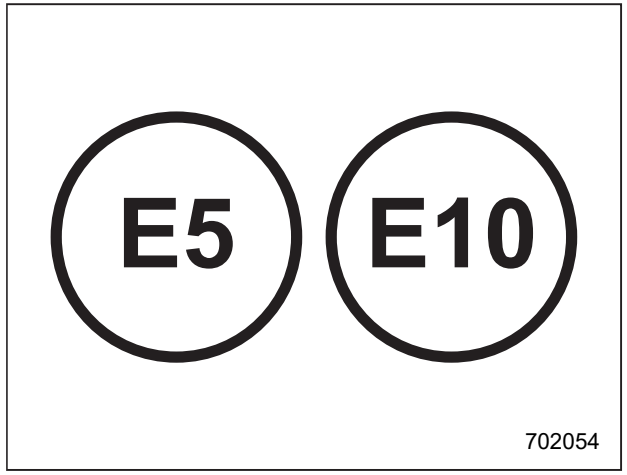

When you find these types of fuel labels at the petrol station, use only the fuel with one of the above labels.

SUBARU allows the use of ethanol blended petrol if the ethanol content is up to 10%. Make sure that the ethanol blended petrol to be used has a Research Octane Number that follows the above.

▼ **For Other areas**

▽ **Fuel type**

Unleaded petrol only.

▽ **Required Research Octane Number (RON)**

98 or higher is recommended.

If unleaded petrol with an octane rating of 98 or higher is not available, unleaded petrol with an octane rating of 95 or higher may be used.

▽ **Use of ethanol blended petrol**


SUBARU allows the use of ethanol blended petrol if the ethanol content is up to 10%. Make sure that the ethanol blended petrol to be used has a Research Octane Number that follows the above.

▼ **In areas where the impurity content in the fuel is high**

Add **a bottle** of genuine SUBARU fuel additive to the fuel every 15,000 km (9,000 miles). For further details refer to an authorized SUBARU dealer.

■ Fuel Filler Lid and Cap

▼ **Locations of the fuel filler lid**

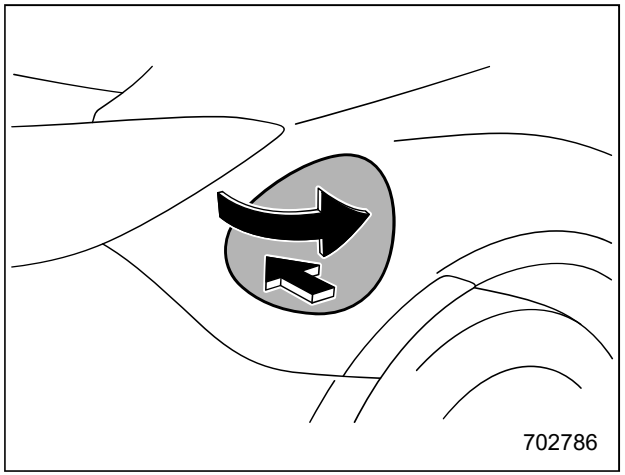

▼ **Refueling**

Only one person should be involved in refueling. Do not allow others to approach the area of the vehicle near the fuel filler pipe while refueling is in progress.

Be sure to observe any other precautions that are posted at the service station.


1. Stop the vehicle, turn the ignition switch to the “OFF” position and turn off all the other electrical components.
2. Push the rear side of the fuel filler lid. If the fuel filler lid is locked, perform one of the operations below.
   – Press the “” button on the key fob.

– Press the unlock side of the power door locking switch.

3. The fuel filler lid opens automatically. Open it further by hand.

⚠ WARNING

Before opening the fuel filler cap, first touch the vehicle body or a metal portion of the fuel pump or similar object to discharge any static electricity that may be present on your body. If your body is carrying an electrostatic charge, there is a possibility that an electric spark could ignite the fuel, which could burn you. To avoid acquiring a new static electric charge, do not get back into the vehicle while refueling is in progress.

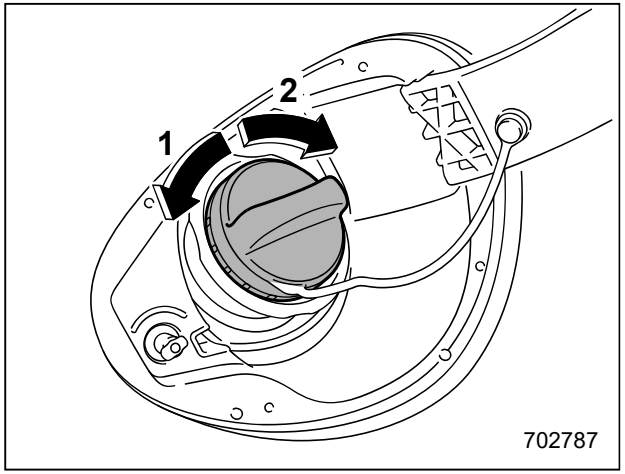


1) Open
2) Close

4. Remove the fuel filler cap by turning it slowly counterclockwise.

⚠ WARNING

- **Fuel vapor is highly flammable. Before refueling, always turn the ignition switch to the "OFF" position first and then close all vehicle doors and windows. Make sure that there are no lighted cigarettes, open flames or electrical sparks in the adjacent area. Only handle fuel outdoors. Quickly wipe up any spilled fuel.**
- **When opening the cap, grasp it firmly and turn it slowly to the left. Do not remove the cap quickly. Fuel may be under pressure and spray out of the fuel filler neck, especially in hot weather. If you hear a hissing sound while you are removing the cap, wait for the sound to stop and then slowly open the cap to prevent fuel from spraying out and creating a fire hazard.**

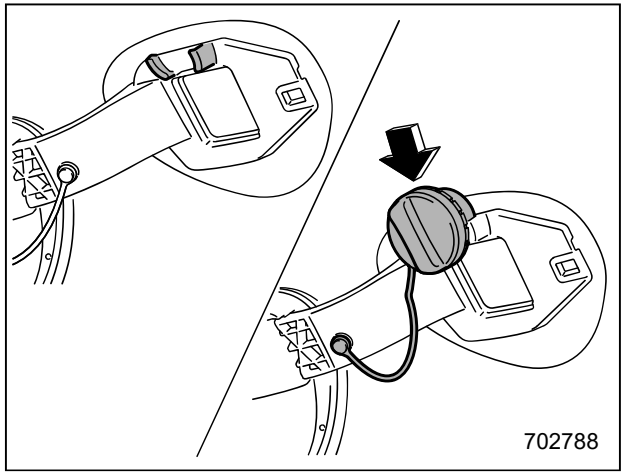

5. Set the fuel filler cap on the cap holder inside the fuel filler lid.

– CONTINUED –

⚠ WARNING

- **When refueling, insert the fuel nozzle securely into the fuel filler pipe. If the nozzle is lifted or not fully inserted, its automatic stopping mechanism may not function, causing fuel to overflow the tank and creating a fire hazard.**
- **Stop refueling when the automatic stop mechanism on the fuel nozzle activates. If you continue to add fuel, temperature changes or other conditions may cause fuel to overflow from the tank and create a fire hazard.**

6. Stop filling the tank after the fuel filler pump automatically stops. Do not add any more fuel.
7. Put the cap back on and turn it clockwise until you hear a clicking noise. Be certain not to catch the tether under the cap while tightening.

⚠ CAUTION

Make sure that the cap is tightened until it clicks to prevent fuel spillage in the event of an accident.

8. Close the fuel filler lid completely.

⚠ CAUTION

If you spill any fuel on the painted surface, rinse it off immediately. Otherwise, the painted surface could be damaged.

NOTE

- **You will see the "⛽▶" sign in the fuel gauge. This indicates that the fuel filler lid is located on the right side of the vehicle.**
- **To lock the fuel filler lid, perform one of the operations below. However if these operations are performed when the fuel filler lid is open, the fuel filler lid will not lock when it is subsequently closed.**
  - **Press the "🔒" button on the key fob.**
  - **Press the lock side of the power door locking switch.**


⚠ CAUTION

- **Never add any cleaning agents to the fuel tank. The addition of a cleaning agent may cause damage to the fuel system.**


- **After refueling, turn the cap to the right until it clicks to ensure that it is fully tightened. If the cap is not securely tightened, fuel may leak out while the vehicle is being driven or fuel spillage could occur in the event of an accident, creating a fire hazard.**
- **Do not let fuel spill on the exterior surfaces of the vehicle. Because fuel may damage the paint, be sure to wipe off any spilled fuel quickly. Paint damage caused by spilled fuel is not covered under the SUBARU Limited Warranty.**
- **Always use a genuine SUBARU fuel filler cap. If you use the wrong cap, it may not fit or have proper venting and your fuel tank and emission control system may be damaged. It could also lead to fuel spillage and a fire.**
- **Immediately put fuel in the tank whenever the low fuel warning light illuminates. Engine misfires as a result of an empty tank could cause damage to the engine. Continuing to operate your vehicle at an extremely low fuel level may result in a reduction of engine performance.**

▼ If the fuel filler lid cannot be opened

If the fuel filler lid cannot be opened due to a malfunction or a dead battery, it can be opened from the trunk.

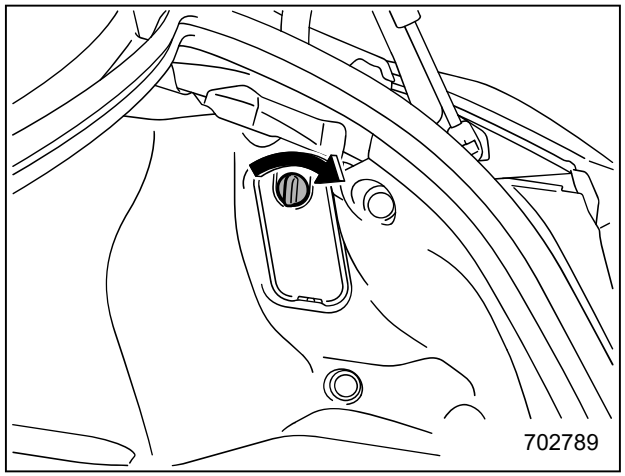

1. Remove the access cover at the right-side of the trunk trim.

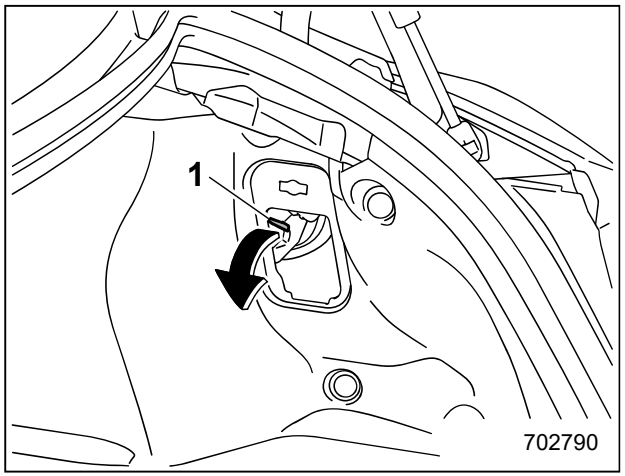

1) Lever

2. Push the yellow lever to unlock the fuel filler lid.

7-2. Preparing to Drive

You should perform the following checks and adjustments every day before you start driving.

1. Check that all windows, mirrors, and lights are clean and unobstructed.
2. Check the appearance and condition of the tires. Also check tires for proper inflation.
3. Look under the vehicle for any sign of leaks.
4. Check that no small animals enter the engine compartment.
5. Check that the hood and trunk are fully closed.
6. Check the adjustment of the seat.
7. Check the adjustment of the inside and outside mirrors.
8. Fasten your seatbelt. Check that your passengers have fastened their seatbelts.
9. Check the operation of the warning and indicator lights when the ignition switch is turned to the “ON” position.
10. Check the gauges, indicator and warning lights after starting the engine.

– CONTINUED –

⚠ CAUTION

Small animals trapped in the cooling fan and belt of the engine may result in a malfunction. Check that no small animal enters the engine compartment and under the vehicle before starting the engine.

NOTE

Engine oil, engine coolant, brake fluid, washer fluid and other fluid levels should be checked daily, weekly or at fuel stops.

7-3. Starting and Stopping Engine

■ Safety Precautions

Refer to "Safety Precautions" ☞P92.

■ Operating Range for Push-Button Start System

Refer to "Operating Range for Push-Button Start System" ☞P119.

■ General Precautions When Starting Engine

⚠ WARNING

- **Never start the engine from outside the vehicle. It may result in an accident.**
- **Do not leave the engine running in locations with poor ventilation, such as a garage and indoors. The exhaust gas may enter the vehicle or indoors, and it may result in carbon monoxide poisoning.**
- **Do not start the engine near dry foliage, paper, or other flammable substances. The exhaust pipe and exhaust emissions can create a fire hazard at high temperatures.**

⚠ CAUTION

- **If the engine is stopped during driving, the catalyst may overheat and burn.**
- **When starting the engine, be sure to sit in the driver's seat.**

NOTE

- **It may be difficult to start the engine when the battery has been disconnected and reconnected (for maintenance or other purposes). This difficulty is caused by the electronically controlled throttle's self-diagnosis function. To overcome it, keep the ignition switch in the "ON" position for approximately 10 seconds before starting the engine.**
- **Avoid rapid racing and rapid acceleration immediately after the engine has started.**
- **After the engine starts, the engine speed will be kept high.**

- On rare occasions, it may be difficult to start the engine depending on the fuel and the usage condition (repeated driving of a distance in which the engine has not warmed up sufficiently). In such a case, it is recommended that you change to a different brand of fuel.
- On rare occasions, transient knocking may be heard from the engine when the accelerator is operated rapidly such as a rapid start-up and a rapid acceleration. This is not a malfunction.
- The engine starts more easily when the headlights, air conditioner and rear window defogger are turned off.

■ Starting Engine

⚠ WARNING

- There are some general precautions when starting the engine. Carefully read the precautions described in "General Precautions When Starting Engine" ☞P216.
- If the steering lock cannot be released after the engine has started, never drive the vehicle. The steering is still locked, and it may result in an accident.

⚠ CAUTION

- If a system malfunction warning message is displayed on the combination meter, there may be a malfunction with the vehicle. We recommend that you contact your SUBARU dealer immediately.
- If a steering lock warning message is displayed on the combination meter after the engine has started, it means that the steering is still locked. While moving the steering wheel right and left, depress the brake pedal, and press the push-button ignition switch.
- Do not continue pressing the push-button ignition switch for more than 10 seconds. Doing so could cause a malfunction. If the engine does not start, stop pressing the push-button ignition switch. Instead, press the push-button ignition switch without depressing the clutch pedal (MT models) or the brake pedal (AT models) to switch the power status to “OFF”. Wait 10 seconds, and then press the push-button ignition switch to start the engine.

NOTE

- When pressing the push-button ignition switch while depressing the clutch pedal (MT models) or the brake pedal (AT models):
  - The engine starter operates for a maximum of 10 seconds and after starting the engine, the starter stops automatically.
  - The engine can be started regardless of the power status.
- If the engine does not start, check the immobilizer indicator light. Then press the push-button ignition switch without depressing the clutch pedal


– CONTINUED –

(MT models) or the brake pedal (AT models) to switch the power to “OFF”.

- If the light had illuminated, try to start the engine again.

- If the light had been off, press the push-button ignition switch while depressing the clutch pedal (MT models) or the brake pedal (AT models) more forcefully.

- **The engine start procedures may not function depending on the radio wave conditions around the vehicle. In such a case, refer to "Starting Engine" ☞P315.**
- **If the vehicle battery is discharged, the steering cannot be unlocked. Charge the battery.**
- **After the engine starts, the engine speed will be kept high.**
- **Do not shift the select lever (AT models) while the starter is cranking.**

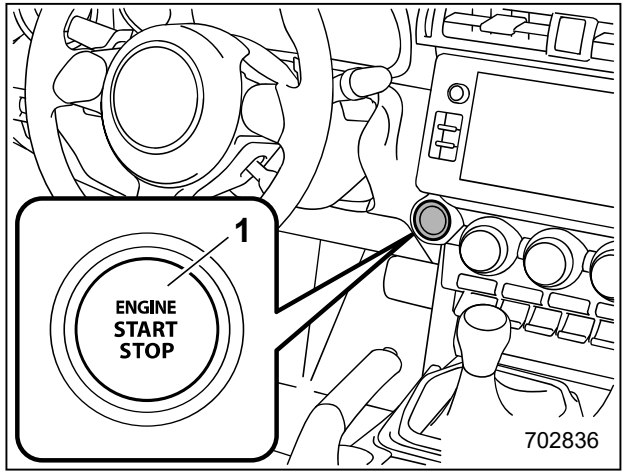

1) Push-button ignition switch

When the push-button ignition switch is pressed while depressing the clutch pedal (MT models) or the brake pedal (AT models), the engine will start. The starting procedure for the engine is as follows.

▼ MT models

1. Carry the access key fob, and sit in the driver’s seat.
2. Apply the parking brake.
3. Shift the shift lever to neutral.
4. Depress the brake pedal and clutch pedal.
5. While depressing the clutch pedal, press the push-button ignition switch.

NOTE

In case the engine does not start by the normal engine start procedure, move the shift lever to the neutral position, and switch the power to “ACC”. Depress the clutch pedal, and press the push-button ignition switch for at least 15 seconds. The engine may start. Only use this engine start procedure in case of emergency.

▼ AT models

1. Carry the access key fob, and sit in the driver’s seat.
2. Apply the parking brake.
3. Make sure the select lever is in the “P” position. The engine can also start when the select lever is in the “N” position, however, for safety reasons, start in the “P” position.
4. Depress the brake pedal.
5. While depressing the brake pedal, press the push-button ignition switch.

NOTE

- **In case the engine does not start by the normal engine start procedure, move the select lever to the “P” position, and switch the power to “ACC”. Depress the brake pedal, and press the push-button ignition switch for at least 15 seconds. The engine may start. Only**

use this engine start procedure in case of emergency.

- **When the engine is not started, the brake pedal may feel stiff. In such a case, depress the brake pedal more forcefully than usual. Press the push-button ignition switch to start the engine.**

■ Stopping Engine

1. Stop the vehicle completely.
2. Move the shift lever to neutral (MT models) or select lever to the “P” position (AT models).
3. Press the push-button ignition switch. The engine will stop, and the power will be switched off.

⚠ WARNING

- **Do not touch the push-button ignition switch during driving.**

  When the push-button ignition switch is operated as follows, the engine will stop.

  –The switch is pressed and held for 2 seconds or longer.

  –The switch is pressed briefly 3 times or more in succession.

  When the engine stops, the brake booster will not function. A greater foot pressure will be required on the brake pedal.

  The power steering system will not operate either. A greater force will be required to steer, and it may result in an accident.

- **If the engine stops during driving, do not operate the push-button ignition switch or open any of the doors until the vehicle is stopped in a safe location. It is dangerous because the steering lock may be activated. Stop the vehicle in a safe place, and we recommend that you contact a SUBARU dealer immediately.**

⚠ CAUTION

For AT models:

- **Do not stop the engine while the select lever is in a position other than the “P” position.**
- **If the engine is stopped while the select lever is in a position other than the “P” position, the power will be in “ACC”. If the vehicle is left in this condition, the battery may be discharged.**

NOTE

Although you can stop the engine by operating the push-button ignition switch, do not stop the engine during driving except in an emergency.

■ When Access Key Fob Does Not Operate Properly

Refer to "Access Key Fob – If Access Key Fob Does Not Operate Properly" ☞P314.


■ Steering Lock

After stopping the engine and any door is opened, the steering wheel will be locked due to the steering lock function.

When the engine is restarted, the steering lock will be automatically released.

– CONTINUED –

▼ When the steering lock cannot be released

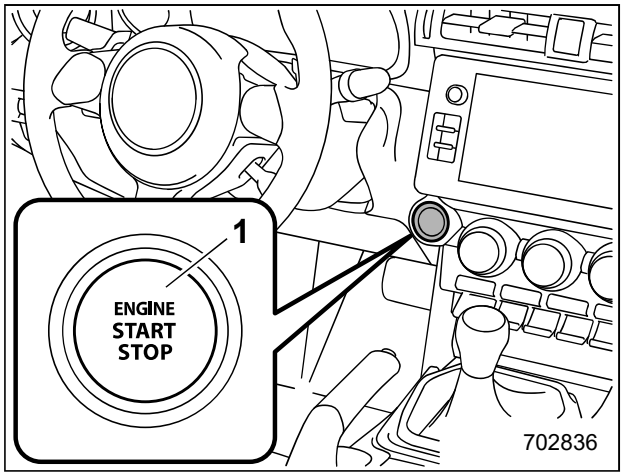

1) Push-button ignition switch

When you cannot restart the engine due to the steering lock, check the status of operation indicator and perform the following steps.


▽ How to released steering lock

1. Check that the shift lever is set in neutral (MT models) or select lever is set in the “P” position (AT models).
2. Depress the brake pedal and keep it.
3. Press the push-button ignition switch while turning the steering wheel left and right.

▽ When the display of warning messages

There may be a malfunction in the steering lock function. Immediately we recommend that you contact your nearest SUBARU dealer.

7-4. Manual Transmission

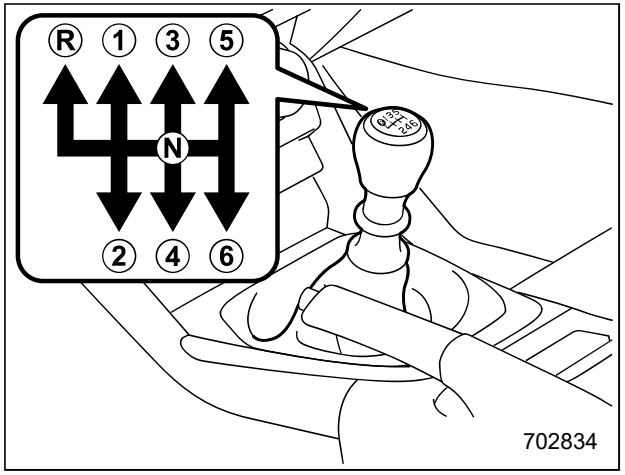


This manual transmission is a completely synchromesh, 6-forward-speed and 1-reverse-speed transmission.

The shift pattern is shown on the shift lever knob.

To change the shift lever position:

1. Depress the clutch pedal.
2. To shift into all positions other than “R”, move the shift lever accordingly.

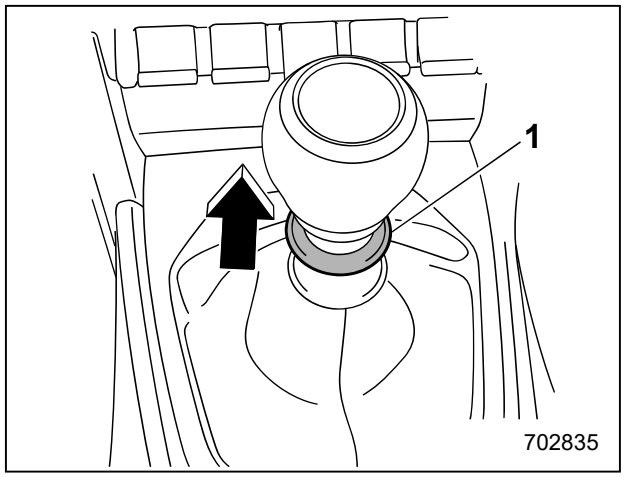

1) Slider

3. To shift into the “R” position, hold up the slider, move the lever to the “R” position, then release the slider.

4. Gradually release the clutch pedal.

If it is difficult to shift into gear, put the transmission in neutral, release the clutch pedal momentarily, and then try again.

⚠ WARNING

- **Do not drive the vehicle with the clutch disengaged (i.e., when the clutch pedal is depressed) or with the shift lever in the neutral position. Engine braking has no effect in either of these conditions and the risk of an accident is consequently increased.**
- **Do not engage the clutch (i.e., release the clutch pedal) suddenly when starting the vehicle. By doing so the vehicle might unexpectedly accelerate or the transmission could malfunction.**

⚠ CAUTION

- **Shift into reverse ONLY when the vehicle has completely stopped. It may cause damage to the transmission to try shifting into reverse when the vehicle is moving.**
- **Do not shift the shift lever without depressing the clutch pedal.**


■ Shifting Speeds

▼ Recommended shifting speeds

The best compromise between fuel economy and vehicle performance during normal driving is ensured by shifting up at the speeds listed in the following table.

Shift up	km/h (mph)
1st to 2nd	20 (13) to 23 (14)
2nd to 3rd	28 (18) to 38 (24)
3rd to 4th	35 (22) to 54 (34)
4th to 5th	42 (26) to 69 (43)
5th to 6th	55 (34) to 83 (52)

▼ Gear shift indicator

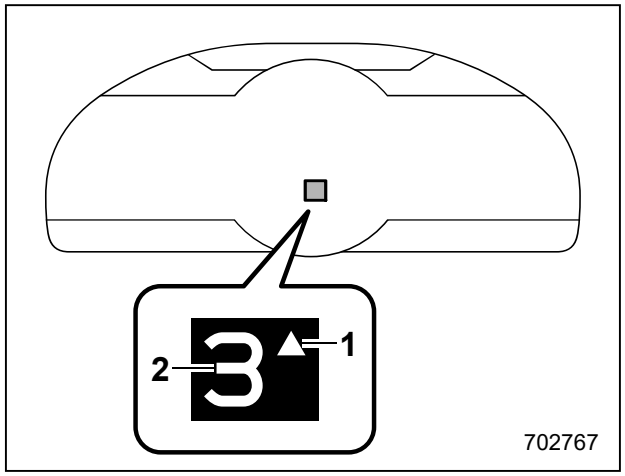

1) Upshift indicator
2) Gear position indicator

The gear position indicator shows the position of the shift lever.

When shifting up is recommended for good fuel economy, the upshift indicator blinks.

The gear shift indicator can be activated or deactivated. The default setting is deactivated. For details, refer to "Settings Display" ☞P150.

– CONTINUED –

■ Driving Tips

⚠ WARNING

When shifting down a gear, ensure that the engine speed does not enter the red zone. Failure to observe this precaution can lead to engine over-revving and this in turn can result in engine damage.

In addition, sudden application of engine brakes when the vehicle is travelling on a slippery surface can lead to wheel locking; as a consequence, control of the vehicle may be lost and the risk of an accident increased.

NOTE

If the accelerator and brake pedals are depressed at the same time, driving torque may be restrained. This is not a malfunction.

Do not drive with your foot resting on the clutch pedal and do not use the clutch to hold your vehicle at a standstill on an upgrade. Either of those actions may cause clutch damage.

Do not drive with your hand resting on the shift lever. This may cause wear on the transmission components.

When it is necessary to reduce vehicle speed due to slow traffic, turning corners, or driving up steep hills, downshift to a lower gear before the engine starts to labor.

On steep downgrades, downshift the transmission to 5th, 4th, 3rd or 2nd gear as necessary; this helps to maintain a safe speed and to extend brake pad life.

In this way, the engine provides a braking effect. Remember, if you “ride” (over use) the brakes while descending a hill, they may overheat and not work properly.

The engine may, on rare occasions, knock when the vehicle rapidly accelerates or rapidly pulls away from a standstill. This phenomenon is not an indication of a problem in your vehicle.

With the exception of cases where sudden acceleration is required, do not drive the vehicle with the pointer of the tachometer inside the red area. Failure to observe this precaution can lead to excessive engine wear and poor fuel economy.

7-5. Automatic Transmission

The automatic transmission is electronically controlled and provides 6 forward speeds and 1 reverse speed. It also has a manual mode.

⚠ WARNING

Do not shift from the “P” or “N” position into the “D” or “R” position while depressing the accelerator pedal. This may cause the vehicle to lurch forward or backward.

⚠ CAUTION

- **Observe the following precautions. Failure to observe these precautions could cause damage to the transmission.**
  - **Shift into the “P” or “R” position only after the vehicle has completely stopped.**
  - **Do not shift from the “D” position into the “R” position or vice versa until the vehicle has completely stopped.**

- **Do not race the engine for more than 5 seconds in any position except the “N” or “P” position when the brake is applied or when chocks are used in the wheels. This may cause the transmission fluid to overheat.**
- **Never move the vehicle rearward by inertia with the select lever set in a forward driving position or move the vehicle forward by inertia with the select lever set in the “R” position. Doing so may result in an unexpected accident or malfunction.**
- **When parking the vehicle, first securely apply the parking brake and then place the select lever in the “P” position. Do not park for a long time with the select lever in any other position as doing so could result in a dead battery.**

NOTE


• When the engine coolant temperature is still low, the transmission will shift at higher engine speeds than when the coolant temperature is sufficiently high in order to shorten the warm-up time and improve driveability. The gearshift timing will automatically shift to the normal timing after the engine has warmed up.

• Immediately after transmission fluid is replaced, you may feel that the transmission operation is somewhat unusual. This results from invalidation of data which the on-board computer has collected and stored in memory to allow the transmission to shift at the most appropriate times for the current condition of your vehicle. Optimized shifting will be restored as the vehicle continues to be driven for a while.

• Place the shift boot to the original position after it is lifted. If the shift lever is operated with the shift boot in the rolled up position, the shift boot may have tension and it may disturb the shift lever operation.

• When the vehicle is idling at high rpm in order to warm up, and the vehicle is on a slippery road, the transmission may automatically shift to 2nd gear for stopping and starting off.

■ Select Lever

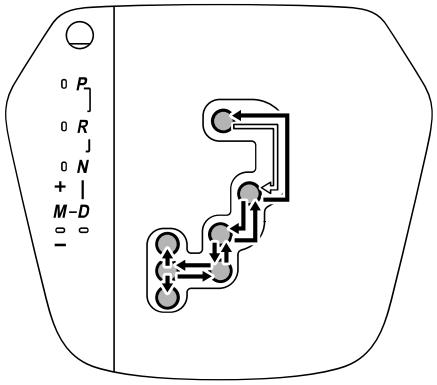

⇨ : Shift with the brake pedal depressed and push-button ignition switch in the “ON” position. When shifting between “P” and “D”, depress the brake pedal and securely stop the vehicle before shifting.

The select lever has four positions, “P”, “R”, “N”, “D” and also has a manual gate for using the manual mode.

NOTE

To protect the engine while the select lever is in the “P” or “N” position, the engine is controlled so that the engine speed may not become too high even if the accelerator pedal is depressed hard.

– CONTINUED –

▼ P (Park)

This position is for parking the vehicle and starting the engine. In this position, the transmission is mechanically locked to prevent the vehicle from rolling freely.

When you park the vehicle, first apply the parking brake, then shift into the “P” position. Do not hold the vehicle with only the mechanical friction of the transmission.

To shift the select lever from the “P” to any other position, you should depress the brake pedal fully then move the select lever. This prevents the vehicle from lurching when it is started.

▼ R (Reverse)

This position is for backing the vehicle. To shift from the “N” to “R” position, stop the vehicle completely then move the lever to the “R” position.

▼ N (Neutral)

This position is for restarting a stalled engine. In this position, the transmission is neutral, meaning that the wheels and transmission are not locked. Therefore, the vehicle will roll freely, even on the slightest incline unless the parking brake or foot brake is applied.

⚠ WARNING

Do not drive the vehicle with the select lever in the “N” (neutral) position. Engine braking has no effect in this condition and the risk of an accident is consequently increased.

▼ D (Drive)

This position is for normal driving. The transmission shifts automatically into a suitable gear according to the vehicle speed and the acceleration you require. Also, while driving up and down a hill, the transmission assists and controls the driving performance and engine braking while corresponding to the road grade.

When more acceleration is required in “D” position, depress the accelerator pedal fully to the floor and hold that position. The transmission will automatically downshift. When you release the pedal, the transmission will return to the original gear position.

To use the manual mode, move the lever from this position into the manual gate.

If one of the shift paddles behind the steering wheel is operated while driving in the “D” position, the transmission will temporarily switch to the manual mode. In this mode, you can shift into any gear position using the shift paddles. For details about the manual mode, refer to "Selection of Manual Mode" ☞P226. Once the vehicle speed stabilizes, the transmission will switch from the manual mode back to the “D” position for normal driving.

▽ While climbing a grade

When driving up a hill, undesired upshift is prevented from taking place when the accelerator is released. This minimizes the chance of subsequent downshifting to a lower gear when accelerating again. This prevents repeated upshifting and downshifting resulting in a smoother operation of the vehicle.

NOTE

The transmission may downshift, depending on the way the accelerator pedal is depressed to accelerate the vehicle again.

■ Adaptive Control

In order to realize smoother driving while driving in “D” position, an appropriate gear is automatically selected by limiting upshifting and performing downshifting operations according to driver operations and driving conditions.

- When driving uphill, prevents unnecessary upshifting and downshifting.
- When driving downhill, downshifting is performed at engine speeds higher than usual.
- When driving on curves, prevents upshifting even when accelerating.
- When the brake pedal is depressed firmly, downshifting is automatically performed, fully utilizing engine braking.
- When the accelerator pedal is suddenly released, prevents upshifting.

NOTE

Adaptive control operates automatically when the select lever is in the “D” position. The function is canceled when the paddle shift levers are operated or the select lever is shifted to the “M” position.

■ Shift Lock Function

The shift lock function helps prevent the improper operation of the select lever.

- The select lever cannot be operated unless the ignition switch is turned to the “ON” position and the brake pedal is depressed.
- The select lever cannot be moved from the “P” position to any other position before the brake pedal is depressed. Depress the brake pedal first, and then operate the select lever.
- Only the “P” position allows you to turn the push-button ignition switch to the “OFF” position.

▼ Shift lock release


If the select lever cannot be operated, turn the ignition switch back to the “ON” position then move the select lever to the “P” position with the brake pedal depressed.

If the select lever does not move after performing the above procedure, refer to "Shift lock release using the shift lock release portion" ☞P225.


▼ Shift lock release using the shift lock release portion

Perform the following procedure to release the shift lock.

1. Apply the parking brake and stop the engine.

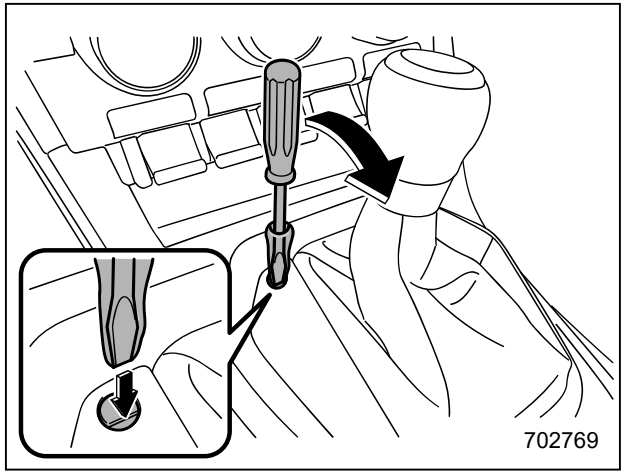

2. Using a flathead screwdriver, remove the cover. To prevent damage to the vehicle, wrap the tip of the flathead screwdriver with a rag, etc.

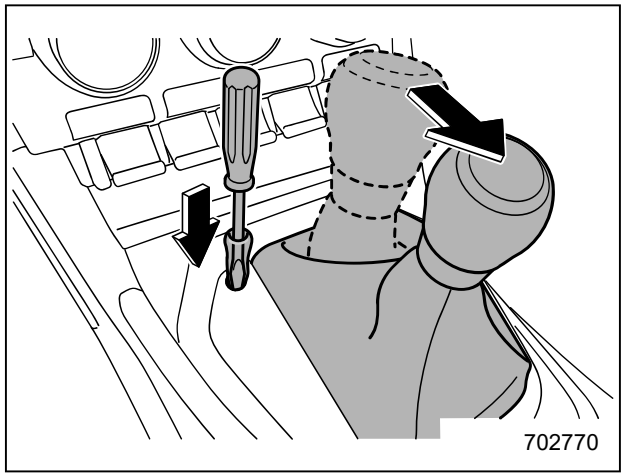

3. While depressing the brake pedal, insert the screwdriver into the hole, press the shift lock release portion using the

– CONTINUED –

screwdriver, and then move the select lever.


If the select lever does not move after performing the above procedure, the shift lock system may be malfunctioning. We recommend that you contact a SUBARU dealer for an inspection as soon as possible.

■ Selection of Manual Mode

▼ Selecting gears in manual mode

Shift the select lever to the “M” position to change to manual mode.

When the upshift/downshift indicators are illuminated, the vehicle can be driven in a selected gear by shifting the select lever toward “-” or “+” or operating the “-” or “+” shift paddle.

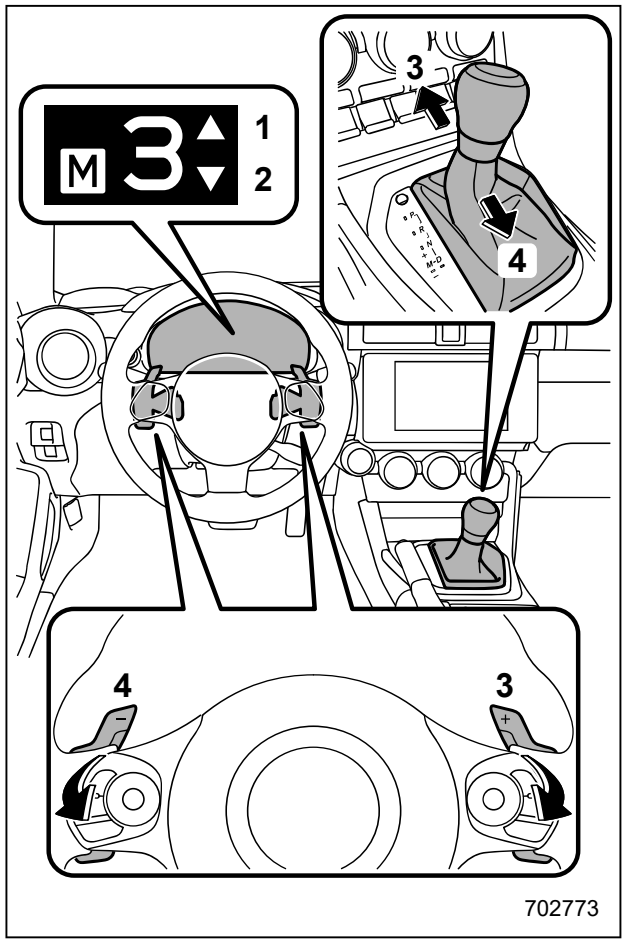

1) Upshift indicator
2) Downshift indicator
3) Upshift
4) Downshift

The gear changes once each time the select lever or a shift paddle is operated.

The selected gear, from “M1” to “M6”, will be displayed on the combination meter.

When in manual mode, the gear will not change unless the select lever or a shift paddle is operated, except in the following situations.

- When the vehicle speed drops (downshift only)
- When the engine oil temperature is high and the engine speed approaches close to the red zone

If an upshift is attempted while the vehicle speed is low, the gear will not be changed.

⚠ CAUTION

Do not place or hang anything on the shift paddles. Doing so may result in accidental gear shifting.


NOTE

- **If a downshift is attempted at a vehicle speed where a downshift is not possible (when the engine speed would enter the red zone if a downshift is performed), the downshift warning buzzer will sound to inform the driver that a downshift cannot be performed.**
- **You can perform a skip-shift (for example, from 4th to 2nd) by operating the shift paddle twice in rapid succession.**

• **If the temperature of the transmission fluid becomes too high, the "AT OIL TEMP" warning light will illuminate. Immediately stop the vehicle in a safe place and let the engine idle until the warning light turns off.**

▼ Temporary manual mode driving

While driving with the select lever in "D", if a shift paddle is operated, the gear can temporarily be selected. In this case, "M" and the selected gear number will be displayed on the combination meter. (If the engine speed approaches close to the red zone, an upshift will automatically be performed.)

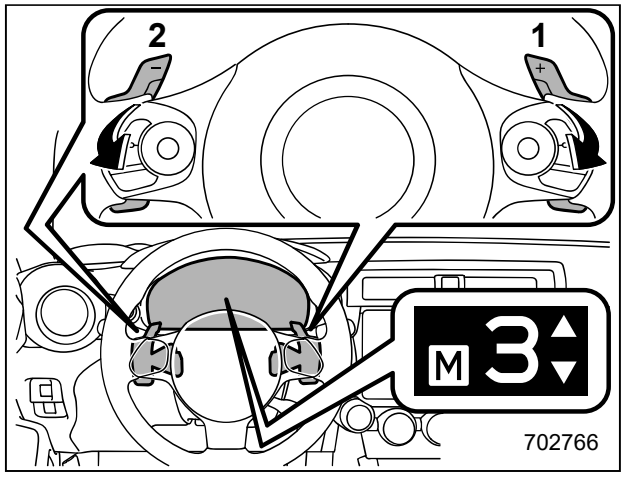

1) Upshift
2) Downshift

The selected gear, from "M1" to "M6", will be displayed on the combination meter.

NOTE

• **In the following situations, temporary manual mode will be cancelled.**
- **When the vehicle speed is low**
- **When the accelerator pedal is depressed continuously for a certain amount of time or more**
- **When the accelerator pedal is depressed heavily**
- **When the select lever is shifted to a position other than "D"**
- **When the "+" shift paddle switch is held down for a period of time**

When a downshift is attempted at a vehicle speed where a downshift is not possible (when the engine speed would enter the red zone if a downshift is performed), the downshift warning buzzer will sound to inform the driver that a downshift cannot be performed.

■ Driving Tips

NOTE

If the accelerator and brake pedals are depressed at the same time, driving torque may be restrained. This is not a malfunction.

• On a road surface where there is a risk of wheelspin (for example, a snow- or gravel covered road), you can start off from a standstill safely and easily by first selecting Snow mode.

• Always apply the foot or parking brake when the vehicle is stopped in the "D" or "R" position.

• Make sure to apply the parking brake when parking your vehicle. Do not hold the vehicle with only the transmission.

• Do not keep the vehicle in a stationary position on an uphill grade by using the "D" position. Use the brake instead.

• The engine may, on rare occasions, knock when the vehicle rapidly accelerates or rapidly pulls away from a standstill. This phenomenon does not indicate a malfunction.


7-6. Driving Mode Select Switch (If Equipped)

By pressing the driving mode select switch the following modes can be selected to suit driving and usage conditions:

■ Normal Mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for normal driving.

■ Sport Mode

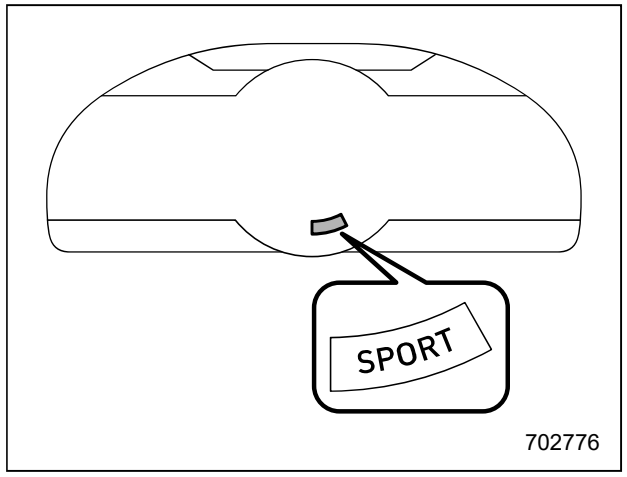

The Sport mode indicator light comes on.


Use Sport mode for sporty driving or when driving in mountainous regions with lots of curves.

If the mode is changed to Sport mode while driving with the select lever in the “D” position, the selected gear, from “D1” to “D6”, will be displayed on the meter.

NOTE

- **In Sport mode, lower gears are used and gears change at a higher engine speed.**
- **Sport mode cannot be changed to when driving with adaptive cruise control/cruise control activated.**
- **While the engine is cool, you cannot change to Sport mode.**
- **If tire slip is detected on a slippery road surface while in Sport mode, Sport mode may be cancelled.**

■ Snow Mode

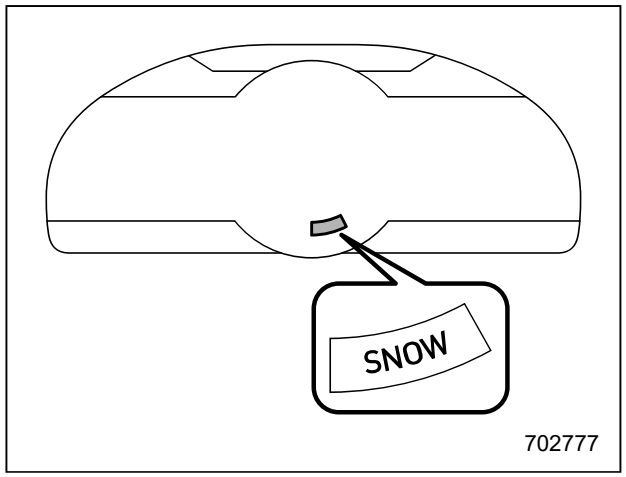


The Snow mode indicator light comes on.

Use Snow mode for accelerating and driving on slippery road surfaces such as snow.

NOTE

To prevent slipping, 1st gear cannot be selected when in Snow mode.

■ Driving Mode Select Switch

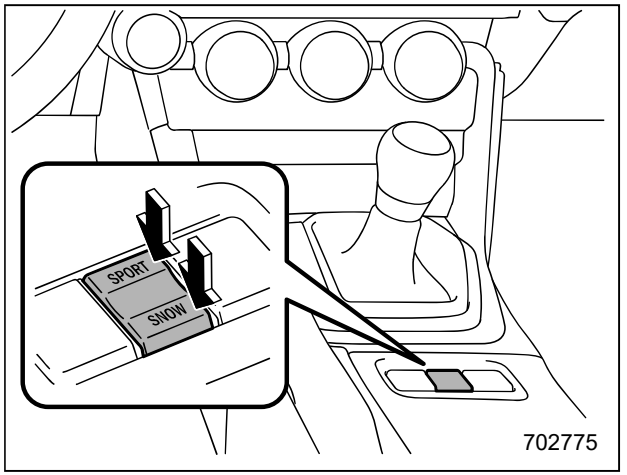

- To select the Sport mode, press the SPORT switch.
- To select the Snow mode, press the SNOW switch.

To cancel Sport mode or Snow mode, press the same side of the switch again.

NOTE

In the following situations, the driving mode will automatically change to normal mode:

- **When the engine is turned off after driving in Sport mode or Snow mode.**
- **When adaptive cruise control/cruise control is activated while driving in Sport mode.**
- **If a malfunction occurs in the engine or automatic transmission electrical control system while Sport mode or Snow mode is selected.**
- **When in Sport mode and the idling speed is high during warm-up or when the road surface is slippery and stopping/starting off is automatically performed in second gear.**

7-7. Active Sound Control


The active sound control provides dynamic engine sounds. When driving with Sport mode selected, the engine sounds will be particularly loud.

NOTE

The operational/non-operational setting of the Active Sound Control can be changed by a SUBARU dealer. We recommend that you contact your SUBARU dealer for details.

When the driving mode is changed, the sound of the active sound control will be stopped for approximately 1 second, this is not a malfunction.

7-8. Power Steering

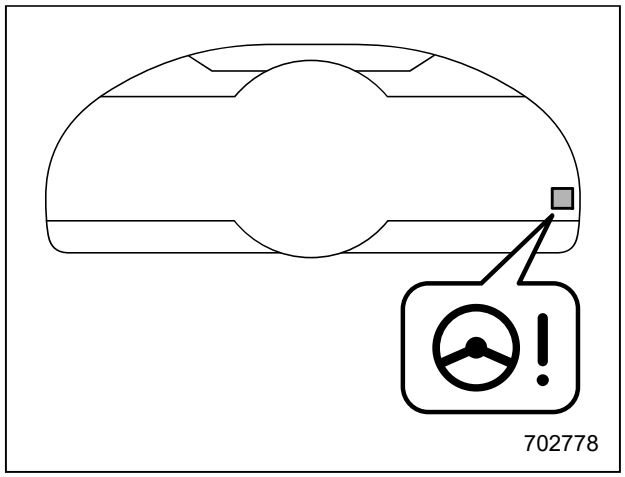

Power steering warning light

The vehicle is equipped with an electric power steering system. When the ignition switch is turned to the “ON” position, the power steering warning light on the combination meter illuminates to inform the driver that the warning system is functioning properly. Then, if the engine started, the warning light turns off to inform the driver that the steering power assist is operational.

– CONTINUED –

⚠ CAUTION

While the power steering warning light is illuminated, there may be more resistance when the steering wheel is operated. Drive carefully to the nearest SUBARU dealer and we recommend that you have the vehicle inspected immediately.

NOTE

If the steering wheel is operated in the following ways, the power steering control system may temporarily limit the power assist in order to prevent the system components, such as the control computer and drive motor, from overheating.

- **The steering wheel is operated frequently and turned sharply while the vehicle is maneuvered at extremely low speeds, such as while frequently turning the steering wheel during parallel parking.**
- **The steering wheel remains in the fully turned position for a long period of time.**

At this time, there will be more resistance when steering. However this is not a malfunction. Normal steering force will be restored after the steering wheel is not operated for a while and the power steering control system has an opportunity to cool down. However, if the power steering is operated in a non-standard way which causes power assist limitation to occur too frequently, this may result in a malfunction of the power steering control system.

7-9. Braking

■ Braking Tips

⚠ WARNING

Never rest your foot on the brake pedal while driving. This can cause dangerous overheating of the brakes and needless wear on the brake pads.

▼ When the brakes get wet

When driving in rain or after washing the vehicle, the brakes may get wet. As a result, brake stopping distance will be longer. To dry the brakes, drive the vehicle at a safe speed while lightly depressing the brake pedal to heat up the brakes.

▼ Use of engine braking

Remember to make use of engine braking in addition to foot braking. When descending a grade, if only the foot brake is used, the brakes may start working improperly because of brake fluid overheating, caused by overheated brake pads. To help prevent this, shift into a lower gear to get stronger engine braking.

▼ Braking when a tire is punctured

Do not depress the brake pedal suddenly when a tire is punctured. This could cause a loss of control of the vehicle. Keep driving straight ahead while gradually reducing speed. Then slowly pull off the road to a safe place.

■ Brake System

▼ Two separate circuits

Your vehicle has a dual circuit brake system. Each circuit works diagonally across the vehicle. If one circuit of the brake system should fail, the other half of the system still works. If one circuit fails, the brake pedal will go down much closer to the floor than usual and you will need to press it down much harder. And a much longer distance will be needed to stop the vehicle.

▼ Brake booster

The brake booster uses vacuum pump system to assist braking force. Do not turn off the engine while driving because that will turn off the brake booster, resulting in poor braking power.

The brakes will continue to work even when the brake booster completely stops functioning. If this happens, however, you will have to depress the pedal much harder than normal and the braking distance will increase.

▼ Supplemental booster function when vacuum pressure fails

While the ignition switch is turned “ON” and the engine is running, the supplemental booster function operates when the brake booster performance is decreased due to insufficient vacuum boost.

When the brake pedal is depressed while the supplemental booster function is operating, an operation sound and brake pedal vibration may be generated. This is not a malfunction.

▼ Brake assist system

⚠ WARNING

Do not be overconfident about the brake assist. It is not a system that brings more braking ability to the vehicle beyond its braking capability. Always use the utmost care when driving regarding vehicle speed and safe distance.

⚠ CAUTION

When you need to brake suddenly, continue depressing the brake pedal strongly to bring the effect of the brake assist.

Brake assist is a driver assistance system. It assists the brake power when the driver cannot depress the brake pedal strongly and the brake power is insufficient.

Brake assist generates the brake power according to the speed at which the driver depresses the brake pedal.

NOTE

When you depress the brake pedal strongly or suddenly, the following phenomena occur. However, even though these occur, they do not indicate any malfunctions, and the brake assist system is operating properly.

- **You might feel that the brake pedal is applied by lighter force and generates a greater braking force.**
- **You might hear the sound of ABS operating from the engine compartment.**

▼ Emergency Stop Signal

The Emergency Stop Signal is a function that automatically blinks the hazard

– CONTINUED –

warning flasher in short intervals when the brake pedal is depressed suddenly. The rapid flashing of the hazard warning flasher cautions the vehicles behind and reduces the possibility of a collision.

⚠ CAUTION

The Emergency Stop Signal is activated in priority over the turn signal.

▽ **Operating condition**

The Emergency Stop Signal activates when all of the following conditions are met.

- The hazard warning flasher is off.
- The vehicle speed is 60 km/h (37 mph) or more.
- The system judges that sudden braking has occurred based on the vehicle deceleration when the brake pedal is depressed.


▽ **Automatic cancel**

The Emergency Stop Signal is canceled in either of the following circumstances.

- The hazard warning flasher is turned on.
- The brake pedal is released.
- The system judges that sudden braking has ended, based on the vehicle deceleration.

The operational/non-operational setting of the Emergency Stop Signal can be changed by a SUBARU dealer. For details, we recommend that you contact your SUBARU dealer.

■ Disc Brake Pad Wear Warning Indicators

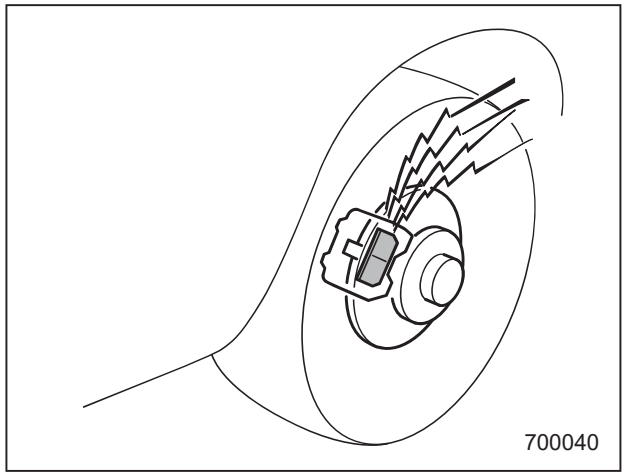

The disc brake pad wear warning indicators on the disc brakes give a warning noise when the brake pads are worn.

If a squeaking or scraping noise is heard from the disc brakes while braking, immediately we recommend that you have your vehicle inspected by the nearest SUBARU dealer.

7-10. ABS (Anti-Lock Brake System)

⚠ WARNING

Always use the utmost care in driving – overconfidence because you are driving with an ABS equipped vehicle could easily lead to a serious accident.

⚠ CAUTION

- **The ABS does not always decrease stopping distance. You should always maintain a safe following distance from other vehicles.**
- **When driving on badly surfaced roads, gravel roads, icy road, or over newly fallen snow, stopping distances may be longer for a vehicle with the ABS than one without. When driving under these conditions, therefore, reduce your speed and leave ample distance from other vehicles.**

- **When tire chains are installed, stopping distances may be longer for a vehicle with the ABS than one without. Be sure to reduce your speed and maintain a safe distance from the vehicle in front.**
- **When you feel the ABS operating, you should maintain constant brake pedal pressure. Do not pump the brake pedal since doing so may defeat the operation of the ABS.**

The ABS prevents the lock-up of wheels which may occur during sudden braking or braking on slippery road surfaces. This helps prevent the loss of steering control and directional stability caused by wheel lock-up.

When the ABS is operating, you may hear a chattering noise or feel a slight vibration in the brake pedal. This is normal when the ABS operates.

■ ABS Self-Check

You may feel a slight shock in the brake pedal and hear the operating noise of the ABS from the engine compartment just after the vehicle is started. This is caused by an automatic functional test of the ABS being carried out and does not indicate any abnormal condition.

■ ABS Warning Light

Refer to "ABS Warning Light" ☞P133.

7-11. Electronic Brake Force Distribution (EBD) System


The EBD system maximizes the effectiveness of the brakes by allowing the rear brakes to supply a greater proportion of the braking force. It functions by adjusting the distribution of braking force to the rear wheels in accordance with the vehicle's loading condition and speed.

The EBD system is an integral part of the ABS and uses some of the ABS components to perform its function of optimizing the distribution of braking force. If any of the ABS components used by the EBD function fails, the EBD system also stops working.

When the EBD system is operating, you may hear a chattering noise or feel a slight vibration in the brake pedal. This is normal and does not indicate a malfunction.

– CONTINUED –

■ EBD System Malfunctions

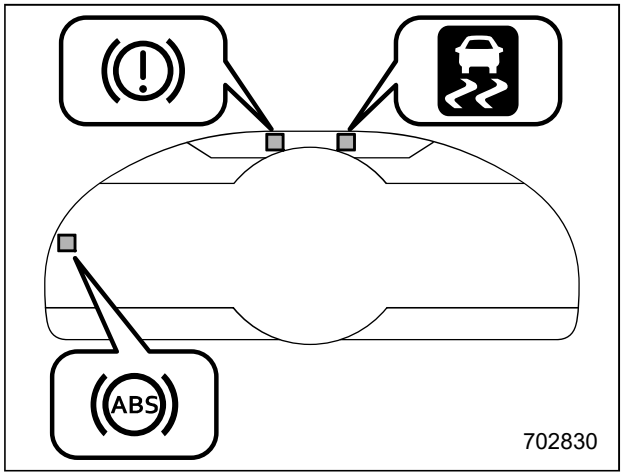

If a malfunction occurs in the EBD system, the system stops working and the following warning lights illuminate simultaneously.

- Brake system warning light
- ABS warning light
- Vehicle Stability Control (VSC) warning light

If all the warning light remains on even though the parking brake is released, the brake fluid level may be low or there could be a problem with the EBD system. Park the vehicle in a safe place immediately and we recommend that you contact an SUBARU dealer.

⚠ WARNING

- **Driving with the brake system warning light on is dangerous. This indicates your brake system may not be working properly. If the light remains on, we recommend that you have the brakes inspected by a SUBARU dealer immediately.**
- **If at all in doubt about whether the brakes are operating properly, do not drive the vehicle. We recommend that you have your vehicle towed to the nearest SUBARU dealer for repair.**

7-12. Vehicle Stability Control (VSC)/TRC System

■ Vehicle Stability Control (VSC) System

In the event of wheelspin and/or skidding on a slippery road surface and/or during cornering and/or an evasive maneuver, the Vehicle Stability Control (VSC) system adjusts the engine's output and the wheels' respective braking forces to help maintain traction and directional control. The skid suppression function is designed to help maintain directional stability by suppressing the wheels' tendency to slide sideways during steering operations. Activation of this function is indicated by flashing of the Vehicle Stability Control (VSC) operation indicator light.

NOTE

- **In the following circumstances, the vehicle may be less stable than it feels to the driver. The Vehicle Stability Control (VSC) system may therefore operate. Such operation does not indicate a system malfunction.**
  - **On gravel-covered or rutted roads**
  - **On unfinished roads**
  - **When the vehicle is fitted with snow tires or winter tires**

• Activation of the Vehicle Stability Control (VSC) system will cause operation of the steering wheel to feel slightly different compared to that for normal conditions.
• It is always important to reduce speed when approaching a corner, even if the vehicle is equipped with Vehicle Stability Control (VSC) system.
• Always turn off the engine before replacing a tire as failure to do so may render the Vehicle Stability Control (VSC) system unable to operate correctly.

■ TRC System

The TRC system is designed to prevent spinning of the driving wheels on slippery road surfaces, thereby helping to maintain traction and directional control. Activation of this function is indicated by flashing of the Vehicle Stability Control (VSC) operation indicator light. The TRC system is also equipped with the brake LSD function.

⚠ WARNING

- **Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC system is operating. Do not drive the vehicle in conditions where stability and power may be lost.**
- **Always use the utmost care in driving – overconfidence because you are driving with a Vehicle Stability Control (VSC) system and TRC system equipped vehicle could easily lead to a serious accident.**

⚠ CAUTION

- **Even if your vehicle is equipped with Vehicle Stability Control (VSC) system and TRC system, winter tires should be used when driving on snowcovered or icy roads; in addition, vehicle speed should be reduced considerably. Simply having a Vehicle Stability Control (VSC) system and TRC system does not guarantee that the vehicle will be able to avoid accidents in any situation.**
- **Activation of the Vehicle Stability Control (VSC) system and TRC system is an indication that the road being travelled on has a slippery surface; since having Vehicle Stability Control (VSC) and TRC is no guarantee that full vehicle control will be maintained at all times and under all conditions, its activation should be seen as a sign that the speed of the vehicle should be reduced considerably.**
- **Whenever suspension components, steering components, or an axle are removed from a vehicle equipped with the Vehicle Stability Control (VSC) system and TRC system, we recommend that you have an inspection of that system performed by an authorized SUBARU dealer.**
- **The following precautions should be observed in order to ensure that the Vehicle Stability Control (VSC) system and TRC system is operating properly.**

– CONTINUED –

- **All four wheels should be fitted with tires of the same size, type, and brand. Furthermore, the amount of wear should be the same for all four tires.**
- **Keep the tire pressure at the proper level as shown on the label attached to the driver's side center pillar.**
- **When replacing a flat tire, use only the specified temporary spare tire. However, even with the specified temporary spare tire, the effectiveness of the Vehicle Stability Control (VSC) system and TRC system will be reduced.**

• **If non-matching tires are used, the Vehicle Stability Control (VSC) system and TRC system may not operate correctly.**

NOTE

The Vehicle Stability Control (VSC) system and TRC system may be considered normal when the following conditions occur.

• **Slight twitching of the brake pedal is felt.**

• **The vehicle or steering wheel shakes to a small degree.**


• **An operating noise from the engine compartment is heard briefly when starting the engine and when driving off after starting the engine.**

• **The brake pedal seems to jolt when driving off after starting the engine.**

■ Vehicle Stability Control (VSC) System Monitor

Refer to "Vehicle Stability Control (VSC) Warning Light/Vehicle Stability Control (VSC) Operation Indicator Light" ☞P135 and "Vehicle Stability Control (VSC) OFF Indicator Light" ☞P136.

■ Vehicle Stability Control (VSC) OFF Switch

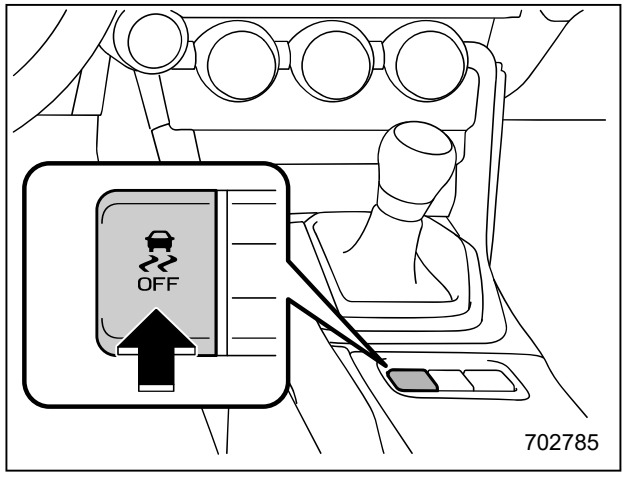


▼ Disabling the TRC System

If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the engine to the wheels. Pressing the Vehicle Stability Control (VSC) OFF switch to turn the system off may make it easier for you to rock the vehicle in order to free it. In this case, the brake LSD function remains on. To turn the TRC system off, quickly press and release the button. The TRC OFF indicator light will come on. Press the button again to turn the system back on.

Creating adequate driving wheel slip by deactivating the TRC system may help to recover from the loss of traction. Use the Vehicle Stability Control (VSC) OFF switch as necessary.

• A standing start on a steeply sloping road with a snowy, gravel-covered, or otherwise slippery surface

• Extrication of the vehicle when its wheels are stuck in mud or deep snow

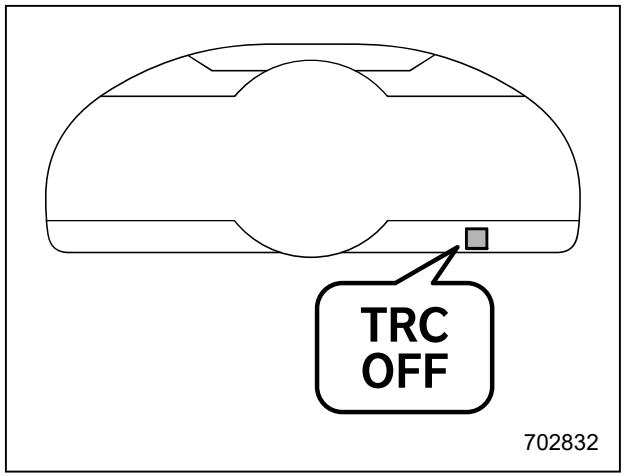

▼ Turning Off both Vehicle Stability Control (VSC) and TRC Systems

To turn the Vehicle Stability Control (VSC) systems and TRC system off, press and hold the Vehicle Stability Control (VSC) OFF switch for more than 3 seconds while the vehicle is stopped. The TRC OFF indicator light and the Vehicle Stability Control (VSC) OFF indicator light will come on. However, on vehicles with an automatic transmission, the brake LSD function will remain on. Press the button again to turn the systems back on. With the Vehicle Stability Control (VSC) system and TRC system deactivated, traction and stability enhancement offered by Vehicle Stability Control (VSC) system and TRC system is unavailable. Therefore you should not deactivate the Vehicle Stability Control (VSC) system and TRC system except under above-mentioned situations.

NOTE

• When the switch has been pressed to deactivate the Vehicle Stability Control (VSC) system and TRC system, the Vehicle Stability Control (VSC) system and TRC system automatically reactivates itself the next time the ignition switch is turned to the "OFF" position and the engine is restarted.

• If the switch is held down for 30 seconds or longer, the indicator light turns off, the Vehicle Stability Control (VSC) system is activated, and the system ignores any further pressing of the switch. To make the switch usable again, turn the ignition switch to the "OFF" position and restart the engine.

• When the switch is pressed to deactivate the Vehicle Stability Control (VSC) system and TRC system, the vehicle's running performance is comparable with that of a vehicle that does not have a Vehicle Stability Control (VSC) system and TRC system. Do not deactivate the Vehicle Stability Control (VSC) system and TRC system except when absolutely necessary.


• Even when the TRC system is deactivated, components of the brake control system may still activate. When the brake control system is activated, the Vehicle Stability Control (VSC) operation indicator light flashes.

7-13. TRACK Mode

■ TRACK Mode

Your vehicle is equipped with two types of control modes to accommodate various driving preferences. The control modes can be selected with the TRACK switch. Normal mode allows secure and smooth normal driving. When the switch is pressed and held for 1 second or more, TRACK mode is activated. Control characteristics such as the Vehicle Stability Control (VSC) and TRC are adjusted to afford maneuverability closer to what a driver may desire, while a sense of security is retained.

▼ TRACK mode/Normal mode

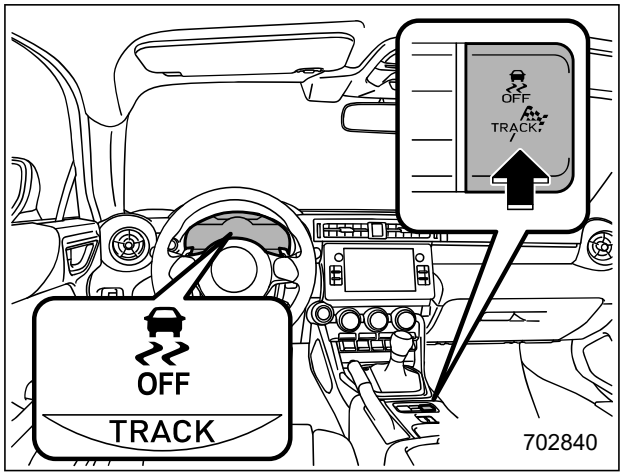

The TRACK indicator and Vehicle Stability Control (VSC) OFF indicator come on when in TRACK mode.

To change back to normal mode while in TRACK mode, press Vehicle Stability Control (VSC) OFF switch or the TRACK switch.

■ Selecting TRC Mode and Vehicle Stability Control (VSC) Mode


Modes can be selected to suit your driving conditions as follows:

Driving conditions	TRC modes	Vehicle Stability Control (VSC) modes	Brake LSD function	Indicator lights
Normal roads	Normal mode	Normal mode	Normal mode	—
Rough roads	Off	Normal mode	Normal mode	TRC OFF
Sport driving	TRACK mode	TRACK mode	TRACK mode	OFF TRACK
	Off	Off	TRACK mode (AT models)	TRC OFF OFF
			Off (MT models)	

NOTE

When the ignition switch is turned "OFF" position after driving in TRACK mode, the mode is automatically deactivated.

7-14. Tire Pressure Monitoring System (TPMS) (If Equipped)

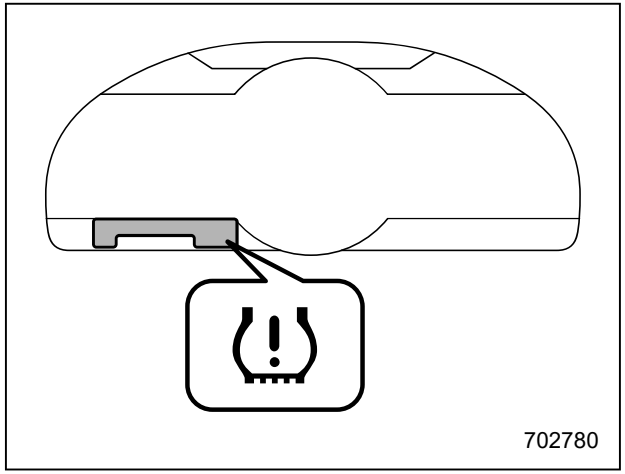

Low tire pressure warning light

The tire pressure monitoring system provides the driver with a warning message by sending a signal from a sensor that is installed in each wheel when tire pressure is severely low.

The tire pressure monitoring system will activate only when the vehicle is driven at speeds above 40 km/h (25 mph). Also, this system may not react immediately to a sudden drop in tire pressure (for example, a blow-out caused by running over a sharp object).

– CONTINUED –

⚠ WARNING

- **If the low tire pressure warning light illuminates while driving, never brake suddenly. Instead, perform the following procedure. Otherwise an accident involving serious vehicle damage and serious personal injury could occur.**

  (1) Keep driving straight ahead while gradually reducing speed.

  (2) Slowly pull off the road to a safe place.

  (3) Check the pressure for all four tires and adjust the pressure to the COLD tire pressure shown on the tire inflation pressure label on the center pillar on the driver's side.

- **Even when the vehicle is driven a very short distance, the tires get warm and their pressures increase accordingly. Be sure to let the tires cool thoroughly before adjusting their pressures to the standard values shown on the tire inflation pressure label. Refer to "Tires and Wheels" ☞P351. The tire pressure monitoring system does not function when the vehicle is stationary. After adjusting the tire pressures, increase the vehicle speed to at least 40 km/h (25 mph) to start the TPMS rechecking of the tire inflation pressures. If the tire pressures are now above the severe low pressure threshold, the low tire pressure warning light should turn off a few minutes later.**

  If this light still illuminates while driving after adjusting the tire pressure, a tire may have significant damage and a fast leak that causes the tire to lose air rapidly. For details, refer to "Flat Tires" ☞P292.


- **When a spare tire is mounted or a wheel rim is replaced without the original pressure sensor/transmitter being transferred, the low tire pressure warning light will illuminate steadily after blinking for approximately one minute. This indicates the TPMS is unable to monitor all four road wheels. Contact your SUBARU dealer as soon as possible for tire and sensor replacement and/or system resetting.**

- **When a tire is repaired with liquid sealant, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your nearest SUBARU dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. You may reuse the wheel if there is no damage to it and if the sealant residue is properly cleaned off. Do not inject any tire liquid or aerosol tire sealant into the tires, as this may cause a malfunction of the tire pressure sensors. If the light illuminates steadily after blinking for approximately one minute, promptly contact a SUBARU dealer to have the system inspected.**

⚠ CAUTION

Do not place metal film or any metal parts under the driver's seat. This may cause poor reception of the signals from the tire pressure sensors, and the tire pressure monitoring system will not function properly.

■ TPMS Screen

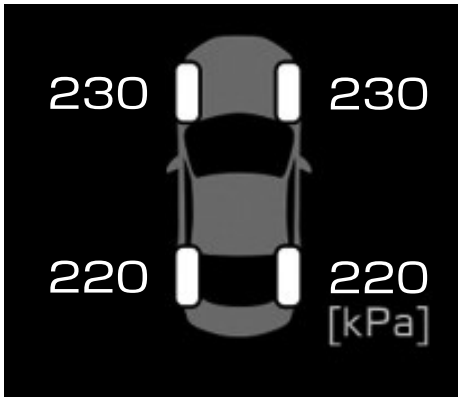

702813

This screen displays each tire pressure. Refer to "Drive Information" ☞P146.

■ Initializing the Tire Pressure Monitoring System

When setting the tire inflation pressure above the specified level, initialize the tire pressure monitoring system.
When the tire pressure monitoring system is initialized, the current tire inflation pressure is set as the standard pressure.

■ How to Initialize the Tire Pressure Monitoring System (If Equipped)

1. Park the vehicle in a safe place and turn the ignition switch to the "OFF" position.


Initialization cannot be performed while the vehicle is moving.

2. Adjust the tire inflation pressure to the specified cold tire inflation pressure level. Refer to "Tires" ☞P377.

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure monitoring system will operate based on this pressure level.

3. Turn the ignition switch to the "ON" position.

– CONTINUED –

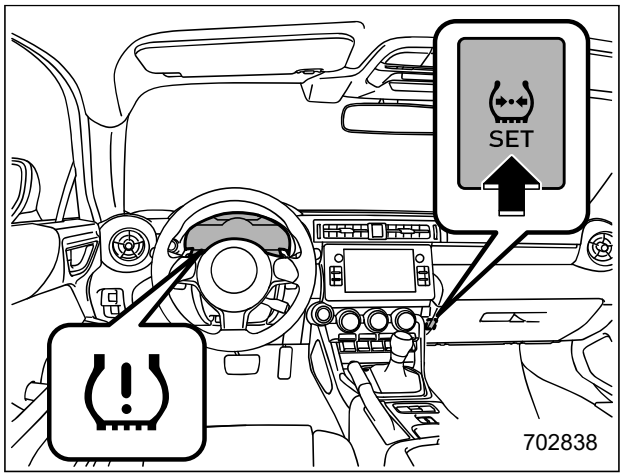

4. Press and hold the TPMS set switch until the low tire pressure warning light blinks slowly 3 times.

■ If You Press the Tire Pressure Monitoring Reset Switch Accidentally

If initialization is performed, adjust the tire inflation pressure to the specified level and initialize the tire pressure monitoring system again.

■ Initialization Procedure

- Make sure to carry out initialization after adjusting the tire inflation pressure. Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- If you have accidentally turned the ignition switch to the “OFF” position during initialization, it is not necessary to press the TPMS set switch again as initialization will restart automatically when the engine is restarted.
- If you accidentally press the TPMS set switch when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.

■ When Initialization of the Tire Pressure Monitoring System has Failed

Initialization can be completed in a few minutes. However, in the following case, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle checked at your SUBARU dealer.

- When operating the TPMS set switch, low tire pressure warning light does not blink 3 times.
- After carrying out the initialization procedure, the tire pressure warning light blinks for 1 minute then stays on after driving for 20 minutes.

⚠ WARNING

Do not operate the TPMS set switch without first adjusting the tire inflation pressure to the specified level. Otherwise, the low tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

■ Registering ID Codes

Every tire pressure warning valve and transmitter has a unique ID code. In addition to the set of tire pressure monitoring system sensor ID codes initially registered to the vehicle, a second set of ID codes can be registered.

A second set of tire pressure monitoring system sensor ID codes can be registered at your SUBARU dealer or repairer, or another duly qualified and equipped professional. When 2 sets of ID codes have been registered, either ID code set can be selected.

■ Changing the ID code set

1. Park the vehicle in a safe place and turn the ignition switch to the “ON” position.

2. Press the TPMS set switch 3 times within 3 seconds.

3. The low tire pressure warning light will illuminate for 3 seconds and then blink 3 times.

4. The low tire pressure warning light will blink for 1 minute and then illuminate.

5. When the ID code change has completed, the tire pressure monitoring light will turn off.
Check that tire pressures are displayed on the TPMS screen.


7-15. Parking Your Vehicle

⚠ WARNING

- **Never leave unattended children or pets in the vehicle. They could accidentally injure themselves or others through inadvertent operation of the vehicle. Also, on hot or sunny days, the temperature in a closed vehicle could quickly become high enough to cause severe or possibly fatal injuries to people.**
- **Do not park the vehicle over flammable materials such as dry grass, waste paper or rags, as they may burn easily if they come near hot engine or exhaust system parts.**
- **Be sure to stop the engine if you take a nap in the vehicle. If engine exhaust gas enters the passenger compartment, occupants in the vehicle could die from carbon monoxide (CO) contained in the exhaust gas.**

■ Parking Brake

To set the parking brake, depress the brake pedal firmly and hold it down until the parking brake lever is fully pulled up.

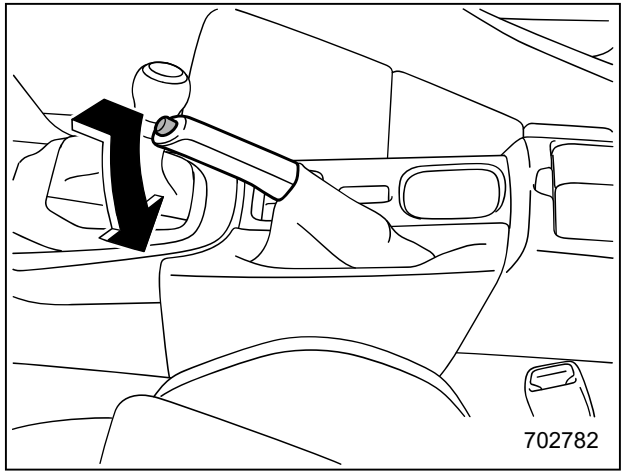

To release the parking brake, pull the lever up slightly, press the release button, then lower the lever while keeping the button pressed.

When the parking brake is set while the engine is running, the parking brake warning light illuminates. After starting the vehicle, be sure that the warning light has turned off before the vehicle is driven. Refer to "Brake System Warning Light (Red)" ☞P134.

⚠ CAUTION

- **Never drive while the parking brake is set because this will cause unnecessary wear on the brake linings. Before starting to drive, always make sure that the parking brake has been fully released.**

– CONTINUED –


- **The braking power of the parking brake may not be sufficient when stronger braking power is needed (e.g., when parking on a steep slope while towing a trailer).**

■ Parking Tips


When parking your vehicle, always perform the following items.

- Apply the parking brake firmly.
- For MT models, put the shift lever in the “1” (1st) for upgrade or “R” (Reverse) for a downgrade.
- For AT models, put the select lever in the “P” (Park) position.

Never rely on the mechanical friction of the transmission alone to hold the vehicle.

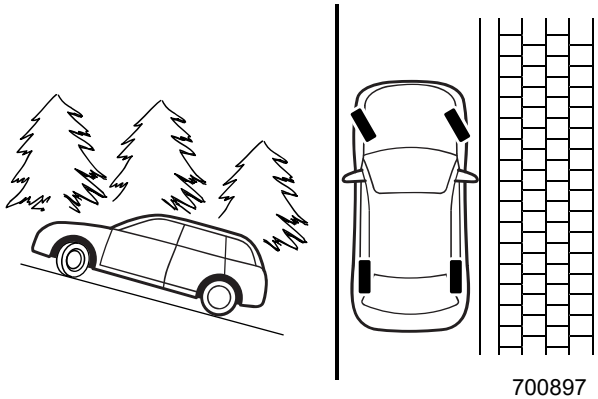

When parking on a hill, always turn the steering wheel. When the vehicle is headed up the hill, the front wheels should be turned away from the curb.

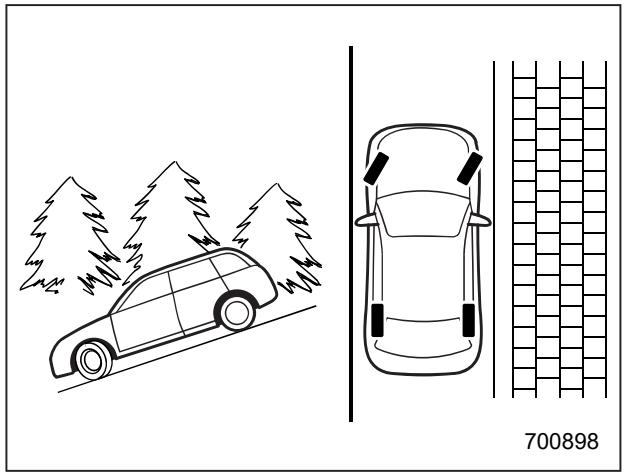


When facing downhill, the front wheels should be turned into the curb.

7-16. Hill Start Assist System

⚠ WARNING

- **The Hill start assist system is a device only for helping the driver to START the vehicle on an uphill grade. To prevent accidents when the vehicle is parked on a slope, be sure to firmly set the parking brake. When setting the parking brake, make sure that the vehicle remains stationary when the clutch pedal (MT models) and brake pedal (both MT and AT models) are released.**
- **Do not turn the ignition switch to the “OFF” position while the Hill start assist system is operating. The Hill start assist system will be deactivated and may lead to an accident.**

The Hill start assist system is a device to make the following vehicle operations easier.

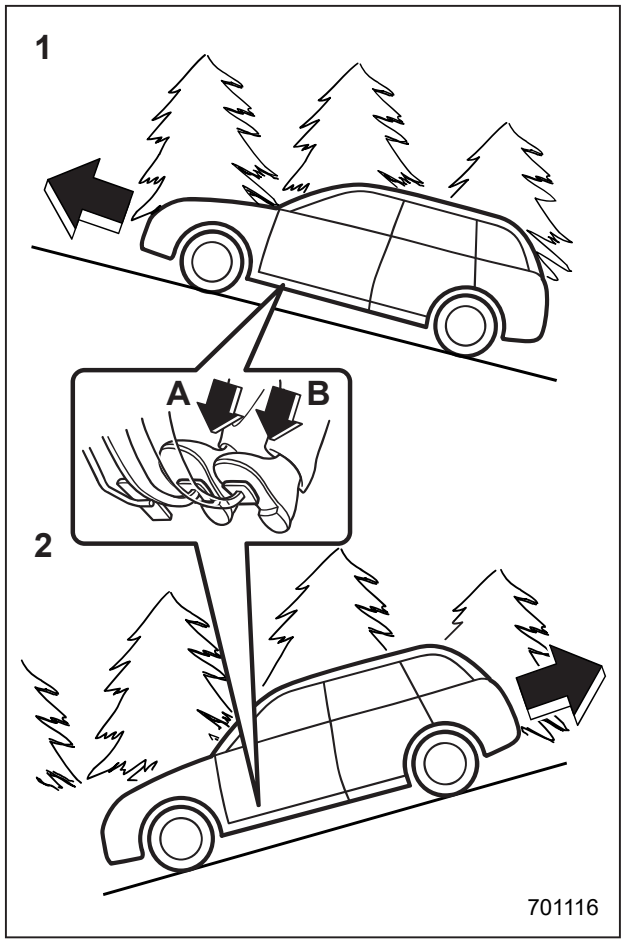

1) Starting forward facing uphill
2) Starting backward facing downhill

A) Brake pedal (both MT models and AT models)
B) Clutch pedal (MT models only)


In both these cases, the Hill start assist system operates under the following conditions.

- The clutch pedal is depressed while the brake pedal is also depressed (MT models).
- The vehicle has stopped with the brake pedal depressed (AT models).

Braking power is maintained temporarily (for approximately 2 seconds) by the Hill start assist system after the brake pedal is released. The driver is therefore able to start the vehicle in the same way as on a level grade, just using the clutch pedal (MT models only) and accelerator pedal (all models).

If the braking power of the Hill start assist system is insufficient after the brake pedal is released, apply more braking power by depressing the brake pedal again.

The Hill start assist system may not operate on slight grades. Also, the Hill start assist system does not operate in the following cases.

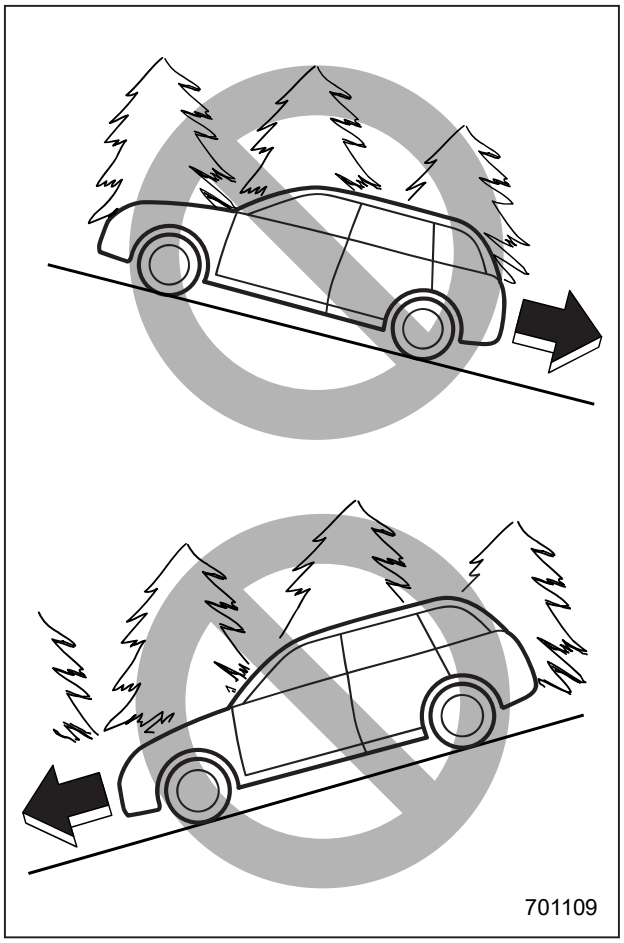

- When starting backward facing uphill
- When starting forward facing downhill
- While the parking brake is applied
- While the ignition switch is in the “ACC” or “OFF” position

– CONTINUED –

• While the Hill start assist indicator light is illuminated. Refer to "Hill Start Assist Indicator Light" ☞P143.

When using the Hill start assist system, a braking effect may be felt even after the brake pedal has been released. However, for MT models, this braking effect should disappear once the clutch pedal is released.


⚠ CAUTION

The braking power of the Hill start assist system may not be sufficient when strong braking power is needed (e.g., when towing a trailer).

NOTE

A slight jolt may be felt when the vehicle begins to move forward after being reversed.

■ To Activate/Deactivate the Hill Start Assist System

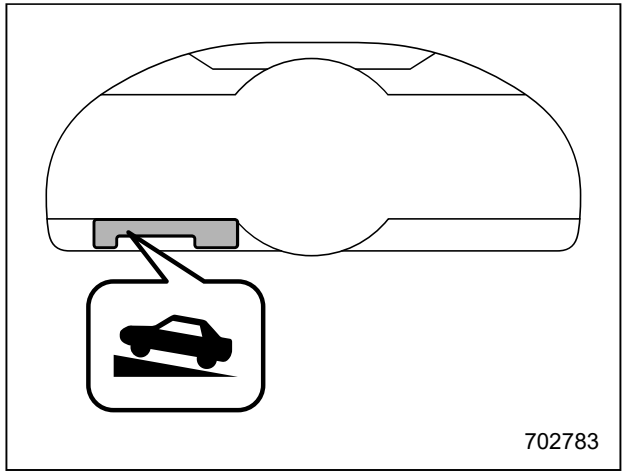

Hill start assist indicator light

⚠ CAUTION

When starting on an uphill grade, make sure the Hill start assist indicator light is on.

If the Hill start assist indicator light is off, make sure the parking brake is applied.


To activate or deactivate the Hill start assist system, perform the following steps.

NOTE


If you make an error when performing any steps in the following procedure, place the ignition switch in the "OFF" position once and then start over again.

▼ To deactivate

1. Park your vehicle in a flat and safe location and apply the parking brake.
2. Turn the ignition switch to the "OFF" position.
3. Restart the engine.

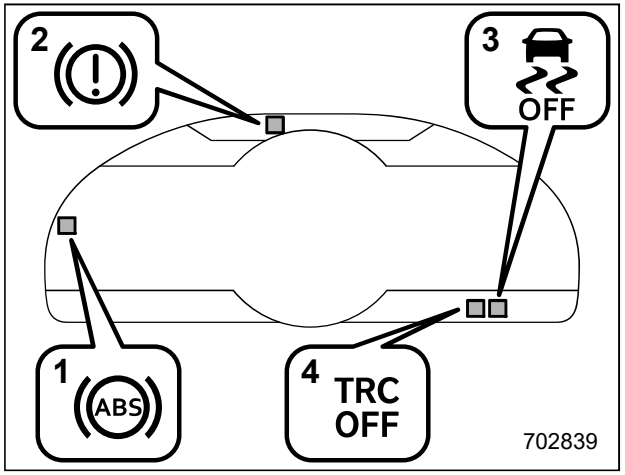

4. Confirm the following items.
   (1) The ABS warning light turns off.
   (2) The brake system warning light illuminates.
   (3) The Vehicle Stability Control (VSC) OFF indicator light turns off.
   (4) TRC OFF indicator light turns off.

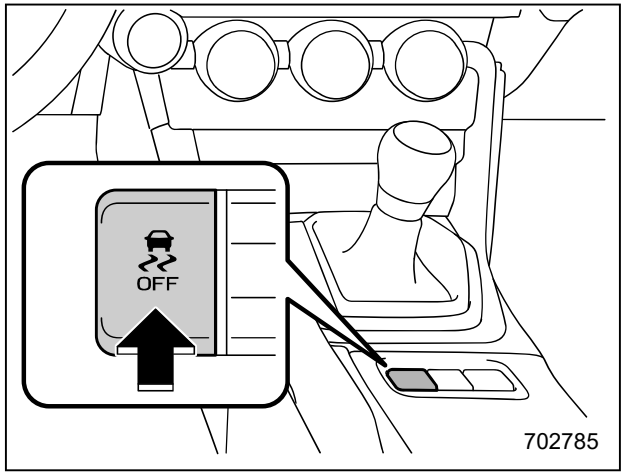

5. Press and hold the Vehicle Stability Control (VSC) OFF switch for 30 seconds until the Vehicle Stability Control (VSC) OFF indicator light OFF on the combination meter turns on and off.

6. Within 5 seconds, release the Vehicle Stability Control (VSC) OFF switch.

7. Within 2 seconds, press back the Vehicle Stability Control (VSC) OFF switch.
The Hill start assist indicator light turns on and off.

8. Turn the ignition switch to the “OFF” position. Hill start assist is deactivated.

NOTE

When the Hill start assist system is deactivated, the Hill start assist indicator light turns off.

▼ To reactivate

To reactivate Hill start assist system, repeat steps 1 to 8. When the Hill start assist system is activated, the Hill start assist indicator light illuminates.

■ Hill Start Assist Indicator Light

Refer to "Hill Start Assist Indicator Light" ☞P143.

7-17. Cruise Control (Models without the EyeSight system)

NOTE

For models with the EyeSight system: Refer to the Owner’s Manual supplement for the EyeSight system.

Cruise control enables you to maintain a constant vehicle speed without holding your foot on the accelerator pedal and it is operative when the vehicle speed is 30 km/h (20 mph) or more.

⚠ WARNING

- **Do not use the cruise control under any of the following conditions. These may cause loss of vehicle control.**
  - **In heavy traffic**
  - **On roads with sharp bends**
  - **On winding roads**
  - **On slippery roads, such as those covered with rain, ice or snow**
  - **On steep hills**
    Vehicle speed may exceed the set speed when driving down a steep hill.
  - **During emergency towing**


– CONTINUED –

- **When using the cruise control, always set the speed appropriately according to the speed limit, traffic flow, road conditions, and other conditions.**

NOTE


- **Make sure the cruise control system is turned off when the cruise control is not in use to avoid unintentionally setting of the cruise control.**
- **When the gasoline particulate filter warning light (if equipped) is flashing or illuminated, the cruise control cannot be used.**
- **When the low fuel warning light is illuminated, the cruise control may not be available for use.**

■ To Set Cruise Control

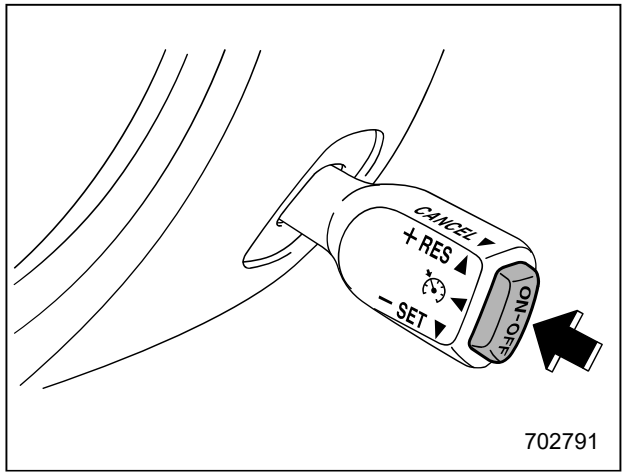

“ON-OFF” switch


1. After the engine has started, press the “ON-OFF” switch of the cruise control switch.

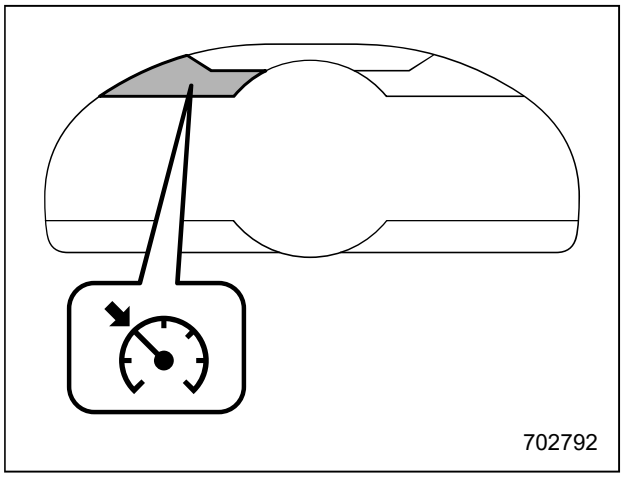

Cruise control indicator light

The cruise control indicator light (white) on the combination meter will illuminate.


2. Depress the accelerator pedal until the vehicle reaches the desired speed.

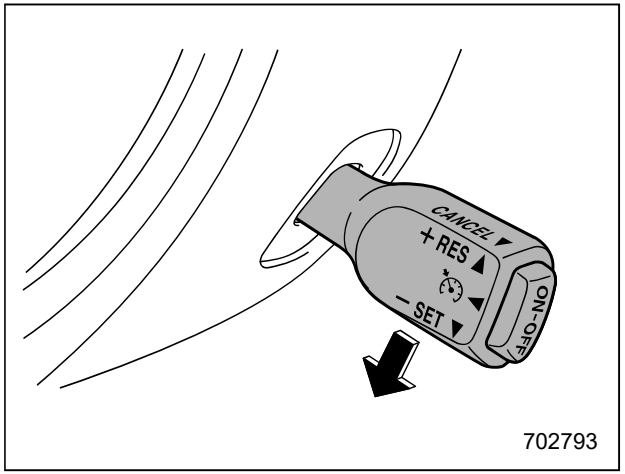

3. Push the Cruise control switch to the “-SET” side and release it.

NOTE

When setting a cruise speed for the first time during a drive, both “-SET” and “+RES” may be used to set the initial cruise speed.

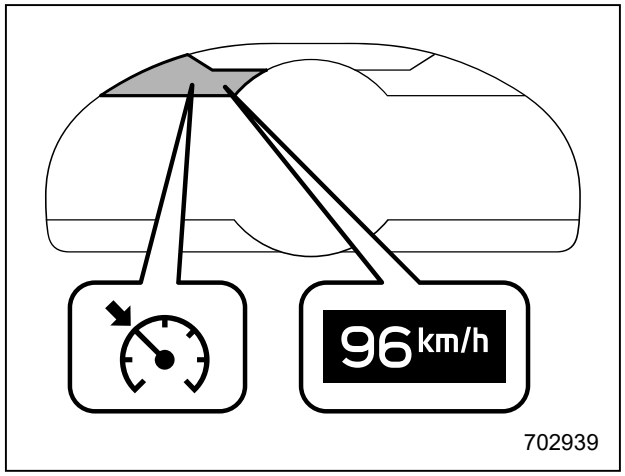

Cruise control indicator light


At this time, the cruise control indicator light (green) is illuminated in the combination meter. The set speed will be shown on the combination meter. You can change the displayed units by operating the combination meter display. For details, refer to "Combination Meter Settings" ☞P124.

The vehicle will maintain the desired speed.

Vehicle speed can be temporarily increased while driving with the cruise control activated. Simply depress the accelerator pedal to accelerate the vehicle. When the accelerator pedal is released, the vehicle will return to and maintain the previous cruising speed.


■ To Temporarily Cancel the Cruise Control

The cruise control can be temporarily canceled in the following ways.

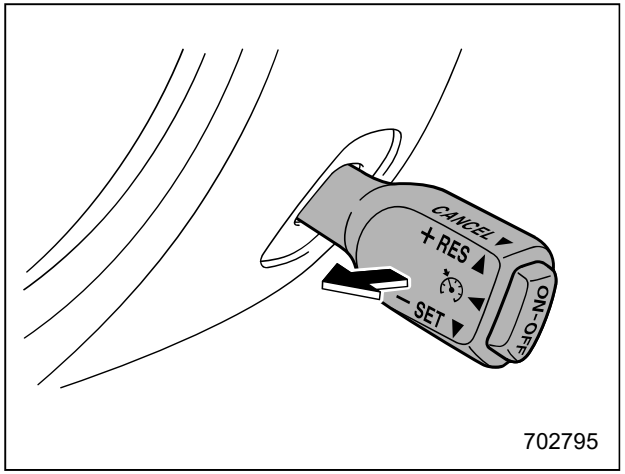

- Pulling the cruise control switch.
- Depress the brake pedal.
- Depress the clutch pedal.

When the cruise control is cancelled, the cruise control indicator light in the combination meter will change from green to white.

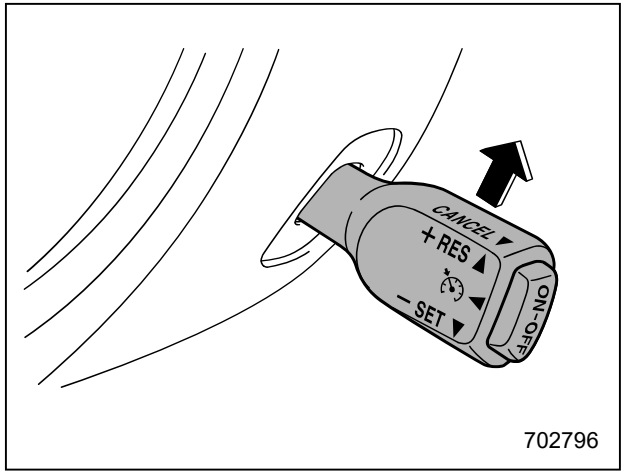

To resume the cruise control after it has been temporarily canceled and with vehicle speed of approximately 30 km/h (20 mph) or more, push the lever up to return to the original cruising speed automatically.

At this time, the cruise control indicator light in the combination meter will change from white to green.

■ To Turn Off the Cruise Control


There are two ways to turn off the cruise control:

- Press the “ON-OFF” switch of the cruise control switch again.
- Turn the ignition switch to the “ACC” or “OFF” position (but only when the vehicle is completely stopped).

– CONTINUED –

■ To Change the Cruising Speed

▼ To increase the speed (by the cruise control switch)

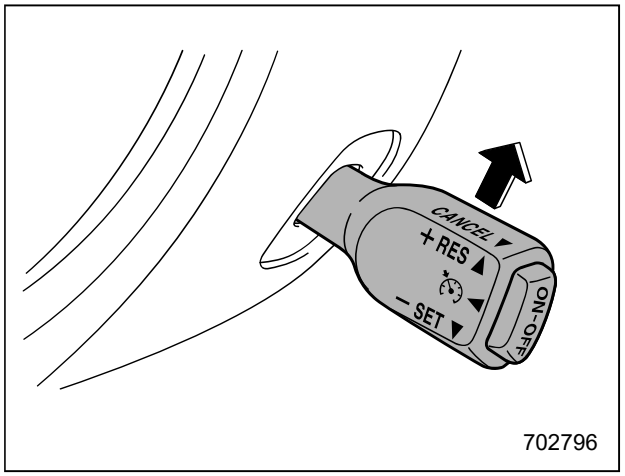


Push the cruise control switch to the “+RES” side and hold it until the vehicle reaches the desired speed. Then, release the switch. The vehicle speed at that moment will be memorized and treated as the new set speed.

The set speed can be increased 1 km/h (0.6 mph) each time by pressing the cruise control switch to the “+RES” side.

▼ To increase the speed (by accelerator pedal)

1. Depress the accelerator pedal to accelerate the vehicle to the desired speed.
2. Push the cruise control switch to the “-SET” side once. Now the desired speed is set and the vehicle will keep running at that speed without depressing the accelerator pedal.

▼ To decrease the speed (by the cruise control switch)

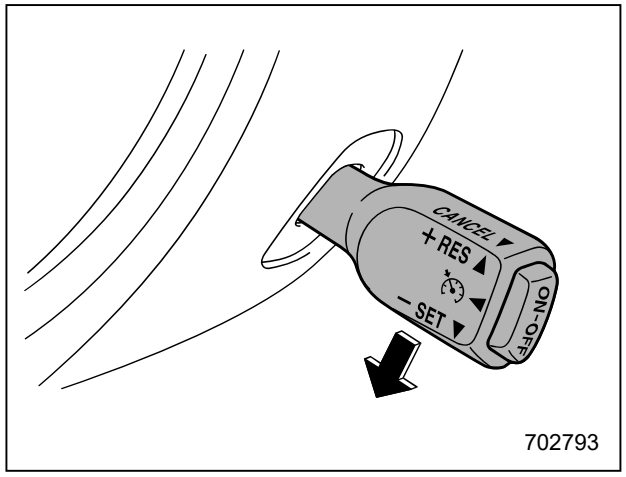

Push the cruise control switch to the “-SET” side and hold it until the vehicle reaches the desired speed. Then, release the switch. The vehicle speed at that moment will be memorized and treated as the new set speed.

The set speed can be decreased 1 km/h (0.6 mph) each time by pushing the cruise control switch to the “-SET” side.


▼ To decrease the speed (by brake pedal)

1. Depress the brake pedal to release cruise control temporarily.
2. When the speed decreases to the desired speed, push the cruise control switch to the “-SET” side once. Now the desired speed is set and the vehicle will keep running at that speed without depressing the accelerator pedal.

■ Cruise Control Indicator Light

Refer to "Combination Meter Settings" ☞P124.

7-18. Rear View Camera

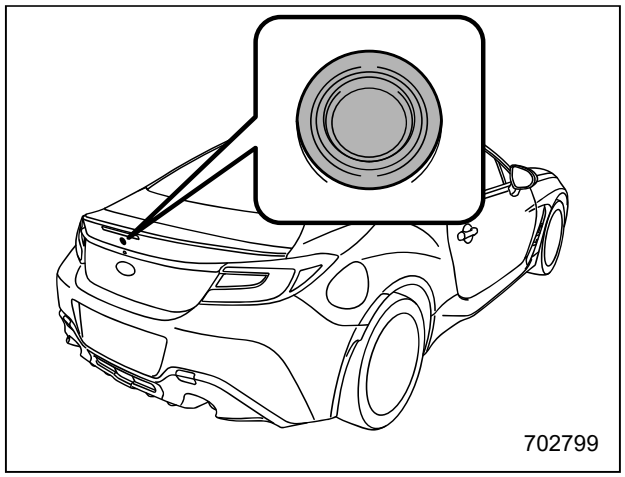

A rear view camera is attached to the trunk lid. When the ignition switch is in the “ON” position and the shift lever (MT models) or select lever (AT models) is set to “R”, the rear view camera automatically displays the rear view image behind the vehicle on the center information display.

⚠ WARNING

- **Since the rear view camera uses a wide-angle lens, the image on the monitor is different from the actual view in terms of distance.**
- **Since the range of the image on the monitor is limited, always check the rear view and the surrounding area with your eyes and mirrors, and move backward at a slow speed. Moving backward only by checking the rear view image from the camera could cause an accident.**
- **Do not disassemble or modify the camera, switch or wiring. If smoke comes out or you smell a strange odor, stop using the rear view camera immediately. We recommend that you contact your SUBARU dealer for an inspection. Continued use may result in accident, fire or electric shock.**

⚠ CAUTION

- **When washing your vehicle with a high-pressure washer, do not allow water to touch the camera directly. Entry of water in the camera lens may result in condensation, malfunction, fire or electric shock.**
- **Since the camera is a precision device, do not subject it to strong impacts. Otherwise, malfunction, fire or electric shock may occur.**
- **If mud or snow sticks to or is frozen on the camera, you must be very careful when removing it. Otherwise, damage to the camera may cause a fire or electric shock. Pour water or lukewarm water over the camera to remove mud and ice, and wipe it with a soft, dry cloth.**
- **Do not put a flame close to the camera or wiring. Otherwise, damage or fire may occur.**
- **When replacing the fuse, be sure to use a fuse with the specified rating. Use of a fuse with a different rating may result in a malfunction.**
- **If you use the rear view camera for a long time while the engine is not operated, the battery may become completely discharged.**

NOTE

• Do not wipe the camera with alcohol, benzine or paint thinner. Otherwise, discoloration may occur. To remove contamination, wipe the camera with a cloth moistened with a diluted neutral detergent. Then wipe it with a soft, dry cloth.

– CONTINUED –

• When waxing the vehicle, be careful not to apply the wax to the camera. If it comes in contact with the camera, moisten a clean cloth with a diluted neutral detergent to remove the wax.
• The camera lens has a hard coating to help prevent scratches. However, when washing the vehicle or cleaning the camera lens, be careful not to scratch the camera lens. Do not use a washing brush directly on the camera lens. The image quality of the rear view camera may deteriorate.
• Strong light shined on the camera lens may develop vertical lines around the light source. This is not a malfunction.
• Under the fluorescent light, the display may flicker. However, this is not a malfunction.
• The image of the rear view camera may be slightly different from the actual color of the objects.
• If there is a malfunction on the center information display, refer to "Malfunctions of the Center Information Display" ☞P316.

■ How to Use the Rear View Camera

When the shift lever/select lever is set to "R", the rear view camera automatically displays the rear view image from the vehicle. When the lever is set to other positions, the image before setting to "R" is displayed.

1. Set the ignition switch to "ON".
2. Set the shift lever/select lever to "R".


NOTE

• The image of the rear view camera is horizontally reversed as is the case with the vehicle inside mirror or the outside mirror.
• When "Rear Camera Delay Control" is on, the rear view image from the rear view camera will be displayed on the center information display for a certain amount of time after the shift lever (MT models) or select lever (AT models) is shifted from "R" to another position.
When any of the following conditions are met, the rear view image will be canceled:
- The select lever is shifted to "P" (AT models)
- The vehicle speed becomes approximately 8 km/h (5 mph) or more
- The parking brake is engaged
- 9 seconds have elapsed since the shift lever (MT models) or select lever (AT models) was shifted from "R" to another position
To turn the function on and off, refer to "General settings" ☞P155.
• It may be difficult to see the image of the rear view camera in the following cases. This is not a malfunction of the camera.
- The vehicle is in a dark place (at night, in a tunnel, etc.).
- The vehicle is in an extremely hot or cold place.
- An object (such as raindrops, snow, dirt, etc.) that disturbs the view of the rear view camera sticks to the lens of the camera.
- Strong light is shining directly on the camera lens (occasionally, there are vertical lines on the screen).


■ Viewing Range on the Screen

⚠ CAUTION

The range that can be viewed with the rear view camera is limited. Always be sure to check with your eyes when moving backward and proceed slowly. Otherwise, it may cause an accident or injury.

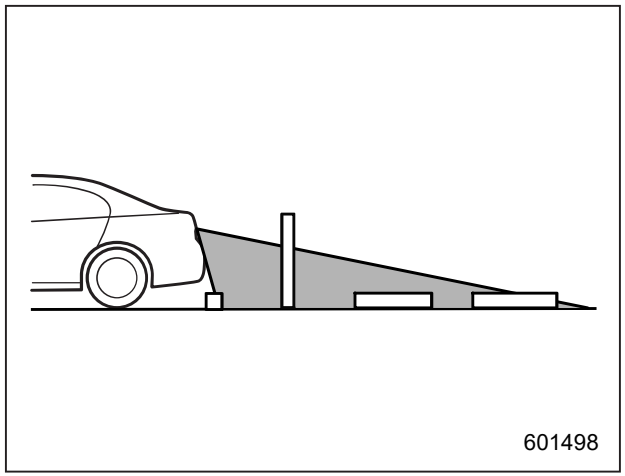

Range of view

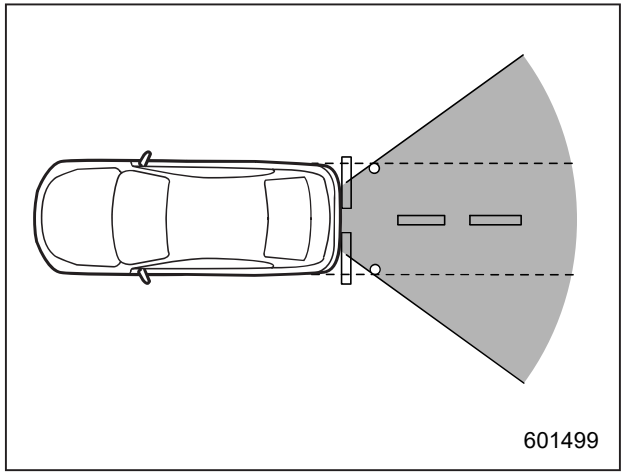

Range of view


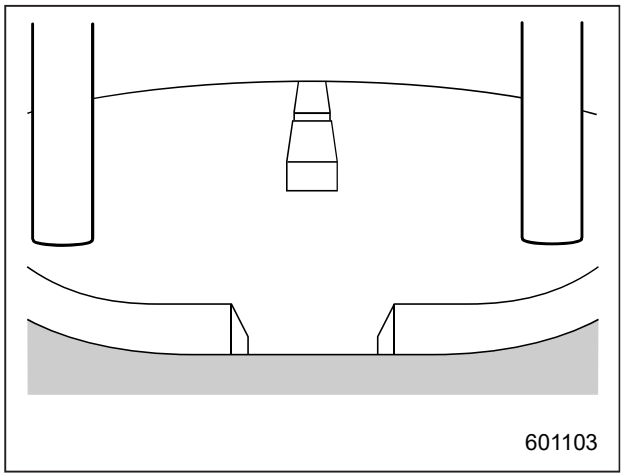


Image from camera

The area from the rear end of the bumper can be viewed. Areas at both ends of the bumper and areas just under the bumper cannot be viewed.

Also, the image from the rear view camera looks shorter than the actual distance.

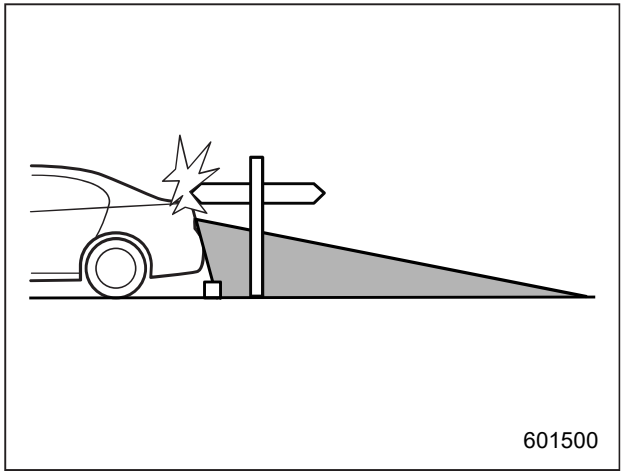

Range of view

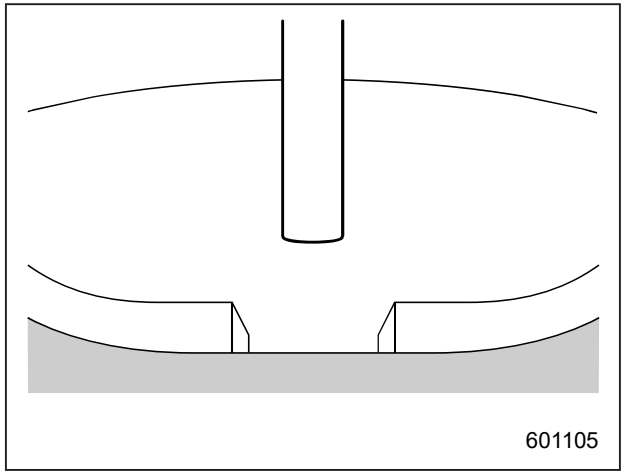


Image from camera

The area above the camera cannot be viewed. If there is an object that has a wide projection on its upper part such as a sign pole behind the vehicle, the projection cannot be seen on the screen.

■ Help Lines


The help lines are a guide to help you realize the actual distance from the screen image.

NOTE

If you shift to the “R” range within several seconds after turning on the ignition switch, the warning message may not be displayed. Wait for several seconds after turning on the ignition

– CONTINUED –

switch before shifting to the “R” range. Then, the warning message will be displayed.

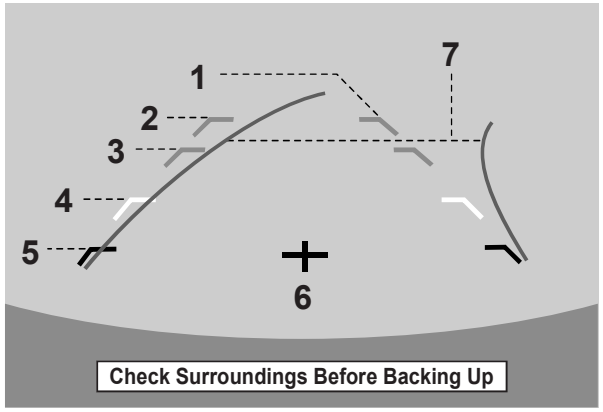

Help lines
1) Vehicle width line (oblique vertical line)
2) Approx. 3 m (10 ft) from the bumper (green horizontal line)
3) Approx. 2 m (6 ft) from the bumper (green horizontal line)
4) Approx. 1 m (3 ft) from the bumper (yellow horizontal line)
5) Approx. 0.5 m (1.5 ft) from the bumper (red horizontal line)
6) Vehicle centerline
7) Dynamic guidelines

When the shift lever/select lever is set to “R”, the monitor screen displays the help lines together with the rear view image.

⚠ CAUTION

- **When moving backward, always check the back with your eyes without relying on the help lines. Otherwise, it may cause an accident or injury.**
- **The actual position may be different from the indication of the help lines.**
- **Differences may occur due to the number of passengers or the loaded cargo.**
- **When the vehicle is on a slope or inclined against the road, the indication is different from the actual position.**


NOTE

When “Steering Angle Lines” is off, the dynamic guidelines will be disappear on the center information display. To turn the dynamic guidelines on and off, refer to "General settings" ☞P155.

▼ Difference between screen image and actual road

The distance markers show the distance for a level road when the vehicle is not loaded. It may be different from the actual distance depending on the loading conditions or road conditions.


▽ When there is an upward slope at the back

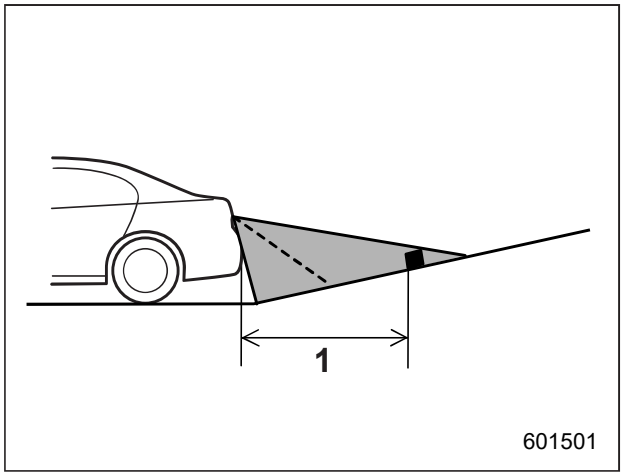

1) 1 m (3 ft)

The distance on the screen looks farther than the actual distance.

▽ **When there is a downward slope at the back**

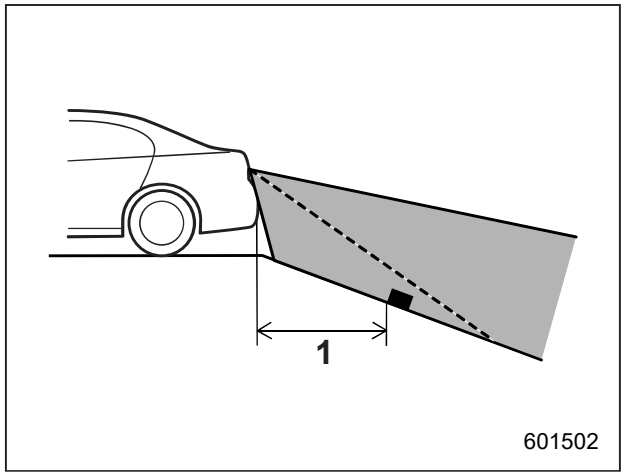


1) 1 m (3 ft)

The distance on the screen looks nearer than the actual distance.

NOTE

When cargo is loaded, the rear view distance on the screen looks farther than the actual distance as in an upward slope.

▼ **Feature of distance marker**

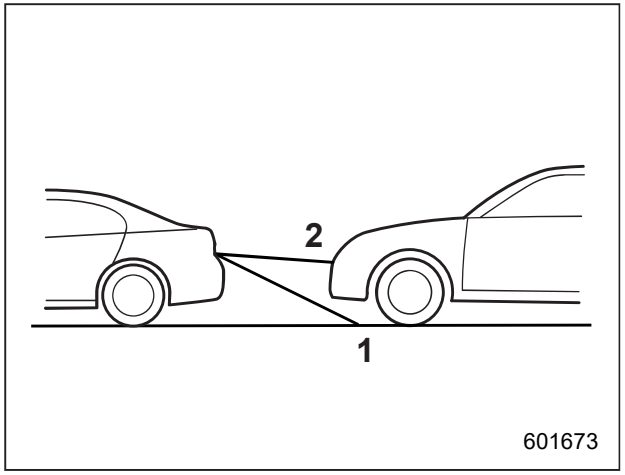

1) 1 m (3 ft) line
2) 3 m (10 ft) line

The distance marker shows the distance on the road. If there is a car or another object close behind, distance cannot be correctly displayed.

7-19. Subaru Rear Vehicle Detection (SRVD) (If Equipped)

The Subaru Rear Vehicle Detection (SRVD) consists of rear corner radars with Blind Spot Detection, Lane Change Assist and Rear Cross Traffic Alert.

These functions of SRVD are the systems that detect objects and vehicles to the rear and draw attention to the driver when changing a lane or when driving in reverse.

⚠ WARNING

The driver is responsible for driving safely. Always be sure to check the surroundings with your eyes when changing lanes or reversing the vehicle.

– CONTINUED –

The system is designed to assist the driver in changing lanes or reversing safely by monitoring the rear and side areas of the vehicle. However, you cannot rely on this system alone in assuring the safety during a lane change or reversing. Overconfidence in this system could result in an accident and lead to serious injury or death. Since the system operation has various limitations, the flashing or illumination of the SRVD approach indicator light may be delayed or it may not operate at all even when a vehicle is present in a neighboring lane or approaching from either side.

The driver is responsible for paying attention to the rear and side areas of the vehicle.

■ System Features

SRVD consists of the following functions.


- To detect a vehicle in a blind spot on an adjacent lane or a vehicle approaching at high speed while driving the vehicle (Blind Spot Detection and Lane Change Assist)
- To detect a vehicle approaching from the right or left while reversing the vehicle (Rear Cross Traffic Alert)

The system uses radar sensors for the following features.

NOTE

The SRVD radar sensor is approved under the radio wave related laws of each country. For details, refer to "Technical information" ☞P413

▼ Blind Spot Detection (BSD)

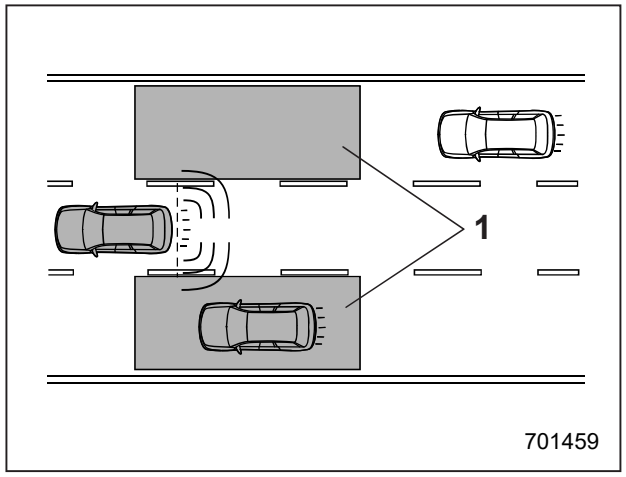


1) Operating range

The system notifies the driver of the presence of vehicles in its blind spot.

- If the system detects a vehicle in its blind spot, it warns the driver by illuminating the SRVD approach indicator light(s) on the outside mirror(s).
- If the driver operates the turn signal lever in the direction where the SRVD approach indicator light is illuminating, the system warns the driver of dangers by flashing the SRVD approach indicator light.

▽ Lane Change Assist (LCA)

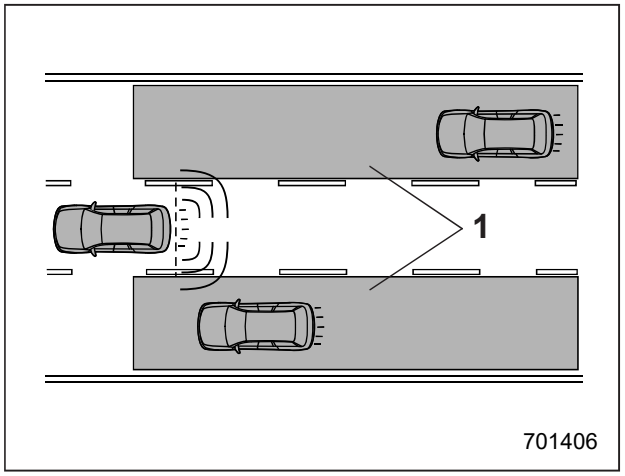


1) Operating range

The system notifies the driver of vehicles approaching at a high speed in the neighboring lanes.

- If the system detects a vehicle approaching at a high speed in the neighboring lanes, it warns the driver of dangers by illuminating the SRVD approach indicator light(s) on the outside mirror(s).
- If the driver operates the turn signal lever in the direction where the SRVD approach indicator light is illuminating, the

system warns the driver of dangers by flashing the SRVD approach indicator light.

▼ Rear Cross Traffic Alert (RCTA)

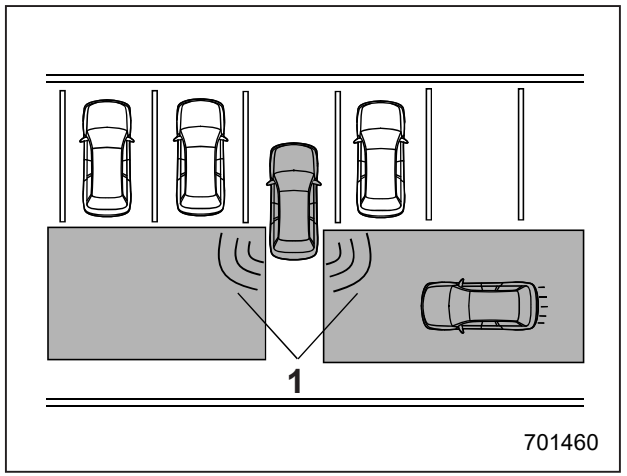

1) Operating range


The system notifies the driver of another vehicle approaching from either side when driving in reverse. This feature helps the driver check the rear and side areas of the vehicle when moving backward.

If the system detects a vehicle approaching from either side while moving backward, it warns the driver of dangers in the following way.

- The SRVD approach indicator light(s) on the outside mirror(s) flashes.
- A warning buzzer sounds.
- An icon appears on the center information display.

▽ Limitations of the detectability of RCTA

Since the detectability of RCTA is limited, the RCTA may not operate properly in angled parking.

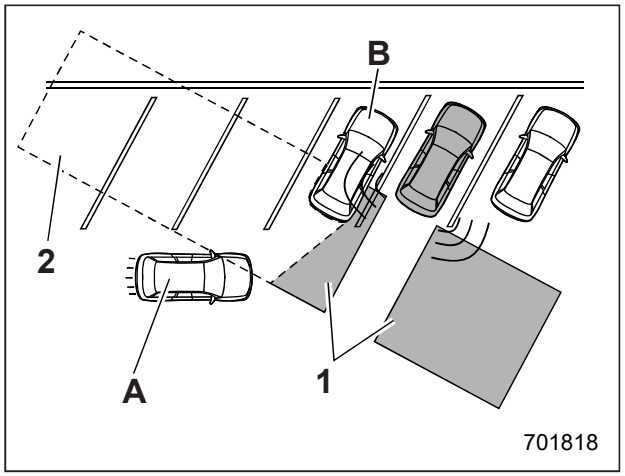


Example 1

1) The detection range of the radar sensors
2) Area out of detection range of the radar sensors

A) Vehicle that may not be detected
B) Parked vehicle

⚠ WARNING

An approaching vehicle (A) may not be detected because the detection range is limited by the parked vehicle (B). Always be sure to check the surroundings with your eyes when reversing the vehicle.

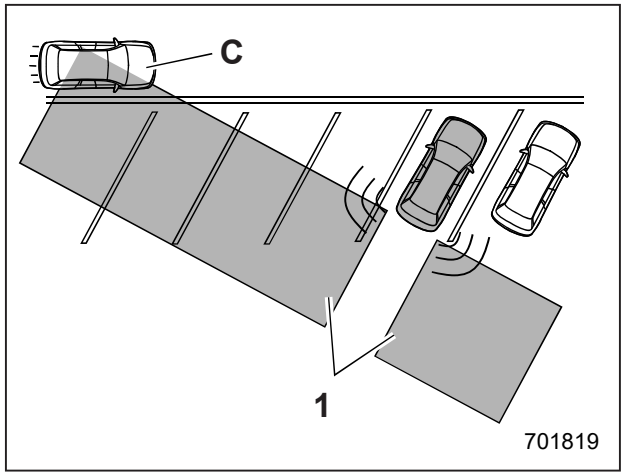

Example 2

1) The detection range of the radar sensors

C) Vehicle that may be detected

NOTE

The system may detect that a vehicle (C) is passing in front of your vehicle. Always be sure to check the surroundings with your eyes when reversing the vehicle.

– CONTINUED –

■ System Operation

▼ Operating conditions

The SRVD will operate when all of the following conditions are met.

- The ignition switch is in the “ON” position.
- The SRVD warning indicator and SRVD OFF indicator are turned off.
- The vehicle is driven at speeds above12 km/h (7 mph) (except when reversing).
- The shift lever/select lever is in the “R” position (RCTA only).

The SRVD will not operate in the following situations.

- The SRVD OFF indicator appears.
- The vehicle speed is below 10 km/h (6 mph) even when the SRVD OFF indicator does not appear (except when reversing).

NOTE

- **In the following cases, the SRVD will stop operating and the SRVD warning indicator will appear.**
  - **When a malfunction occurs in the system, including the SRVD approach indicator light**
- **If the SRVD warning indicator appears, exercise proper caution. For details, refer to "SRVD Warning Indicator" ☞P261.**
- **In the following cases, the SRVD will temporarily stop operating (or may stop operating) and the SRVD OFF indicator will appear.**
  - **When the radar sensor becomes significantly misaligned (If the orientation of the radar sensor is shifted for any reason, readjustment is required. We recommend that you have the sensor adjusted at a SUBARU dealer.)**
  - **When a large amount of snow or ice sticks to the rear bumper surface around the radar sensors**
  - **When the vehicle is driven on a snow-covered road or in an environment in which there are no objects around (such as in a desert) for a prolonged period of time**
  - **When the temperature around the radar sensors increases excessively due to long driving on uphill grades in the summer, etc.**
  - **When the temperature around the radar sensors becomes extremely low**
  - **When the vehicle battery voltage lowers**
  - **When the vehicle voltage exceeds the battery voltage rating**

The SRVD will resume operation once these conditions are corrected, and the SRVD OFF indicator will disappear. However, if the SRVD OFF indicator appears for a prolonged period of time, we recommend that you have the system inspected at a SUBARU dealer as soon as possible.

- **The detectability of the radar sensors is restricted. The SRVD detection may be impaired and the system may not operate properly under the following conditions.**
  - **When the rear bumper around the radar sensors is distorted**
  - **When ice, snow or mud adheres to the rear bumper surface around the radar sensors**
  - **When stickers, etc. are affixed on the areas of the radar sensors on the rear bumper**
  - **During adverse weather conditions such as rain, snow or fog**
  - **When driving on wet roads such as snow-covered roads and through puddles**
- **The radar sensors may not detect or may have difficulty detecting the following vehicles and objects.**
  - **Small motorcycles, bicycles, pedestrians, stationary objects on the road or road side, etc.**
  - **Vehicles with body shapes that the radar may not reflect (vehicles with lower body height such as a**

trailer with no cargo and sports cars)
- Vehicles that are not approaching your vehicle even though they are in the detection area (either on a neighboring lane to the rear or beside your vehicle when reversing) (The system determines the presence of approaching vehicles based on data detected by the radar sensors.)
- Vehicles traveling at significantly different speeds
- Vehicles driving in parallel at almost the same speed as your vehicle for a prolonged time
- Oncoming vehicles
- Vehicles in a lane beyond the neighboring lane
- Vehicles travelling at a significantly lower speed that you are trying to overtake


- **On a road with extremely narrow lanes, the system may detect vehicles driving in a lane next to the neighboring lane.**

■ SRVD Approach Indicator Light/Warning Buzzer

While the SRVD is active, the following item(s) will operate to alert the driver:

- The SRVD approach indicator light (when there are vehicles in the neighboring lanes).
- The SRVD approach indicator light and warning buzzer (when a vehicle is approaching from the left or right side while your vehicle is reversing)

▼ SRVD approach indicator light

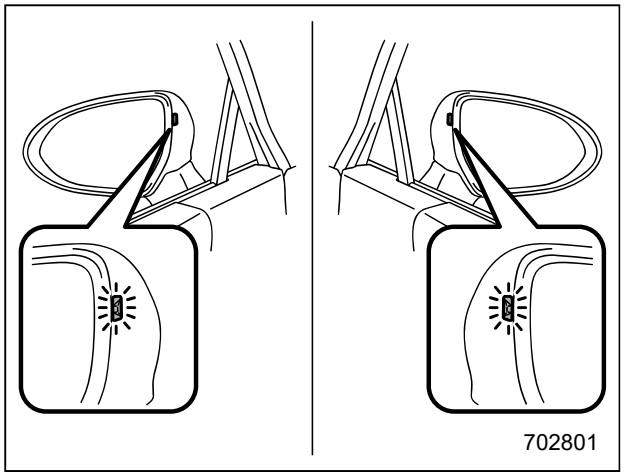

SRVD approach indicator light

It is mounted on each side of the outside mirrors.

The indicator light will illuminate when a vehicle approaching from behind is detected.

The indicator light will flash to warn the driver of dangers under the following conditions.

- While the indicator light is illuminating, if the turn signal lever is operated toward the side in which this light turned on
- When reversing the vehicle while the system detects a vehicle approaching from either side

▽ SRVD approach indicator light dimming function

When the headlights are turned on, the brightness of the SRVD approach indicator light will be reduced.

NOTE

- **You may have difficulty seeing the SRVD approach indicator light under the following conditions.**
  - When sunlight shines directly on it
  - When the headlight beams from a vehicle traveling behind shines directly on it
- **While the illumination brightness control dial is in the fully upward position, even if the headlights are turned on, the brightness of the SRVD approach indicator light will not be reduced. For details about the illumination brightness control dial, refer to "Illumination Brightness Control" ☞P124.**

– CONTINUED –

▼ SRVD approach warning buzzer (only when reversing)

A warning buzzer sounds along with flashing of the SRVD approach indicator light to warn the driver of dangers.

The setting of the warning buzzer volume can be changed by operating the center information display. For details, refer to "Car settings" ☞P159.


▼ Safety tips regarding the SRVD approach indicator light/warning buzzer

• In the following cases, operation of the SRVD approach indicator light and the warning buzzer may be delayed or the system may fail to issue these warnings.

- When a vehicle moves to the neighboring lane from a lane next to the neighboring lane
- When driving on a steep incline or on repeated sharp uphill and downhill grades
- When going beyond a pass
- When both your vehicle and a vehicle driving on a neighboring lane are driving on the far side of each lane.
- When several narrowly-spaced vehicles are approaching in a row
- In low radius bends (tight bends or when making turns at an intersection)
- When there is a difference in height between your lane and the neighboring lane
- Immediately after the SRVD is activated by touching “SRVD”
- Immediately after the shift lever/ select lever is shifted to the “R” position
- When extremely heavy cargo is loaded in the trunk

• During reversing, operation of the SRVD approach indicator light and the warning buzzer may be delayed or the system may fail to issue these warnings under the following conditions.

- When backing out of an angled parking space
- When a large-sized vehicle is parked next to your vehicle (That vehicle prevents the propagation of radar waves.)
- When reversing on sloped roads
- When reversing at a high speed

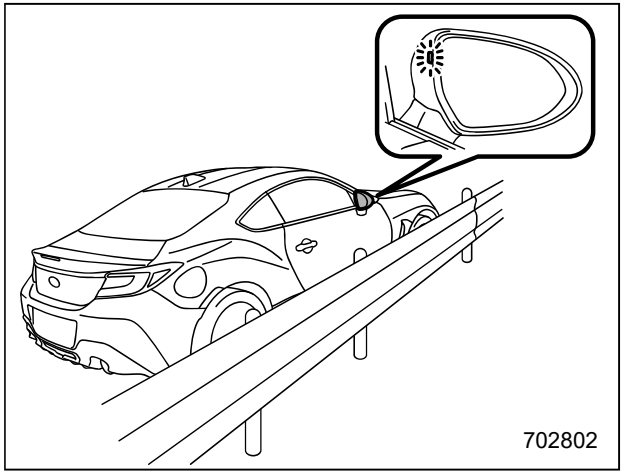

• The SRVD approach indicator light may illuminate when driving close to solid objects on the road or road side (such as guardrails, tunnels and sidewalls).

• When turning at an intersection in urban areas, or a multilane intersection, the SRVD approach indicator light may flash.

• If a building or a wall exists in the reversing direction, the SRVD approach indicator light may flash and the warning buzzer may sound.


• In the following cases, the system may detect a vehicle driving two lanes away from your vehicle.

- When your vehicle drives on the near side of its lane from the corresponding vehicle

- When the vehicle driving two lanes away drives on the near side of its lane from your vehicle

■ SRVD OFF Indicator

▼ System temporary stops

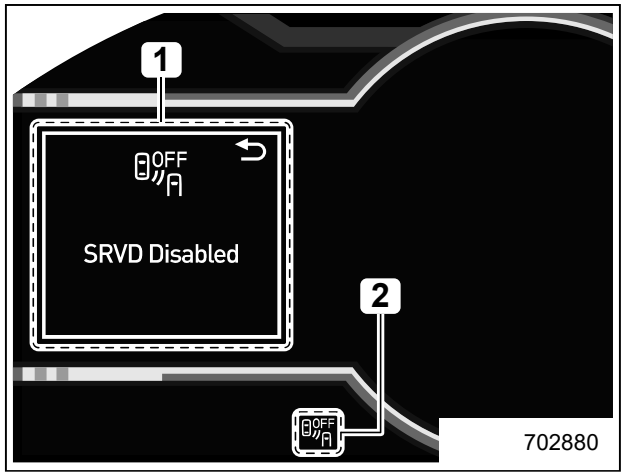


1) SRVD temporary stop message
2) SRVD OFF indicator

This display appears when the system is used at extremely high or low temperatures or when abnormal voltage exists. Once these conditions are corrected, the system will recover from the temporary stop condition and the indicator will disappear.

If the indicator remains displayed for a prolonged time, we recommend that you have the system inspected at a SUBARU dealer.

▼ System temporary stops due to reduced radar sensitivity

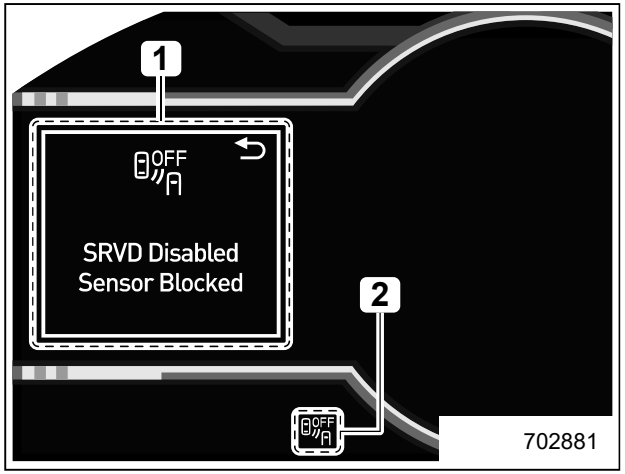


1) SRVD temporary stop message due to reduced radar sensitivity
2) SRVD OFF indicator

This display appears when the detectability of the radar sensors is reduced. Once the condition is corrected, the system will recover from the temporary stop condition and the indicator will disappear.

If the indicator remains displayed for a prolonged time, we recommend that you have the system inspected at a SUBARU dealer.

■ SRVD Warning Indicator

▼ System malfunction

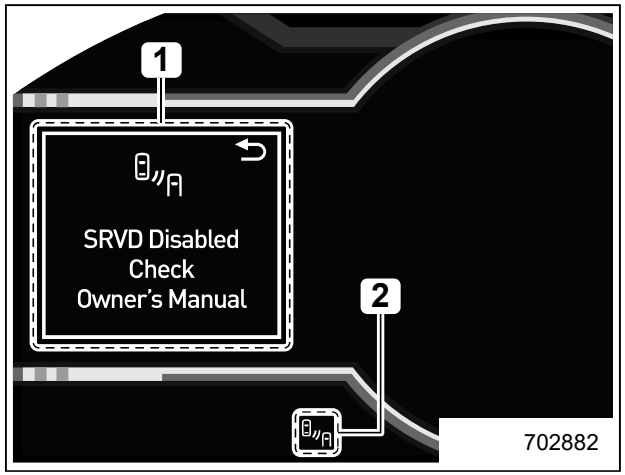


1) SRVD malfunction message
2) SRVD warning indicator

This display appears when a malfunction occurs in the system. We recommend that you contact a SUBARU dealer and have the system inspected.

– CONTINUED –

■ To Turn On/Off the SRVD

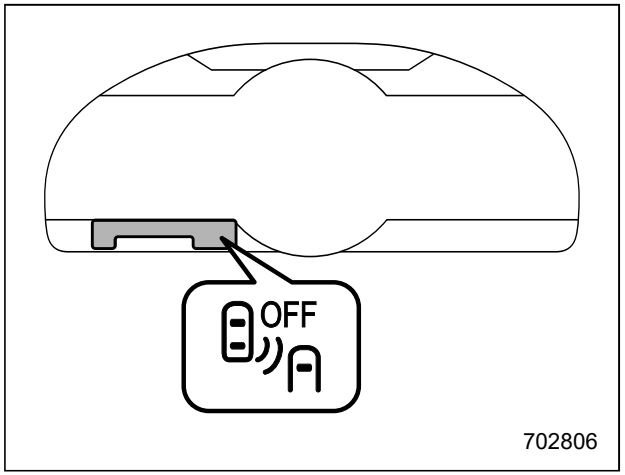

SRVD OFF indicator

To turn the SRVD system on and off, operate the center information display. Refer to "Car settings" ☞P159.

When the SRVD system is turned OFF, the SRVD OFF indicator on the combination meter display (color TFT) will illuminate.

NOTE

• In the following cases, turn off the SRVD system. The system may not operate properly due to blocked radar waves.

- When towing the vehicle


- When a bicycle carrier or other item is fitted to the rear of the vehicle

- When using a chassis dynamometer or free roller device, etc.

- When running the engine and making the wheels rotate while lifting up the vehicle


• If the ignition switch is turned to the "OFF" position, the last known status of the system is maintained. For example, if the ignition switch is turned to the "OFF" position with the SRVD deactivated, the SRVD remains deactivated the next time the ignition switch is turned to the "ON" position.

■ Handling of Radar Sensors

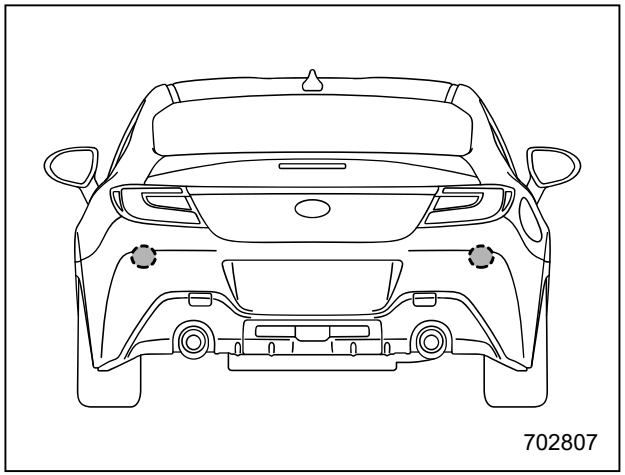

Radar sensors

The radar sensors, one on each side of the vehicle, are mounted inside the rear bumper.

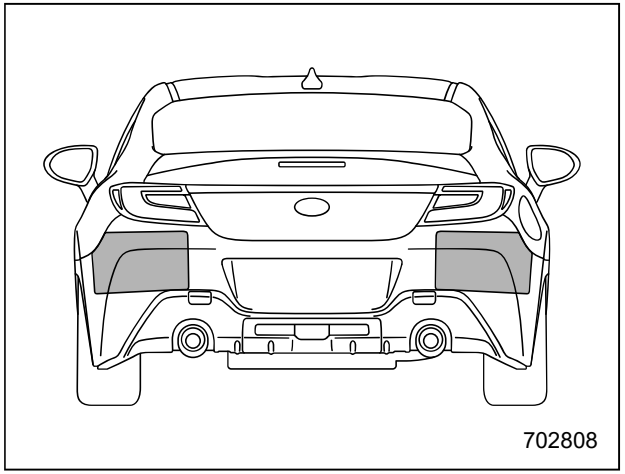

⚠ CAUTION

To ensure correct operation of the SRVD, observe the following precautions.

- **Always keep the bumper surface near the radar sensors clean.**
- **Do not affix any stickers or other items on the bumper surface near the radar sensors. For details, we recommend that you consult your SUBARU dealer.**
- **Do not modify the bumper near the radar sensors.**
- **Do not paint the bumper near the radar sensors.**

- **Do not expose the bumper near the radar sensors to strong impacts. If a sensor becomes misaligned, a system malfunction may occur, including the inability to detect vehicles entering the detection areas. If any strong shock is applied to the bumper, we recommend that you contact your SUBARU dealer for inspection.**
- **Do not disassemble the radar sensors.**

NOTE

If the radar sensors require repair or replacement, or the bumper area around the radar sensors requires repair, paintwork or replacement, we recommend that you contact your SUBARU dealer for assistance.

7-20. Reverse Automatic Braking (RAB) System (If Equipped)

Reverse Automatic Braking (RAB) is a system designed to help avoid collisions or reduce collision damage when reversing the vehicle. If a wall or an obstacle is detected in the reversing direction, the system will notify the driver with a warning sound and may activate the vehicle's brakes automatically.

⚠ WARNING

- **Reverse Automatic Braking (RAB) is not a system intended to replace the driver's responsibility to check their surroundings for vehicles or obstacles to avoid a collision.**
- **The driver is responsible for driving safely. Before reversing, be sure to first depress the brake pedal and visually check the surroundings.**
- **There are some cases in which the vehicle cannot avoid collision, because the system operation has limitations. The warning sound or automatic braking may be delayed or may not operate at all even when an obstacle is present.**
- **Make sure to set the Automatic Braking function to OFF when the vehicle is on the free roller or on the chassis dynamometer. Otherwise, the vehicle may move and it may cause an accident.**
- **Make sure to set the Automatic Braking function to OFF when towing the vehicle. Otherwise, the vehicle may move and it may cause an accident.**
- **The system is not designed to detect people (including children), animals or other moving objects.**
- **Depending on the vehicle condition or the surrounding environment, the sonar sensor's ability to detect objects may become unstable.**

– CONTINUED –

NOTE

The Reverse Automatic Braking (RAB) system records and stores the following data when automatic braking operates. It does not record conversations, personal information or other audio data.

- **Distance from the object**
- **Vehicle speed**
- **Accelerator pedal operation status**
- **Brake pedal operation status**
- **Select lever position**
- **Outside temperature**
- **The sensitivity setting of the sonar sensors**

SUBARU and third parties contracted by SUBARU may acquire and use the recorded data for the purpose of vehicle research and development. SUBARU and third parties contracted by SUBARU will not disclose or provide the acquired data to any other third party except under the following conditions.

- **The vehicle owner has given his/her consent.**
- **The disclosure/provision is based on a court order or other legally enforceable request.**
- **Data that has been modified so that the user and vehicle cannot be identified is provided to a research institution for statistical processing or similar purposes.**

■ Reverse Automatic Braking (RAB) System Overview


The Reverse Automatic Braking (RAB) system will operate the following 2 functions using 4 sonar sensors.

- **Sonar Audible Alarm function**

The Reverse Automatic Braking (RAB) system detects objects rearward and warns the driver by warning message on the center information display and warning beeps.

- **Automatic Braking function**

The Automatic Braking function detects objects rearward and if there is a high risk of a collision, the system decelerates the vehicle and controls the braking to reduce damage.

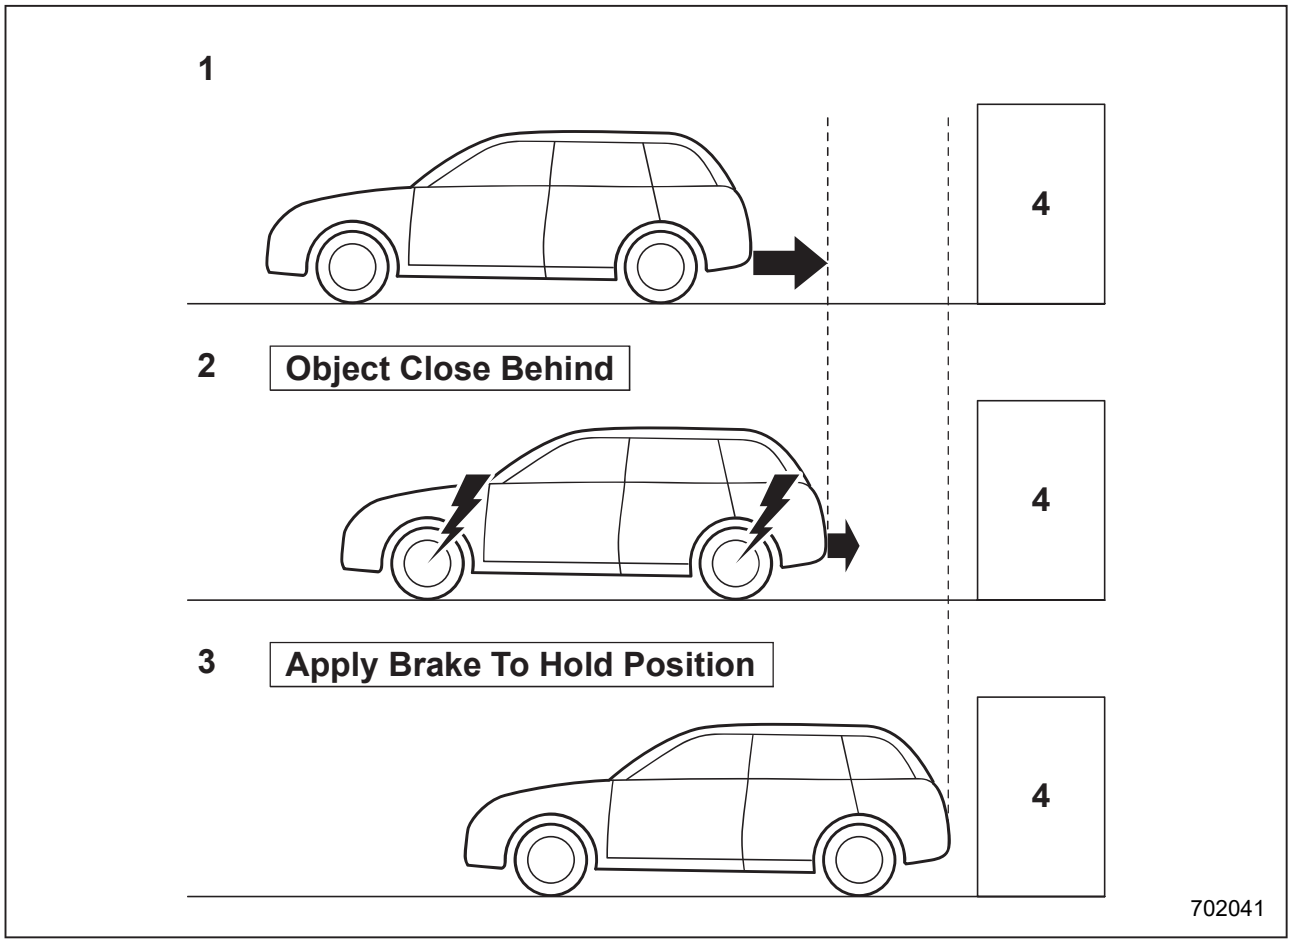

1) When reversing
2) When either strong automatic braking or torque control is applied to prevent collision (in this case, short warning beeps or continuous warning beeps will sound)
3) When the vehicle is stopped by the system (in this case, the continuous beep will remain sounding)
4) Object (e.g., a wall)


⚠ WARNING

If your vehicle is trapped on a railroad crossing and you are trying to escape by reversing through the crossing gate, the system may recognize the crossing gate as an obstacle and brake may activate. In this case, remain calm and either continue to depress the accelerator pedal or cancel the system. To cancel the system, refer to "Canceling the Reverse Automatic Braking (RAB) System Operation" ☞P272.

■ Operating Conditions

The Reverse Automatic Braking (RAB) system will operate when all of the following conditions are met.

– CONTINUED –

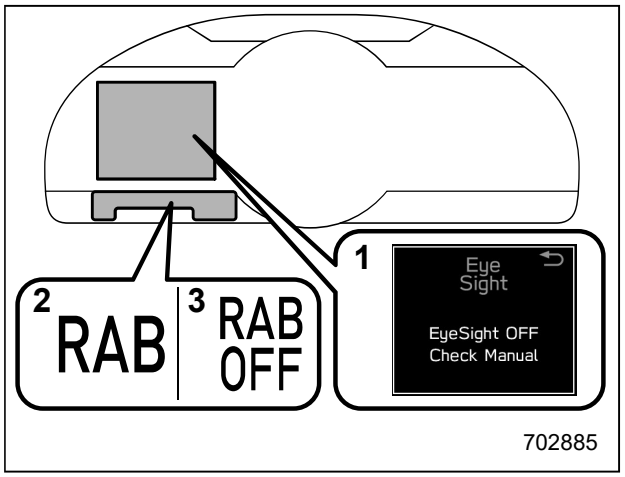

1) EyeSight warning indicator
2) RAB warning indicator
3) RAB OFF indicator

- The ignition switch is in the “ON” position.
- The EyeSight warning indicator is off.
- The RAB warning indicator is off.
- The RAB OFF indicator is off.
- The select lever is in the “R” position.

Sonar Audible Alarm function

- The Sonar Audible Alarm function is set to “ON”.
- The vehicle speed is from 0 to 15 km/h (0 to 9 mph).

Automatic Braking function

- The Automatic Braking function is set to “ON”.
- The vehicle speed is from 1.5 to 15 km/h (1 to 9 mph).

NOTE

- **In the following cases, the Reverse Automatic Braking (RAB) system will not operate. Promptly we recommend that you contact a SUBARU dealer to have the system inspected.**
  - **The EyeSight warning indicator is illuminated.**
  - **The RAB warning indicator is illuminated.**
- **In the following cases, the Reverse Automatic Braking (RAB) system cannot be operated.**
  - **The RAB OFF indicator is illuminated.**
- **In the following cases, the functions may not be able to properly work. Promptly we recommend that you contact a SUBARU dealer to have the system inspected.**
  - **A sticker, paint, or a chemical is applied to the sonar sensors or the rear bumper near the sonar sensor.**
  - **The rear bumper is modified.**
  - **The rear bumper has been removed and attached.**
  - **The ground clearance is changed due to the vehicle’s loading condition or modification.**
  - **There is damage to the sonar sensors or the rear bumper near the sonar sensor.**
  - **The rear bumper is exposed to strong impact, or the rear bumper is deformed.**
- **On a steep hill, the system’s automatic braking ability will be reduced.**
- **The system is designed to avoid collisions by automatic hard braking when the vehicle’s reversing speed is less than approximately 5 km/h (3 mph). However, the system does not guarantee that the vehicle will be able to avoid collisions in any situation.**
- **If the vehicle is reversed at an extremely slow speed, the driver’s operation may be prioritized. In this case, automatic braking will not operate.**
- **The system may not be able to detect and apply the brake with the following objects.**
  - **Sharp or thin objects such as poles, fences and ropes which may not reflect the sound wave emitted from the sonar sensor.**
  - **Objects that are too close to the rear bumper when the select lever is set to the “R” position.**
  - **Objects with a surface which may not reflect the sound wave**

emitted from the sonar sensor such as a chain link fence.

• Objects the system is not designed to detect and apply brake.
- Pedestrians.
- Moving objects including moving vehicles.
- Objects which absorbs sound waves such as cloth or snow.
- Objects whose surface has a diagonal angle.
- Objects that are low to the ground such as parking blocks.
- Objects that are high above the ground such as objects hanging from above.
- Objects that are out of range of the center of the vehicle in the horizontal direction.
- Objects that are not perpendicular to the ground.
- The surface of the object is uneven or wavy.

• When reversing the vehicle, the functions may not be able to work properly or may cause a system malfunction if the following conditions exist.

High frequency sound from other sources are nearby:
- Horn sound from another vehicle.
- Engine sound from other vehicles.
- Sound of an air brake.
- Vehicle detection equipment or a sonar from another vehicle.
- A sound wave with a frequency similar to the vehicle's system is transmitted near by.
- A vehicle equipped with the same system is reversing toward your reversing direction.


Weather conditions:
- Extremely high or extremely low temperatures in which the area near the sonar sensor becomes too hot or too cold to operate.
- The sonar sensors or the rear bumper near the sonar sensors are exposed to heavy rain or a significant amount of water.
- Fog, snow or sandstorm, etc.
- Air is moving rapidly such as when a strong wind is blowing.


Parts attached to the rear bumper near the sonar sensor:
- Commercial electronic parts (fog light, fender pole, radio antenna) or commercial attachment parts (trailer hitch, bicycle carrier, bumper guard) are attached.
- Parts that emit high frequency sound, such as a horn or speaker, are attached.

Vehicle conditions:
- Ice, snow or mud is adhered to the sonar sensors or the rear bumper near the sonar sensor.
- The vehicle is significantly inclined.
- The ground clearance is significantly reduced due to the vehicle's loading condition, etc.
- When the sonar sensor is misaligned due to a collision or an accident.


Surrounding environment:
- A cloth banner, flag, hanging branch or railroad crossing bars are present in the reversing direction.
- When reversing on a gravel or grassy area.
- When reversing in an area where objects or walls are adjacent to the vehicle such as narrow tunnels, narrow bridges, narrow roads or narrow garages.
- Wheel track or hole is present in the ground of the reversing direction.
- When reversing over a drainage cover (grating cover).


– CONTINUED –

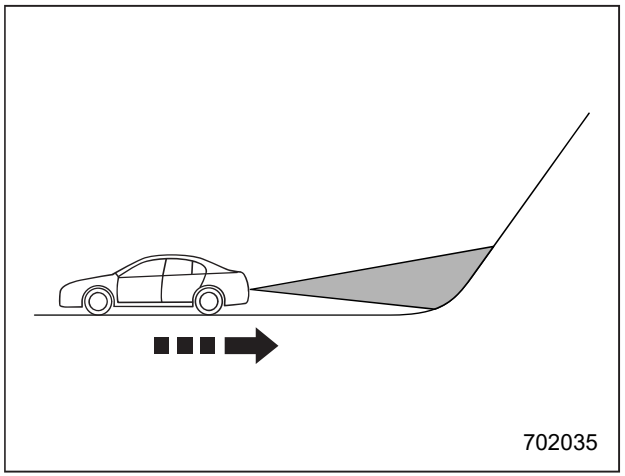

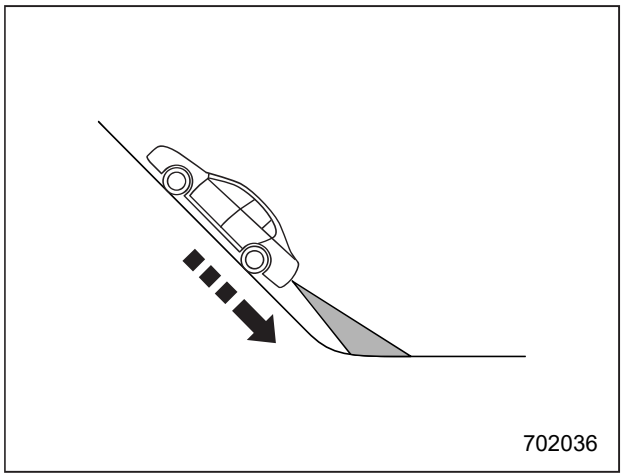

- The path of the reversing direction is inclined such as on a steep uphill.
- When reversing downhill.

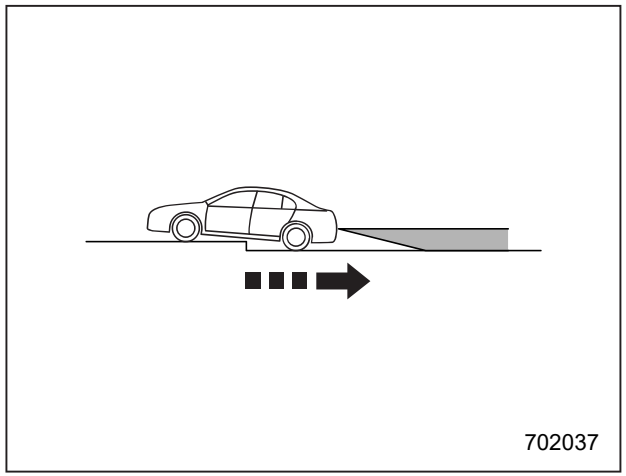

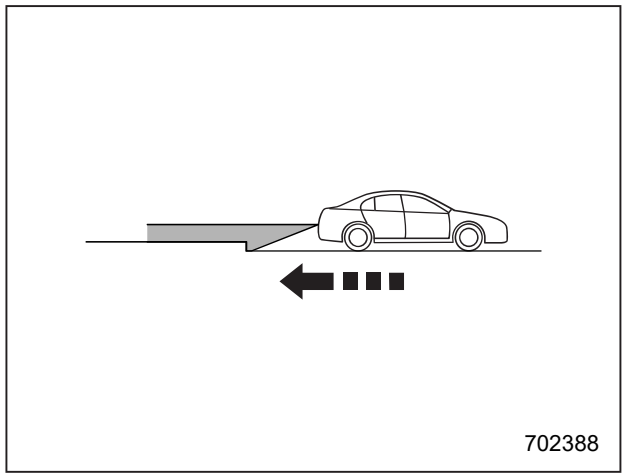

- Reversing in a garage with a low ceiling or a tunnel.
- A curb or step is present in the reversing direction.
- There is a patch of snow rearward.
- There is a puddle of water.
- There is an obstacle that is next to an object.
- Going back along a wall.
- The area where the road starts touching dirt and snow
- When reversing on an uneven road.

• In circumstances such as the following, it may not be possible to avoid a collision even when the system operates normally.
- Roads are slippery.
- The tire air pressure is not correct.
- The tires have become worn.
- Tire chains are installed.
- Tires which are not the designated size are installed.
- Emergency repairs were performed using a puncture repair kit.
- The suspension was modified.
- Vehicle driving is unstable due to accident or malfunction.
- The brake warning light is illuminated.

■ Sonar Audible Alarm Function

When Reverse Automatic Braking (RAB) system is in operation, an audible warning beeps will sound in 3 levels to warn the driver of a potential collision.

NOTE

It may take time to display the wall and sound warning beeps after the object was recognized by the Sonar Audible Alarm function.


Guideline of detecting range

Alert level	Range of detected object*	Distance indicator	Alarm pattern
Long proximity (object detected)	90 cm (35 in) or more	Green	No warning sound
Medium proximity alert (approaching the object)	70 to 90 cm (28 to 35 in)	Yellow	Short beeps
Short proximity alert (approaching closer to the object)	50 to 70 cm (20 to 28 in)	Orange	Rapid short beeps
Closest proximity alert (too close to the object)	50 cm (20 in) or less	Red	Continuous beep


*: Range of detection may vary depending on the environmental condition.

– CONTINUED –


▼ Obstacle detected and alert level

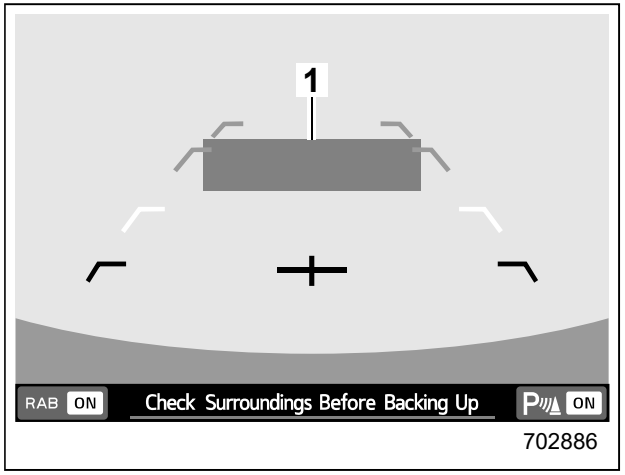


Long proximity alert (object detected)
1) Green: 90 cm (35 in) or more

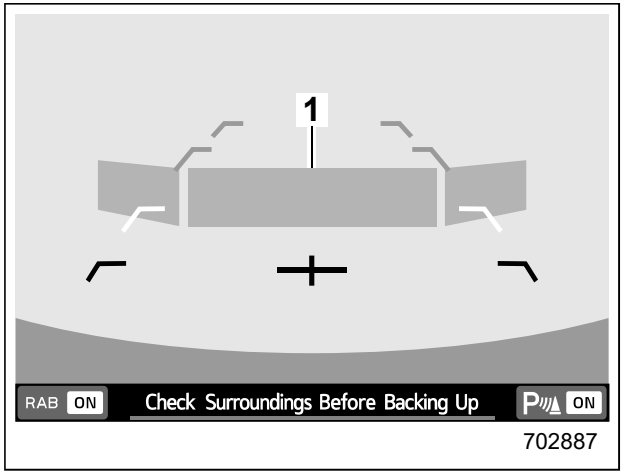

Medium proximity alert (approaching the object)
1) Yellow: 70 to 90 cm (28 to 35 in)

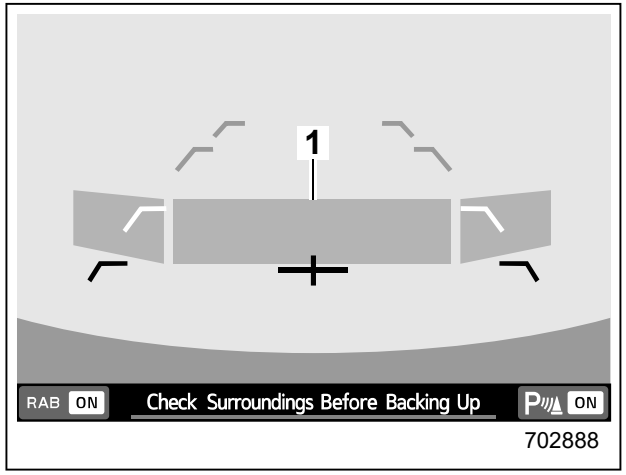

Short proximity alert (approaching the object closer)
1) Orange: 50 to 70 cm (20 to 28 in)

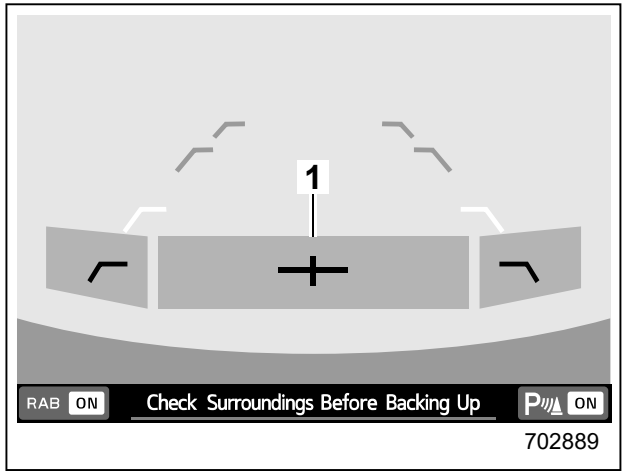


Closest proximity alert (too close to the object)
1) Red: 50 cm (20 in) or less

When an object is detected in the reversing direction, the range of detected object will be shown on the center information display.

A warning alarm will sound and, depending on the speed, either torque control to generate engine braking or automatic braking will be applied.

■ Automatic Braking Function Operation

▼ Object close behind warning

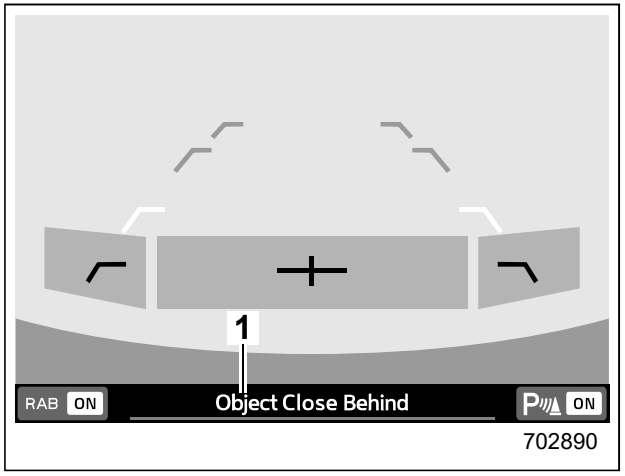


Automatic braking warning
1) Warning message

If the system determine the risk of collision with the object. Short warning beeps or continuous warning beeps will sound and

either strong automatic braking or torque control will be applied to prevent collision.

At this time, a warning message is also displayed on the combination meter display (color TFT).

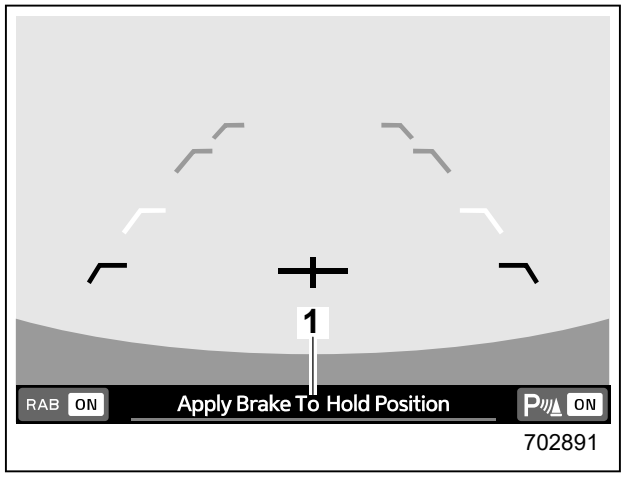

Depress brake pedal warning
1) Warning message

Make sure to depress the brake pedal once the vehicle has been stopped by automatic braking. Until the brake pedal is depressed, a message will be displayed on the center information display and the continuous beep will remain sounding.

At this time, a warning message is also displayed on the combination meter display (color TFT).


NOTE

The Sonar Audible Alarm function and Automatic Braking function are different in operation conditions. Therefore there are cases in which only one of these functions will activate.

⚠ WARNING

Depress the brake pedal immediately after the system stops the vehicle by automatic braking. Depending on the conditions of the road surface and tires, the vehicle may not remain stopped, possibly leading to an accident.

▼ After the vehicle is stopped by the system

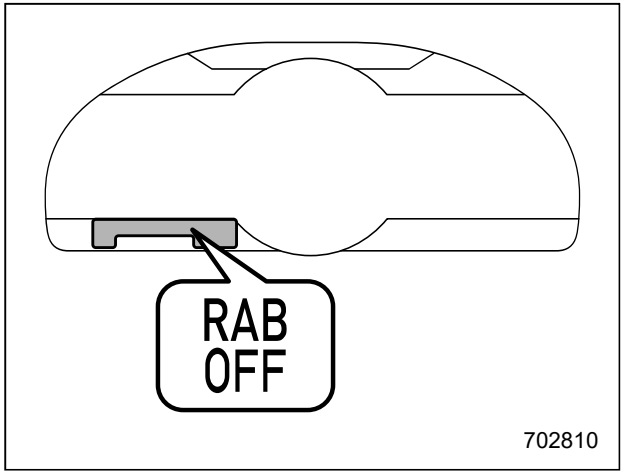

After the brake pedal is depressed, the RAB OFF indicator will illuminate and the system will temporarily stop operating. The RAB OFF indicator will turn off when the select lever is shifted to a position other than the “R” position.

The system will operate again the next time the select lever is shifted to the “R” position.

NOTE

- **The Reverse Automatic Braking (RAB) system will be disabled in the following situations.**
  - **When 3 seconds pass after the vehicle is stopped**
  - **When any door is opened**
  - **When the RAB warning indicator is illuminated**
  - **When the RAB OFF indicator is illuminated**
- **The Reverse Automatic Braking (RAB) system may stop operating temporarily in the following cases and the RAB OFF indicator will illuminate.**
  - **Ice, snow or mud is adhered to the sonar sensors or the rear bumper near the sonar sensor**
  - **Objects are too close to the rear bumper when the select lever is set to the “R” position**
  - **The system detects sounds of a similar frequency to the RAB sonar**

– CONTINUED –

- When the TRC mode and Vehicle Stability Control (VSC) mode are turned off
- When in TRACK mode and the Pre-Collision Braking System has been turned off

■ Canceling the Reverse Automatic Braking (RAB) System Operation

The Reverse Automatic Braking (RAB) system can be temporarily canceled by any of the following operation.


- While the vehicle is stopped by the operation of automatic braking, the brake pedal is depressed.
- While the vehicle is stopped by the operation of automatic braking, the accelerator pedal is depressed.
- The accelerator pedal is depressed continuously (In this case, limited acceleration will be canceled and the vehicle will continue reversing.)
- The select lever is shifted to a position other than the “R” position.

NOTE

The system will be canceled if the object is no longer detected.

■ Reverse Automatic Braking (RAB) System ON/OFF Setting

While the select lever is shifted to the “R” position, the below functions of the Reverse Automatic Braking (RAB) system can be set by operating the center information display.

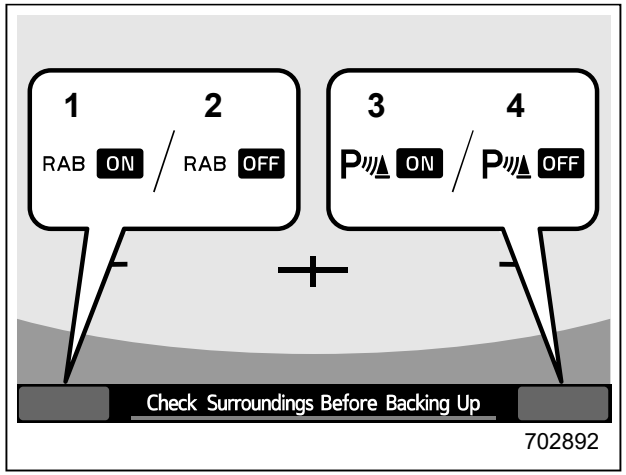

1) ON setting key of Automatic Braking function
2) OFF setting key of Automatic Braking function
3) ON setting key of the Sonar Audible Alarm function
4) OFF setting key of the Sonar Audible Alarm function


When the ON setting key is shown, the corresponding setting is ON.

Touch the ON setting key to turn the setting OFF.

When the OFF setting is shown, the corresponding setting is OFF.

Touch the OFF setting key to turn the setting ON.

When the Automatic Braking function are turned OFF, the following indicator(s) will illuminate.

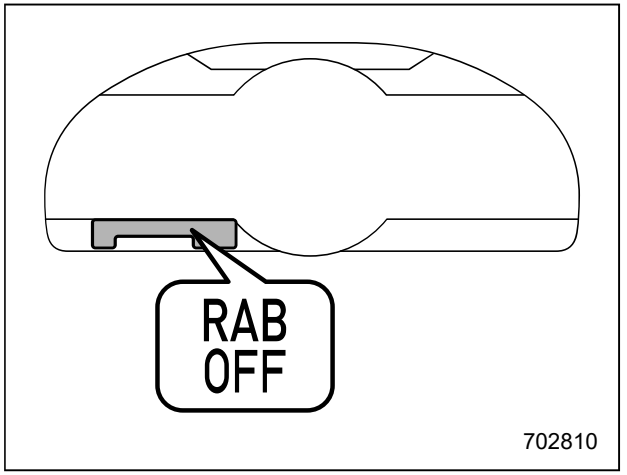

The RAB OFF indicator will turn off when the corresponding function is turned ON.

NOTE


When the settings cannot be changed, the ON/OFF setting key will be grayed out.

Also, the following settings can be changed by operating the center information display.

- Warning volume
- Sonar Audible Alarm
- Automatic Braking

For details, refer to "Car settings" ☞P159.


■ RAB Warning Indicator

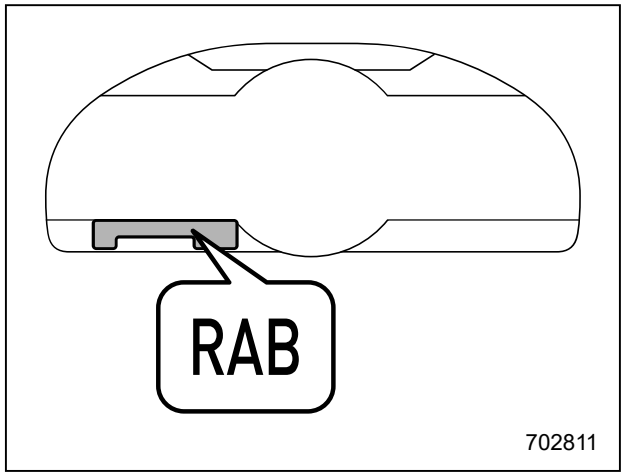

If the Reverse Automatic Braking (RAB) system malfunctions, the above indicator illuminates on the combination meter. We recommend that you contact the nearest SUBARU dealer for details.

■ Handling of the Sonar Sensors

The 4 sonar sensors are located in the rear bumper. To ensure the proper operation of the Reverse Automatic Braking (RAB) system, observe the following precautions.

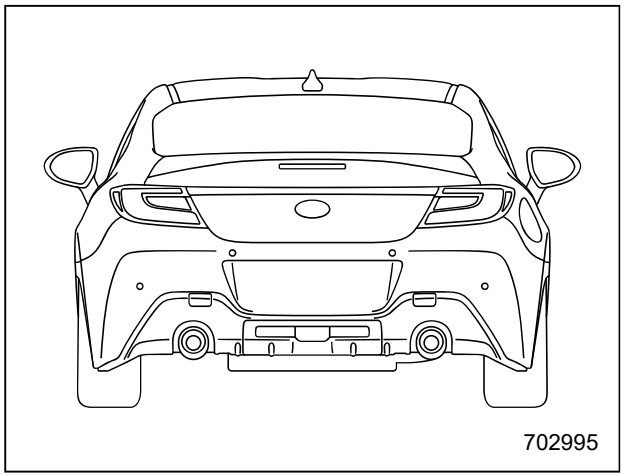

- Do not affix any stickers or other items on the sonar sensor or the bumper surface near the sonar sensors.
- Always keep the sonar sensor and the rear bumper surface near the sonar sensors clean.
- Do not modify rear bumper.
- Do not paint the bumper near the sonar sensors.
- Do not apply high pressure water to the sonar sensors with a high pressure car-washing machine.
- Do not apply strong impacts to the rear bumper near the sonar sensors. If a sensor becomes misaligned, a system malfunction may occur, including inability to detect objects in the reversing direction. If any strong impact is applied to the rear bumper, we recommend that you contact a SUBARU dealer to have the system inspected.
- Do not disassemble the sonar sensors.

NOTE

If the sonar sensors require repair or replacement, or if the area of the rear bumper near the sonar sensors requires repair, paintwork or replacement, we recommend that you contact your SUBARU dealer for assistance.

8-1. New Vehicle Break-In Driving – the First 1,600 km (1,000 miles) 276
8-2. Fuel Economy Hints 276
8-3. Engine Exhaust Gas (Carbon Monoxide) 276
8-4. Catalytic Converter 277
8-5. Gasoline Particulate Filter (If Equipped).....278
When gasoline particulate filter warning light illuminates 278
When gasoline particulate filter warning light flashes.....279
8-6. Periodic Inspections.....280
8-7. Driving in Foreign Countries.....280
8-8. Driving Tips 280
8-9. Winter Driving.....281
Operation during Cold Weather 281
Driving on Snowy and Icy Roads 283
Corrosion Protection..... 284
Snow Tires..... 284
Tire Chains 284
Rocking the Vehicle..... 285
8-10.Loading Your Vehicle 285
Vehicle Capacity Weight 286
8-11.Trailer Towing 287

8-1. New Vehicle Break-In Driving – the First 1,600 km (1,000 miles)

The performance and long life of your vehicle are dependent on how you handle and care for your vehicle while it is new. Follow these instructions during the first 1,600 km (1,000 miles):

- Do not race the engine. And do not allow engine speed to exceed 4,000 rpm except in an emergency.
- Do not drive at one constant engine or vehicle speed for a long time, either fast or slow.
- Avoid starting suddenly and rapid acceleration, except in an emergency.
- Avoid hard braking, except in an emergency.

The same break-in procedures should be applied to a newly installed or overhauled engine or when brake pads are replaced with new ones.

8-2. Fuel Economy Hints

The following suggestions will help to save your fuel.

- Select the proper gear position for the speed and road conditions.
- Avoid sudden acceleration or deceleration. Always accelerate gently until you reach the desired speed. Then try to maintain that speed for as long as possible.
- Do not pump the accelerator and avoid racing the engine.
- Avoid unnecessary engine idling.
- Keep the engine properly tuned.
- Keep the tires inflated to the correct pressure shown on the tire inflation pressure label, which is located on the driver's center pillar. Low pressure will increase tire wear and fuel consumption.
- Use the air conditioner only when necessary.
- Keep the front and rear wheels in proper alignment.
- Avoid carrying unnecessary luggage or cargo.

8-3. Engine Exhaust Gas (Carbon Monoxide)

⚠ WARNING

- **Never inhale engine exhaust gas. Engine exhaust gas contains carbon monoxide, a colorless and odorless gas which is dangerous, or even lethal, if inhaled.**
- **Always properly maintain the engine exhaust system to prevent engine exhaust gas from entering the vehicle.**
- **Never run the engine in a closed space, such as a garage, except for the brief time needed to drive the vehicle in or out of it.**
- **Avoid remaining in a parked vehicle for a long time while the engine is running. If that is unavoidable, then use the ventilation fan to force fresh air into the vehicle.**
- **Always keep the front ventilator inlet grille free from snow, leaves or other obstructions to ensure that the ventilation system always works properly.**

- **If at any time you suspect that exhaust fumes are entering the vehicle, have the problem checked and corrected as soon as possible. If you must drive under these conditions, drive only with all windows fully open.**
- **Keep the trunk lid closed while driving to prevent exhaust gas from entering the vehicle.**


NOTE

Due to the expansion and contraction of the metals used in the manufacture of the exhaust system, you may hear a crackling sound coming from the exhaust system for a short time after the engine has been shut off. This sound is normal.

8-4. Catalytic Converter

⚠ WARNING

- **Avoid fire hazards. Do not drive or park the vehicle anywhere near flammable materials (e.g. grass, paper, rags or leaves), because the catalytic converter operates at very high temperatures.**
- **Keep everyone and flammable materials away from the exhaust pipe while the engine is running. The exhaust gas is very hot.**

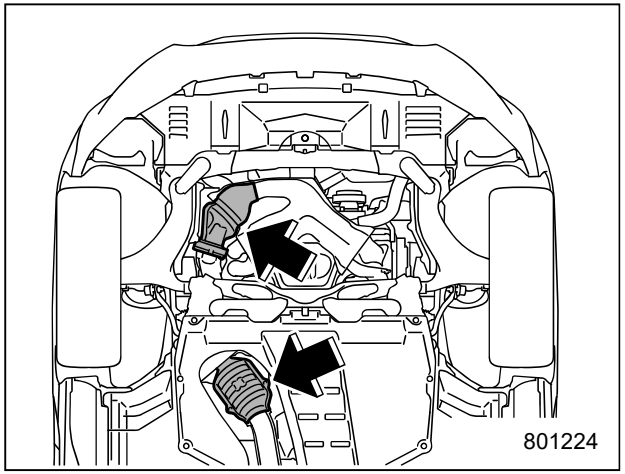


The catalytic converter is installed in the exhaust system. It serves as catalyst to reduce HC, CO and NOx in exhaust gases, thus providing cleaner exhaust.

To avoid damage to the catalytic converter:


- Use only unleaded petrol. Even a small amount of leaded fuel will damage the catalytic converter.
- Never start the engine by pushing or pulling the vehicle.
- Avoid racing the engine.
- Never turn off the ignition switch while the vehicle is moving.
- Keep your engine tuned-up. If you feel the engine running rough (misfiring, back-firing or incomplete combustion), we recommend that you have your vehicle checked and repaired by an authorized SUBARU dealer.
- Do not apply undercoating or rust prevention treatment to the heat shield of catalytic converter and the exhaust system.
- Do not drive with an extremely low fuel level.

8-5. Gasoline Particulate Filter (If Equipped)

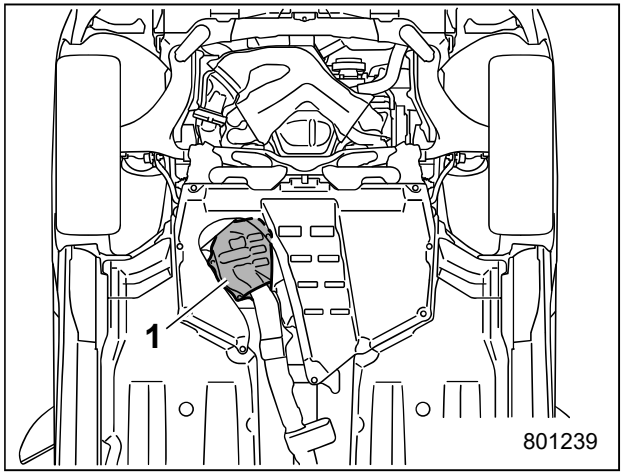

1) Gasoline particulate filter

The gasoline particulate filter is a device that eliminates particulate matter in the exhaust gas of a gasoline engine.

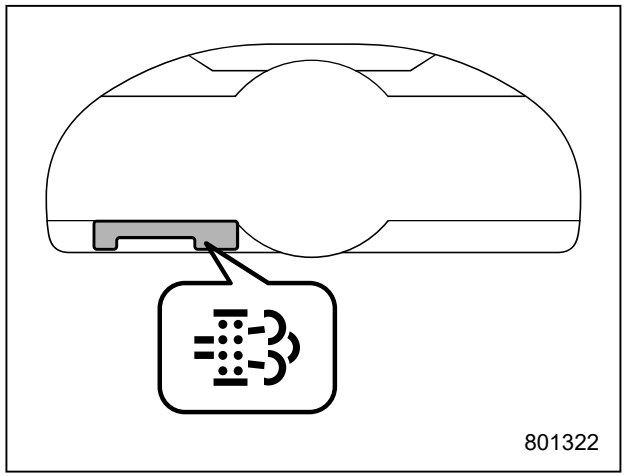

Gasoline particulate filter warning light

■ When gasoline particulate filter warning light illuminates

The gasoline particulate filter warning light will appear when the accumulated particulate matter exceeds the specified limit. When the gasoline particulate filter warning light illuminates, drive the vehicle to regenerate the gasoline particulate filter.
Drive the vehicle under the following conditions after the engine has been warmed up completely.

- Drive at a speed of 60km/h (37 mph) or higher.
- Periodically release the accelerator pedal.

The indicator light will turn off after approximately 30 minutes.
If the indicator light does not turn off, we recommend that you contact a SUBARU dealer.

⚠ WARNING

When gasoline particulate filter regeneration driving is performed, note the following points. Failure to do so may result in a traffic violation or accident.

- **Find a safe and legally acceptable driving location.**
- **Observe the speed limit and pay attention to the vehicle traveling behind you when releasing the accelerator pedal.**

NOTE

• Under following circumstances where particulate filter regeneration driving needs more engine power than normal driving, it may be difficult to achieve filter regeneration.

- Driving uphill, through deserts, and on snowy, unpaved, and dirt roads

- Driving with 4 passengers or with a lot of cargo

- **Do not use cruise control while gasoline particulate filter regeneration driving is performing.**
- **Do not perform gasoline particulate filter regeneration driving while towing something.**
- **While the gasoline particulate filter warning light is illuminating, the engine speed will become higher and its noise and vibration will be louder than normal to allow gasoline particulate filter regeneration.**

▼ How to avoid illumination of the gasoline particulate filter warning light

Repeating short trips under low temperatures and at low speeds will increase the likelihood of gasoline particulate filter warning light illumination. The gasoline particulate filter warning light will illuminate less frequently by driving in the suburbs and by releasing acceleration pedal periodically when driving.

▼ How to perform gasoline particulate filter regeneration driving effectively

The gasoline particulate filter warning light will turn off more quickly by performing effective regeneration driving as follows.

- Periodically releasing the accelerator pedal (approximately 3 seconds to 10 seconds)
- For AT models, driving at an engine speed of 2000 to 3500 rpm.
- For MT models, driving at an engine speed of 2000 to 3000 rpm.

NOTE

- **When the engine speed is too low, it may take more time for the gasoline particulate filter warning light to turn off.**
- **When the engine speed is too high, the gasoline particulate filter cannot be regenerated.**

■ When gasoline particulate filter warning light flashes

When the gasoline particulate filter warning light flashes, we recommend that you consult the nearest SUBARU dealer for an immediate inspection.

⚠ CAUTION

- **Do not drive the vehicle for long periods of time when the gasoline particulate filter warning light is flashing. Doing so could cause the engine power to be limited to protect the engine and the gasoline particulate filter. When the engine power is limited, the vehicle speed will also be limited and acceleration and hill-climbing will be decreased.**
- **Do not tow a vehicle when the gasoline particulate filter warning light is flashing. Doing so could possibly make the vehicle unable to run.**

NOTE

Cruise control cannot be used when the gasoline particulate filter warning light is flashing.

8-6. Periodic Inspections

To keep your vehicle in the best condition at all times, always have the recommended maintenance services listed in the maintenance schedule performed at the specified time or mileage intervals.

8-7. Driving in Foreign Countries

When planning to use your vehicle in another country:

- Confirm the availability of the correct fuel. Refer to "Fuel Requirements" ☞P211.
- Comply with all regulations and requirements of each country.

8-8. Driving Tips

⚠ WARNING

- **Always maintain a safe driving speed according to the road and weather conditions in order to avoid having an accident on a sharp turn, during sudden braking or under other similar conditions.**
- **When replacing or installing tire(s), all four tires must be the same for the following items.**

  (a) Size

  (b) Speed symbol

  (c) Load index

  (d) Circumference

  (e) Construction

  (f) Manufacturer

  (g) Brand (tread pattern)

  (h) Degrees of wear

  For items (a) to (c), you must obey the specification that is printed on the tire inflation pressure label. The tire inflation pressure label is located on the driver's center pillar.

If all four tires are not the same in items (a) to (h), serious mechanical damage could be caused to the drivetrain of the car, and affect the followings.

- **Ride**
- **Handling**
- **Braking**
- **Speedometer/Odometer calibration**
- **Clearance between the body and the tires**

  It also may be dangerous and lead to loss of vehicle control, and it can lead to an accident.

- **In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. The driver and all your passengers should fasten their seatbelts before starting to drive in order to minimize the chance of serious injury or death.**
- **Do not make sharp turns or quick maneuvers unless absolutely unavoidable. Such actions are dangerous as you may lose control, possibly resulting in a rollover which could cause death or serious injury.**
- **Whenever strong crosswinds are present, slow down sufficiently to maintain control of your vehicle.**
- **Never attempt to drive through pools and puddles, or roads flooded with water. Water entering the engine air intake or the exhaust pipe or water splashing onto electrical parts may damage your vehicle and may cause it to stall. In this case, contact your SUBARU dealer immediately. Regardless of its depth, it can wash away the ground from under your tires, resulting in possible loss of traction and even vehicle rollover.**

⚠ CAUTION

After driving on gravel roads or rough roads, check the undercarriage of the vehicle body for any damage, deformation, or paint removal. If you notice any irregularities, we recommend that you contact a SUBARU dealer for an inspection as soon as possible.

8-9. Winter Driving

■ Operation during Cold Weather

Carry some emergency equipment, such as tire chains, a window scraper, a bag of sand, flares, a small shovel and jumper cables.

Check the battery and cables. Cold temperatures reduce battery capacity. The battery must be in good condition to provide enough power for cold winter starts.

It normally takes longer to start the engine in very cold weather conditions. Use an engine oil of a proper grade and viscosity for cold weather. Using heavy summer oil will make it harder to start the engine.

Keep the door locks from freezing by squirting them with deicer or glycerin.

Forcing a frozen door open may damage or separate the rubber weather strips around the door. If the door is frozen, use hot water to melt the ice, and afterwards thoroughly wipe the water away.

Use a windshield washer fluid that contains an antifreeze solution. Do not use engine antifreeze or other substitutes because they may damage the paint of the vehicle.

– CONTINUED –

If you fill the windshield washer tank with a fluid with a different concentration from the one used previously, purge the old fluid from the piping between the windshield washer tank and washer nozzles by operating the washer for a certain period of time. Otherwise, if the concentration of the fluid remaining in the piping is too low for the outside temperature, it may freeze and block the nozzles.

⚠ CAUTION

Adjust the washer fluid concentration appropriately for the outside temperature. If the concentration is inappropriate, sprayed washer fluid may freeze on the windshield and obstruct your view, and the fluid may freeze in the windshield washer tank.

▼ Before driving your vehicle

Before entering the vehicle, remove any snow or ice from your shoes because that could make the pedals slippery and driving dangerous.

While warming up the vehicle before driving, check that the accelerator pedal, brake pedal, and all other controls operate smoothly.

Clear away ice and snow that has accumulated under the fenders to avoid making steering difficult. During severe winter driving, stop when and where it is safe to do so and check under the fenders periodically.

▼ Parking in cold weather

⚠ WARNING

Snow can trap dangerous exhaust gases under your vehicle. Keep snow clear of the exhaust pipe and from around your vehicle if you park the vehicle in snow with the engine running.

⚠ CAUTION

- **Do not use the parking brake when parking for long periods in cold weather since it could freeze in that position.**
- **When the vehicle is parked in snow or when it snows, raise the wiper blades off the glass to prevent damage to them.**
- **Under either of the following conditions, icing may develop on the brake system, which could cause poor braking action.**
  - **When the vehicle has been left parked after use on roads heavily covered with snow**
  - **When the vehicle has been left parked during a snowstorm**

  Check for snow or ice buildup on the suspension, disc brakes and brake hoses underneath the vehicle. If there is caked snow or ice, remove it, being careful not to damage the disc brakes and brake hoses and ABS harness.

When parking for long periods in cold weather, you should observe the following tips.

1. For MT models, place the shift lever in the “1” or “R” position. For AT models, place the select lever in the “P” position.
2. Use tire stops under the tires to prevent the vehicle from moving.

▼ Refueling in cold weather

To help prevent moisture from forming in the fuel system and the risk of its freezing, use of an antifreeze additive in the fuel tank is recommended during cold weather.

Use only additives that are specifically designed for this purpose. When an anti-

freeze additive is used, its effect lasts longer if the tank is refilled whenever the fuel level reaches half empty.

If your SUBARU is not going to be used for an extended period, it is best to have the fuel tank filled to capacity.

■ Driving on Snowy and Icy Roads

⚠ WARNING

Do not use the cruise control on slippery roads such as snowy or icy roads. This may cause loss of vehicle control.

⚠ CAUTION

Avoid prolonged continuous driving in snowstorms. Snow will enter the engine's intake system and may hinder the airflow, which could result in engine shutdown or even breakdown.

To prevent skidding and slipping, avoid sudden braking, abrupt acceleration, high-speed driving, and sharp turning when driving on snowy or icy roads.

Always maintain ample distance between your vehicle and the vehicle ahead of you to avoid the need for sudden braking.

To supplement the foot brake, use the engine brake effectively to control the vehicle speed. (Shift into a lower gear when necessary.)

Avoid shifting down abruptly. Such behavior can cause the wheels to lock, possibly leading to loss of vehicle control.

An anti-lock brake system (ABS) enhances your vehicle's braking performance on snowy and icy roads. For information about braking on slippery surfaces, refer to "ABS (Anti-Lock Brake System)" ☞P232 and "Vehicle Stability Control (VSC)/TRC System" ☞P234.

For AT models, use the Snow mode when driving on snowy or icy roads. For details about how to use the mode, refer to "Driving Mode Select Switch (If Equipped)" ☞P228.

▼ Wiper operation when snowing

Before driving in cold weather, make sure the wiper blade rubbers are not frozen to the windshield.

If the wiper blade rubbers are frozen to the windshield, use the defroster with the airflow selection in "" and the temperature set for maximum warmth until the wiper blade rubbers are completely thawed. Refer to "Climate Control Panel" ☞P186.

Snow stuck on the wiper arm prevents the wiper from working effectively. If snow is stuck on the wiper arm, pull off the road to a safe place, then remove it. If you stop the vehicle at road side, use the hazard warning flasher to alert other drivers. Refer to "Hazard Warning Flasher" ☞P121.

We recommend use of non-freezing type wiper blades (winter blades) during the seasons you could have snow and freezing temperatures. Blades of this type give superior wiping performance in snowy conditions. Be sure to use blades that are suitable for your vehicle.

⚠ CAUTION

During high-speed driving, non-freezing type wiper blades may not perform as well as standard wiper blades. If this happens, reduce the vehicle speed.

NOTE

When the season requiring non-freezing type wiper blades is over, replace them with standard wiper blades.

– CONTINUED –

■ Corrosion Protection

Refer to "Corrosion Protection" ☞P322.

■ Snow Tires

⚠ WARNING

- **When replacing or installing winter tire(s), all four tires must be the same for the following items.**

  (a) Size

  (b) Speed symbol

  (c) Load index

  (d) Circumference

  (e) Construction

  (f) Manufacturer

  (g) Brand (tread pattern)

  (h) Degrees of wear

  For items (a) to (c), you must obey the specification that is printed on the tire inflation pressure label. The tire inflation pressure label is located on the driver's center pillar.

  If all four tires are not the same in items (a) to (h), serious mechanical damage could be caused to the drivetrain of the car, and affect the followings.

  - **Ride**
  - **Handling**
  - **Braking**
  - **Speedometer/Odometer calibration**
  - **Clearance between the body and the tires**

  It also may be dangerous and lead to loss of vehicle control, and it can lead to an accident.

- **Do not use a combination of radial, belted bias or bias tires since it may cause dangerous handling characteristics and lead to an accident.**
- **Request repairs or replacement of snow tires (vehicles with a tire pressure monitoring system) from SUBARU dealers or legitimate tire retailers. This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.**

In winter, it may be possible to enhance performance through use of tires designed specifically for winter driving conditions.

If you choose to install winter tires on your vehicle, be sure to use the correct tire size and type.

All four tires must be of the same size, construction, brand and load index and you should never mix radial, belted bias or bias tires since this may result in dangerous handling characteristics. Remember to drive with care at all times regardless of the type of tires on your vehicle.

When using winter tires (speed symbol Q, T or H) never exceed 160 km/h (99 mph), 190 km/h (118 mph) or 210 km/h (130 mph), respectively.

■ Tire Chains

If it is necessary to use the tire chains for driving on snowy grades or icy roads, observe the following precautions:

- Put the chains on the rear wheels only.
- Use only chains that are of the correct size for your tires so as to not damage the vehicle body or suspension. We recommend that you consult your SUBARU dealer for information about the chains that you can use.

- Regulations regarding the use of tire chains vary according to location and type of road. Always check local regulations before installing chains.
- Install and remove tire chains in a safe location.
- Install tire chains following the instructions provided with the tire chains.
- Be careful not to damage the alloy wheels when using tire chains.
- When driving with tire chains, drive at speeds below 30 km/h (19 mph).
- Install tire chains on rear tires as tightly as possible. Retighten chains after driving approximately 100 m (328 ft.).
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- The tire pressure warning system may not function correctly when tire chains are fitted. (models with tire pressure monitoring system)

Always use the utmost care when driving with tire chains – overconfidence because you are driving with tire chains could easily lead to a serious accident.

■ Rocking the Vehicle

If you must rock the vehicle to free it from snow, sand, or mud, depress the accelerator pedal slightly and move the shift lever/select lever back and forth between “1” (MT model)/“D” (AT model) and “R” repeatedly. Do not race the engine. For the best possible traction, avoid spinning the wheels when trying to free the vehicle.


When the road surface is extremely slippery, you can obtain better traction by starting the vehicle with the transmission in 2nd than in 1st (MT models).

If your vehicle is a AT model, Snow mode can be used. For details about how to use the mode, refer to "Driving Mode Select Switch (If Equipped)" ☞P228.

8-10. Loading Your Vehicle

⚠ WARNING

Never allow passengers to ride on a folded rear seatback or in the trunk. Doing so may result in serious injury.

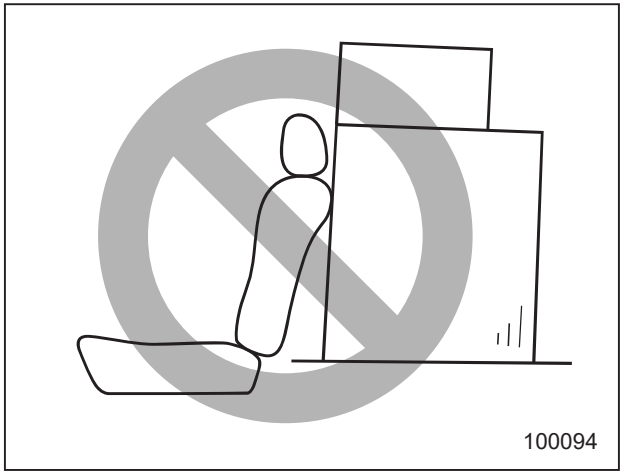

⚠ WARNING

- **Never stack luggage or other cargo higher than the top of the seatback because it could tumble forward and injure passengers in the event of a sudden stop or accident. Keep luggage or cargo low, as close to the floor as possible.**

– CONTINUED –

- **Stow cargo and luggage in the trunk whenever possible.**
- **To prevent cargo and luggage from sliding forward during braking, do not stack anything in the enlarged trunk. Keep cargo and luggage low, as close to the floor as possible.**
- **When you carry something inside the vehicle, secure it whenever you can to prevent it from being thrown around inside the vehicle during sudden stops, sharp turns or in an accident.**
- **Secure long items properly to prevent them from shooting forward and causing serious injury during a sudden stop.**
- **Never exceed the maximum load limit. If you do, some parts on your vehicle can break, or it can change the way your vehicle handles. This could result in loss of control and cause personal injury. Also, overloading can shorten the life of your vehicle.**

- **Do not place cargo or luggage in or on the following locations as the item may get under the clutch, brake, or accelerator pedal and prevent the pedals from being depressed properly, block the driver's vision, or hit the driver or passengers, causing an accident:**
  - **At the feet of the driver**
  - **On the front passenger or rear seats (when stacking items)**
  - **On the rear shelf**
  - **On the instrument panel**
  - **On the dashboard**


⚠ CAUTION


Do not carry spray cans, containers with flammable or corrosive liquids or any other dangerous items inside the vehicle.

NOTE

For better fuel economy, do not carry unneeded cargo.

■ Vehicle Capacity Weight

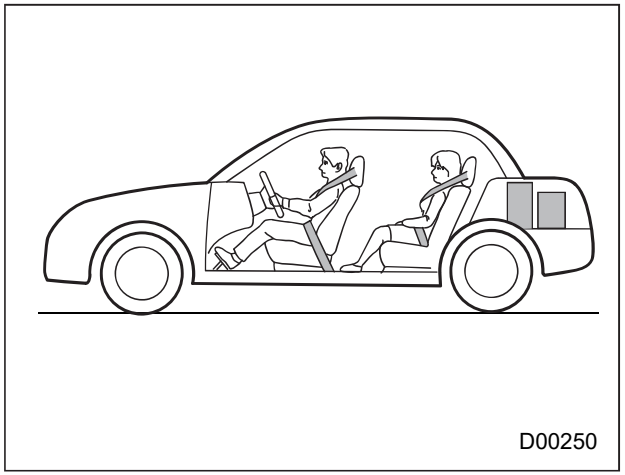

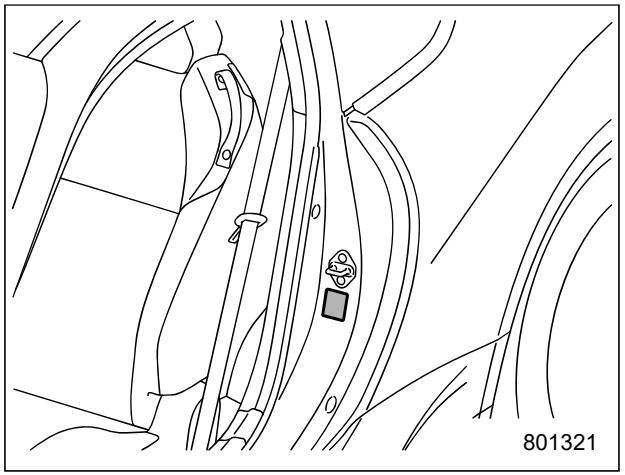

The load capacity of your vehicle is determined by weight, not by available cargo space. The maximum load you can carry in your vehicle is shown on the tire inflation pressure label attached to the driver's side center pillar. It includes the total

weight of the driver and all passengers, their belongings, and any optional equipment.

8-11. Trailer Towing


⚠ CAUTION

Your vehicle is neither designed nor intended to be used for trailer towing. Therefore, never tow a trailer with your vehicle.

SUBARU assumes no responsibility for injuries or vehicle damage that may result from trailer towing, from any trailer towing equipment or from any errors or omissions in the instructions accompanying such equipment. SUBARU warranties do not apply to vehicle damage or malfunction caused by trailer towing.

9-1. If You Park Your Vehicle in an Emergency.....290
9-2. Maintenance Tools.....290
Models with Flat Tire Repair Kit.....291
Models with spare tire.....291
9-3. Flat Tires.....292
Changing a Flat Tire.....292
Sealing a Flat Tire (Models with the Flat Tire Repair Kit).....295
Tire Pressure Monitoring System (TPMS) (if equipped).....303
TPMS Screen (if equipped).....304
9-4. Jump Starting.....305
Battery Precautions.....305
Precautions when jump starting.....306
How to Jump Start.....306
9-5. Engine Overheating.....308
If Steam Is Coming from the Engine Compartment.....308
If No Steam Is Coming from the Engine Compartment.....308
9-6. Towing.....309
Towing Hook and Tie-Down Hooks/Holes.....309
Using a Flat-Bed Truck.....313
Towing with All Wheels on the Ground.....313
9-7. Access Key Fob – If Access Key Fob Does Not Operate Properly.....314
Locking and Unlocking.....314
Switching Power Status.....315
Starting Engine.....315
9-8. Malfunctions of the Center Information Display.....316
9-9. If Your Vehicle Is Involved in an Accident.....317
To Restart the Engine When Involved in an Accident.....317

9-1. If You Park Your Vehicle in an Emergency

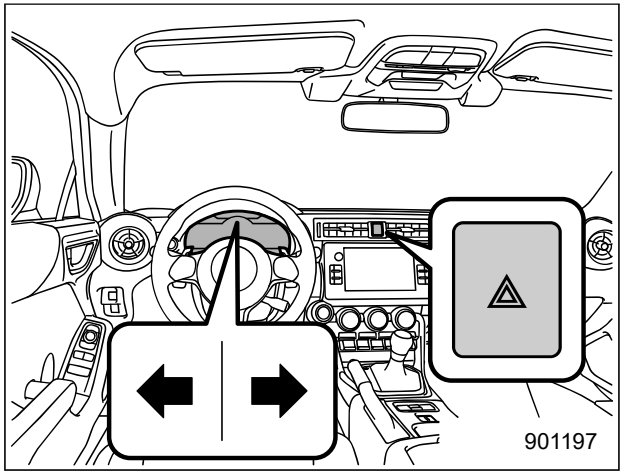

The hazard warning flasher should be used in day or night to warn other drivers when you have to park your vehicle under emergency conditions.

Avoid stopping on the road. It is best to safely pull off the road if a problem occurs.

The hazard warning flasher can be activated regardless of the ignition switch position.

Turn on the hazard warning by pressing the hazard warning flasher switch. Turn it off by pressing the switch again.

When the hazard warning flasher are flashing, the corresponding turn signal indicator will also flash.

NOTE

When the hazard warning flasher is on, the turn signals do not work.

9-2. Maintenance Tools


Your vehicle is equipped with the following maintenance tools.

- Jack (if equipped)
- Jack handle (if equipped)
- Screwdriver
- Towing hook (eye bolt)
- Wheel nut wrench

NOTE


This jack complies with the Machinery Directive 2006/42/EC. A copy of the original Declaration of Conformity is found in chapter 13.

■ Models with Flat Tire Repair Kit

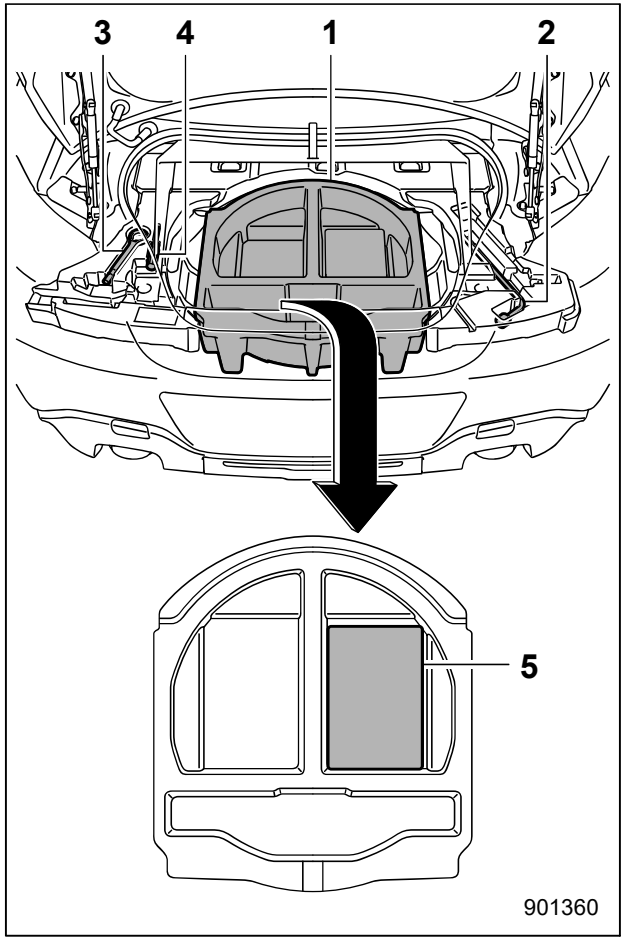


1) Under-floor storage compartment
2) Wheel nut wrench
3) Towing hook (eye bolt)
4) Screwdriver
5) Flat tire repair kit

■ Models with spare tire

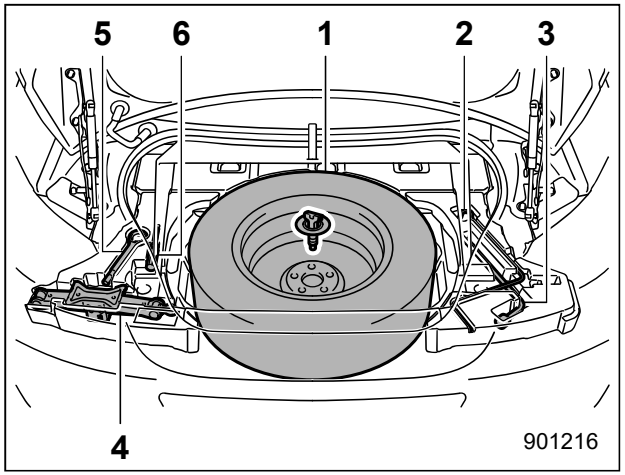

1) Spare tire
2) Jack handle
3) Wheel nut wrench
4) Jack
5) Towing hook (eye bolt)
6) Screwdriver

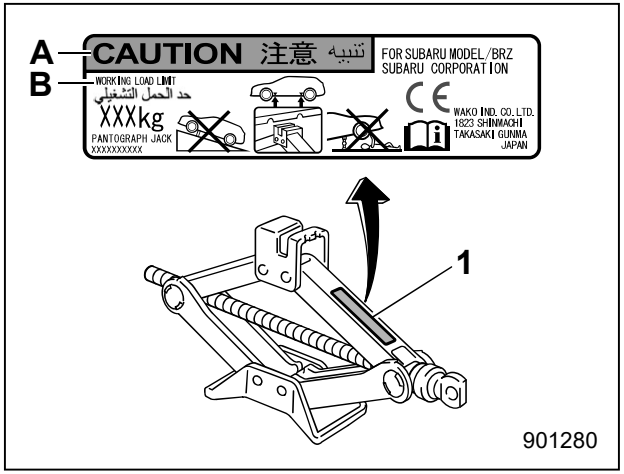

Example of jack label

1) Jack label
A) CAUTION
B) WORKING LOAD LIMIT

NOTE

- **For how to use the jack, refer to "Flat Tires" ☞P292.**
- **The following items may be different depending on the model.**
  - **The shape of the storage compartment**
  - **The locations of some maintenance tools**

9-3. Flat Tires

If you have a flat tire while driving, never brake suddenly; keep driving straight ahead while gradually reducing speed. Then slowly pull off the road to a safe place.

■ Changing a Flat Tire

⚠ WARNING

- **Use only the jack and the jack handle provided with your vehicle. The jack supplied with the vehicle is designed only for changing a tire. Never put any part of your body under the vehicle while the vehicle is being supported by the jack. Doing so could result in serious injury or death.**
- **Do not jack up the vehicle on an incline or a loose road surface. The jack can come out of the jacking point or sink into the ground and this can result in serious injury or death.**
- **Before jacking up the vehicle, be sure that there are no occupants or cargo on board.**
- **Do not jack up the vehicle with an object on or underneath the jack. The jack can be unstable and this can result in a severe accident.**
- **Always turn off the engine before raising the flat tire off the ground using the jack. Never swing or push the vehicle supported with the jack. The jack can come out of the jacking point due to a jolt and this can result in serious injury or death.**
- **All passengers must exit the vehicle before you raise it with the jack. Raising the vehicle with someone inside of it could result in serious injury or death.**
- **Do not start the vehicle while it is supported by the jack. Doing so could result in serious injury or death.**

⚠ CAUTION

Do not hit and bend the disc rotor backing plate when removing and installing the tire. A bent backing plate may scrape against the disc rotor and cause noise while the vehicle is in motion.

▼ Australia and New Zealand models

⚠ WARNING

For Australia and New Zealand, the following instructions are supplied by the Australian/New Zealand Standard™ (AS/NZS 2693:2007). Be sure to obey the following instructions for your safety.

- **That the jack should be used on level firm ground wherever possible.**
- **That it is recommended that the wheels of the vehicle be chocked, and that no person should remain in a vehicle that is being jacked.**
- **That no person should place any portion of their body under a vehicle that is supported by a jack.**


NOTE

We recommend that contact a SUBARU dealer when jacking up the vehicle using a garage jack.

1. Park on a hard, level surface, whenever possible, then stop the engine.
2. Set the parking brake securely and shift the shift lever in reverse (MT models)

or the select lever to the “P” (Park) position (AT models).

3. Turn on the hazard warning flasher and unload all occupants and luggage from the vehicle.

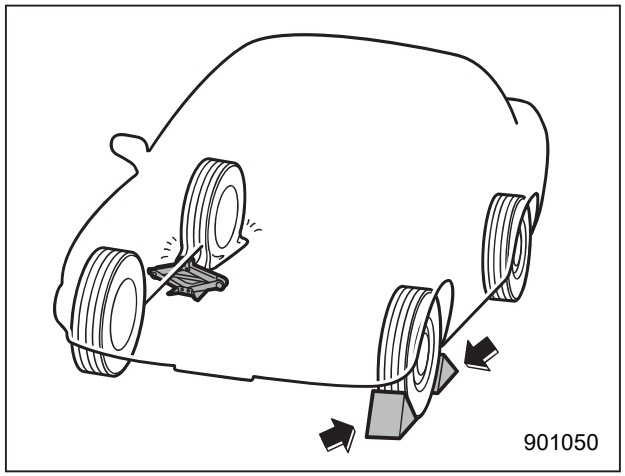


4. Put wheel blocks at the front and rear of the tire diagonally opposite the flat tire.

5. Take out the jack, jack handle and wheel nut wrench.


The tools and the spare tire are stored under the floor of the trunk. Refer to "Maintenance Tools" ☞P290.

NOTE


Make sure that the jack is well lubricated before using it.

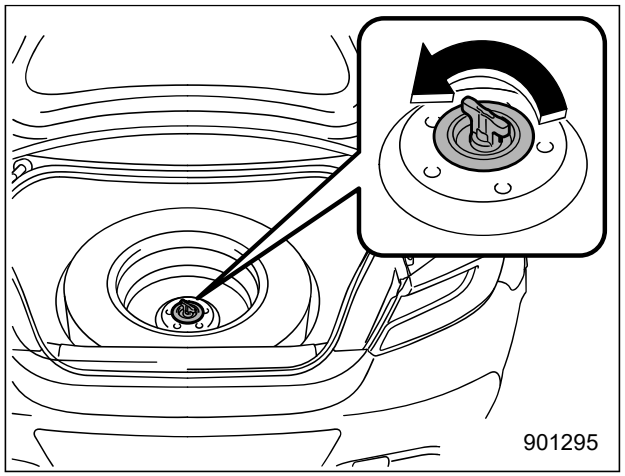


6. Models with spare tire: Take out the under-floor storage compartment and turn the attaching bolt counterclockwise, then take the spare tire out.

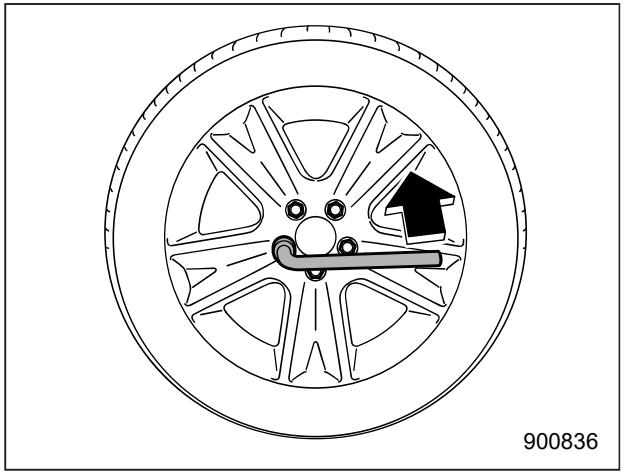

7. Loosen the wheel nuts using the wheel nut wrench but do not remove the nuts.

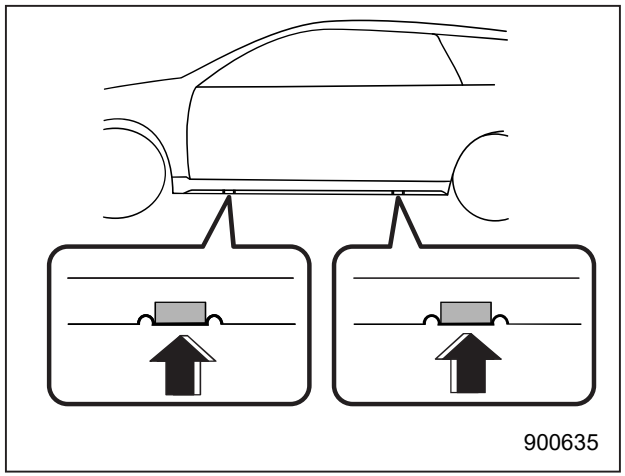


8. Place the jack under the side sill at the front or rear jack-up point closest to the flat tire.

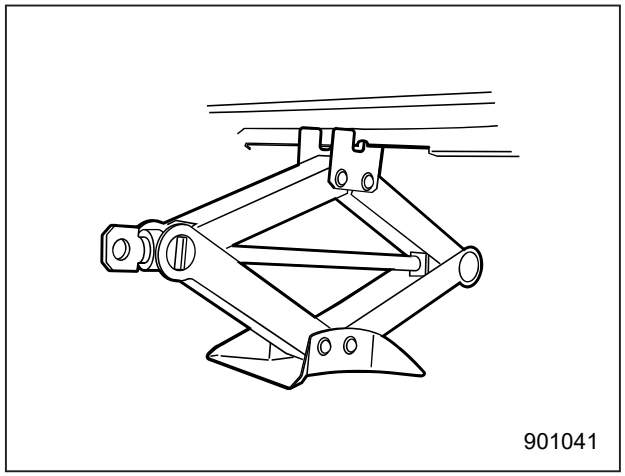


Turn the jackscrew by hand until the jack head engages firmly into the jack-up point.


– CONTINUED –

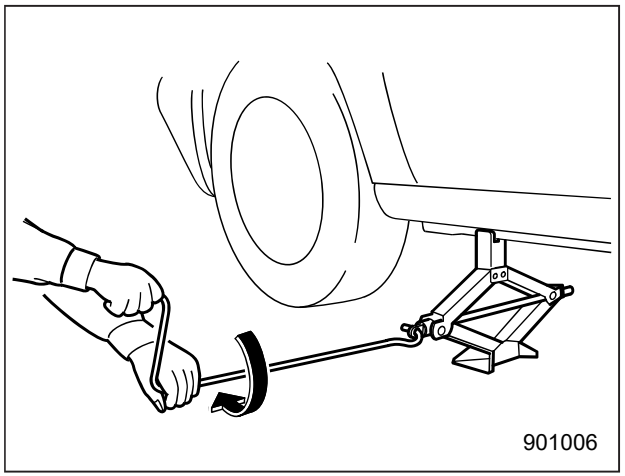

9. Insert the jack handle into the jack-screw, and turn the handle until the tire clears the ground. Do not raise the vehicle higher than necessary.

10. Remove the wheel nuts and the flat tire.

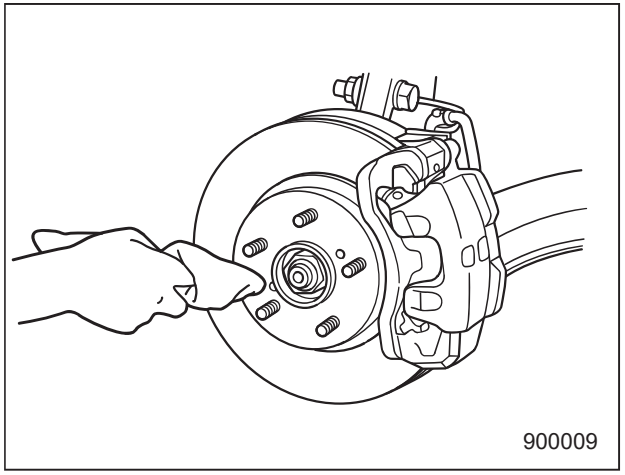

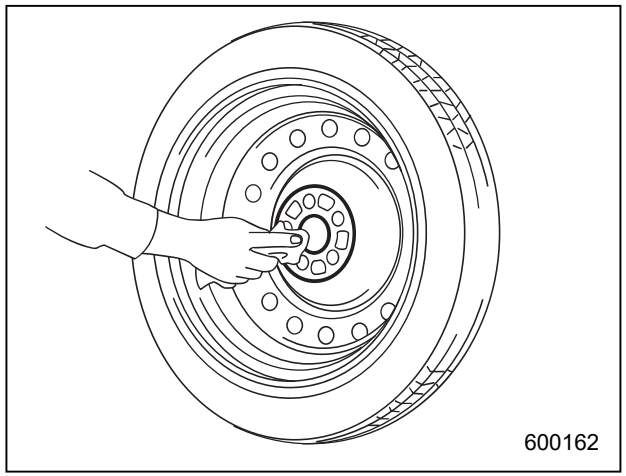

11. Before putting the spare tire on, clean the mounting surface of the wheel and hub with a cloth.

⚠ CAUTION


If the threaded part was damaged, we recommend that you immediately contact your SUBARU dealer.

12. Put on the spare tire. Replace the wheel nuts. Tighten them by hand.

⚠ WARNING


Do not use oil or grease on the wheel studs or nuts when the spare tire is installed. This could cause the nuts to become loose and lead to an accident.

13. Turn the jack handle counterclockwise to lower the vehicle.

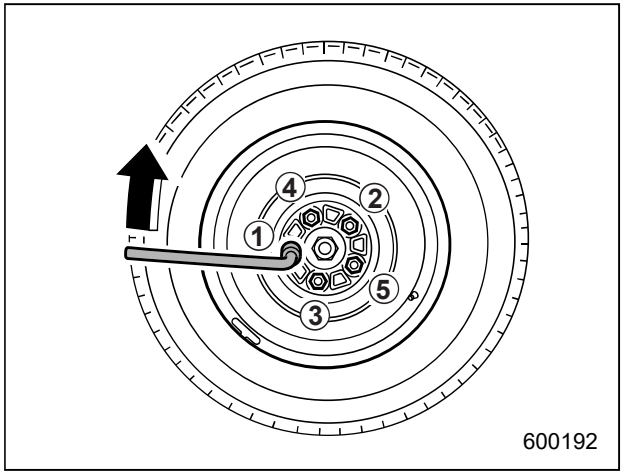

14. Use the wheel nut wrench to securely tighten the wheel nuts to the specified torque, following the tightening order in the illustration.

For the wheel nut tightening torque, refer to "Tires" ☞P377. Never use your foot on the wheel nut wrench or a pipe extension on the wrench because you may exceed the specified torque. Have the wheel nut torque checked at the nearest automotive service facility.

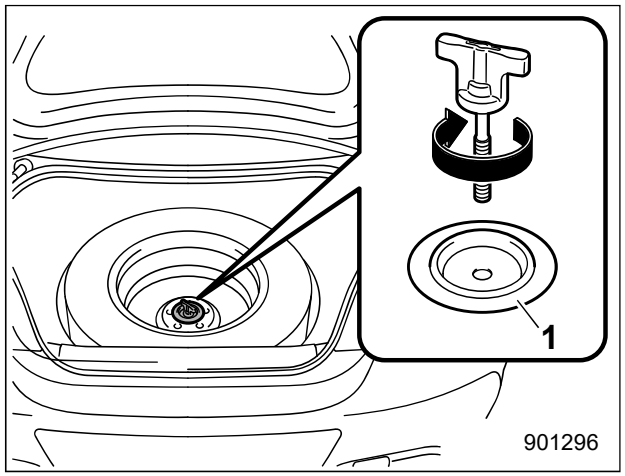

1) Support holder

15. Models with spare tire: Store the flat tire in the spare tire compartment. Install with the support holder facing upward and secure the flat tire by firmly tightening the attaching bolt.

NOTE

If you cannot fix the flat tire firmly, try turning the support holder upside down.

16. Store the jack, jack handle and wheel nut wrench in their storage locations.

⚠ WARNING

Never place a tire or tire changing tools in the passenger compartment after changing wheels. In a sudden stop or collision, loose equipment could strike occupants and cause injury. Store the tire and all tools in the proper place.

■ Sealing a Flat Tire (Models with the Flat Tire Repair Kit)

⚠ WARNING

Read these instructions and warnings carefully before sealing a flat tire.

Compliance with these instructions is vital to ensuring vehicle safety. Noncompliance with these instructions means risking tire damage, which can affect vehicle handling and lead to loss of vehicle control. This may result in serious injury or death.

If the tire is punctured, you can seal the flat tire temporarily by using the flat tire repair kit. You can seal a flat tire caused, for example, by nails or similar objects with less than 4 mm (0.2 in). However, depending on the type and extent of tire damage, some tires can only be partially sealed or not sealed at all, and this condition may cause a loss of tire pressure. A loss of tire pressure can affect vehicle handling, leading to the loss of vehicle control.


After sealing the flat tire temporarily, change the tires with new ones as soon as possible. We recommend that you have the sealed tire changed by your nearest SUBARU dealer. You may reuse the wheel if the attached sealant is wiped off, but the valve of the wheel must be replaced with a new one. If you reuse the wheel without replacing the valve, air may leak from the valve.

For tire replacement, refer to "Tire Replacement" ☞P357.

– CONTINUED –

▼ Safety precautions when sealing a flat tire

Observe the following rules when sealing a flat tire.

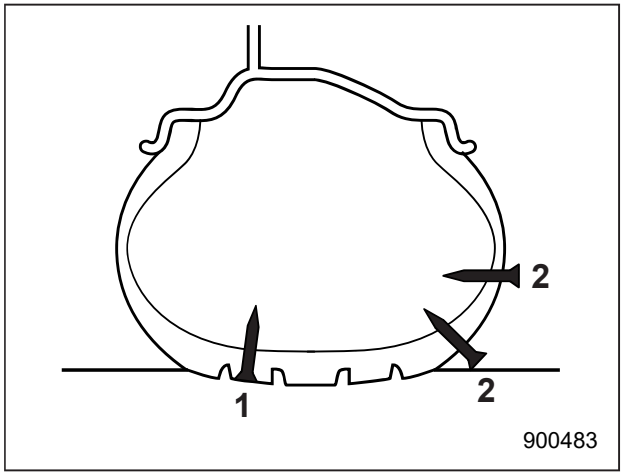

1) Sealing is possible
2) Sealing is not possible


⚠ WARNING

- **Do not use the flat tire repair kit in the following cases.**
  - **The tire has already been damaged as a result of being driven in the under inflated condition.**
  - **The tire damage is not located within the visible tread of the tire.**
  - **The tire damage is on the sidewall of the tire.**
  - **When the tire has been taken off of the wheel.**
  - **The wheel or the tire valve of the flat tire is damaged.**
  - **Two or more tires have been punctured.**
  - **The expiration date of the sealant has passed.**
  - **The tire is punctured by pointed items such as nails of 4 mm (0.2 in) or larger.**
- **When inflating the flat tire, if the tire inflation pressure does not reach the green zone of the pressure gauge within 10 minutes, do not continue to seal the tire. We recommend that you contact your SUBARU dealer.**
- **Drive with caution and avoid making sudden steering or driving maneuvers.**
- **Do not exceed a maximum speed of 80 km/h (50 mph).**
- **Do not exceed a maximum driving distance of 200 km (125 miles).**
- **Do not use tire chains on a sealed tire.**
- **Do not tow a trailer.**
- **If used for a purpose other than sealing a flat tire, the flat tire repair kit may cause a severe accident or injury due to the fact that compressed air can act as an explosive or propellant.**
- **Safely park your vehicle on the roadside so that you do not obstruct the flow of traffic and so that you are able to seal the flat tire without being in danger.**
- **Apply the parking brake, even if the vehicle is parked on a level road, to make sure that the vehicle will not move.**
- **Stop the engine before sealing the flat tire.**
- **Turn on the hazard warning flasher while sealing the flat tire.**
- **Do not attempt to remove foreign objects like nails or screws that have penetrated the tire. Leave them as they are.**
- **Never leave the flat tire repair kit unattended while in use.**
- **Only one tire can be repaired with one bottle of sealant.**
- **The tires can be repaired when the ambient temperature is −30 °C (−22 °F) or higher.**

⚠ CAUTION

- **Remember that the flat tire repair kit only provides temporary mobility. Regulations concerning tire repair after usage of flat tire repair kit may differ from country to country. We recommend that you consult your SUBARU dealer or tire dealer for advice.**
- **Store the flat tire repair kit safely and secure it under the floor of the trunk. Storing it anywhere in the passenger compartment is not advisable because it could strike an occupant in the event of a sudden stop or collision and cause injury.**
- **Use the flat tire repair kit with original vehicle tires only.**
- **Do not keep the air compressor operating for more than 10 minutes, otherwise there is a risk of overheating.**
- **The temperature of the air compressor may become high. Be careful not to burn yourself.**
- **When raining, take measures to prevent the air compressor from being exposed directly to the rain. Exposing to rain may cause a malfunction.**
- **Do not use air compressors other than the one in the repair kit. Using an air compressor other than the one in the repair kit may damage the tires.**
- **Do not disassemble or modify the air compressor to enable the use of a power supply or a battery other than DC 12 V.**
- **If a temporary puncture repair is performed with the repair kit, the Tire Pressure Monitoring System (TPMS) (if equipped) may not operate normally.**

▼ Location of the flat tire repair kit

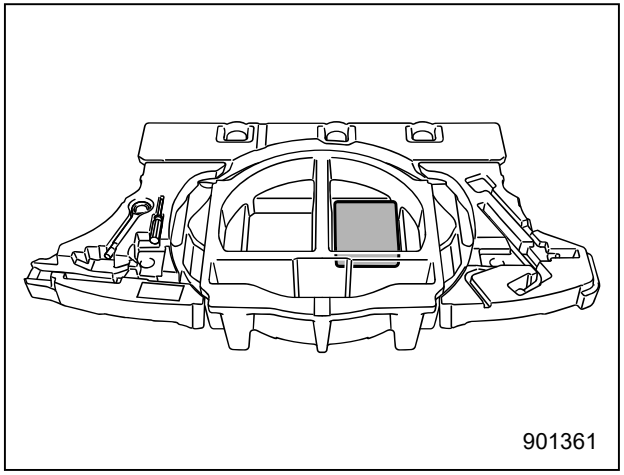


Flat tire repair kit

The flat tire repair kit is stored in the portion shown in the illustration.


– CONTINUED –

▼ Contents of the flat tire repair kit

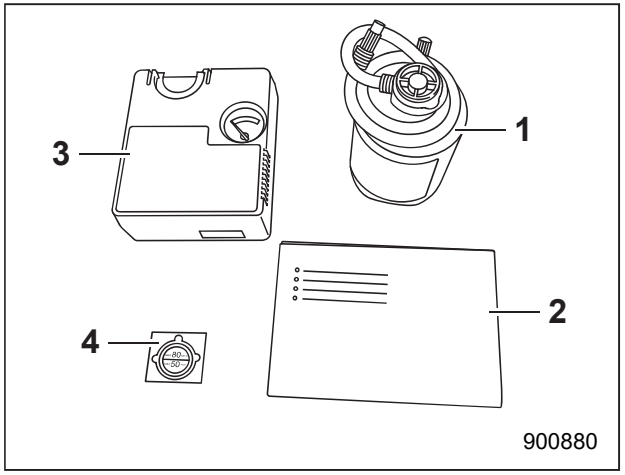


1) Sealant bottle
2) Quick reference guide
3) Air compressor
4) Speed limit label


The above repair kits are packed in a plastic bag. Return them to the plastic bag after use.

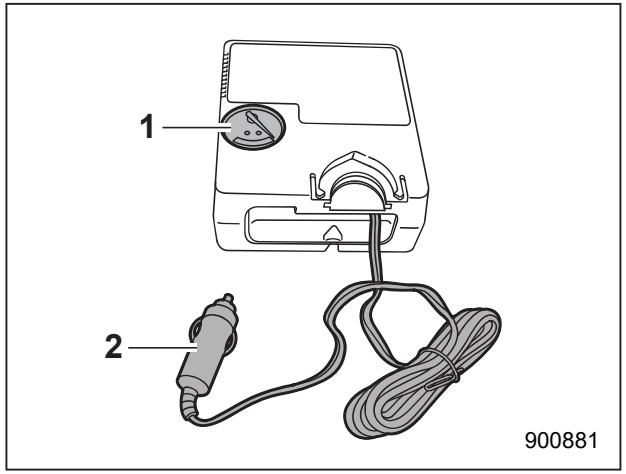

Air compressor (front side)
1) Air gauge
2) Power plug

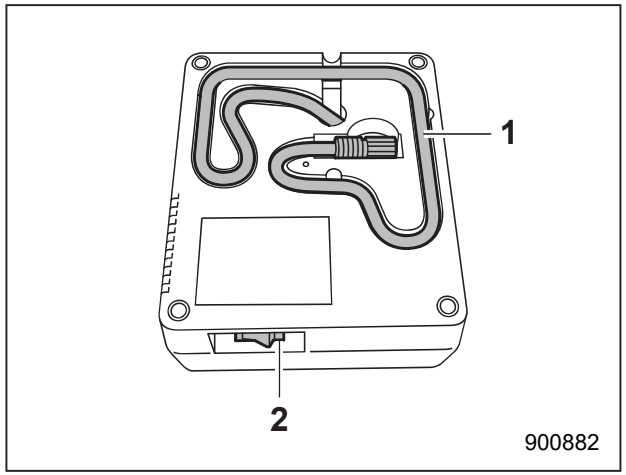

Air compressor (rear side)
1) Hose
2) Compressor switch

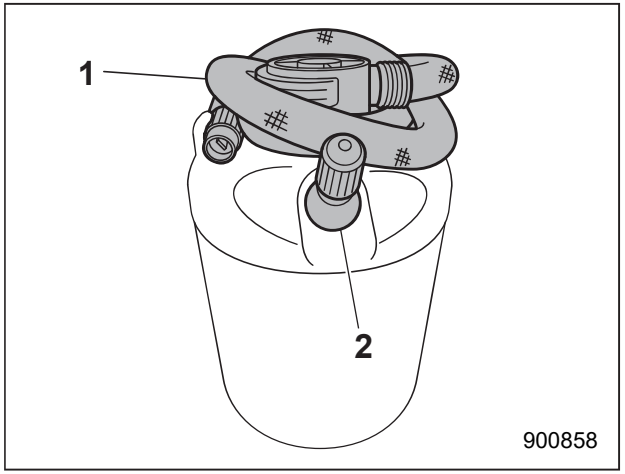


Sealant bottle
1) Hose
2) Valve

⚠ WARNING

- **Do not drink the sealant. If the sealant is accidentally swallowed, seek medical attention immediately.**
- **If the sealant splashes onto your skin or eyes, wash it away immediately with plenty of water. If necessary, seek medical attention immediately.**
- **Keep the flat tire repair kit out of the reach of children.**

- **If a person who is allergic to natural rubber comes in contact the sealant, allergy symptoms may occur.**

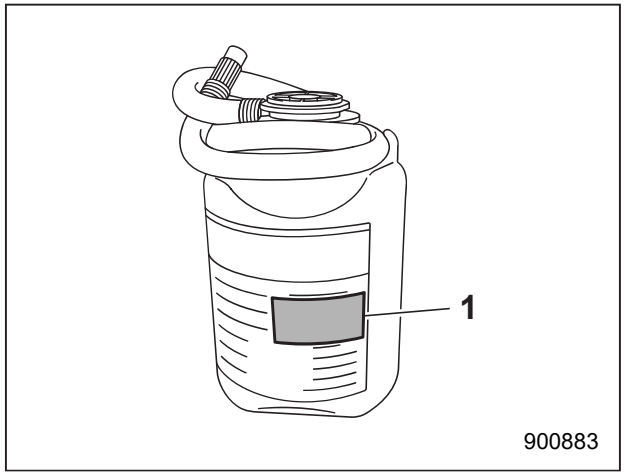

1) Expiration date

⚠ CAUTION


Replace the sealant bottle with a new one before the expiration date passes.

▼ How to seal the flat tire


To seal the flat tire, perform the following steps.

- First, pump in the sealant and air. Drive the vehicle for approximately 10 minutes or 5 km (3 miles) so that the sealant can seal the damaged area.
- Stop the vehicle again, check and, if necessary, adjust the pressure of the damaged tire.
- After that, you can continue to drive carefully no faster than 80 km/h (50 mph) and within the maximum distance of 200 km (125 miles).

Inform all other users of the vehicle that the tire has been temporarily sealed with the flat tire repair kit and make them aware of the special driving conditions to be observed.

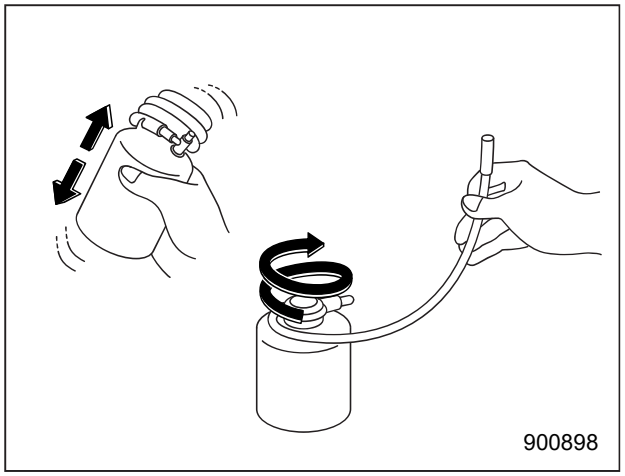

1. Shake the sealant bottle well. Loosen the hose.

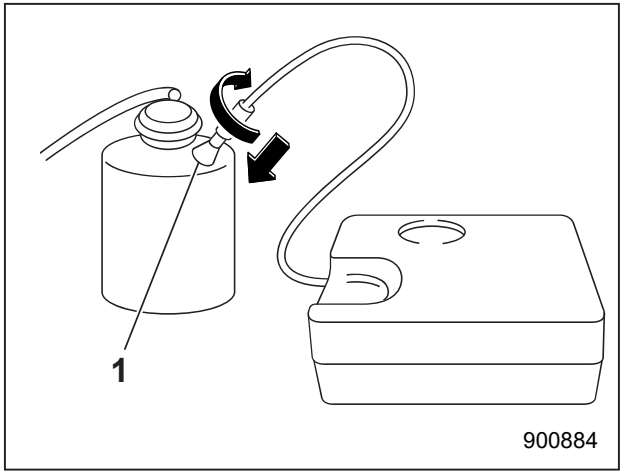


1) Valve

2. Connect the air compressor hose to the valve on the bottle.

⚠ CAUTION

- **Make sure that the air compressor switch is OFF.**
- **The sealant may leak if the fitting is not tight enough.**


– CONTINUED –

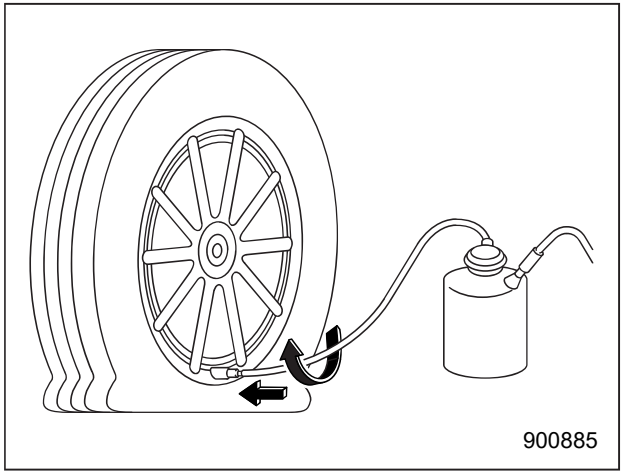

Connect the hose from the bottle to the tire valve stem tightly.


⚠ CAUTION

The sealant may leak if the fitting is not tight enough.

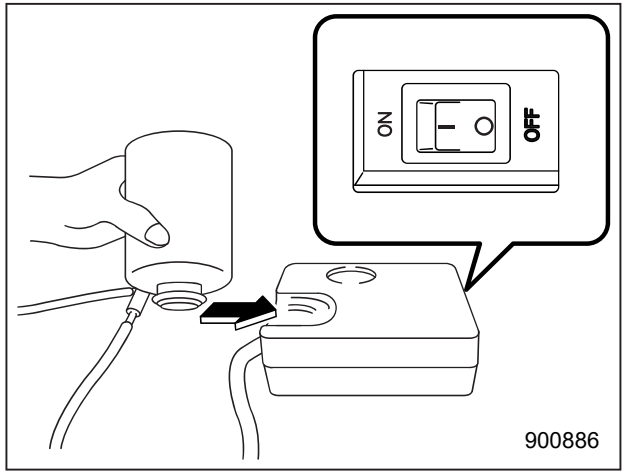



3. Turn the bottle upside down and tilt the bottle cap into the bottle holder of the air compressor.

Make sure that the air compressor switch is OFF.

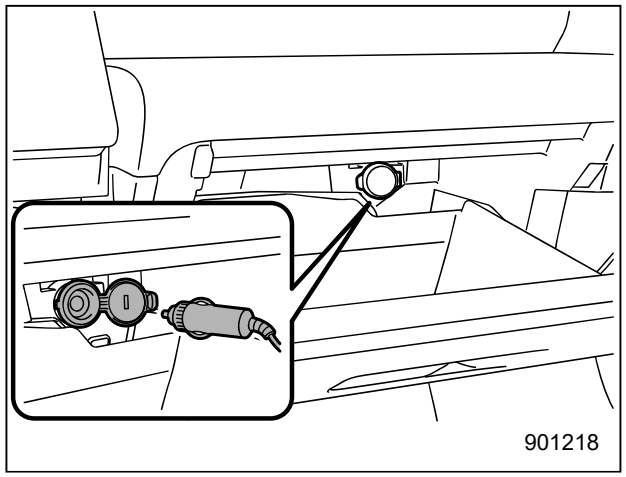

4. Connect the power plug of the air compressor into the accessory power outlet. Apply the parking brake and turn on the ignition switch to the “ACC” position.

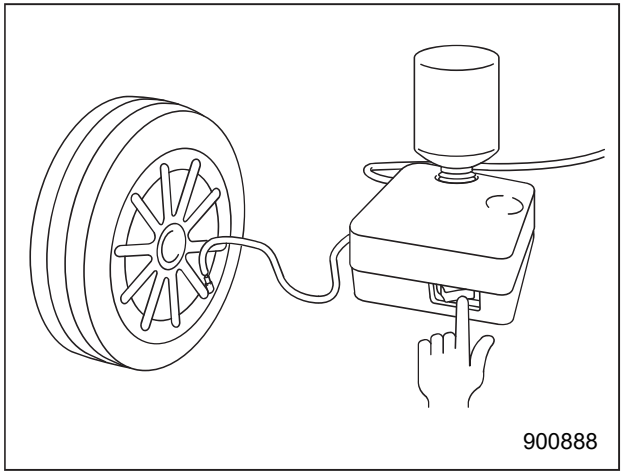

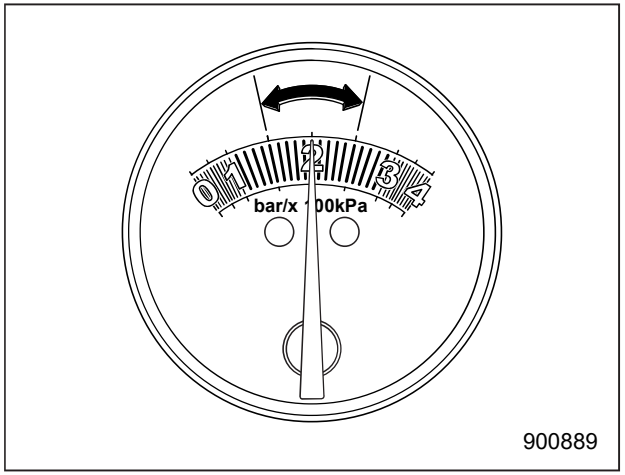

Turn the air compressor switch on and adjust the air pressure to the appropriate level (green zone of the air gauge).

⚠ CAUTION


- **Do not run the air compressor for more than 10 minutes as it can get hot. Be careful not to get burned.**
- **If tire pressure doesn't reach the green zone for 10 minutes, this kit will be unable to seal the tire. Please contact your SUBARU dealer for help.**

NOTE

• After the compressor starts to operate, the air pressure will temporarily rise to 300 kPa (3.0 kgf/cm^2, 45 psi) or higher. After about 30 seconds when all of the sealant is inside the tire, the air pressure will lower, representing the air pressure in the tire.

• In extremely low temperatures −30°C to −20°C (−22°F to −4°F), the viscosity of the sealant increases and the sealant will flow more slowly. In such temperatures, bring the sealant into the vehicle to warm it up before use.

• When mending the tire, if the air pressure gauge is hard to read, turn the compressor switch off once to get an accurate reading.

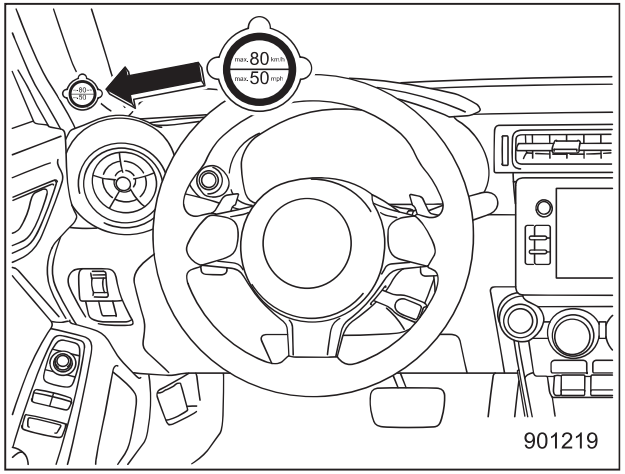


901219

5. While filling the tire with air, attach the speed limit label on the position shown in the illustration.

⚠ WARNING


Do not attach the speed limit label in a position where the label hides the warning lamp or on the steering wheel. It may interfere with the normal operation of the airbag and lead to a critical failure.

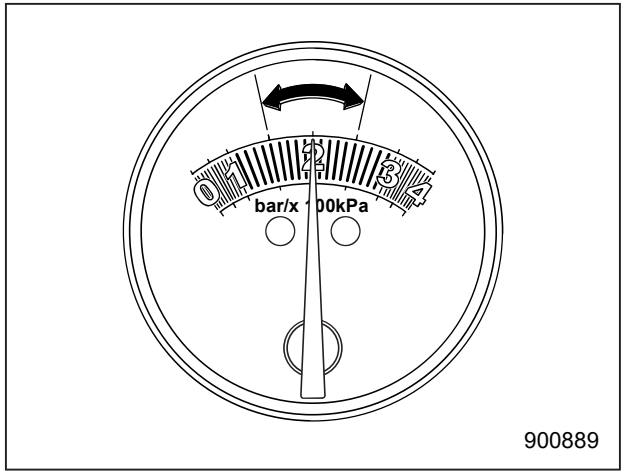

900889


6. Turn the air compressor power switch off when the air pressure reaches the green zone of the air gauge.

Remove the power plug from the accessory power socket.

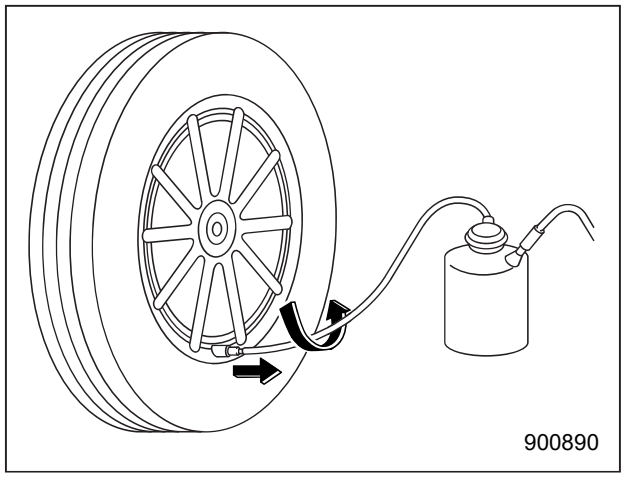
900890

Remove the hose after filling the tire with air and fasten the valve cap.


– CONTINUED –

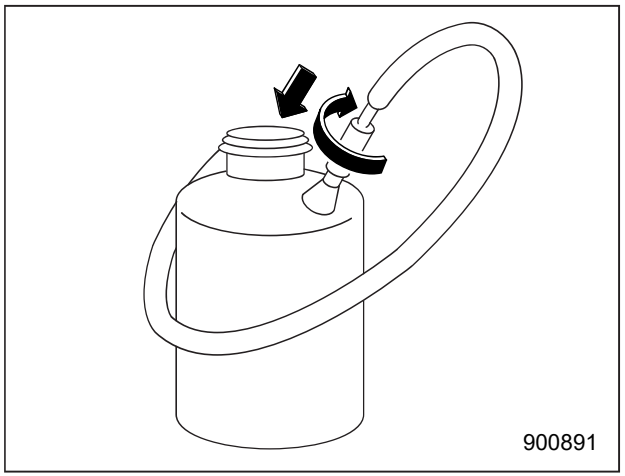

Connect the hose of the bottle to the valve of the bottle in a circular fashion to avoid leakage of the remaining sealant.

⚠ CAUTION

The sealant may stain clothing.

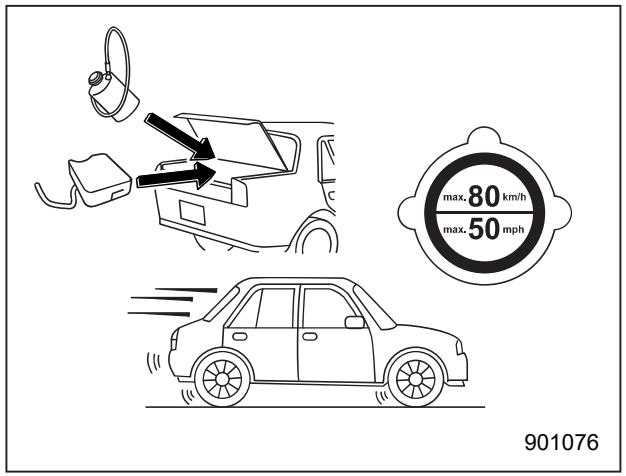


7. Stow the kit back in the vehicle and drive your vehicle immediately for 10 minutes or 5 km (3 miles).

⚠ WARNING

- **Drive carefully. Do not exceed 80 km/h (50 mph). Driving faster than that can result in the vehicle shaking.**
- **Do not use tire chains on a sealed tire.**
- **Do not tow a trailer.**

- **If heavy vibrations, unsteady steering behavior or noises occur while driving, reduce your speed and drive with caution to a location where it is safe for you to stop the vehicle. Recheck the tire and its pressure. If the tire pressure is in the red zone of the air gauge or if there are any cracks, bumps or similar tire damage visible, temporary repairs cannot be performed with the repair kit. We recommend that you consult with your SUBARU dealer or road service provider.**

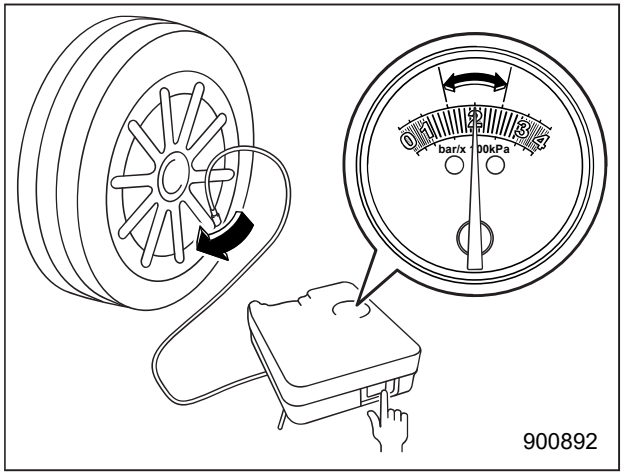

8. After driving for 10 minutes or 5 km (3 miles), whichever comes first, stop the

vehicle in a safe place to recheck the air pressure (see step 4).

If necessary, fill the tire with air to the appropriate air pressure again and drive carefully to the nearest SUBARU dealer for tire, valve stem and sealant bottle replacement.

NOTE

Connect the air compressor only to the tire valve.

⚠ CAUTION

- **If the air pressure is in red zone of the air gauge, the kit did not successfully seal the puncture. In this case, please stop driving and we recommend that you contact your SUBARU dealer for help.**
- **Do not drive your vehicle with the sealed tire for more than 200 km (125 miles). Failure to replace the valve stem may result in air leakage at the valve stem.**

Before the tire is removed from the rim, inform your SUBARU dealer or other tire dealer that the tire contains sealant.

⚠ CAUTION

The sealant bottle and speed limit label need to be replaced after using the flat tire repair kit.


NOTE

New sealant and replacement parts can be purchased from your authorized repair shop or SUBARU dealer, and they should also be installed into the kit by a specialist. Empty sealant bottles and replacement parts must be returned to your SUBARU dealer or disposed of in compliance with local waste disposal regulations.

▼ Technical data of air compressor

Line voltage	DC 12 V
Operating voltage	DC 10 – 15 V
Amperage	Max. 10 A

■ Tire Pressure Monitoring System (TPMS) (if equipped)

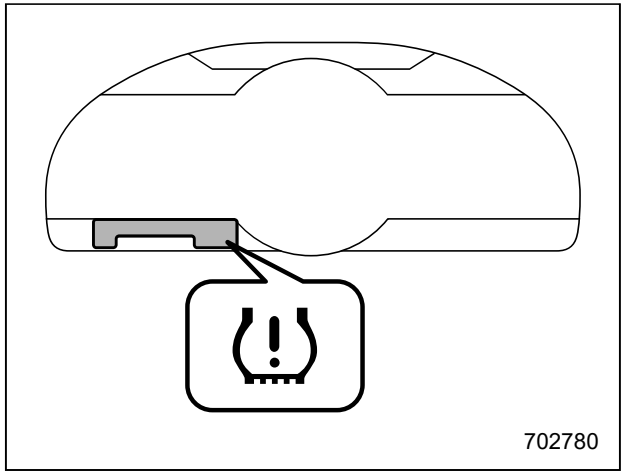

Low tire pressure warning light

The tire pressure monitoring system provides the driver with the warning message indicated by sending a signal from a sensor that is installed in each wheel when tire pressure is severely low.

The tire pressure monitoring system will activate only when the vehicle is driven. Also, this system may not react immediately to a sudden drop in tire pressure (for example, a blow-out caused by running over a sharp object).

– CONTINUED –

⚠ WARNING

If the low tire pressure warning light illuminates while driving, never brake suddenly and keep driving straight ahead while gradually reducing speed. Then slowly pull off the road to a safe place. Otherwise an accident involving serious vehicle damage and serious personal injury could occur.


Check the pressure for all four tires and adjust the pressure according to COLD tire pressure values shown on the tire inflation pressure label located on the center pillar on the driver's side. If this light still illuminates while driving after adjusting the tire pressure, a tire may have significant damage and a fast leak that causes the tire to lose air rapidly. If you have a flat tire, replace it with a spare tire as soon as possible.

When a spare tire is mounted or a wheel rim is replaced without the original pressure sensor/transmitter being transferred, the low tire pressure warning light will illuminate steadily after blinking for approximately one minute. This indicates the TPMS is unable to monitor all four road wheels. We recommend that you contact your SUBARU dealer as soon as possible for tire and sensor replacement and/or system resetting.

When a tire is repaired with liquid sealant, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, we recommend that you contact your nearest SUBARU dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. You may reuse the wheel if there is no damage to it and if the sealant residue is properly cleaned off.

If the light illuminates steadily after blinking for approximately one minute, we recommend that you promptly contact a SUBARU dealer to have the system inspected.

■ TPMS Screen (if equipped)

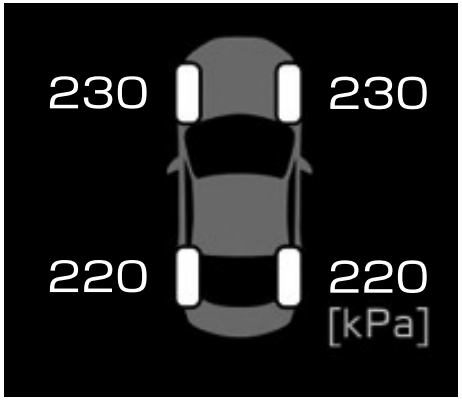

702813

This screen displays each tire pressure. Refer to "Combination Meter Display (Color TFT)" ☞P145.

9-4. Jump Starting

■ Battery Precautions

⚠ WARNING

Read these instructions carefully:

To ensure safe and correct handling of your battery, read the following precautions carefully before using the battery or inspecting it.

Wear eye protection:

Always wear eye protection when working near your vehicle's battery. Battery fluid contains sulfuric acid, so it can cause blindness if splashed into your eyes. Also, batteries emit highly flammable, explosive hydrogen gas. Eye protection is vital for protection in the event that this gas ignites.

Battery fluid contains sulfuric acid:

Since battery fluid contains sulfuric acid, be sure to wear eye protection and protective gloves when inspecting your vehicle's battery. Avoid tipping the battery and subjecting it to shocks since this could cause fluid to spill.

Under no circumstances allow battery fluid to make contact with your skin, eyes, or clothing since this can cause blindness and burns. If battery fluid splashes onto your skin, eyes or clothing, wash it away immediately with plenty of water. If battery fluid splashes into your eyes, seek medical attention immediately.

If battery fluid is accidentally swallowed, immediately drink a large amount of milk or water, and seek medical attention immediately.

Battery fluid is corrosive. If it splashes onto your vehicle's paintwork or fabrics, wash it away immediately with plenty of water.

Keep children away:

Batteries must be handled only by persons who are aware of the potential hazards. Take particular care to keep children away from your vehicle's battery. Improper handling can cause blindness and burns.

Keep flames away:

Before working on or near your vehicle's battery, extinguish all cigarettes, matches, and lighters. Also, keep the battery away from flammable items and electrical sparks. Since batteries emit highly flammable, explosive hydrogen gas, any flames or sparks in the vicinity could cause an explosion.

When working near your vehicle's battery, take care that metal tools do not short-circuit the battery's (+) and (−) terminals or connect the battery's (+) terminal to the vehicle's body. A short circuit could create electrical sparks and lead to an explosion.

– CONTINUED –

To prevent electrical sparks, all rings, wristwatches, and other metal accessories must be taken off before work is carried out on or near the battery.



Prevent explosions:

While being charged, batteries emit highly flammable, explosive hydrogen gas. To prevent an explosion, charge your vehicle's battery in a well ventilated area and keep flames away.

■ Precautions when jump starting

⚠ WARNING

- **Never attempt jump starting if the discharged battery is frozen. It could cause the battery to burst or explode.**
- **Be sure the jumper cables and clamps on them do not have loose or missing insulation. Do not jump start unless cables in suitable condition are available.**
- **A running engine can be dangerous. Keep your fingers, hands, clothing, hair and tools away from the cooling fan, belts and any other moving engine parts. Removing rings, watches and ties is advisable.**
- **Jump starting is dangerous if it done incorrectly. If you are unsure about the proper procedure for jump starting, consult a competent mechanic.**


⚠ CAUTION

The battery used for boosting must be 12 V. Do not jump start unless you are sure that the booster battery is correct.

When your vehicle does not start due to a run down (discharged) battery, the vehicle may be jump started by connecting your battery to another battery (called the booster battery) with jumper cables.

■ How to Jump Start

1. Make sure the booster battery is 12 volts and the negative terminal is grounded.
2. If the booster battery is in another vehicle, do not let the two vehicles touch.
3. Turn off all unnecessary lights and accessories.
4. Connect the jumper cables exactly in the sequence illustrated.

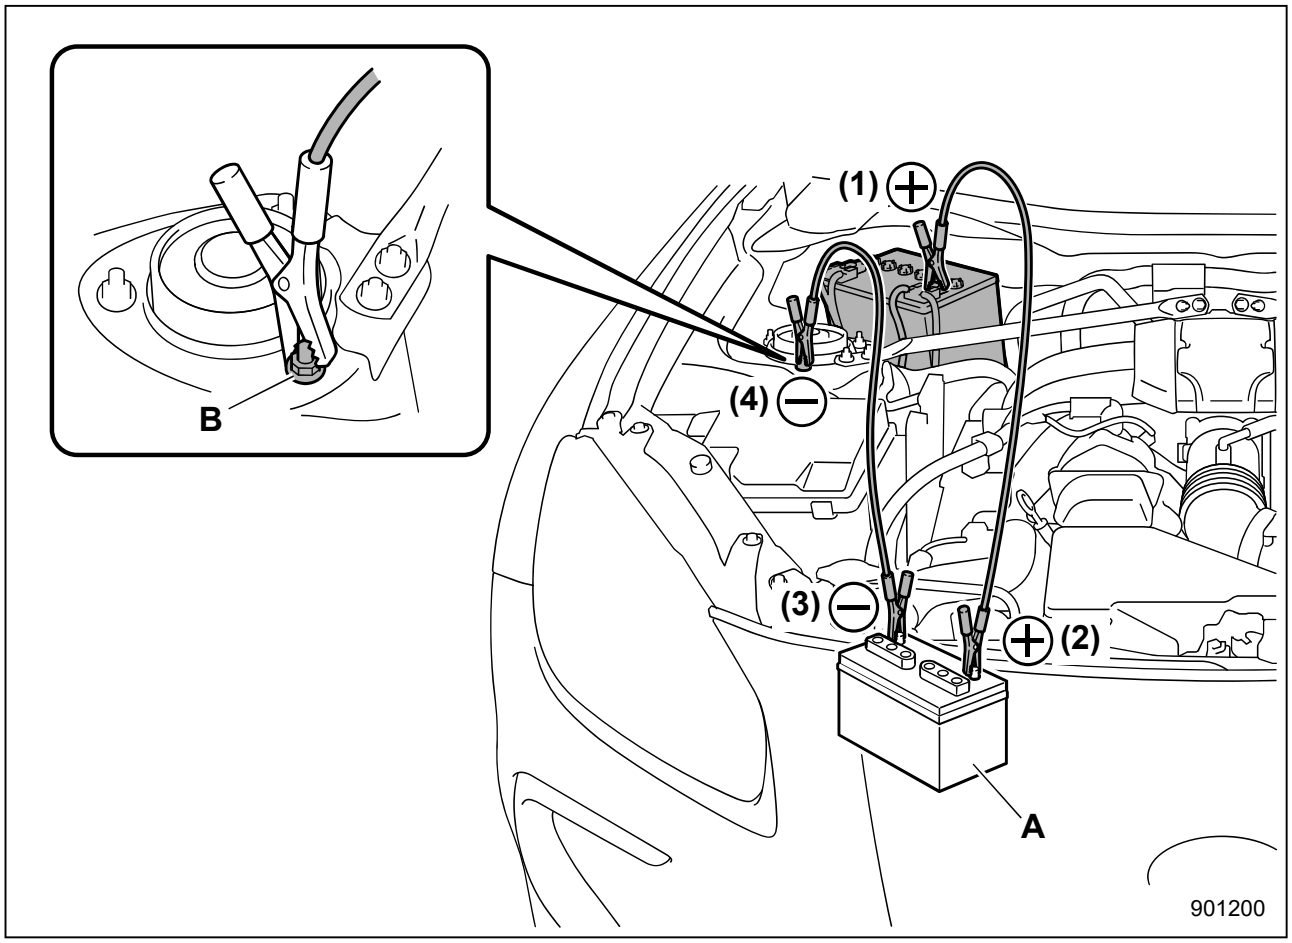

A) Booster battery
B) Strut mounting nut
1) Connect one jumper cable to the positive (+) terminal on the discharged battery.
2) Connect the other end of the jumper cable to the positive (+) terminal of the booster battery.
3) Connect one end of the other cable to the negative (−) terminal of the booster battery.
4) Connect the other end of the cable to the strut mounting nut.

Make sure that the cables are not near any moving parts and that the cable clamps are not in contact with any other metal.

5. Start the engine of the vehicle with the booster battery and run it at moderate speed. Then start the engine of the vehicle that has the discharged battery.

6. When finished, carefully disconnect the cables in exactly the reverse order.

9-5. Engine Overheating

⚠ WARNING

Never remove the radiator cap until the engine has been shut off and has fully cooled down. When the engine is hot, the coolant is under pressure. Removing the cap while the engine is still hot could release a spray of boiling hot coolant, which could burn you very seriously.

⚠ CAUTION

If the engine overheats, the engine speed or the vehicle speed may be reduced. Stop the vehicle in a safe place immediately.

■ If Steam Is Coming from the Engine Compartment

Turn off the engine and get everyone away from the vehicle until it cools down.

We recommend that you contact an authorized SUBARU dealer.

■ If No Steam Is Coming from the Engine Compartment

1. Keep the engine running at idling speed.
2. Open the hood to ventilate the engine compartment. Refer to "Engine Hood" ☞P336.

Confirm that the cooling fan is turning. If the fan is not turning, immediately turn off the engine and contact we recommend that your authorized dealer for repair.

3. After the engine coolant temperature has dropped, turn off the engine.

If the temperature gauge stays in the overheated zone, turn off the engine.

4. After the engine has fully cooled down, check the coolant level in the reserve tank.

If the coolant level is below the “LOW” mark, add coolant up to the “FULL” mark.

NOTE

For details about how to check the coolant level or how to add coolant, refer to "Engine Coolant" ☞P342.

5. If there is no coolant in the reserve tank, add coolant to the reserve tank. Then remove the radiator cap and fill the radiator with coolant.


If you remove the radiator cap from a hot radiator, first wrap a thick cloth around the radiator cap, then turn the cap counterclockwise slowly without pressing down until it stops. Release the pressure from the radiator. After the pressure has been fully released, remove the cap by pressing down and turning it.

9-6. Towing

⚠ WARNING

Never tow vehicles with the front wheels raised off the ground while the rear wheels are on the ground, or with the rear wheels raised off the ground while the front wheels are on the ground.

This will cause the vehicle to damage or cause an accident.

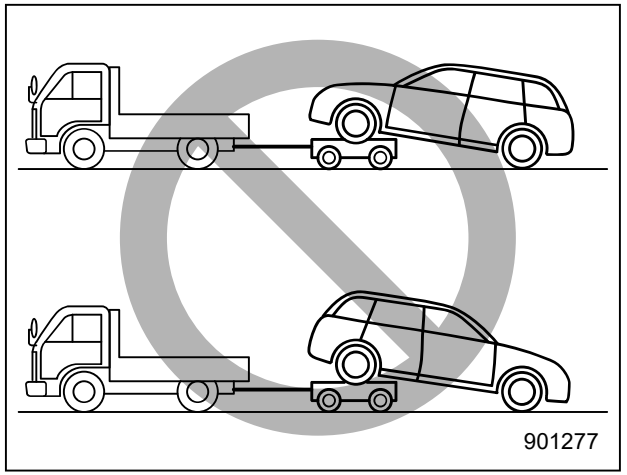

If towing is necessary, SUBARU recommends it be done by your SUBARU dealer or a commercial towing service.

■ Towing Hook and Tie-Down Hooks/Holes

The towing hooks should be used only in an emergency.


SUBARU recommends towing be done by your SUBARU dealer or a commercial towing service.

⚠ CAUTION

- **Use only the specified towing hook and tie-down hooks/holes. Never use suspension parts or other parts of the body for towing or tie-down purposes.**
- **Never use the tie-down hole closest to the muffler under the vehicle for towing purposes.**

Front towing hook:

1. Take out the screwdriver, towing hook and wheel nut wrench from the under-floor storage compartment.

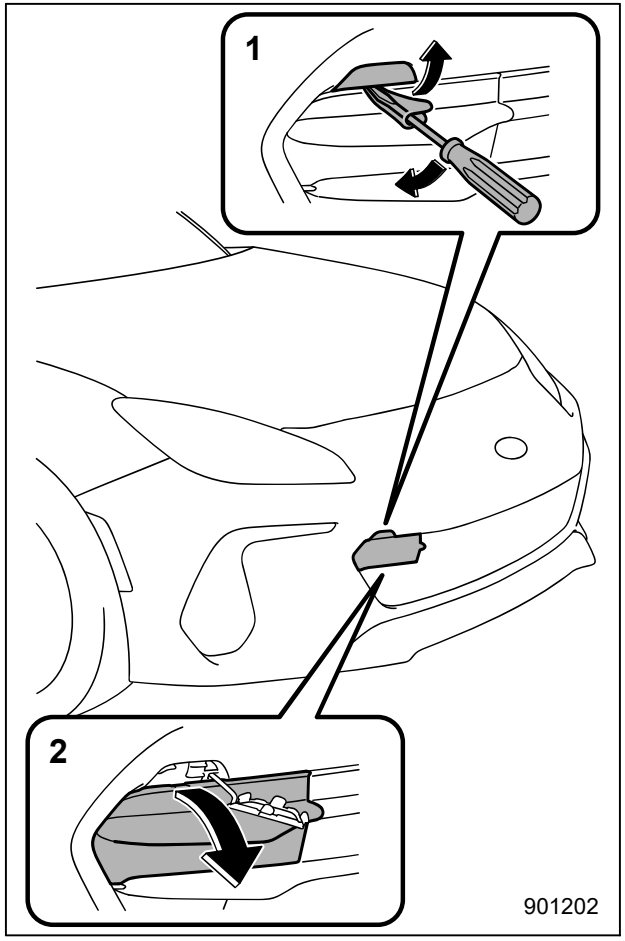


1) Upper cover
2) Lower cover

2. Insert a screwdriver, with its tip covered with tape or a cloth to prevent damage to the bumper, into the cutout of the cover and pry up to separate the upper

– CONTINUED –

cover. Then, pull the lower cover to separate it.

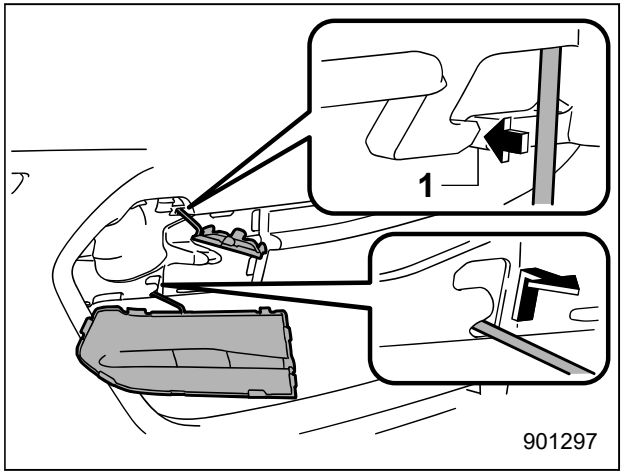


1) Slit

3. Remove the covers from the bumper.


When removing the upper side cover, align the hook portion of the cover with the slit and push it through the slit to remove the cover.

⚠ CAUTION

Do not apply excessive force when removing the covers. Otherwise, they may be deformed or damaged.

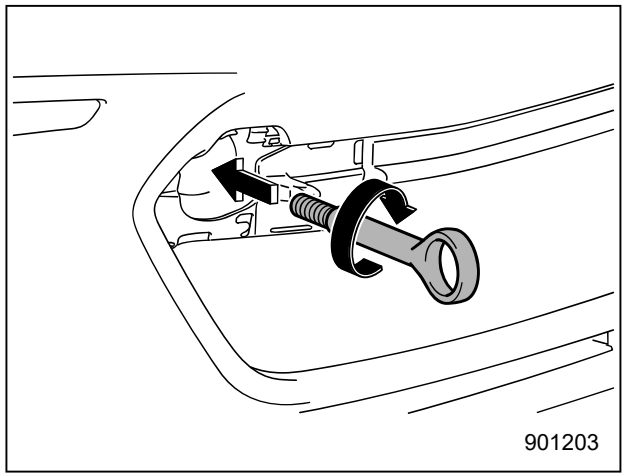

4. Screw the towing hook into the threaded hole until the threads can no longer be seen.

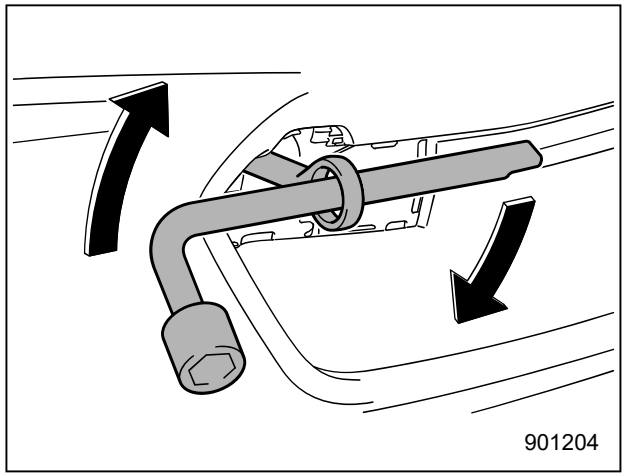

5. Tighten the towing hook securely using the wheel nut wrench.

After towing, remove the towing hook from the vehicle and stow it in the under-floor storage compartment.

Fit the towing hook cover on the bumper.

⚠ WARNING


- **Do not use the towing hook except when towing your vehicle.**
- **Be sure to remove the towing hook after towing. Leaving the towing hook mounted on the vehicle could interfere with proper operation of the SRS airbag system in a frontal collision.**

⚠ CAUTION


To prevent deformation to the bumper and the towing hook, do not apply excessive load to the towing hook.

Rear towing hook:


1. Take out the screwdriver, towing hook, wheel nut wrench from the under-floor storage compartment.

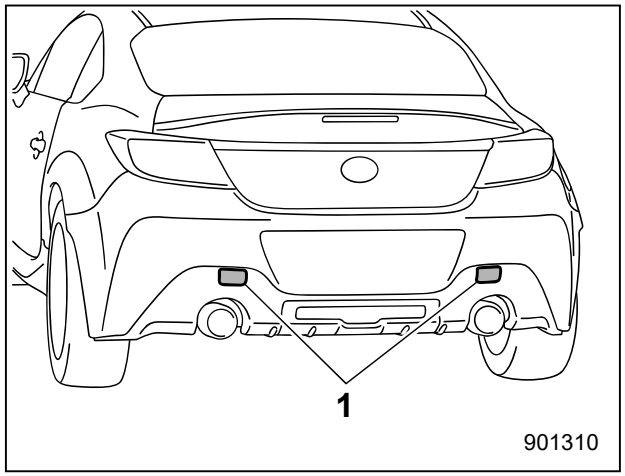

1) Towing hook covers

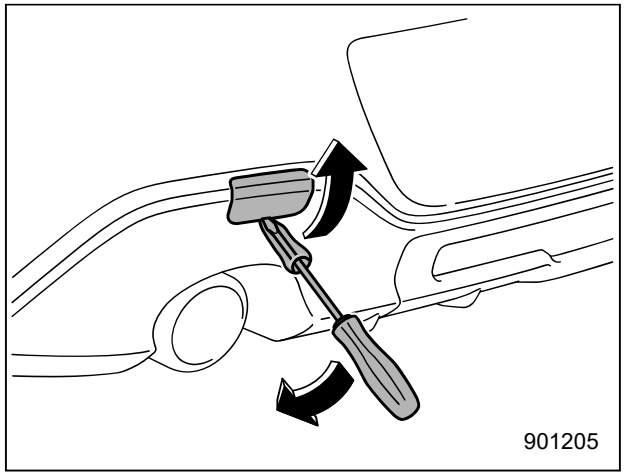


2. Pry off the cover on the rear bumper using a screwdriver, and you will find a threaded hole for attaching the towing hook.

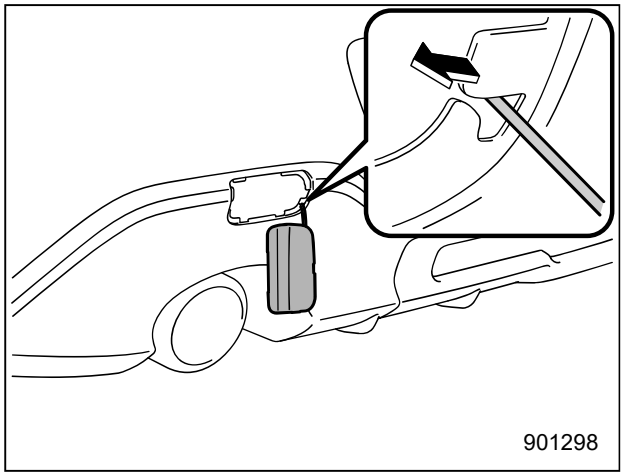


3. Remove the covers from the bumper.

⚠ CAUTION

Do not apply excessive force when removing the covers. Otherwise, they may be deformed or damaged.

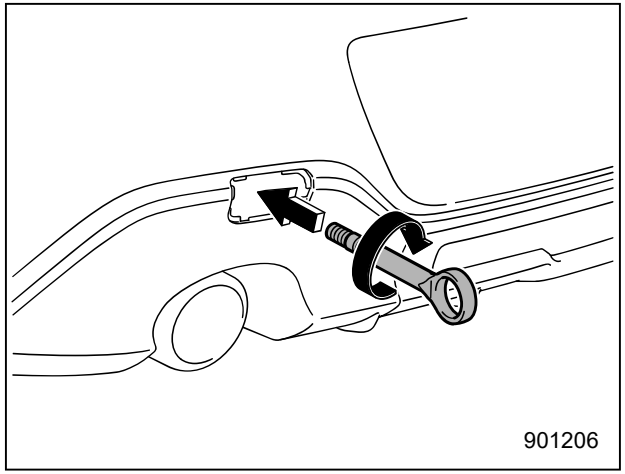

4. Screw the towing hook into the threaded hole until its thread can no longer be seen.

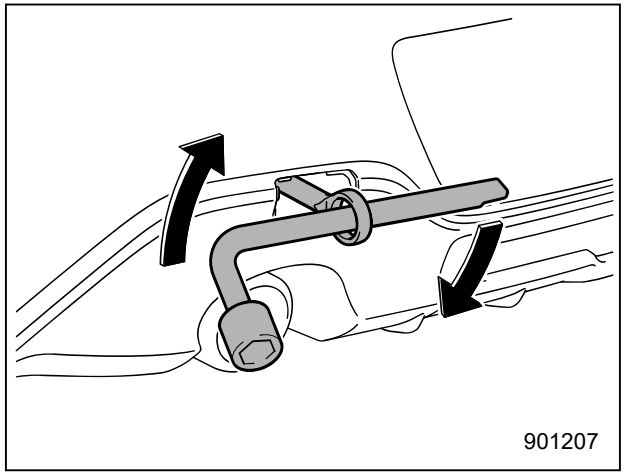

5. Tighten the towing hook securely using the wheel nut wrench.

– CONTINUED –

After towing, remove the towing hook from the vehicle and stow it in the under-floor storage compartment.

Fit the towing hook cover on the bumper.


⚠ WARNING

- **Do not use the towing hook except when towing your vehicle.**
- **Be sure to remove the towing hook after towing. Leaving the towing hook mounted on the vehicle could interfere with proper operation of the fuel pump shut off function when the vehicle is struck from behind.**

⚠ CAUTION

To prevent deformation to the bumper and the towing hook, do not apply excessive load to the towing hook.


Front tie-down hooks:

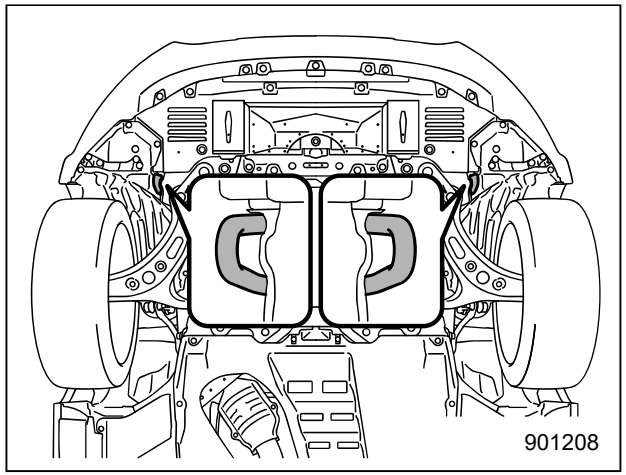

The front tie-down hooks are located between each of the front tires and the front bumper.

Front Tie-down Hooks are for tying down the vehicle. They are not for towing.

Rear tie-down holes:

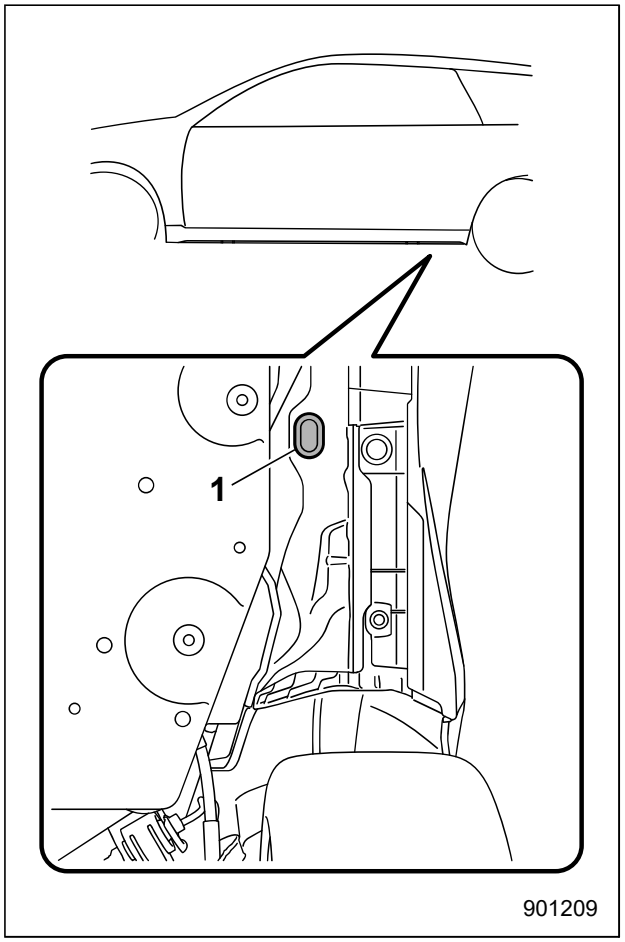

1) Rear tie-down hole

The rear tie-down holes are located near each of the jack-up reinforcements.


There is a plug in each rear tie-down hole. To use the rear tie-down holes, remove the plugs. After using the rear tie-down

holes, return the plugs to their original places.

⚠ WARNING

Use the rear tie-down holes only for downward anchoring. If they are used to anchor the vehicle in any other direction, cables may slip out of the holes, possibly causing a dangerous situation.

■ Using a Flat-Bed Truck

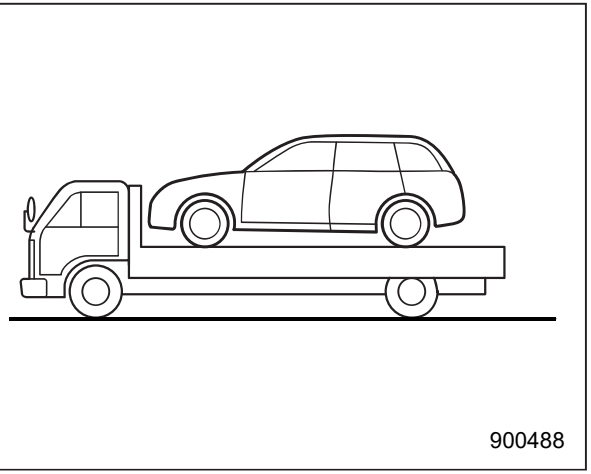


This is the best way to transport your vehicle. Use the following procedures to ensure safe transportation.

1. Shift the select lever into the “P” position for AT models. Shift the shift lever into the 1st position for MT models.
2. Apply the parking brake firmly.
3. Secure the vehicle onto the carrier properly with safety chains. Each safety chain should be equally tightened and care must be taken not to pull the chains so tightly that the suspension bottoms out.

⚠ CAUTION

Transport by flat-bed truck may cause the headlights to become misaligned. In such a case, we recommended that you have the headlight alignment checked by a SUBARU dealer after transporting the vehicle by flat-bed truck.

■ Towing with All Wheels on the Ground

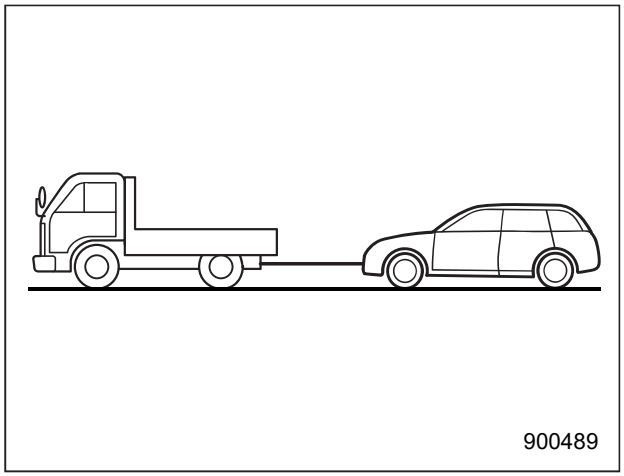

⚠ WARNING

- **Never turn the ignition switch to the “OFF” position while the vehicle is being towed because the steering wheel and the direction of the wheels will be locked.**
- **Remember that the brake booster and power steering do not function when the engine is not running. Because the engine is turned off, it will take greater effort to operate the brake pedal and steering wheel.**

⚠ CAUTION

- **If transmission failure occurs, transport your vehicle on a flat-bed truck.**
- **Sometime damaged vehicles cannot be towed because of their damaged condition. In that case, use a flat-bed truck for transportation.**
- **The traveling speed must be limited to less than 30 km/h (19 mph) and the traveling distance to less than 30 km (19 miles). For greater speeds and distances, transport your vehicle on a flat-bed truck.**

– CONTINUED –

- **Use a flat-bed truck if there are long distance downgrades or steep slopes. However, do not apply the brake pedal for a long time because the engine braking will not work while towing. Doing so could overheat the brake.**
- **Drive carefully and do not make an impact on the towing rope by suddenly starting.**
- **Use a specific towing rope for towing. If wire ropes and metal chains are needed to be used for towing, wrap the contact portion of the bumper with cloth to protect it from damage.**

1. Release the parking brake and put the transmission in neutral.
2. The ignition switch should be in the “ON” position while the vehicle is being towed.
3. Take up slack in the towline slowly to prevent damage to the vehicle.

9-7. Access Key Fob – If Access Key Fob Does Not Operate Properly

⚠ CAUTION


Keep metallic objects, magnetic sources and signal transmitters away from the area between the access key fob and the push-button ignition switch. They may interfere with the communication between the access key fob and the push-button ignition switch.

The following functions may be inoperable because of strong radio signals in the surrounding area or a low battery condition of the access key fob.

- Locking/unlocking doors including trunk
- Switching power status
- Starting engine

In such cases, perform the following procedure. When the battery of the access key fob is discharged, replace it with a new one. Refer to "Replacing Battery of Access Key Fob" ☞P369.

■ Locking and Unlocking

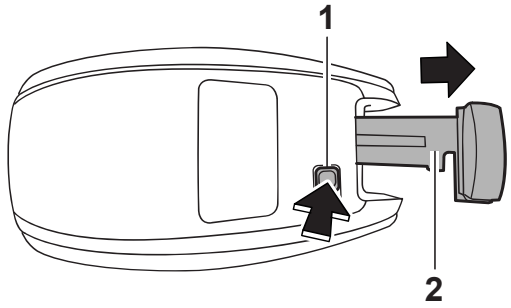

1) Release button
2) Emergency key

While pressing the release button of the access key fob, take out the emergency key.


Lock or unlock the driver’s door with the emergency key in the procedure described in "Locking and Unlocking from the Outside" ☞P108.

NOTE

After locking or unlocking, be sure to attach the emergency key back to the access key fob.

■ Switching Power Status

1. Apply the parking brake.
2. Shift the shift lever into neutral (MT models) or the select lever into the “P” position (AT models).
3. Depress the clutch pedal (MT models) or brake pedal (AT models).

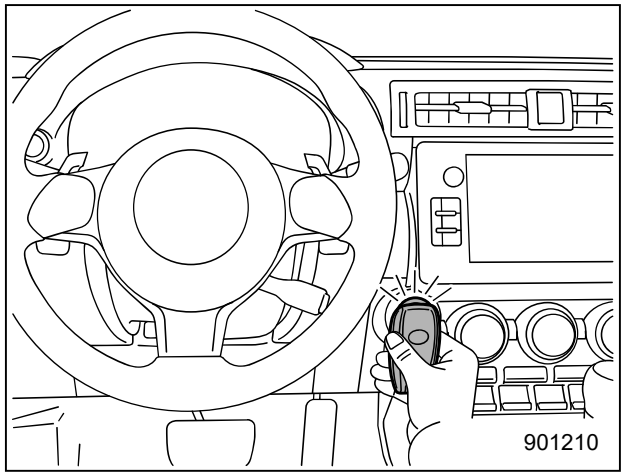

4. Hold the access key fob with the buttons facing you, and touch the push-button ignition switch with it.

When the communication between the access key fob and the vehicle is completed, a chime (ding) will sound. At the same time, the status of the push-button ignition switch changes to either of the following.

- When the keyless access with push-button start system is deactivated: “ACC”
- Under other conditions: “ON”


5. When the keyless access with push-button start system is deactivated, press the push-button ignition switch with the clutch pedal (MT models) or brake pedal (AT models) released. The status of the push-button ignition switch then changes to “ON”.

NOTE

If the power does not switch even though the above procedure was followed precisely, we recommend that contact your SUBARU dealer.

■ Starting Engine

1. Apply the parking brake.
2. Shift the shift lever into neutral (MT models) or the select lever into the “P” position (AT models).
3. Depress the brake pedal (all models).
4. Depress the clutch pedal (MT models).

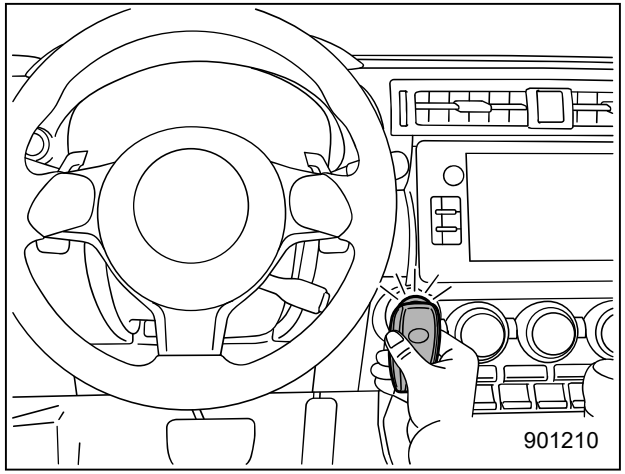

5. Hold the access key fob with the buttons facing you, and touch the push-button ignition switch with it.

When the communication between the access key fob and the vehicle is completed, a chime (ding) will sound. At the same time, the push-button ignition switch turns to the “ACC” or “ON” position.

6. After the push-button ignition switch turns to the “ACC” or “ON” position, while depressing the brake pedal (all models) and the clutch pedal (MT models), press the push-button ignition switch.


NOTE

If the engine does not start even though the above procedure was followed precisely, we recommend that you contact your SUBARU dealer.


9-8. Malfunctions of the Center Information Display

If the following screens are displayed, temporary errors or malfunctions may occur in the center information display.


If they are only temporary errors, the following procedure may help to eliminate them.

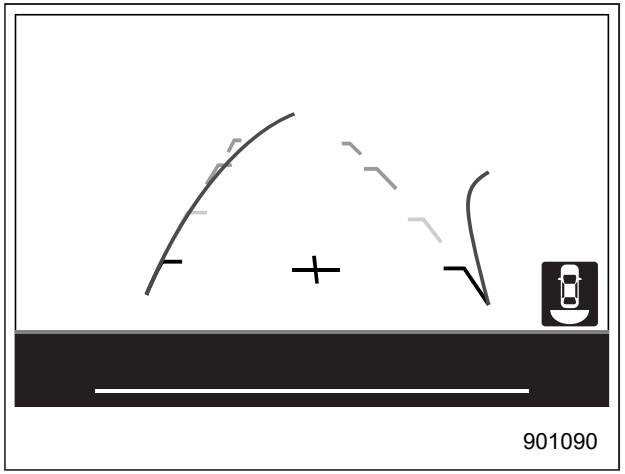


Shutting down the screen

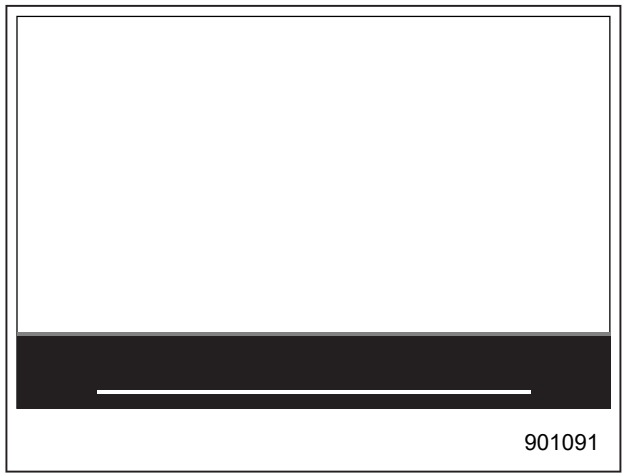


Freezing the screen

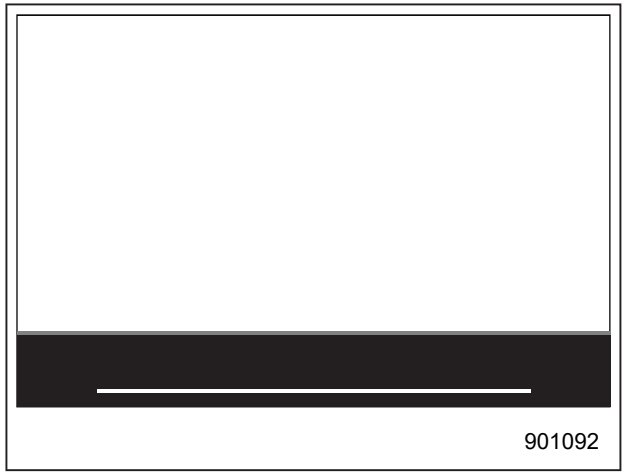

Blacking out the screen

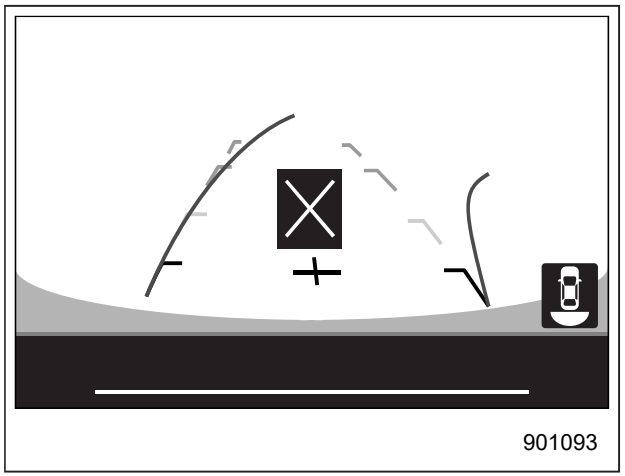


Error A

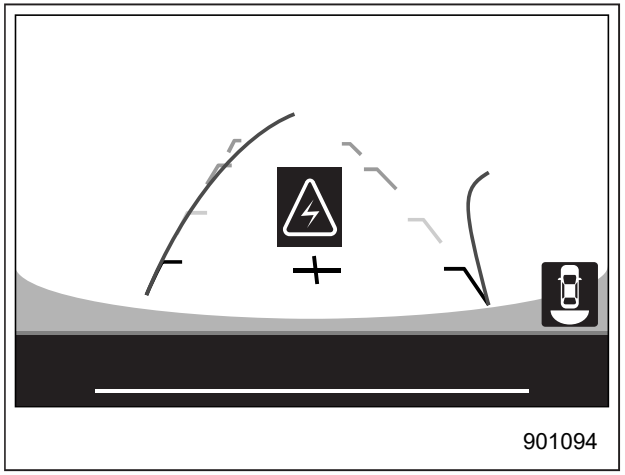

Error B

1. Park the vehicle in a safe place.
2. Turn the ignition switch once to the “OFF” position, then start the engine.

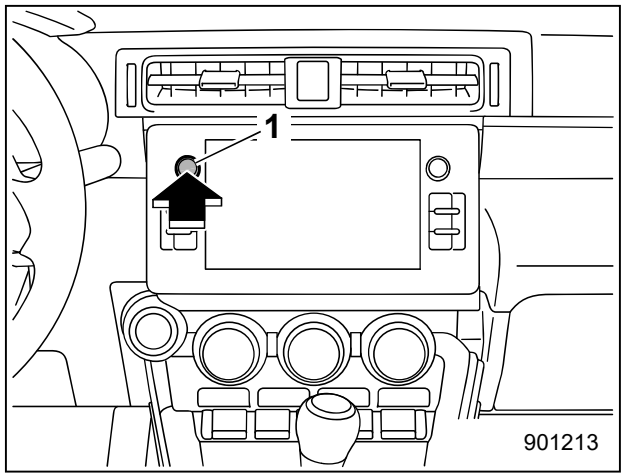

1) Volume button

3. If the center information display cannot be recovered even though the engine has been restarted, press and hold the volume button for more than 10 seconds. The center information display will start up again.

4. If the center information display is not recovered by restarting it, we recommend that you contact your SUBARU dealer.

9-9. If Your Vehicle Is Involved in an Accident

■ To Restart the Engine When Involved in an Accident

⚠ CAUTION

If your vehicle is involved in an accident, be sure to inspect the ground under the vehicle before restarting the engine. If you find that fuel has leaked on the ground, do not try to restart the engine. The fuel system has been damaged and is in need of repair. Immediately contact the nearest automotive service facility. We recommend that you consult your SUBARU dealer.

Your vehicle has a fuel pump shut off system. When the vehicle sustains an impact in an accident, etc., the fuel pump shut off system stops supplying the fuel in order to minimize fuel leakage.

However, depending on the impact conditions at the time of collision, the fuel pump shut-off system may not operate.

Perform the following procedures to restart the engine after the system is activated.

1. Turn the push-button ignition switch to the “ACC” or “OFF” position.
2. Restart the engine.

Appearance Care

10-1.Exterior Care 320
Washing.....320
Waxing and Polishing 321
Cleaning Alloy Wheels 321
Alloy Wheels (Vehicles with Matte Painted Wheels) 322
10-2.Corrosion Protection 322
Most Common Causes of Corrosion 322
To Help Prevent Corrosion 322
10-3.Cleaning the Interior 323
Seat Fabric Material..... 323
Leather Seat Materials..... 323
Synthetic Leather Upholstery..... 324
Instrument Panel, Console Panel, Switches, Combination Meter, and Other Plastic Surface 324
Center Information Display..... 324

10-1. Exterior Care

■ Washing

⚠ CAUTION

- **When washing the vehicle, the brakes may get wet. As a result, the brake stopping distance will be longer. To dry the brakes, drive the vehicle at a safe speed while lightly pressing the brake pedal to heat up the brakes.**
- **Do not wash the engine compartment and areas adjacent to it. If water enters the engine air intake or electrical parts, it will cause engine trouble or a malfunction of the power steering.**
- **When washing inner fenders, underbody, bumpers and protruding objects such as exhaust pipes and exhaust finishers, be careful to prevent injuries from contacting sharp ends.**
- **If the climate control system is operating when you wash the vehicle, do not set the air inlet selection of the climate control to outside air circulation mode. There is a risk that water may enter the vehicle through the air inlets.**
- **Do not use any organic solvents when washing the surface of the bulb assembly cover. However, if a detergent with organic solvents is used to wash the cover surface, completely rinse off the detergent with water. Otherwise, the cover surface may be damaged.**

NOTE

When having your vehicle washed in an automatic car wash, make sure beforehand that the car wash is of suitable type.

The best way to preserve your vehicle's beauty is frequent washing. Wash the vehicle at least once a month to avoid contamination by road grime.

Wash dirt off with a wet sponge and plenty of lukewarm or cold water. Do not wash the vehicle with hot water and in direct sunlight.

Salt, chemicals, insects, tar, soot, tree sap, and bird droppings should be washed off by using a light detergent, as required. If you use a light detergent, make certain that it is a neutral detergent. Do not use strong soap or chemical detergents. All cleaning agents should be promptly flushed from the surface and not allowed to dry there. Rinse the vehicle thoroughly with plenty of lukewarm water. Wipe the remaining water off with a chamois or soft cloth. Wear rubber gloves and use a hand brush when washing down underbody, inner fenders and suspension to effectively remove mud and dirt off.

▼ Washing the underbody

Chemicals, salts and gravel used for deicing road surfaces are extremely corrosive, accelerating the corrosion of underbody components, such as the exhaust system, fuel and brake lines, brake cables, floor pan and fenders, and suspension.

Thoroughly flush the underbody and inside of the fenders with lukewarm or cold water at frequent intervals to reduce the harmful effects of such agents.

Mud and sand adhering to the underbody components may accelerate their corrosion.

After driving off-road or on muddy or sandy roads, wash the mud and sand off the underbody.

Carefully flush the suspension and axle parts, as they are particularly prone to mud and sand buildup. Do not use a sharp-edged tool to remove caked mud.

⚠ CAUTION

- **Be careful not to damage brake hoses, sensor harnesses, and other parts when washing suspension components.**
- **Be careful not to flush the engine bottom for a long time. It may cause damage of some electrical parts.**

▼ Using a warm water washer

- Keep a good distance of 30 cm (12 in) or more between the washer nozzle and the vehicle.
- Do not wash the same area continuously.
- If a stain will not come out easily, wash by hand. Some warm water washers are of the high temperature, high pressure type, and they can damage or deform the resin parts such as moldings, or cause water to leak into the vehicle.

■ Waxing and Polishing

Always wash and dry the vehicle before waxing and polishing.

Use a good quality polish and wax and apply them according to the manufacturer's instructions. Wax or polish when the painted surface is cool.

Be sure to polish and wax the chrome trim, as well as the painted surfaces. Loss of wax on a painted surface leads to loss of the original luster and also quickens the deterioration of the surface. It is recommended that a coat of wax be applied at least once a month, or whenever the surface no longer repels water.

If the appearance of the paint has diminished to the point where the luster or tone cannot be restored, lightly polish the surface with a fine-grained compound. Never polish just the affected area, but include the surrounding area as well. Always polish in only one direction. A No. 2000 grain compound is recommended. Never use a coarse-grained compound. Coarser grained compounds have a smaller grain-size number and could damage the paint. After polishing with a compound, coat with wax to restore the original luster. Frequent polishing with a compound or an incorrect polishing technique will result in removing the paint layer and exposing the undercoat. We recommend that you always contact your SUBARU dealer or an auto paint specialist.

⚠ CAUTION

Do not use any agents with organic solvents on the surface of the bulb assembly cover. However, if a polish or wax with organic solvents is applied to the cover surface, completely wipe off the polish or wax. Otherwise, the cover surface may be damaged.

NOTE

Be careful not to block the windshield washer nozzles with wax when waxing the vehicle.

■ Cleaning Alloy Wheels

- Promptly wipe the alloy wheels clean of any kind of grime or agent. If dirt is left on too long, it may be difficult to clean off.
- Do not use soap containing grit to clean the wheels. Be sure to use a neutral cleaning agent, and later rinse thoroughly with water. Do not clean the wheels with a stiff brush or expose them to a high-speed washing device.
- Clean the vehicle (including the alloy wheels) with water as soon as possible when it has been splashed with sea water, exposed to sea breezes, or driven on roads treated with salt or other agents.

– CONTINUED –

• Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather.

■ Alloy Wheels (Vehicles with Matte Painted Wheels)

As matte painted wheels require different cleaning methods than conventional alloy wheels, be sure to observe the following. For details, consult your SUBARU dealer.

• Remove dirt using water. If the wheels are excessively dirty, use a sponge or soft cloth dampened with a diluted neutral detergent to remove the dirt.

• To prevent the matte paint from being damaged, make sure to observe the following precautions:

- Do not scrub or polish the wheels using a brush or dry cloth.
- Do not use any wheel coatings or abrasive detergents.

10-2. Corrosion Protection

Your SUBARU has been designed and built to resist corrosion. Special materials and protective finishes have been used on most parts of the vehicle to help maintain fine appearance, strength, and reliable operation.

■ Most Common Causes of Corrosion

The most common causes of corrosion are:

• The accumulation of moisture retaining dirt and debris in body panel sections, cavities, and other areas.

• Damage to paint and other protective coatings caused by gravel and stone chips or minor accidents.

Corrosion is accelerated on the vehicle when:

• It is exposed to road salt or dust control chemicals, or used in coastal areas where there is more salt in the air, or in areas where there is considerable industrial pollution.

• It is driven in areas of high humidity, especially when temperatures range just above freezing.

• Dampness in certain parts of the vehicle remains for a long time, even though other parts of the vehicle may be dry.

• High temperatures will cause corrosion to parts of the vehicle which cannot dry quickly due to lack of proper ventilation.

■ To Help Prevent Corrosion

Wash the vehicle regularly to prevent corrosion of the body and suspension components. Also, wash the vehicle promptly after driving on any of the following surfaces.

• Roads that have been salted to prevent them from freezing in winter

• Mud, sand, or gravel

• Coastal roads

After the winter has ended, it is recommended that the underbody be given a very thorough washing.

Before the beginning of winter, check the condition of underbody components, such as the exhaust system, fuel and brake lines, brake cables, suspension, steering system, floor pan, and fenders. If any of them are found to be rusted, they should be given an appropriate rust prevention treatment or should be replaced. We recommend that you contact your SUBARU dealer to perform this kind of maintenance and treatment if you need assistance.

Repair chips and scratches in the paint as soon as you find them.

Check the interior of the vehicle for water and dirt accumulation under the floor mats because that could cause corrosion. Occasionally check under the mats to make sure the area is dry.

Keep your garage dry. Do not park your vehicle in a damp, poorly ventilated garage. In such a garage, corrosion can be caused by dampness. If you wash the vehicle in the garage or put the vehicle into the garage when wet or covered with snow, that can cause dampness.

If your vehicle is operated in cold weather and/or in areas where road salts and other corrosive materials are used, the door hinges and locks, trunk lid lock, and hood latch should be inspected and lubricated periodically.

10-3. Cleaning the Interior

Use a soft, damp cloth to clean the climate control panel, audio equipment, instrument panel, center console, combination meter panel, and switches. (Do not use organic solvents.)

■ Seat Fabric Material

Remove loose dirt, dust or debris with a vacuum cleaner. If the dirt is caked on the fabric or hard to remove with a vacuum cleaner, use a soft brush then vacuum it.

Wipe the fabric surface with a tightly wrung cloth and dry the seat fabric thoroughly. If the fabric is still dirty, wipe using a solution of mild soap and lukewarm water then dry thoroughly.

If the stain does not come out, try a commercially available fabric cleaner. Use the cleaner on a hidden place and make sure it does not affect the fabric adversely. Use the cleaner according to its instructions.

⚠ CAUTION

When cleaning the seat, do not use benzine, paint thinner, or any similar materials. Doing so could damage the surface and cause the color to deteriorate.

NOTE

As the color of the meter visor may transfer, do not place anything on top of it.

■ Leather Seat Materials

The leather used by SUBARU is a high quality natural product which will retain its distinctive appearance and feel for many years with proper care.

Allowing dust or road dirt to build up on the surface can cause leather to become brittle and wear prematurely. To maintain its resiliency, leather should be cleaned monthly or whenever it becomes soiled.

Before cleaning leather upholstery, vacuum it to remove dust. Use a soft and lint-free cloth dampened with lukewarm water and mild soap, taking care not to soak the leather or allow water to penetrate the stitched seams. Use a gentle circular motion while cleaning the leather - do not rub or apply extreme pressure. Wipe the leather again with another clean, slightly damp cloth to remove soap residue and dry with a soft cloth.

Minor surface blemishes or difficult dirt spots may be treated with a commercial leather spray. Never use alcohol, cleaning solvents, leather oils, varnishes or polishes on your leather as it will dry out the leather finish.

– CONTINUED –

If your SUBARU is to be parked for a long time in bright sunlight, it is recommended that the seats and headrests be covered, or the windows shaded, to prevent fading or shrinkage.

You will discover that each leather seat section will develop soft folds or wrinkles, which is characteristic of genuine leather.

■ Synthetic Leather Upholstery

The synthetic leather material used on the SUBARU may be cleaned using mild soap or detergent and water, after first vacuuming or brushing away loose dirt. Allow the soap to soak in for a few minutes and wipe off with a clean, damp cloth. Commercial foam-type cleaners suitable for synthetic leather materials may be used when necessary.

⚠ CAUTION

Strong cleaning agents such as solvents, paint thinners, window cleaner or fuel must never be used on leather or synthetic interior materials. Doing so could damage the surface and cause the color to deteriorate.

■ Instrument Panel, Console Panel, Switches, Combination Meter, and Other Plastic Surface

Use a soft, damp cloth to clean the instrument panel, center console, combination meter panel, and switches.

⚠ CAUTION

- **Do not use organic solvents such as paint thinners or fuel, or strong cleaning agents that contain those solvents. Doing so could damage the surface and cause the color to deteriorate.**
- **Do not use chemical solvents that contain silicone on the vehicle audio system, electrical components of the air-conditioner or any switches. If silicone adheres to these parts, it may cause damage to electrical components.**

■ Center Information Display

To clean the center information display, wipe it with a silicone cloth or with a soft cloth. If the monitor is extremely dirty, clean it with a soft cloth moistened with neutral detergent then carefully wipe off any remaining detergent.

⚠ CAUTION

- **Do not spray neutral detergent directly onto the monitor. Doing so could damage the monitor's components.**
- **Do not wipe the monitor with a hard cloth. Doing so could scratch the monitor.**
- **Do not use cleaning fluid that contains thinner, fuel, or any other volatile substance. Such cleaning fluid could erase the lettering on the switches at the bottom of the monitor.**

11-1.Maintenance Schedule 327
11-2.Maintenance Precautions.....332
Before Checking or Servicing in the Engine Compartment.....333
When Checking or Servicing in the Engine Compartment.....333
When Checking or Servicing in the Engine Compartment While the Engine Is Running 334
11-3.Maintenance Tips.....334
Removing and Reinstalling Clips.....334
11-4.Engine Hood.....336
11-5.Engine Compartment Overview.....338
11-6.Engine Oil 339
Engine Oil Consumption.....339
Checking the Oil Level.....339
Changing the Oil and Oil Filter.....340
Recommended Grade and Viscosity 341
Synthetic Oil.....341
11-7.Cooling System.....341
Cooling Fan, Hose and Connections.....342
Engine Coolant 342
11-8.Air Cleaner Element.....343
Replacing the Air Cleaner Element.....344
11-9.Spark Plugs 345
Recommended Spark Plugs.....345
11-10.Drive Belt 345
11-11.Automatic Transmission Fluid 346
Recommended Grade and Viscosity 346
11-12.Differential Gear Oil 346
Recommended Grade and Viscosity 346
11-13.Manual Transmission Oil 346
Recommended Grade and Viscosity 346
11-14.Brake Fluid 347
Checking the Fluid Level 347
Recommended Brake Fluid 347
11-15.Clutch Fluid (MT models) 348
Checking the Fluid Level 348
Recommended Clutch Fluid 348
11-16.Brake Booster 348
11-17.Brake Pedal 349
11-18.Clutch Pedal (MT models) 349
11-19.Replacement of Brake Pad and Lining.....349
Breaking-in of New Brake Pads and Linings 350
11-20.Parking Brake Stroke.....350
11-21.Tires and Wheels 351
Types of Tires 351
Tire Pressure Monitoring System (TPMS) (if equipped).....351
Tire Inspection 353
Tire Pressures and Wear..... 353
Wheel Balance 355
Wear Indicators..... 356
Rotational Direction of Tires..... 356
Tire Rotation..... 356
Tire Replacement..... 357
Wheel Replacement..... 358
11-22.Alloy Wheels.....359
11-23.Windshield Washer Fluid 359
11-24.Replacement of Wiper Blades.....360
Windshield Wiper Blade Assembly..... 361
Windshield Wiper Blade Rubber 362
11-25.Battery.....363
Battery Precautions..... 363
11-26.Fuses.....364

11-27.Installation of Accessories.....366
11-28.Replacing Bulbs.....366
Headlights.....366
Rear Fog Light (if equipped)/Backup Light 366
Trunk Light 367
Other Bulbs.....367
11-29.Replacing Battery..... 368
Safety precautions 368
Replacing Battery of Access Key Fob.....369
The safe disposal of button batteries.....370

11-1. Maintenance Schedule

To keep your vehicle in proper operating condition and to assure peak performance at all times, the recommended maintenance service should be performed in accordance with the maintenance schedule.

NOTE

- **The frequency of scheduled inspection and maintenance services as set forth is minimal. However, it may be necessary that they be performed more frequently depending on road conditions, weather, atmospheric conditions and vehicle usage. These conditions may differ from one country to another. Therefore there may be special requirements in your country. We recommend that you ask your authorized SUBARU dealer for the actual maintenance schedule applied to your vehicle.**
- **You can set a reminder to be displayed when a scheduled maintenance item is almost due. For details, refer to "General settings" ☞P155.**

Continue periodic maintenance beyond 120,000 km (75,000 miles) or 96 months by returning to the third column of the maintenance schedule and adding 120,000 km (75,000 miles) or 96 months to the column headings.

– CONTINUED –

Symbols used:

R: Replace
I: Inspect, and then adjust, correct or replace if necessary.
P: Perform
(I): Recommended service for safe vehicle operation

MAINTENANCE ITEM			MAINTENANCE INTERVAL (Number of months or km (miles), whichever occurs first)								REMARKS
		Months	12	24	36	48	60	72	84	96	
		× 1,000 km	15	30	45	60	75	90	105	120	
		× 1,000 miles	9	19	28	38	47	56	66	75	
1	Engine oil		**R**	**R**	**R**	**R**	**R**	**R**	**R**	**R**	See NOTE 1)
2	Engine oil filter		**R**	**R**	**R**	**R**	**R**	**R**	**R**	**R**	See NOTE 1)
3	Drive belt		**I**	**I**	**I**	**I**	**I**	**I**	**I**	**I**	
4	Cooling system, hoses and connections			**I**		**I**		**I**		**I**	
5	Replace engine coolant (SUBARU SUPERCOOLANT or equivalent)		1st replacement: **132 months (11 years)/220,000 km (137,500 miles)** From the 2nd replacement: **72 months (6 years)/120,000 km (75,000 miles)**								
6	Fuel system, lines and connections			**I**		**I**		**I**		**I**	See NOTE 2)
7	Fuel filter	For Europe (except for CIS and General)								**R**	
		Except for Europe						**R**			
8	Air cleaner element		Inspection intervals 12 months / 15,000 km (9,000 miles) whichever comes first. Replacement intervals 36 months / 45,000 km (28,000 miles) whichever comes first.								See NOTE 4)
9	Spark plugs		Replacement intervals 84 months / 10,5000 km (66,000 miles) whichever comes first.								

MAINTENANCE ITEM		MAINTENANCE INTERVAL (Number of months or km (miles), whichever occurs first)									REMARKS
		Months	12	24	36	48	60	72	84	96	
		× 1,000 km	15	30	45	60	75	90	105	120	
		× 1,000 miles	9	19	28	38	47	56	66	75	
10	Rear differential lubricants (gear oil)	For Europe	Replacement intervals 48 months / 30,000 km (18,500 miles) whichever comes first.								
		For South Africa, Australia and New Zealand	Inspection intervals 12 months / 15,000 km (9,000 miles) whichever comes first. Replacement intervals 48 months / 30,000 km (18,500 miles) whichever comes first.								
		For General	Inspection intervals 12 months / 20,000 km (12,500 miles) whichever comes first. Replacement intervals 48 months / 40,000 km (25,000 miles) whichever comes first.								
11	Transmission lubricants (Gear oil)	For Europe	Inspection intervals 48 months / 60,000 km (38,000 miles) whichever comes first.								
		For General	Inspection intervals 48 months / 40,000 km (25,000 miles) whichever comes first.								
12	Automatic transmission fluid	For Europe		**I**		**I**		**I**		**I**	
			Replacement intervals 60 months / 100,000 km (62,000 miles) whichever comes first.								
		For General		**I**		**I**		**I**		**I**	
			Replacement intervals 60 months / 100,000 km (62,000 miles) whichever comes first.								
13	Brake fluid			**R**		**R**		**R**		**R**	See NOTE 3)

– CONTINUED –

MAINTENANCE ITEM			MAINTENANCE INTERVAL (Number of months or km (miles), whichever occurs first)								REMARKS
		Months	12	24	36	48	60	72	84	96	
		× 1,000 km	15	30	45	60	75	90	105	120	
		× 1,000 miles	9	19	28	38	47	56	66	75	
14	Disc brake pads and discs/Front and rear axle boots and axle shaft joint portions		**I**	**I**	**I**	**I**	**I**	**I**	**I**	**I**	See NOTE 2)
15	Brake lining and drums (including parking brake linings and drums)			**I**		**I**		**I**		**I**	See NOTE 2)
16	Inspect brake lines and check operation of parking and service brake system			**P**		**P**		**P**		**P**	See NOTE 2)
17	Clutch system			**I**		**I**		**I**		**I**	
18	Steering and suspension system			**I**		**I**		**I**		**I**	See NOTE 2)
19	Front and rear wheel bearing									**(I)**	
20	Cabin air filter for the climate control system	For Europe (except for CIS and General)	**I**	**R**	**I**	**R**	**I**	**R**	**I**	**R**	See NOTE 4)
		For CIS and General	Replace every 12 months or 12,000 km (7,500 miles) whichever occurs first								
21	SUBARU GENUINE FUEL ADDITIVE (In areas where the impurity content in the fuel is high)		Add a bottle to the fuel tank every 15,000 km (9,000 miles)								

NOTE

1) When the vehicle is used under severe driving conditions mentioned in the following examples*, the engine oil and oil filter should be changed more frequently.

2) When the vehicle is used under severe driving conditions mentioned in the following examples*, inspection should be performed at every 15,000 km (9,000 miles) or 12 months whichever occurs first.

3) When the vehicle is used under following areas, change fluid every 15,000 km (9,000 miles) or 12 months whichever occurs first.

(1) High humidity areas
(2) Mountainous areas

4) When the vehicle is used under severe driving conditions mentioned in the following examples*, the air cleaner element and air filter should be replaced more frequently.

*: Examples of severe driving conditions:

(1) Operating in extremely cold weather (items 1, 2 and 18 only)
(2) Towing a trailer (items 1, 2, 14 and 16 only)
(3) Repeated short trips (items 1, 2 and 16 only)
(4) Driving in dusty roads (items 8, 15, 18 and 20 only)
(5) Driving in rough and/or muddy roads (items 13, 15, 18 and 20 only)
(6) Driving in areas using road salt or other corrosive materials (items 6, 13, 15, 16 and 18 only)
(7) Living in coastal areas (items 6, 14, 15, 16 and 18 only)

11-2. Maintenance Precautions

When maintenance and service are required, it is recommended that all work be done by an authorized SUBARU dealer.

If you perform maintenance and service by yourself, you should familiarize yourself with the information provided in this section on general maintenance and service for your SUBARU.

Incorrect or incomplete service could cause improper or unsafe vehicle operation. Any problems caused by improper maintenance and service performed by you are not eligible for warranty coverage.

⚠ WARNING

- **Always select a safe area when performing maintenance on your vehicle.**
- **Always be very careful to avoid injury when working on the vehicle. Remember that some of the materials in the vehicle may be hazardous if improperly used or handled, for example, battery acid.**
- **Your vehicle should only be serviced by persons fully competent to do so. Serious personal injury may result to persons not experienced in servicing vehicles.**
- **Always use the proper tools and make certain that they are well maintained.**
- **Never get under the vehicle supported only by a jack. Always use safety stands to support the vehicle.**
- **Never keep the engine running in a poorly ventilated area, such as a garage or other closed areas.**
- **Do not smoke or allow open flames around the fuel or battery. This will cause a fire.**
- **Because the fuel system is under pressure, we recommend that you have your SUBARU dealer perform the replacement of the fuel filter.**
- **Wear adequate eye protection to guard against getting oil or fluids in your eyes. If something does get in your eyes, thoroughly wash them out with clean water.**
- **Do not tamper with the wiring of the SRS airbag system or seatbelt pretensioner system, or attempt to take its connectors apart, as that may activate the system or it can render it inoperative. NEVER use a circuit tester for these wiring. If your SRS airbag or seatbelt pretensioner needs service, we recommend that you consult your nearest SUBARU dealer.**
- **Check the inside of the engine compartment to see if there are any cloths and tools left. If they are left inside, they may be a cause of malfunction and fire.**

NOTE


SUBARU does not endorse the use of non-SUBARU approved flushing systems and strongly advises against performing these services on a SUBARU vehicle. Non-SUBARU approved flushing systems use chemicals and/or solvents which have not been tested or approved by SUBARU. SUBARU warranties do not cover any part of the vehicle which is damaged by adding or applying chemicals and/or solvents other than those approved or recommended by SUBARU.

■ Before Checking or Servicing in the Engine Compartment

⚠ WARNING

- **Always stop the engine and apply the parking brake to prevent the vehicle from moving.**
- **Always let the engine cool down. Engine parts become very hot when the engine is running and remain hot for some time after the engine is stopped.**
- **Do not spill engine oil, engine coolant, brake fluid or any other fluid on hot engine components. This may cause a fire.**
- **When the ignition switch is in the "ON" position, the cooling fan may operate suddenly even when the engine is stopped. If your body or clothes come into contact with a rotating fan, that could result in serious injury. To avoid risk of injury, perform the following precautions. Always turn the push-button ignition switch to the "OFF" position and confirm that the operation indicator on the switch is turned off. Then take the access key fob out from the vehicle.**
- **Before performing any servicing on a vehicle equipped with a remote engine start system temporarily place that system in the service mode to prevent it from unexpectedly starting the engine.**

■ When Checking or Servicing in the Engine Compartment

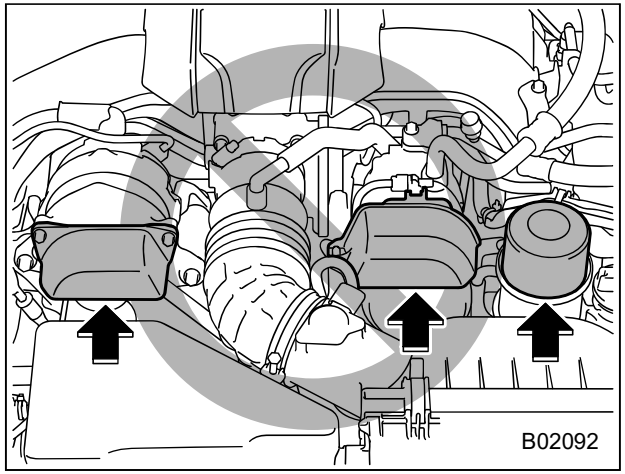

⚠ CAUTION

- **Do not contact the belt cover while checking the components in the engine compartment. Doing so may cause your hand to slip off the belt cover and result in an unexpected injury.**
- **Do not touch the oil filter until the engine has cooled down completely. Doing so may result in a burn or other injury. Note that the oil filter becomes very hot when the engine is running and remains hot for some time after the engine has stopped.**

– CONTINUED –

■ When Checking or Servicing in the Engine Compartment While the Engine Is Running

⚠ WARNING

A running engine can be dangerous. Keep your fingers, hands, clothing, hair and tools away from the cooling fan, belts and any other moving engine parts. Removing rings, watches and ties is advisable.

11-3. Maintenance Tips


Some clips and fender linings must be removed before replacing the air cleaner element or specific bulbs.

■ Removing and Reinstalling Clips


▼ Removing clips

There are several types of clips used for your vehicle.

▽ Type A and D clips

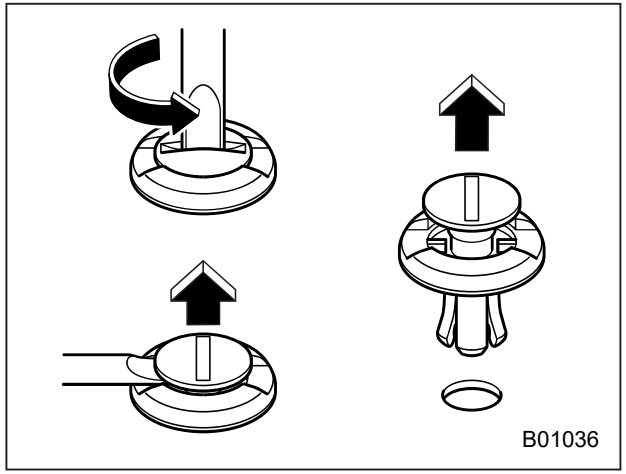


Type A clips

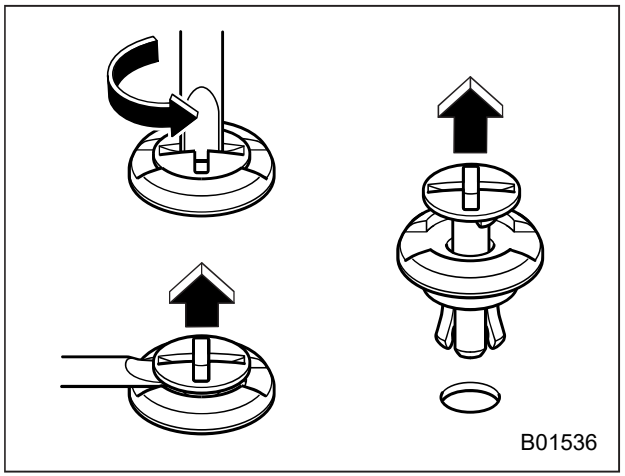

Type D clips


1. Turn the clips counterclockwise using a flat-head screwdriver until the center portion of the clip is raised.
2. Remove the clips with a flat-head screwdriver using leverage.

▽ Type B clips

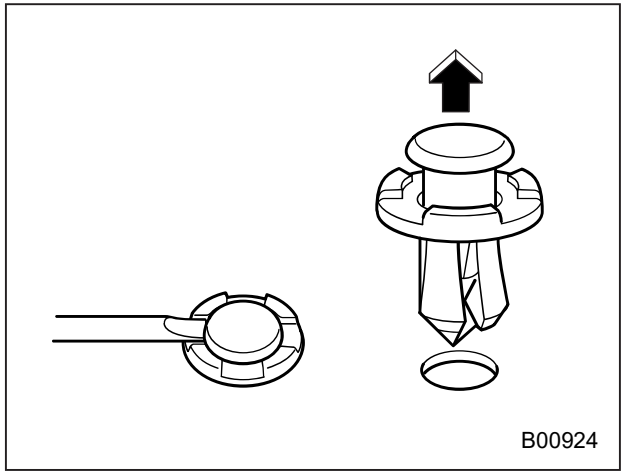


1. Pull out the center portion of the clip using a flat-head screwdriver as shown in the illustration.
2. Pull the protruded center portion to remove the entire body of the clip.

▽ Type C clips

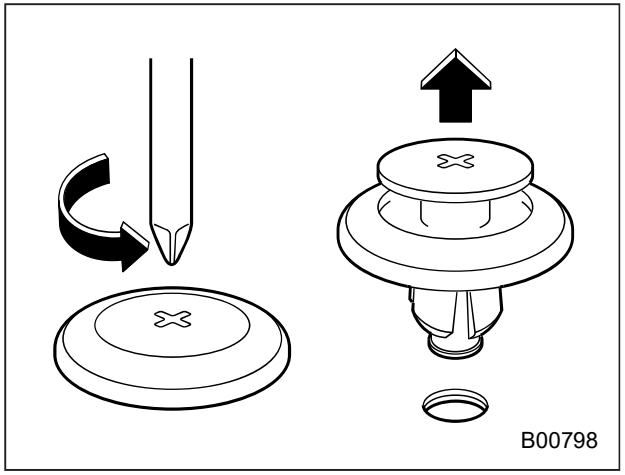


1. Turn the clip counterclockwise using a Phillips screwdriver until the center portion of the clip is raised.
2. Remove the entire clip by pulling it up.

▼ Reinstalling clips

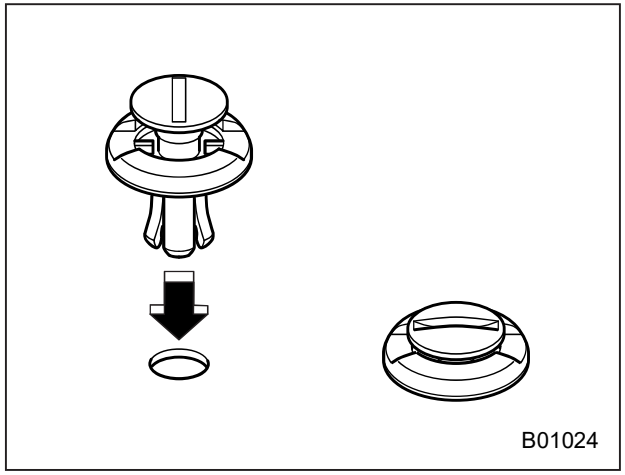


Type A clips

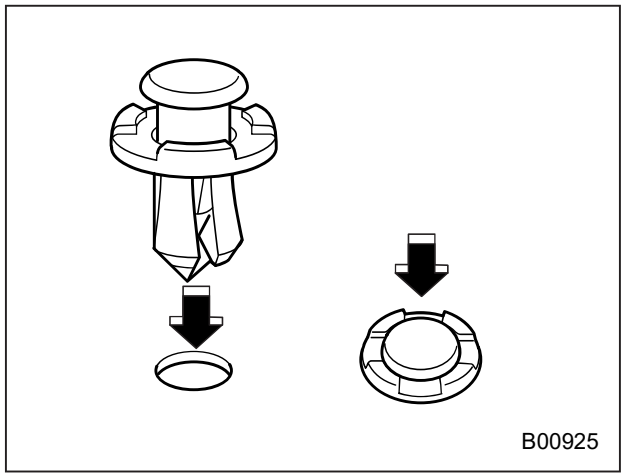


Type B clips

– CONTINUED –

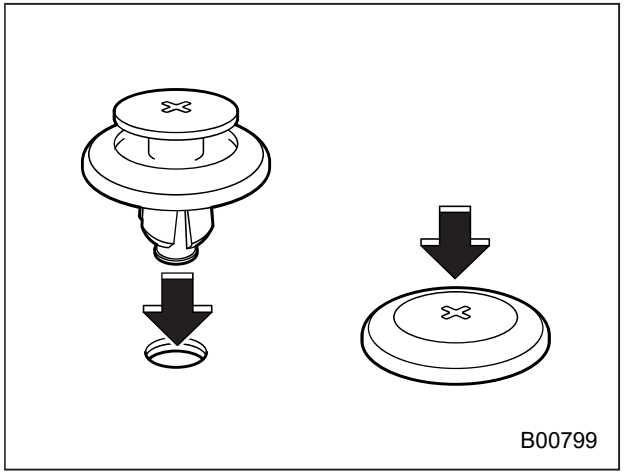

Type C clips

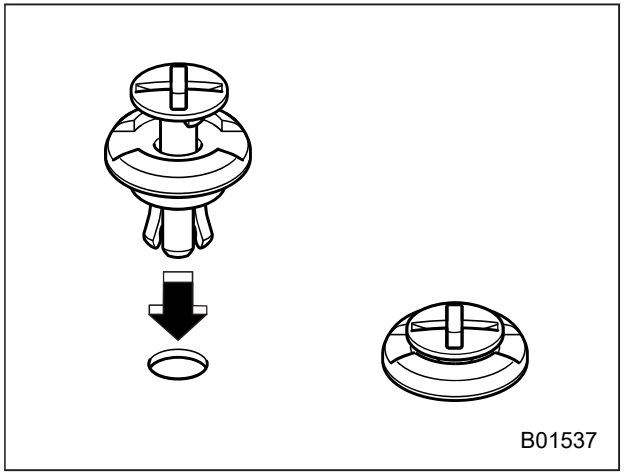

Type D clips

Insert the clip without the center portion first and then push the center portion of the clip into the hole.


11-4. Engine Hood

⚠ CAUTION


- **Be extremely careful not to catch fingers or other objects when closing the engine hood.**
- **Do not push the hood forcibly to close it. It could deform the metal.**
- **Be extremely careful opening the engine hood when the wind is strong. The engine hood could close suddenly, possibly causing injuries from slamming.**
- **Do not install accessories other than genuine SUBARU parts to the engine hood. If the engine hood becomes too heavy, the stay may not be able to support holding it open.**
- **Check that the end of the hood stay is inserted into the slot. If it is not inserted properly, the hood may drop and cause injury.**

To open the hood:


1. If the wiper blades are lifted off the windshield, return them to their original positions.

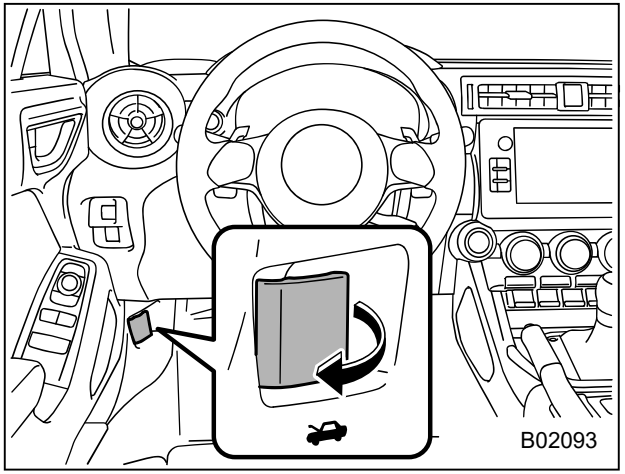

2. Pull the hood release knob under the instrument panel.

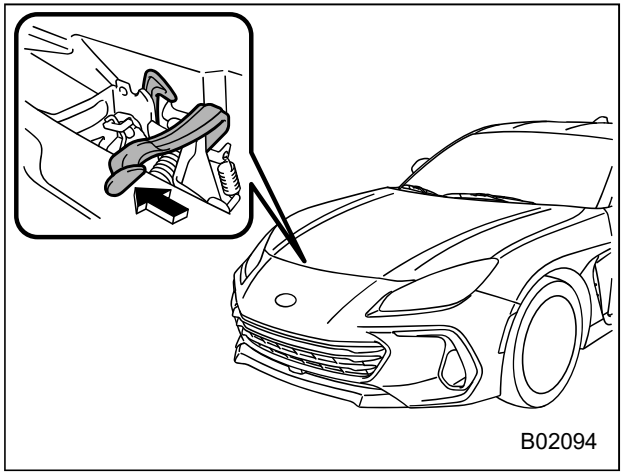

3. Release the secondary hood lock by moving the lever between the front grille and the hood toward the left.

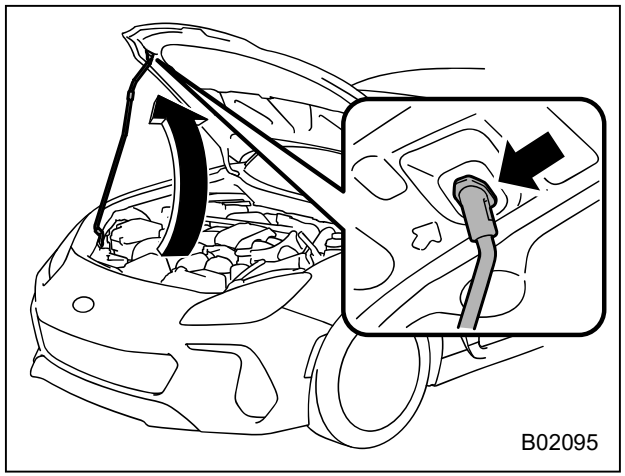

4. Lift up the hood, release the hood prop from its retainer and put the end of the hood prop into the slot in the hood.

To close the hood:


1. Lift the hood slightly and remove the hood prop from the slot in the hood and return the prop to its retainer.
2. Lower the hood to a height of approximately 20 to 30 cm (7.8 to 11.8 in) above its closed position and then let it drop.
3. After closing the hood, be sure the hood is securely locked.

If this does not close the hood, release it from a slightly higher position.

⚠ WARNING

Always check that the hood is properly locked before you start driving. If it is not, it might fly open while the vehicle is moving and block your view, which may cause an accident and serious bodily injury.

11-5. Engine Compartment Overview

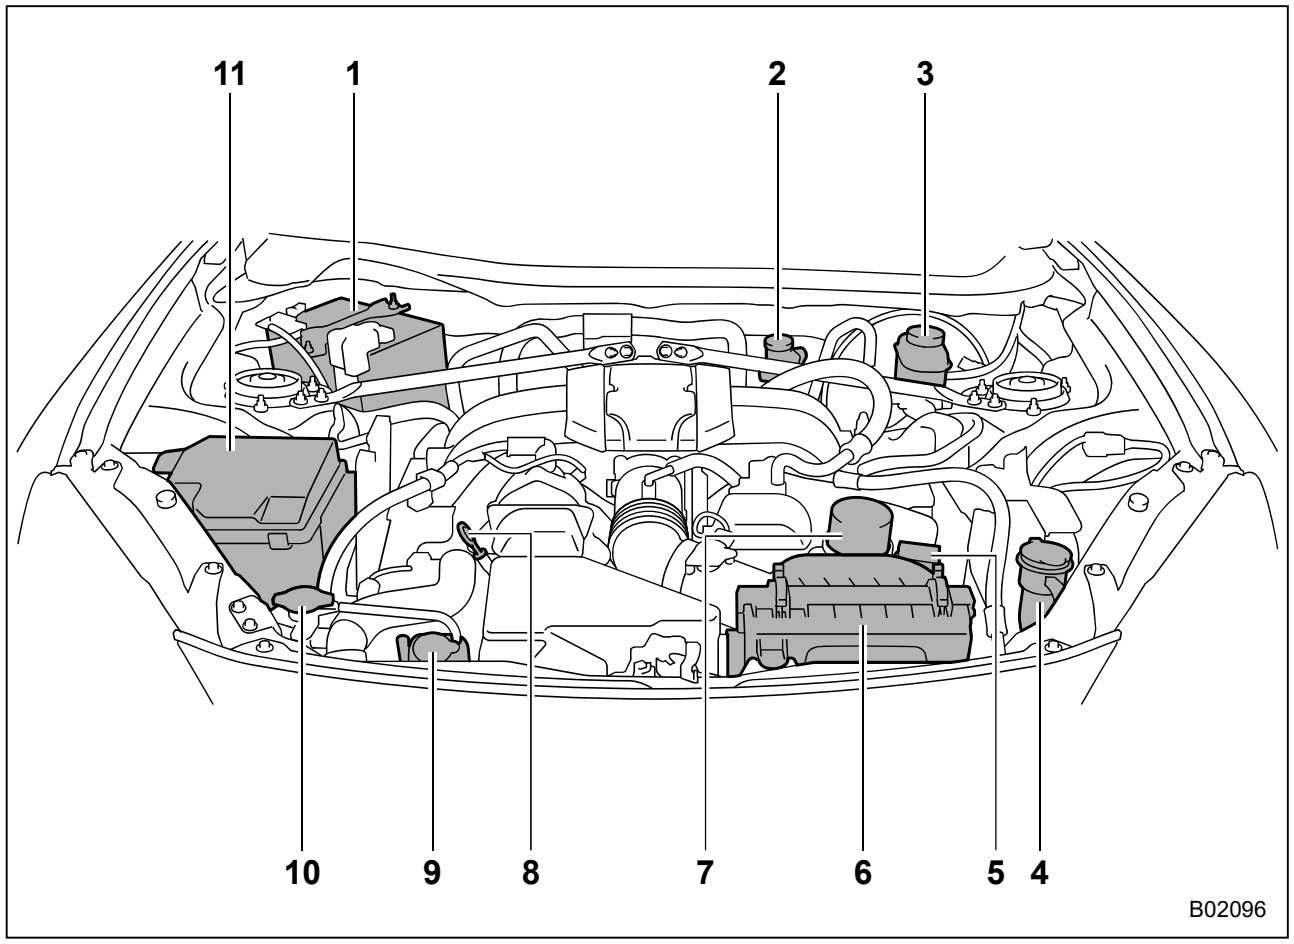

The illustration above is for left-hand drive models. The location of items No. 2 (clutch fluid reservoir) and No. 3 (brake fluid reservoir) for right-hand drive models is the opposite of that shown here.

1) Battery (page "Battery" ☞P363)
2) Clutch fluid reservoir (MT models) (page"Clutch Fluid (MT models)" ☞P348)
3) Brake fluid reservoir (page "Brake Fluid" ☞P347)
4) Windshield washer tank (page "Windshield Washer Fluid" ☞P359)
5) Engine oil filler cap (page "Engine Oil" ☞P339)
6) Air cleaner case (page "Air Cleaner Element" ☞P343)
7) Engine oil filter (page "Changing the Oil and Oil Filter" ☞P340)
8) Engine oil level gauge (page "Checking the Oil Level" ☞P339)
9) Engine coolant reservoir (page "Engine Coolant" ☞P342)
10) Radiator cap (page "Engine Coolant" ☞P342)
11) Main fuse box (page "Fuses" ☞P364)

11-6. Engine Oil

⚠ CAUTION

- **If the level gauge is not pulled out easily, twist the level gauge right and left, then pull it out. Otherwise, you may be injured accidentally straining yourself.**
- **Use only engine oil with the recommended grade and viscosity.**
- **Be careful not to spill engine oil when adding it. If oil touches the exhaust pipe, it may cause a bad smell, smoke, and/or a fire. If engine oil gets on the exhaust pipe, be sure to wipe it off.**

■ Engine Oil Consumption


Some engine oil will be consumed while driving. The rate of consumption can be affected by such factors as transmission type, driving style, terrain and temperature. Under the following conditions, oil consumption can be increased and thus require refilling between maintenance intervals:

- When the engine is new and within the break-in period
- When the engine oil is of lower quality
- When the incorrect oil viscosity is used
- When engine braking is employed (repeatedly)
- When the engine is operated at high engine speeds (for extended periods of time)
- When the engine is operated under heavy loads (for extended periods of time)
- When the engine idles for extended periods of time
- When the vehicle is operated in stop and go and/or heavy traffic situations
- When the vehicle is used under severe thermal conditions
- When the vehicle accelerates and decelerates frequently

Under these or similar conditions, you should check your oil at least every 2nd fuel fill-up and change your engine oil more frequently. If your oil consumption rate is greater than 1 liter every 2,000 km (1 US qt every 1,200 miles, 1 Imp qt every 1,413 miles), we recommend that you contact your SUBARU dealer who may perform a test under controlled conditions.

■ Checking the Oil Level

1. Park the vehicle on a level surface and stop the engine. If you check the oil level just after stopping the engine, wait for at least 5 minutes for the oil to drain back into the oil pan before checking the level.

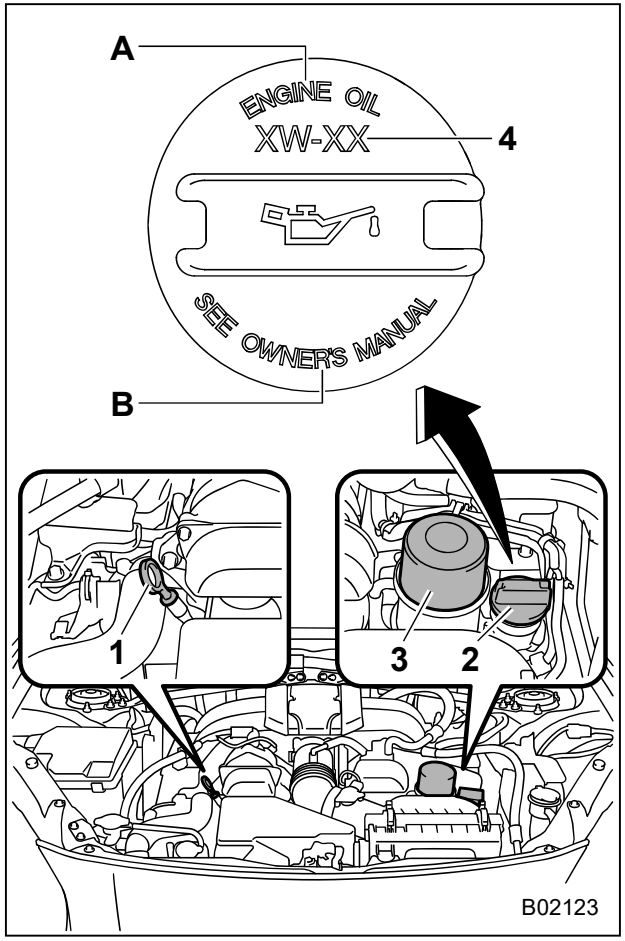

1) Oil level gauge
2) Oil filler cap
3) Oil filter
4) Oil viscosity
   0W-20


– CONTINUED –

A) ENGINE OIL
B) SEE OWNER'S MANUAL

⚠ CAUTION

If the level gauge cannot be pulled out easily, twist the level gauge right and left, then gently pull it out. Otherwise, you may be injured accidentally straining yourself.

2. Pull out the level gauge, wipe it clean, and insert it again.
3. Be sure the level gauge is correctly inserted until it stops.

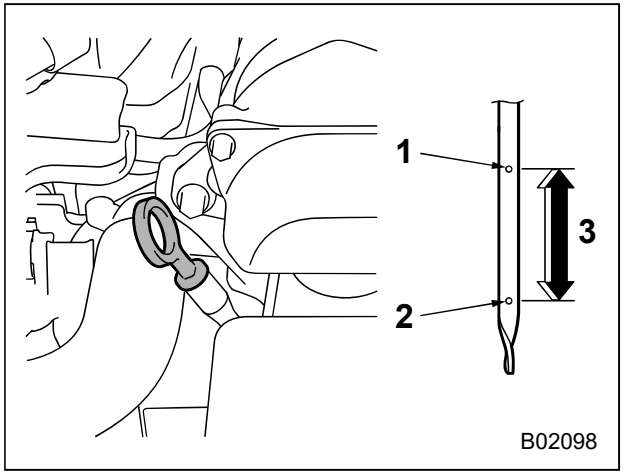

1) Full level
2) Low level
3) Approximately 1.0 liter (1.1 US qt, 0.9 Imp qt) from low level to full level

4. Pull out the oil level gauge again.
5. Check the oil levels on both sides of the level gauge. The engine oil level must be judged by the lowest of the two levels. If the oil level is below the low level mark, add oil so that the full level is reached.

⚠ CAUTION

- **Be careful not to touch the engine oil filter when removing the oil filler cap. Doing so may result in a burn, a pinched finger, or may cause some other injury.**
- **Use only engine oil with the recommended grade and viscosity.**
- **Be careful not to spill engine oil when adding it. If oil touches the exhaust pipe, it may cause a bad smell, smoke, and/or a fire. If engine oil gets on the exhaust pipe, be sure to wipe it off.**

To add engine oil, remove the engine oil filler cap and slowly pour engine oil through the filler neck. After pouring oil into the engine, you must use the level gauge to confirm that the oil level is correct.

NOTE

- **To prevent overfilling the engine oil, do not add any additional oil above the full level when the engine is cold.**

■ Changing the Oil and Oil Filter

Change the oil and oil filter according to the maintenance schedule.
The engine oil and oil filter must be changed more frequently than listed in the maintenance schedule, when short trips are frequently made, when towing a trailer, or when driving in extremely cold weather.

NOTE

Changing the engine oil and oil filter should be performed by a well-trained expert. We recommend that you contact your SUBARU dealer for changing the engine oil and oil filter. Fully trained mechanics are on standby at a SUBARU dealer to utilize the special tools, spare parts and recommended oil for this work, and also, used oils are properly disposed of.

■ Recommended Grade and Viscosity

⚠ CAUTION

Use only engine oil with the recommended grade and viscosity.

Refer to "Engine Oil" ☞P373.

NOTE

Engine oil viscosity (thickness) affects fuel economy. Oils of lower viscosity provide better fuel economy. However, in hot weather, oil of higher viscosity is required to properly lubricate the engine.

■ Synthetic Oil

You should use synthetic engine oil that meets the same requirements given for conventional engine oil. When using synthetic oil, you must use oil of the same classification, viscosity and grade shown in this Owner's Manual. Refer to "Engine Oil" ☞P373. Also, you must follow the oil and filter changing intervals shown in the maintenance schedule. Refer to "Maintenance Schedule" ☞P327.

NOTE

Synthetic oil of the grade and viscosity noted in chapter 12 is the recommended engine oil for optimum engine performance. Conventional oil may be used if synthetic oil is unavailable.

11-7. Cooling System

⚠ WARNING

Never remove the radiator cap until the engine has been shut off and has cooled down completely. Since the coolant is under pressure, you may suffer serious burns from a spray of boiling hot coolant when the cap is removed.

⚠ CAUTION


- **The cooling system has been filled at the factory with a high quality, corrosion-inhibiting, year-around coolant which provides protection against freezing down to −36°C (−33°F). Make sure to always use genuine SUBARU SUPER COOLANT or an equivalent (non-amine type coolant).**
- **If the coolant requires water dilution, be sure to use soft water (or clear and drinkable water) and to follow the required dilution ratio.**

– CONTINUED –

- **Mixing with a different coolant and/or hard water may result in problems including, but not limited to, shortened engine component life, cooling system clogging, coolant leaks and engine damage from overheating. Therefore, never mix different kinds of coolant and/or hard water even if freezing temperatures are not expected.**
- **Do not splash the engine coolant over painted parts. The alcohol contained in the engine coolant may damage the paint surface.**

■ Cooling Fan, Hose and Connections

Your vehicle employs an electric cooling fan which is thermostatically controlled to operate when the engine coolant reaches a specific temperature.

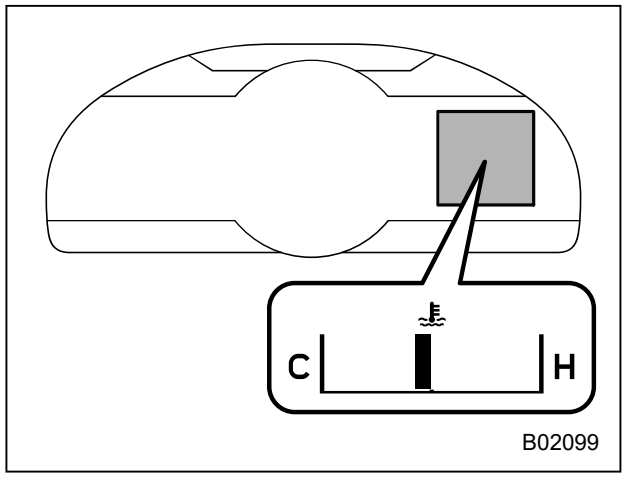


If the radiator cooling fan does not operate even when the engine coolant temperature gauge exceeds the normal operating range, the cooling fan circuit may be defective. Refer to "Engine Coolant Temperature Gauge" ☞P123.

Check the fuse and replace it if necessary. Refer to "Fuses" ☞P364. If the fuse is not blown, we recommend that you have the cooling system checked by your SUBARU dealer.

If the frequent addition of coolant is necessary between vehicle service visits, it is recommended that you have your vehicle inspected by an authorized SUBARU dealer to check for leaks, damage, or looseness.

■ Engine Coolant


▼ Checking the coolant level

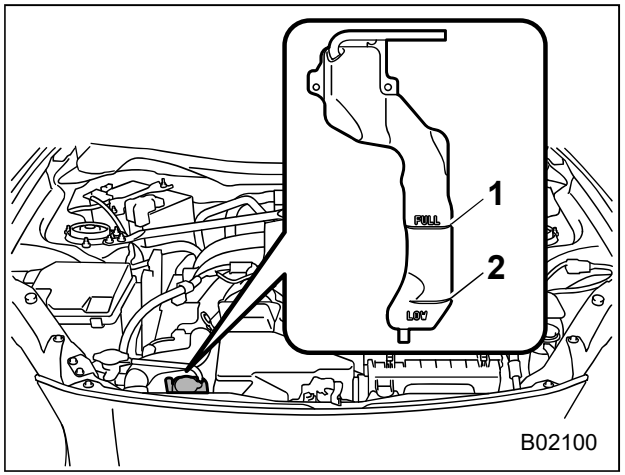


1) “FULL” level mark
2) “LOW” level mark

Check the coolant level at each fuel stop.

1. Check the coolant level on the outside of the reservoir while the engine is cool.
2. If the level is close to or lower than the “LOW” level mark, add coolant up to the “FULL” level mark. If the reserve tank is empty, remove the radiator cap and refill coolant up to just below the filler neck as shown in the following illustration.

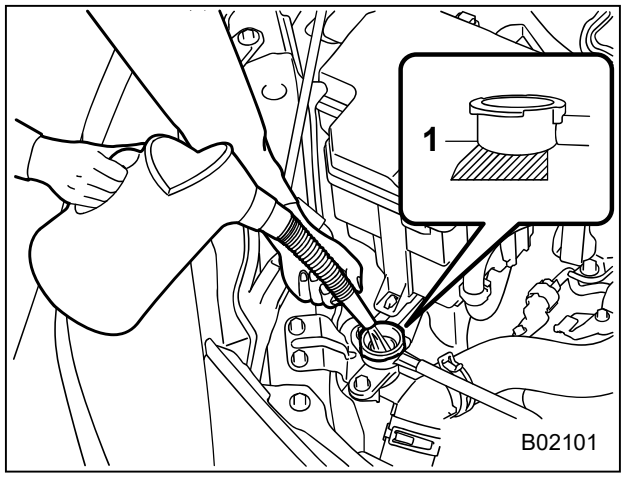

1) Fill up to this level.

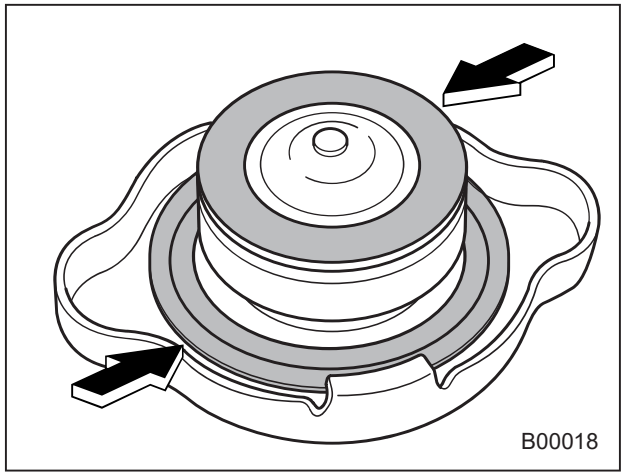

3. After refilling the reserve tank and the radiator, reinstall the cap and check that the rubber gaskets inside the radiator cap are in the proper position.

⚠ CAUTION

- **Be careful not to spill engine coolant when adding it. If coolant touches the exhaust pipe, it may cause a bad smell, smoke, and/or a fire. If engine coolant gets on the exhaust pipe, be sure to wipe it off.**
- **Do not splash the engine coolant over painted parts. The alcohol contained in the engine coolant may damage the paint surface.**

▼ Changing the coolant

It may be difficult to change the coolant. We recommend that you have the coolant changed by your SUBARU dealer if necessary.

The coolant should be changed according to the maintenance schedule. Refer to "Maintenance Schedule" ☞P327.

11-8. Air Cleaner Element

⚠ WARNING

Do not operate the engine with the air cleaner element removed. The air cleaner element not only filters intake air but also stops flames if the engine backfires. If the air cleaner element is not installed when the engine backfires, you could be burned.

⚠ CAUTION

When replacing the air cleaner element, we recommend that you use a genuine SUBARU air cleaner element. If it is not used, there is the possibility of causing a negative effect to the engine.


The air cleaner element functions as a filter screen. When the element is perforated or removed, engine wear will be excessive and engine life shortened.

The air cleaner element is a dry type. It is unnecessary to clean or wash the element.

– CONTINUED –


■ Replacing the Air Cleaner Element

Replace the air cleaner element according to the maintenance schedule in the “Warranty and Maintenance Booklet”. Under extremely dusty conditions, replace it more frequently. It is recommended that you always use genuine SUBARU parts.

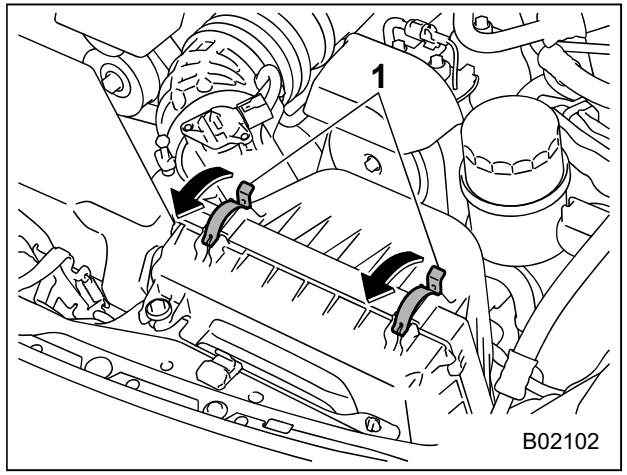

1) Clip

1. Unsnap the two clips holding the air cleaner case (rear).

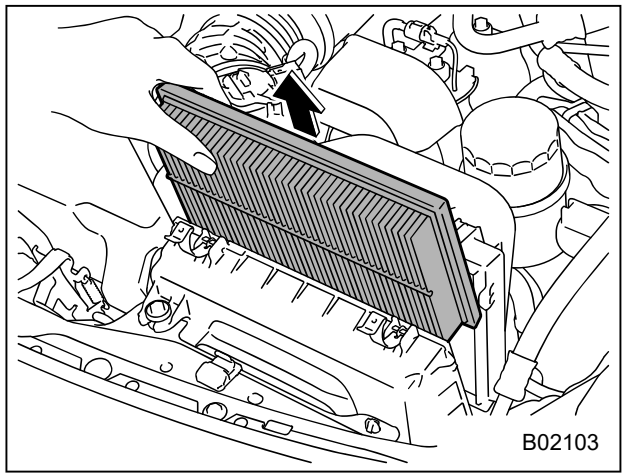


2. Open the air cleaner case and remove the air cleaner element.


⚠ CAUTION

If the inside of the air cleaner case is extremely soiled (for example, by sand), we recommend that you contact a SUBARU dealer and have the air cleaner case cleaned.

3. If you find large foreign objects such as leaves inside the air cleaner case, remove the foreign objects.

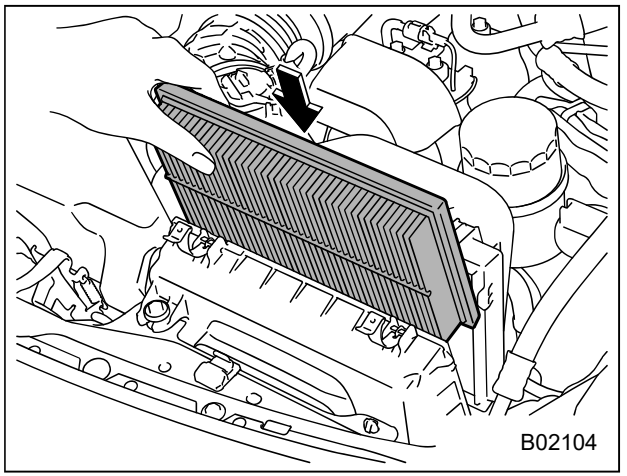

4. Install a new air cleaner element in the way the longitudinal side and the transverse side face as shown in the illustration.

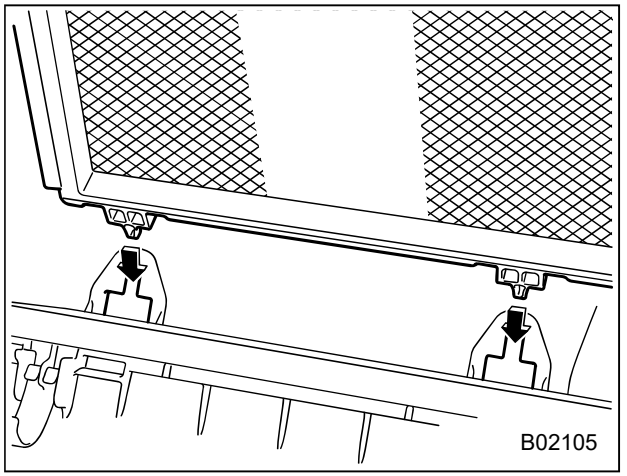

5. To install the air cleaner case (rear), insert the two projections on the air

cleaner case (rear) into the slits on the air cleaner case (front).

6. Install in the reverse order of removal.

11-9. Spark Plugs

It may be difficult to replace the spark plugs. It is recommended that you have the spark plugs replaced by your SUBARU dealer.

The spark plugs should be replaced according to the maintenance schedule. Refer to "Maintenance Schedule" ☞P327.

■ Recommended Spark Plugs

Refer to "Electrical System" ☞P377.

11-10. Drive Belt

It is unnecessary to check the deflection of the drive belt periodically because your engine is equipped with an automatic belt tension adjuster. However, replacement of the belt should be done according to the maintenance schedule in the “Maintenance schedule”. We recommend that you consult your SUBARU dealer for replacement.

If the belt is loose, cracked or worn, we recommend that contact your SUBARU dealer.

11-11. Automatic Transmission Fluid

It is not necessary to check the transmission oil level. Check that there are no cracks, damage or leakage. However, have the oil inspected according to the maintenance schedule in the "Maintenance Schedule" ☞P327. We recommend that you consult your SUBARU dealer for details.

■ Recommended Grade and Viscosity

Each oil manufacturer has its own base oils and additives. Never use different brands together. For details, refer to "Fluids" ☞P375.

11-12. Differential Gear Oil

There is no oil level gauge. To check the gear oil level, we recommend that you consult your SUBARU dealer.

■ Recommended Grade and Viscosity

Each oil manufacturer has its own base oils and additives. Never use different brands together. For details, refer to "Manual Transmission and Differential Gear Oil" ☞P375.

⚠ CAUTION

Using a differential gear oil other than the specified oil may cause a decline in vehicle performance.

11-13. Manual Transmission Oil

It is not necessary to check the transmission oil level. Check that there are no cracks, damage or leakage. However, have the oil inspected according to the maintenance schedule in the "Maintenance Schedule" ☞P327. We recommend that you consult your SUBARU dealer for details.

■ Recommended Grade and Viscosity

Each oil manufacturer has its own base oils and additives. Never use different brands together. For details, refer to "Manual Transmission and Differential Gear Oil" ☞P375.

11-14. Brake Fluid

■ Checking the Fluid Level


⚠ WARNING

- **Never let brake fluid contact your eyes because brake fluid can be harmful to your eyes. If brake fluid gets in your eyes, immediately flush them thoroughly with clean water. For safety, when performing this work, wearing eye protection is advisable.**
- **Brake fluid absorbs moisture from the air. Any absorbed moisture can cause a dangerous loss of braking performance.**
- **If the vehicle requires frequent refilling, there may be a leak. If you suspect a problem, we recommend that you have the vehicle checked at your SUBARU dealer.**

⚠ CAUTION

- **When adding brake fluid, be careful not to allow any dirt into the reservoir.**
- **Never splash the brake fluid over painted surfaces or rubber parts. Alcohol contained in the brake fluid may damage them.**
- **Be careful not to spill brake fluid when adding it. If brake fluid touches the exhaust pipe, it may cause a bad smell, smoke, and/or a fire. If brake fluid gets on the exhaust pipe, be sure to wipe it off.**

Visually check the brake fluid level of the reservoir monthly on the even surface.

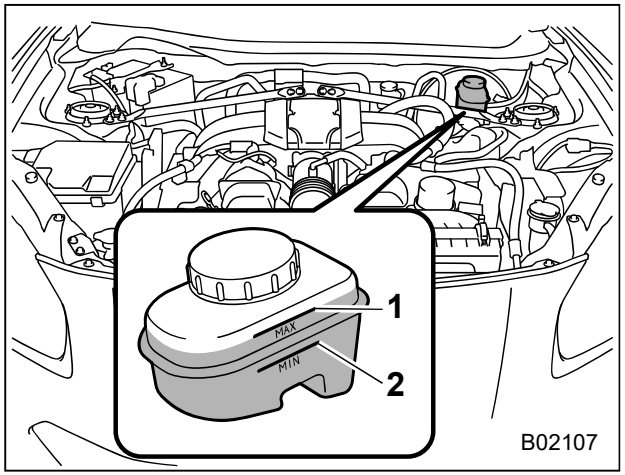

1) “MAX” level line
2) “MIN” level line

Be sure to check the brake fluid level from the outside of the reservoir. If the fluid level is below “MIN”, top up brake fluid to “MAX”. Use only brake fluid from a sealed container.

■ Recommended Brake Fluid


Refer to "Fluids" ☞P375.

⚠ CAUTION

Never use different brands of brake fluid together. Also, avoid mixing DOT 3 and DOT 4 brake fluids even if they are the same brand.

11-15. Clutch Fluid (MT models)

■ Checking the Fluid Level

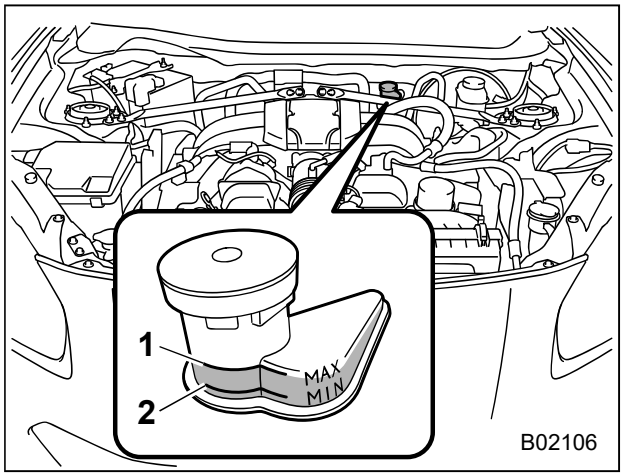

1) “MAX” level line
2) “MIN” level line

Check the fluid level monthly.

Check the fluid level on the outside of the reservoir. Be sure to check the clutch fluid level from the outside of the reservoir. If the fluid level is below “MIN”, top up clutch fluid to “MAX”. Use only clutch fluid from a sealed container.

NOTE

The fluid level for the clutch system must be checked at the inboard side of the reservoir. It cannot be checked at the outboard side of the reservoir.

■ Recommended Clutch Fluid

Refer to "Fluids" ☞P375.

⚠ CAUTION

Never use different brands of clutch fluid together. Also, avoid mixing DOT 3 and DOT 4 brake fluids even if they are the same brand.

11-16. Brake Booster

The brake booster utilizes the vacuum produced by the vacuum pump to reduce the force required to depress the brake pedal.

The vacuum in the brake booster may be insufficient if the brake pedal is depressed when the engine is stopped or after the vehicle has been parked for a long period of time. It such cases, it is necessary to depress the brake pedal using greater force than usual.

11-17. Brake Pedal

Check the brake pedal free play and reserve distance according to the maintenance schedule.


11-18. Clutch Pedal (MT models)

Check the clutch pedal free play according to the maintenance schedule.

11-19. Replacement of Brake Pad and Lining

⚠ CAUTION

- **If you continue to drive despite the scraping noise from the audible brake pad wear indicator, it will result in the need for costly brake rotor repair or replacement.**
- **It is recommended that you disconnect the vehicle battery before replacing the brake pad. However, it is dangerous to disconnect the vehicle battery. We recommend that you have your SUBARU dealer replace the brake pad and lining.**

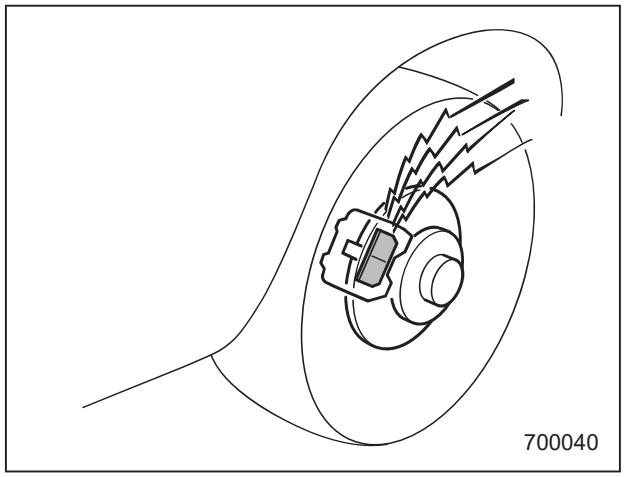

– CONTINUED –

The disc brakes have audible wear indicators on the brake pads. If the brake pads wear close to their service limit, the wear indicator makes a very audible scraping noise when the brake pedal is applied.

If you hear this scraping noise each time you apply the brake pedal, we recommend that you have the brake pads serviced by your SUBARU dealer as soon as possible.

■ Breaking-in of New Brake Pads and Linings

When replacing the brake pad or lining, use only genuine SUBARU parts. After replacement, the new parts must be broken in as follows.

▼ Brake pad and lining

While maintaining a speed of 50 to 65 km/h (30 to 40 mph), step on the brake pedal lightly. Repeat this five or more times.

▼ Parking brake lining

1. Drive the vehicle at a speed of approximately 35 km/h (22 mph).
2. With the parking brake release button pushed in, pull the parking brake lever SLOWLY and GENTLY (pulling with a force of approximately 150 N [15.3 kgf, 33.7 lbf).
3. Drive the vehicle for approximately 200 meters (220 yards) in this condition.
4. Wait 5 to 10 minutes for the parking brake to cool down. Repeat this procedure.
5. Check the parking brake lever travel. If the parking brake lever travel is out of the specified range, adjust it by turning the adjusting nut located on the parking brake lever.

Parking brake stroke:
7 — 8 notches / 200 N (20.4 kgf, 45 lbf)


⚠ WARNING

A safe location and situation should be selected for break-in driving.

⚠ CAUTION

Pulling the parking brake lever too forcefully may cause the rear wheels to lock. To avoid this, be certain to pull the lever up slowly and gently.

11-20. Parking Brake Stroke

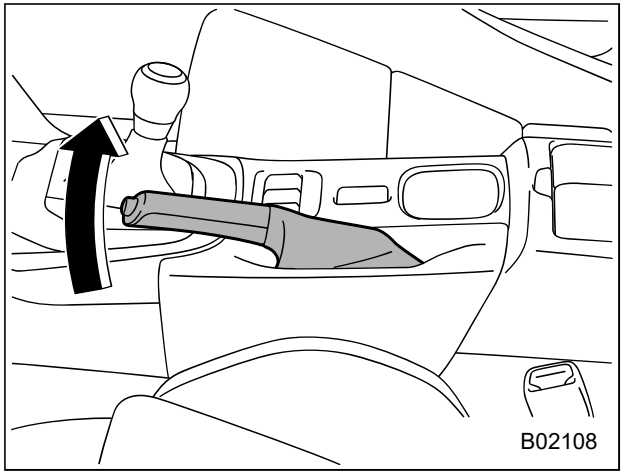

Check the parking brake stroke according to the maintenance schedule.

11-21. Tires and Wheels

■ Types of Tires

You should be familiar with type of tires present on your vehicle.

▼ Summer tires

The factory-installed tires on your new vehicle are summer tires.

Summer tires are high-speed capability tires best suited for highway driving under dry conditions.

Summer tires are inadequate for driving on slippery roads such as on snow-covered or icy roads.

If you drive your vehicle on snow-covered or icy roads, we strongly recommend the use of winter (snow) tires.

When installing winter tires, be sure to replace all four tires.

▼ All season tires

All season tires are designed to provide an adequate measure of traction, handling and braking performance in year-round driving including snowy and icy road conditions. However all season tires do not offer as much traction performance as winter (snow) tires in heavy or loose snow or on icy roads.

All season tires are identified by “ALL SEASON” and/or “M+S” (Mud & Snow) on the tire sidewall.

▼ Winter (snow) tires

Winter tires are best suited for driving on snow-covered and icy roads. However winter tires do not perform as well as summer tires and all season tires on roads other than snow-covered and icy roads.

NOTE

If the tread wears down below 4 mm (0.16 in.) on snow tires the effectiveness of snow tires is lost.

▼ Low profile tires

Generally, low profile tires will wear more rapidly and tire grip performance will be reduced on snowy and/or icy roads when compared to standard tires. Be sure to use snow tires or tire chains on snowy and/or icy roads and drive carefully at a speed appropriate for road and weather conditions.

NOTE

Low profile tires may cause greater damage than usual to the wheel when receiving impact from the road surface. Therefore pay attention to the following:

- **Be sure to use proper tire inflation pressure. If tires are under-inflated, they may be damaged more severely.**
- **Avoid pot holes, uneven pavement, curbs and other road hazards. Failure to do so may lead to severe tire and wheel damage.**

■ Tire Pressure Monitoring System (TPMS) (if equipped)

The tire pressure monitoring system provides the driver with a warning message by sending a signal from a sensor that is installed in each wheel when tire pressure is severely low. The tire pressure monitoring system will activate only when the vehicle is driven. Also, this system may not react immediately to a sudden drop in tire pressure (for example, a blow-out caused by running over a sharp object).

If you adjust the tire pressures in a warm garage and will then drive the vehicle in cold outside air, the resulting drop in tire pressures may cause the low tire pressure warning light to illuminate. To avoid this problem when adjusting the tire pressures in a warm garage, inflate the tires to pressures higher than those shown on the tire inflation pressure label. Specifically, inflate them by an extra 6.9 kPa (0.07 kgf/cm^2, 1 psi) for every difference of 5.6°C

– CONTINUED –

(10°F) between the temperature in the garage and the temperature outside. By way of example, the following table shows the required tire pressures that correspond to various outside temperatures when the temperature in the garage is 15.6°C (60°F).

Example:

Tire size: 215/40R18 85Y

Standard tire pressures:

Front: 240 kPa (2.4 kgf/cm^2 or bar, 35 psi)

Rear: 240 kPa (2.4 kgf/cm^2 or bar, 35 psi)

Garage temperature: 15.6°C (60°F)

Outside temperature	Adjusted pressure [kPa (kgf/cm^2, psi)]	
	Front	Rear
−1°C (30°F)	260 (2.6, 38)	260 (2.6, 38)
−12°C (10°F)	275 (2.75, 40)	275 (2.75, 40)
−23°C (−10°F)	290 (2.9, 42)	290 (2.9, 42)

If the low tire pressure warning light illuminates when you drive the vehicle in cold outside air after adjusting the tire pressures in a warm garage, re-adjust the tire pressures using the method described above. Then, increase the vehicle speed to at least 40 km/h (25 mph) and check to see that the low tire pressure warning light turns off a few minutes later. If the low tire pressure warning light does not turn off, the tire pressure monitoring system may not be functioning normally. In this event, we recommend that you go to a SUBARU dealer to have the system inspected as soon as possible.

While the vehicle is driven, friction between tires and the road surface causes the tires to warm up. After illumination of the low tire pressure warning light, any increase in the tire pressures caused by an increase in the outside air temperature or by an increase in the temperature in the tires can cause the low tire pressure warning light to turn off.

To register newly fitted TPMS valves on the replacement wheels (when switching to snow tires, for example), drive for several minutes at a speed of 40 km/h (25 mph) or higher.

It may not be possible to install TPMS valves on certain wheels that are on the market. Therefore, if you change the wheels (for example, a switch to snow tires), use wheels that have the same part number as the standard-equipment wheels. Without four operational TPMS valve/sensors on the wheels, the TPMS will not fully function and the warning light on the combination meter will illuminate steadily after blinking for approximately one minute.

When a tire is replaced, adjustments are necessary to ensure continued normal operation of the tire pressure monitoring system. As with wheel replacement, therefore, we recommend that you have the work performed by a SUBARU dealer.

⚠ WARNING

If the low tire pressure warning light does not illuminate briefly after the ignition switch is turned ON or the light illuminates steadily after blinking for approximately one minute, we recommend that you have your Tire Pressure Monitoring System checked at a SUBARU dealer as soon as possible.

If this light illuminates while driving, never brake suddenly and keep driving straight ahead while gradually reducing speed. Then slowly pull off the road to a safe place. Otherwise an accident involving serious vehicle damage and serious personal injury could occur.

If this light still illuminates while driving after adjusting the tire pressure, a tire may have significant damage and a fast leak that causes the tire to lose air rapidly. If you have a flat tire, replace it with a spare tire as soon as possible.

When a spare tire is mounted or a wheel rim is replaced without the original pressure sensor/transmitter being transferred, the low tire pressure warning light will illuminate steadily after blinking for approximately one minute. This indicates the TPMS is unable to monitor all four road wheels. We recommend that you contact your SUBARU dealer as soon as possible for tire and sensor replacement and/or system resetting. If the light illuminates steadily after blinking for approximately one minute, we recommend that you promptly contact a SUBARU dealer to have the system inspected.

■ Tire Inspection

Check on a daily basis that the tires are free from serious damage, nails, and stones. At the same time, check the tires for abnormal wear.

We recommend that you contact your SUBARU dealer immediately if you find any problem.

NOTE

- **When the wheels and tires strike curbs or are subjected to harsh treatment as when the vehicle is driven on a rough surface, they can suffer damage that cannot be seen with the naked eye. This type of damage does not become evident until time has passed. Try not to drive over curbs, potholes or on other rough surfaces. If doing so is unavoidable, keep the vehicle's speed down to a walking pace or less, and approach the curbs as squarely as possible. Also, make sure the tires are not pressed against the curb when you park the vehicle.**
- **If you feel unusual vibration while driving or find it difficult to steer the vehicle in a straight line, one of the tires and/or wheels may be damaged. We recommend that you drive slowly to the nearest authorized SUBARU dealer and have the vehicle inspected.**
- **Tires should be replaced if:**
  - **You have tire damage such as cuts, splits, cracks deep enough to expose the fabric or bulges indicating internal damage**
  - **A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage**


If you are not sure, we recommend that you to consult with any authorized SUBARU dealer or repairer, or another duly qualified and equipped professional.

- **Any tires over 6 years old must be checked by a qualified technician even if they have seldom or never been used or damage is not obvious.**


■ Tire Pressures and Wear

Maintaining the correct tire pressures helps to maximize the tires' service lives and is essential for good running performance. Check and, if necessary, adjust the pressure of each tire and the spare (if equipped) at least once a month and before any long journey.

– CONTINUED –

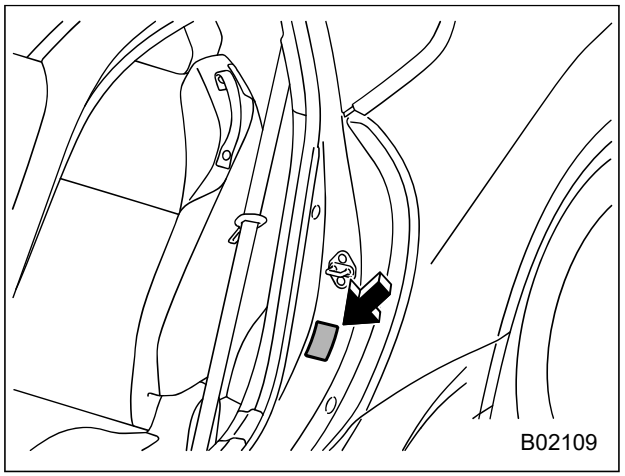

Tire inflation pressure label (left-hand drive models)

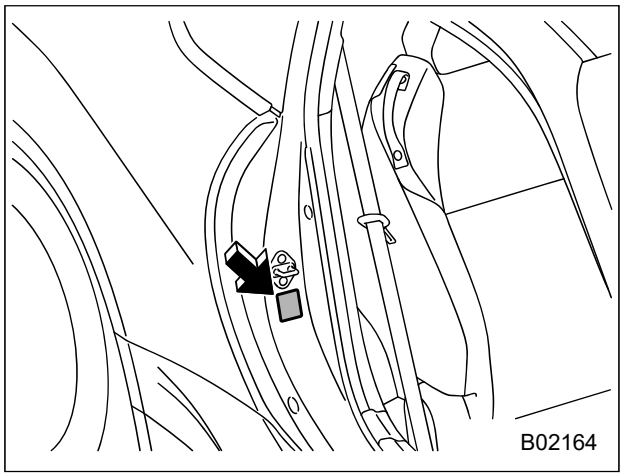

Tire inflation pressure label (right-hand drive models)

Check the tire pressures when the tires are cold. Use a pressure gauge to adjust the tire pressures to the values shown on the tire inflation pressure label. The tire inflation pressure label is located on the center pillar on the driver's side.

Driving even a short distance warms up the tires and increases the tire pressures. Also, the tire pressures are affected by the outside temperature. It is best to check tire pressure outdoors before driving the vehicle.

When a tire becomes warm, the air inside it expands, causing the tire pressure to increase. Be careful not to mistakenly release air from a warm tire to reduce its pressure.

NOTE


- **The air pressure in a tire increases by approximately 30 kPa (0.3 kgf/cm^2, 4.3 psi) when the tire becomes warm.**
- **The tires are considered cold when the vehicle has been parked for at least 3 hours or has been driven less than 1.6 km (1 mile).**

⚠ WARNING

Do not let air out of warm tires to adjust pressure. Doing so will result in low tire pressure.


Incorrect tire pressures detract from controllability and ride comfort, and they cause the tires to wear abnormally.

- Correctly inflated tires (tread worn evenly)

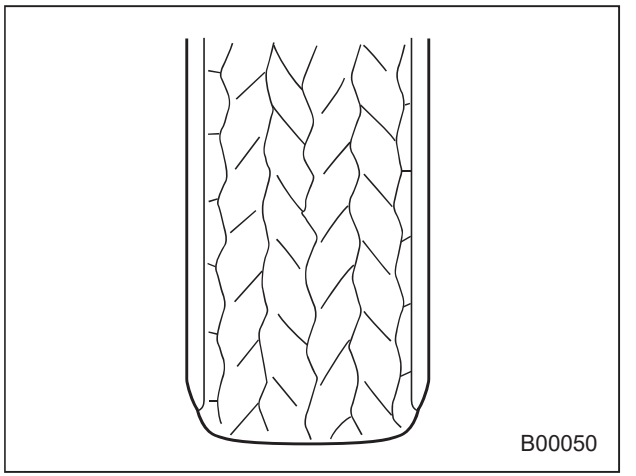


Roadholding is good, and steering is responsive. Rolling resistance is low, so fuel consumption is also lower.

- Under inflated tires (tread worn at shoulders)

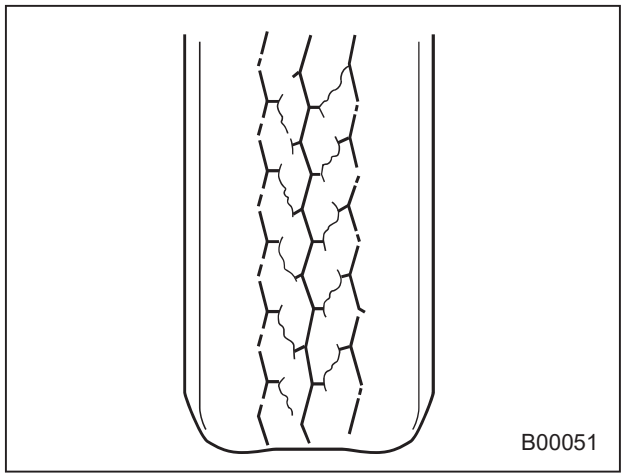

Rolling resistance is high, so fuel consumption is also higher.

- Over inflated tires (tread worn in center)

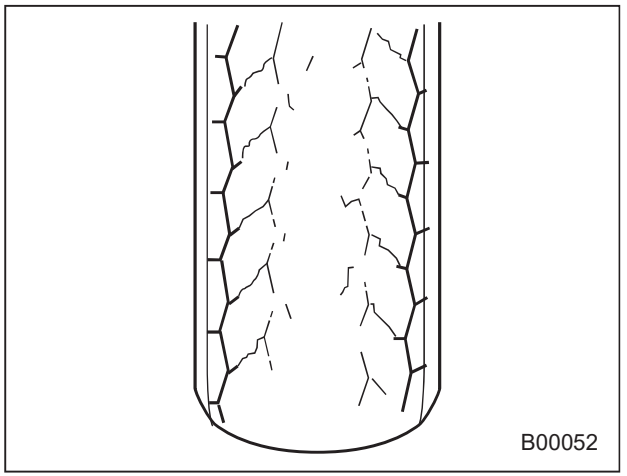

Ride comfort is poor. Also, the tire magnifies the effects of road surface bumps and dips, possibly resulting in vehicle damage.

⚠ WARNING

Driving at high speeds with excessively low tire pressures can cause the tires to deform severely and to rapidly become hot. A sharp increase in temperature could cause tread separation, and destruction of the tires. The resulting loss of vehicle control could lead to an accident.

■ Wheel Balance

Each wheel was correctly balanced when your vehicle was new, but the wheels will become unbalanced as the tires become worn during use. Wheel imbalance causes the steering wheel to vibrate slightly at certain vehicle speeds and detracts from the vehicle's straight-line stability. It can also cause steering and suspension system problems and abnormal tire wear. If you suspect that the wheels are not correctly balanced, we recommend that you have them checked and adjusted by your SUBARU dealer. Also have them adjusted after tire repairs and after tire rotation.

⚠ CAUTION


Loss of correct wheel alignment causes the tires to wear on one side and reduces the vehicle's running stability. We recommend that you contact your SUBARU dealer if you notice abnormal tire wear.

NOTE

The suspension system is designed to hold each wheel at a certain alignment (relative to the other wheels and to the road) for optimum straight-line stability and cornering performance.

– CONTINUED –

■ Wear Indicators

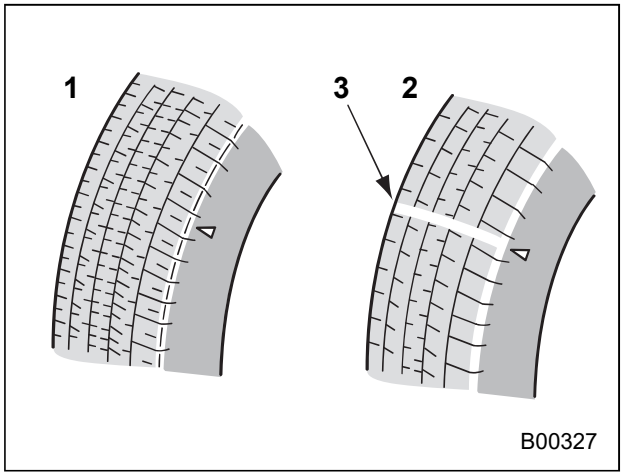

1) New tread
2) Worn tread
3) Tread wear indicator

Each tire incorporates a tread wear indicator, which becomes visible when the depth of the tread grooves decreases to 1.6 mm (0.063 in). A tire must be replaced when the tread wear indicator appears as a solid band across the tread.


⚠ WARNING

When a tire's tread wear indicator becomes visible, the tire is worn beyond the acceptable limit and must be replaced immediately. With a tire in this condition, driving at high speeds in wet weather can cause the vehicle to hydroplane. The resulting loss of vehicle control can lead to an accident.

NOTE

For safety, inspect the tire tread regularly and replace the tires before their tread wear indicators become visible.

■ Rotational Direction of Tires

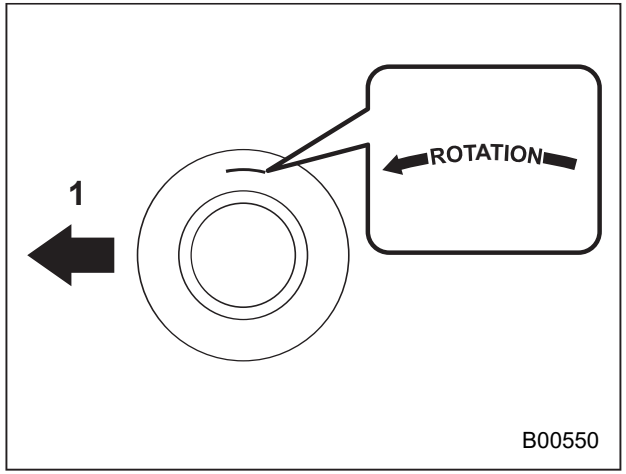


Example of rotational direction marked on the sidewall

1) Front

If the tires have specific rotational direction, refer to the arrow marked on the side wall.


The arrow should be pointing forward direction when the wheels are fitted.

■ Tire Rotation

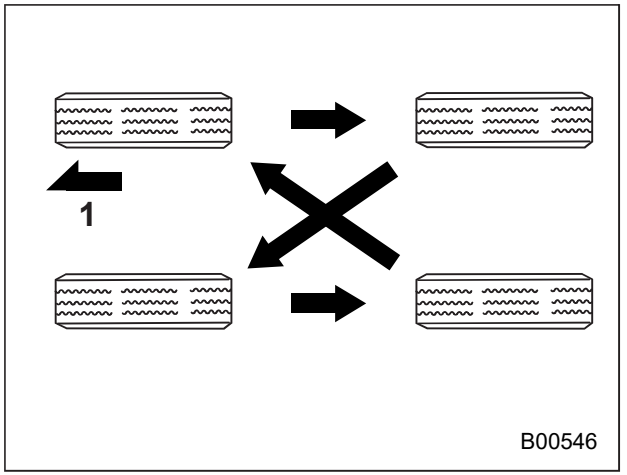


Vehicles equipped with 4 nonunidirectional tires

1) Front

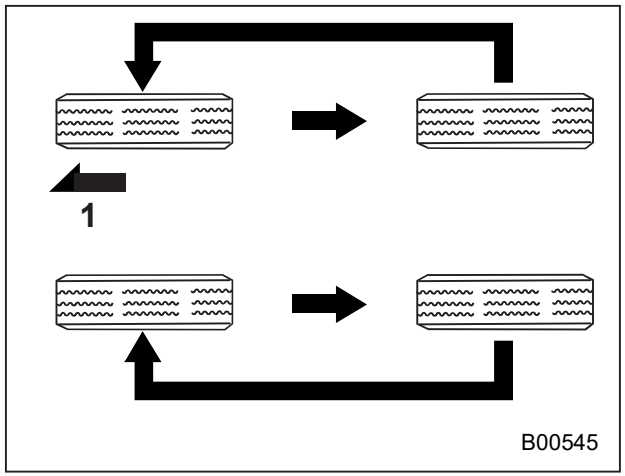

Vehicles equipped with unidirectional tires
1) Front

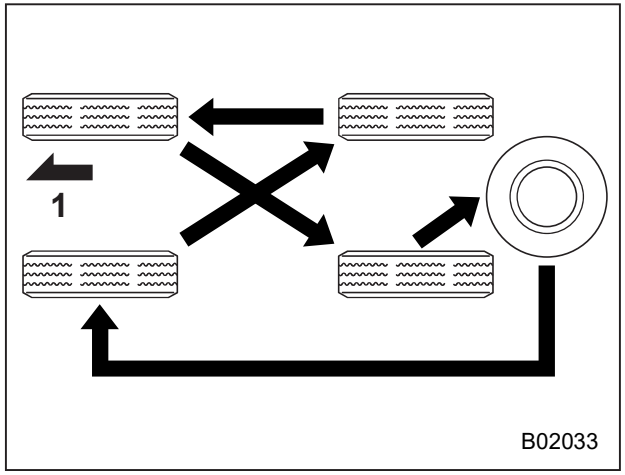

Models without tire pressure monitoring system
1) Front

NOTE

In prior to carrying out a rotation, check the side wall of the tires and confirm the following.

- **All 5 tires are the same in brand and tread pattern.**
- **The rotational directions and sizes match.**

Tire wear varies from wheel to wheel. To maximize the life of each tire and ensure that the tires wear uniformly, it is best to rotate the tires every 10,000 km (6,000 miles). Move the tires to the positions shown in the illustration each time they are rotated.

Replace any damaged or unevenly worn tire at the time of rotation. After tire rotation, adjust the tire pressures and make sure the wheel nuts are correctly tightened.

After driving approximately 1,000 km (600 miles), check the wheel nuts again and retighten any nut that has become loose.

■ Tire Replacement

The wheels and tires are important and integral parts of your vehicle's design; they cannot be changed arbitrarily. The tires fitted as standard equipment are optimally matched to the characteristics of the vehicle and were selected to give the best possible combination of running performance, ride comfort, and service life. It is essential for every tire to have a size and construction matching those shown on the tire inflation pressure label and to have a speed symbol and load index matching those shown on the tire inflation pressure label.

Using tires of a non-specified size detracts from controllability, ride comfort, braking performance, speedometer accuracy and odometer accuracy. It also creates incorrect body-to-tire clearances and inappropriately changes the vehicle's ground clearance.

All four tires must be the same in terms of manufacturer, brand (tread pattern), construction, and size. You are advised to replace the tires with new ones that are identical to those fitted as standard equipment.

For safe vehicle operation, SUBARU recommends replacing all four tires at the same time.

– CONTINUED –

⚠ WARNING

- **When replacing or installing tire(s), all four tires must be the same for the following items.**

  (a) Size

  (b) Speed symbol

  (c) Load index

  (d) Circumference

  (e) Construction

  (f) Manufacturer

  (g) Brand (tread pattern)

  (h) Degrees of wear

  For items (a) to (c), you must obey the specification that is printed on the tire inflation pressure label. The tire inflation pressure label is located on the driver's center pillar.

  If all four tires are not the same in items (a) to (h), serious mechanical damage could be caused to the drivetrain of the car, and affect the followings.

  - **Ride**
  - **Handling**
  - **Braking**
  - **Speedometer/Odometer calibration**
  - **Clearance between the body and the tires**

  It also may be dangerous and lead to loss of vehicle control, and it can lead to an accident.
- **Use only radial tires. Do not use radial tires together with belted bias tires and/or bias-ply tires. Doing so can dangerously reduce controllability, resulting in an accident.**

■ Wheel Replacement

When replacing wheels due, for example, to damage, make sure the replacement wheels match the specifications of the wheels that are fitted as standard equipment. Replacement wheels are available from SUBARU dealers.

⚠ WARNING

Use only those wheels that are specified for your vehicle. Wheels not meeting specifications could interfere with brake caliper operation and may cause the tires to rub against the wheel well housing during turns. The resulting loss of vehicle control could lead to an accident.

NOTE


When any of the wheels are removed and replaced for tire rotation or to change a flat tire, always check the tightness of the wheel nuts after driving approximately 1,000 km (600 miles). If any nut is loose, tighten it to the specified torque.

11-22. Alloy Wheels

Alloy wheels can be scratched and damaged easily. Handle them carefully to maintain their appearance, performance, and safety.

- When any of the wheels is removed and replaced for tire rotation or to change a flat, always check the tightness of the wheel nuts after driving approximately 1,000 km (600 miles). If any nut is loose, tighten it to the specified torque.
- Never apply oil to the threaded parts, wheel nuts, or tapered surface of the wheel.
- Never let the wheel rub against sharp protrusions or curbs.
- When wheel nuts, balance weights, or the center cap is replaced, we recommend that you replace them with genuine SUBARU parts designed for alloy wheels.

11-23. Windshield Washer Fluid

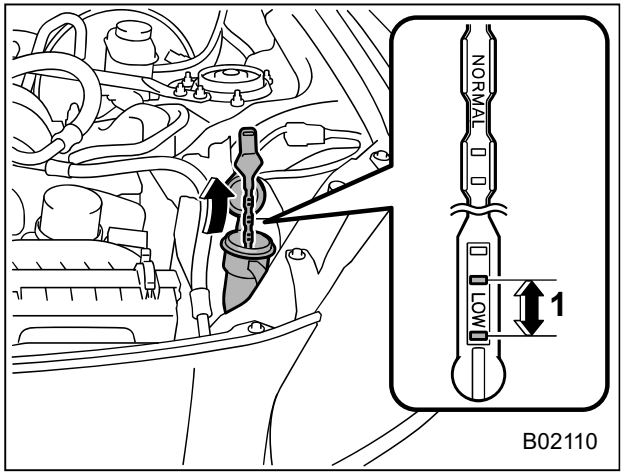

1) "LOW" position

The washer fluid level can be checked by observing the position of the level on the liquid-covered holes in the gauge.
If the level falls below the second hole from the bottom (the "LOW" position), add washer fluid.

Use windshield washer fluid. If windshield washer fluid is unavailable use clean water.

In areas where water freezes in winter, use an anti-freeze type windshield washer fluid.

⚠ CAUTION

Never use engine coolant as washer fluid because it could cause paint damage.

If you fill the windshield washer tank with a fluid with a different concentration from the one used previously, purge the old fluid from the piping between the windshield washer tank and washer nozzles by operating the washer for a certain period of time. Otherwise, if the concentration of the fluid remaining in the piping is too low for the outside temperature, it may freeze and block the nozzles.

⚠ CAUTION

- **Adjust the washer fluid concentration appropriately for the outside temperature. If the concentration is inappropriate, sprayed washer fluid may freeze on the windshield and obstruct your view, and the fluid may freeze in the windshield washer tank.**

– CONTINUED –

- **Be careful foreign matter does not contaminate the washer fluid when filling the tank. Contamination could cause malfunctions, such as clogging the pump.**

11-24. Replacement of Wiper Blades

Grease, wax, insects, or other material on the windshield or the wiper blade results in jerky wiper operation and streaking on the glass. If you cannot remove the streaks after operating the windshield washer or if the wiper operation is jerky, clean the outer surface of the windshield and rear window using a sponge or soft cloth with a neutral detergent or mild-abrasive cleaner. Do not, however, use detergent to clean the blade rubbers. Use only a sponge or soft cloth (and no neutral detergent or mild-abrasive cleaner) when you clean the blade rubbers. If you wipe the rubber of the blade strongly, the black coating component will peel off, which will cause the wiper to judder. Also, after wiping it off, check that the rubber has not come loose. After cleaning the window glass and wiper blade rubbers, be sure to rinse them with clean water. Rinse the window until the water does not form beads on the glass. This indicates that the glass is clean.

⚠ CAUTION

- **Do not clean the wiper blades with fuel or a solvent, such as paint thinner or benzine. This will cause deterioration of the wiper blades.**

- **When you wish to raise the passenger-side wiper arm, first raise the driver-side wiper arm. Otherwise, the passenger-side wiper assembly and driver-side wiper assembly will touch each other, possibly resulting in scratches.**
- **Return the passenger-side wiper arm to its original position before returning the driver-side wiper arm to its original position. Otherwise, the passenger-side wiper assembly and driver-side wiper assembly will touch each other, possibly resulting in scratches.**
- **When returning the raised wipers to the original positions, return the wipers slowly on the windshield by hand. Returning the wipers from the detached positions by the spring operation might change the shape of the wiper arm or scratch the windshield.**
- **While removing the wiper blades from the wiper arms, do not return the wiper arms to the original positions. Otherwise, the windshield surface may be scratched.**


If you cannot eliminate the streaking even after following this method, replace the wiper blades using the following procedures.

■ Windshield Wiper Blade Assembly

NOTE


Do not lower the wiper arm while the wiper blade assembly is removed.

1. Raise the wiper arm off the windshield. First raise the driver's side wiper arm and then raise the front passenger's side wiper arm.

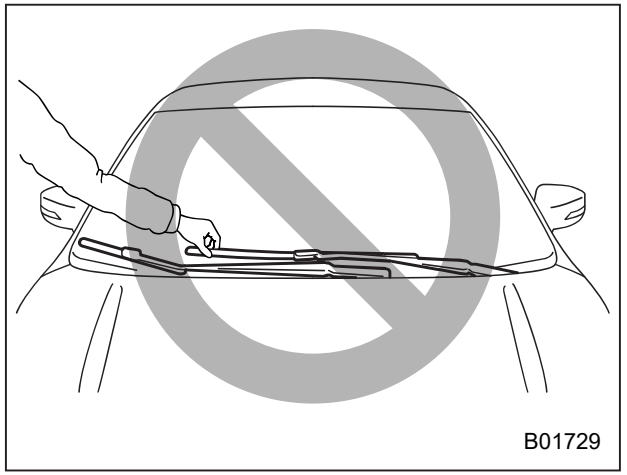


⚠ CAUTION

Hold the wiper arm when replacing the wiper blade. Holding the wiper blade, may result in blade deformation.

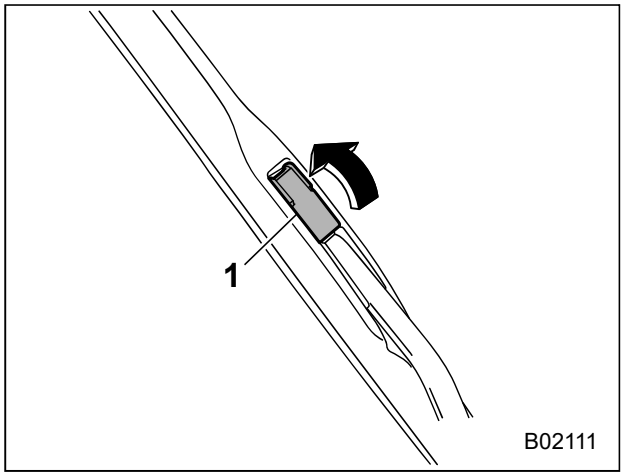


1) Lock cover

2. Hold the wiper blade connection by hand, open the lock cover to release the lock.

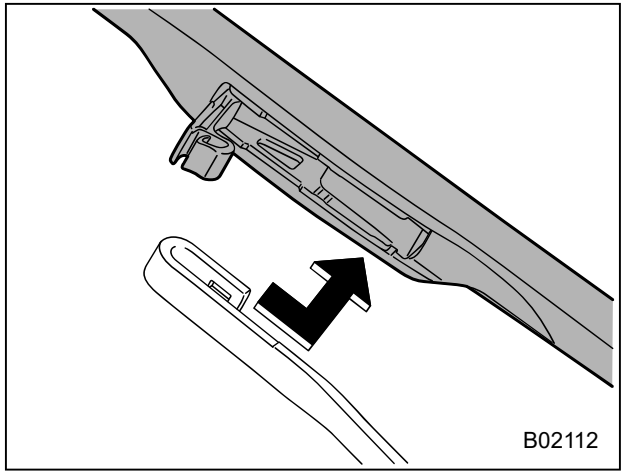

3. Remove the wiper blade assembly by holding its pivot area and pushing it in the direction shown by the arrow.

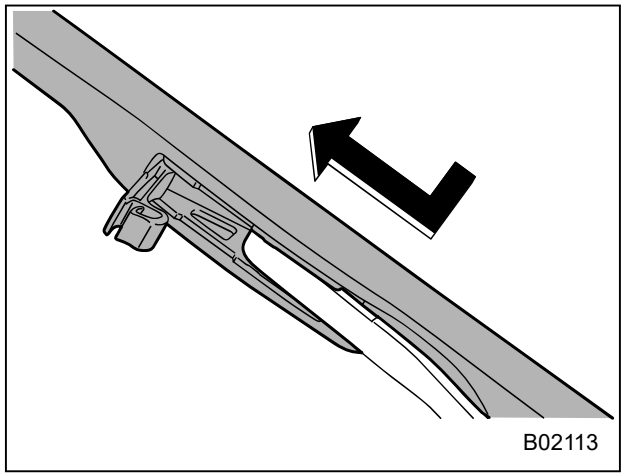


4. When installing the wiper blade assembly, align it with the wiper arm connection part and then slide it in the opposite direction of removal to install.

– CONTINUED –

After installing the wiper blade assembly, close the lock cover and check that the connection part is locked completely.


5. Hold the wiper arm by hand and slowly lower it in position.

■ Windshield Wiper Blade Rubber

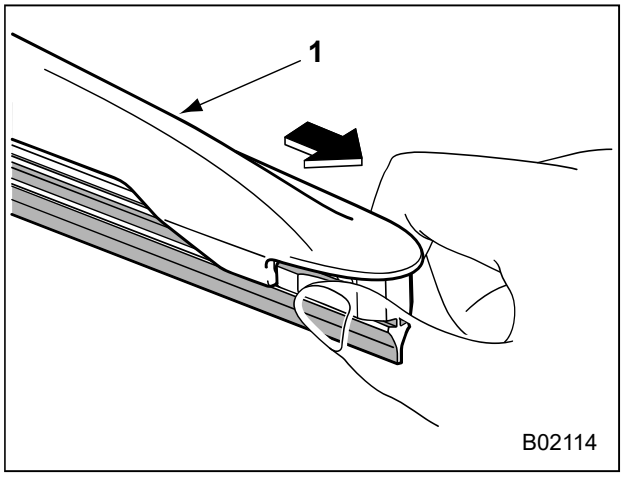


1) Support

1. Grasp the locked end of the blade rubber assembly and pull it firmly until the stoppers on the rubber are free of the support.

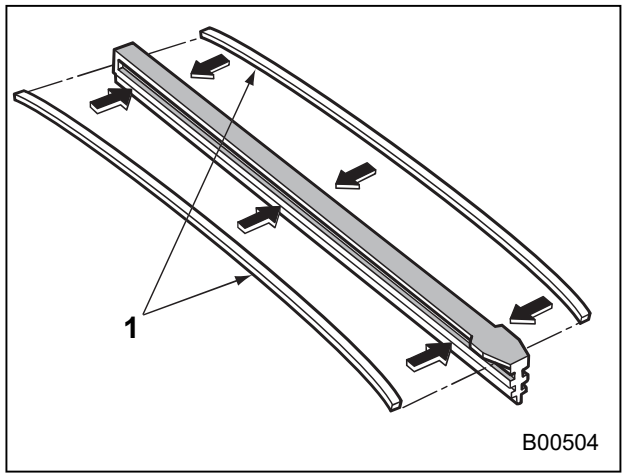


1) Metal spines

2. If the new blade rubber is not provided with two metal spines, remove the metal spines from the old blade rubber and install them in the new blade rubber.

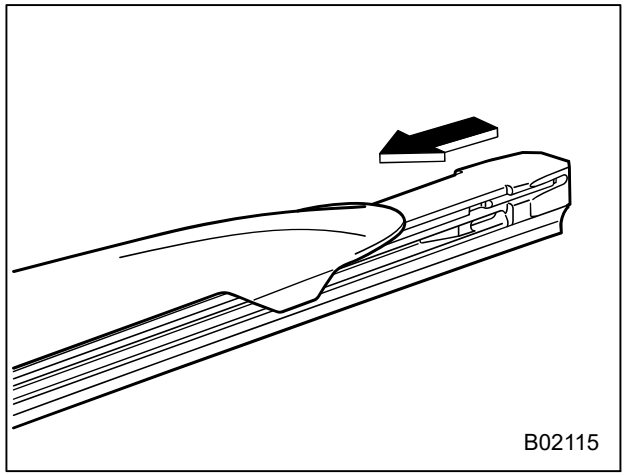

3. Align the claws of the support with the grooves in the rubber and slide the blade rubber assembly into the support until it locks.

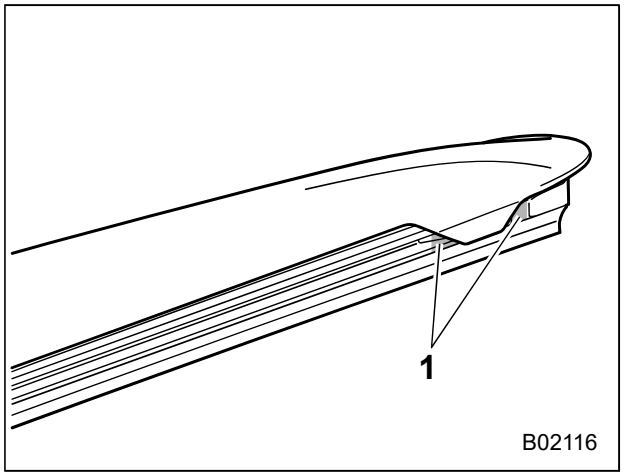

1) Stopper

4. Be sure to position the claws at the end of the support between the stoppers on the rubber as shown. If the rubber is not retained properly, the wiper blade may scratch the windshield.

11-25. Battery

■ Battery Precautions

⚠ WARNING

Read these instructions carefully:

To ensure safe and correct handling of your battery, read the following precautions carefully before using the battery or inspecting it.

Wear eye protection:

Always wear eye protection when working near your vehicle's battery. Battery fluid contains sulfuric acid, so it can cause blindness if splashed into your eyes. Also, batteries emit highly flammable, explosive hydrogen gas. Eye protection is vital for protection in the event that this gas ignites.

Battery fluid contains sulfuric acid:

Since battery fluid contains sulfuric acid, be sure to wear eye protection and protective gloves when inspecting your vehicle's battery. Avoid tipping the battery and subjecting it to shocks since this could cause fluid to spill.

Under no circumstances allow battery fluid to make contact with your skin, eyes, or clothing since this can cause blindness and burns. If battery fluid splashes onto your skin, eyes or clothing, wash it away immediately with plenty of water. If battery fluid splashes into your eyes, seek medical attention immediately.

If battery fluid is accidentally swallowed, immediately drink a large amount of milk or water, and seek medical attention immediately. Battery fluid is corrosive. If it splashes onto your vehicle's paintwork or fabrics, wash it away immediately with plenty of water.

Keep children away:

Batteries must be handled only by persons who are aware of the potential hazards. Take particular care to keep children away from your vehicle's battery. Improper handling can cause blindness and burns.

Keep flames away:

Before working on or near your vehicle's battery, extinguish all cigarettes, matches, and lighters. Also, keep the battery away from flammable items and electrical sparks. Since batteries emit highly flammable, explosive hydrogen gas, any flames or sparks in the vicinity could cause an explosion.


When working near your vehicle's battery, take care that metal tools do not short-circuit the battery's (+) and (−) terminals or connect the battery's (+) terminal to the vehicle's body. A short circuit could create electrical sparks and lead to an explosion.

– CONTINUED –

To prevent electrical sparks, all rings, wristwatches, and other metal accessories must be taken off before work is carried out on or near the battery.

Prevent explosions:

While being charged, batteries emit highly flammable, explosive hydrogen gas. To prevent an explosion, charge your vehicle's battery in a well ventilated area and keep flames away.

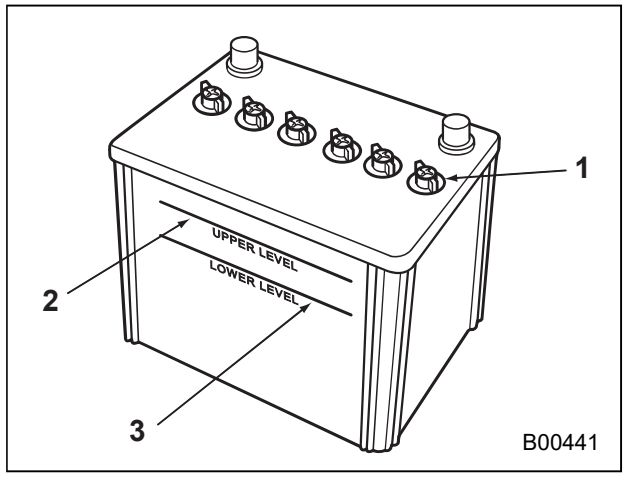

1) Cap
2) Upper level
3) Lower level

It is unnecessary to periodically check the battery fluid level or periodically refill with distilled water.

However, if the battery fluid level is below the lower level, remove the cap. Fill to the upper level with distilled water.

CAUTION

Never use more than 10 A when charging the battery because it will shorten battery life.

11-26. Fuses


CAUTION

Never replace a fuse with one having a higher rating or with material other than a fuse because serious damage or a fire could result.


NOTE

Fuse rating and using circuit are described on the fuse box cover.

The fuses are designed to melt during an overload to prevent damage to the wiring harness and electrical equipment. The fuses are located in two fuse boxes.

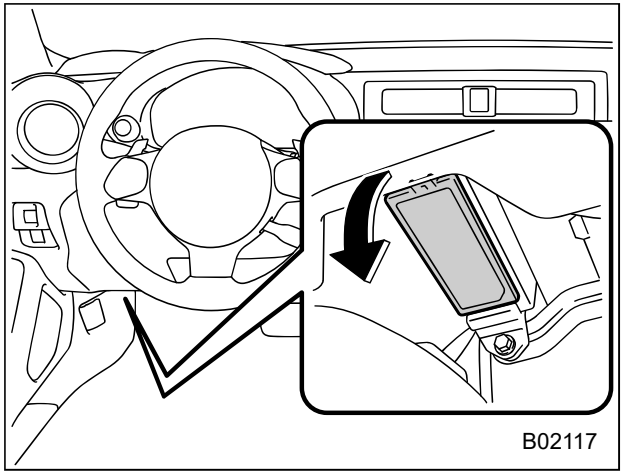


One is located under the instrument panel behind the fuse box cover on the driver's seat side. To remove the cover, pull it out.

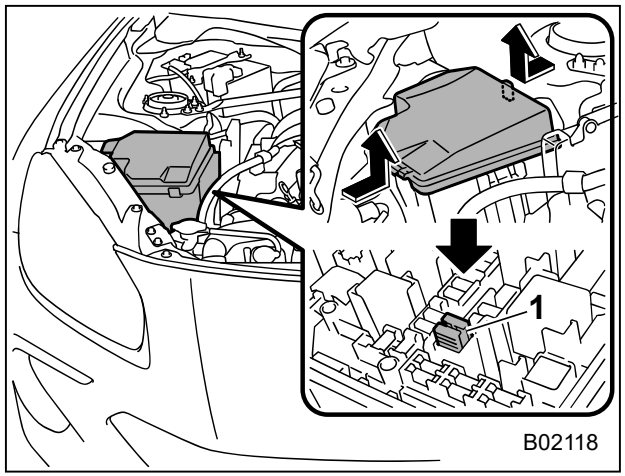

1) Fuse puller

The other one (main fuse box) is housed in the engine compartment. Also, the fuse puller are stored in the fuse box.


Pinch the upper part of the fuse puller when removing it from the main fuse box.

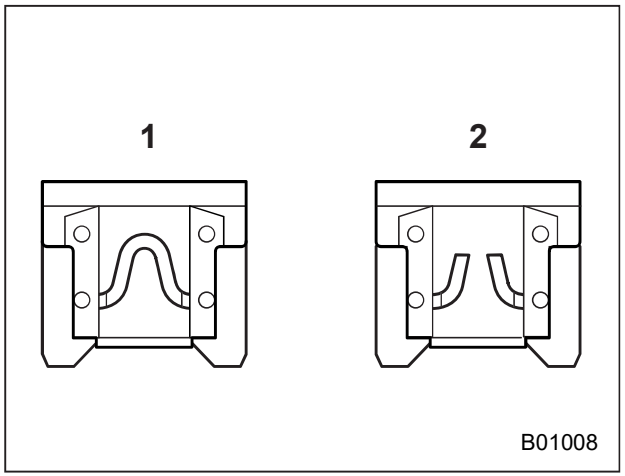

1) Good
2) Blown

If any lights, accessories or other electrical controls do not operate, inspect the corresponding fuse. If a fuse has blown, replace it.

1. Turn the ignition switch to the “OFF” position and turn off all electrical accessories.
2. Remove the fuse box cover.
3. Determine which fuse may be blown. Look at the back side of each fuse box cover.

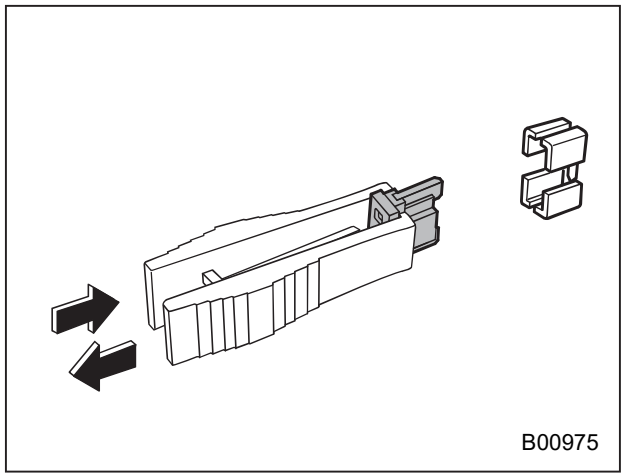

4. Pull out the fuse with the fuse puller.
5. Inspect the fuse. If it has blown, replace it with a spare fuse of the same rating.
6. If the same fuse blows again, this indicates that its system has a problem. We recommend that you contact your SUBARU dealer for repairs.

11-27. Installation of Accessories

We recommend that you always consult your SUBARU dealer before installing fog lights or any other electrical equipment in your vehicle. Such accessories may cause the electronic system to malfunction if they are incorrectly installed or if they are not suited for the vehicle. We recommend that you install only genuine SUBARU accessories on your vehicle.
Also, we recommend that you always consult your SUBARU dealer before installing a radio in your vehicle.

11-28. Replacing Bulbs


⚠ WARNING

Bulbs may become very hot while illuminated. Before replacing bulbs, turn off the lights and wait until the bulbs cool down, Otherwise, there is the risk of sustaining a burn injury.

⚠ CAUTION

- **Before replacing a backup light, stop the engine and allow the exhaust pipes and surrounding parts to cool sufficiently. As the bulbs are near the exhaust pipes, there is a risk of being burned.**
- **Replace any bulb only with a new bulb of the specified wattage. Using a bulb of different wattage could result in a fire. For the specified wattage of each bulb, refer to "Bulb Chart" ☞P378. For replacement, we recommend that you contact your SUBARU dealer.**

■ Headlights

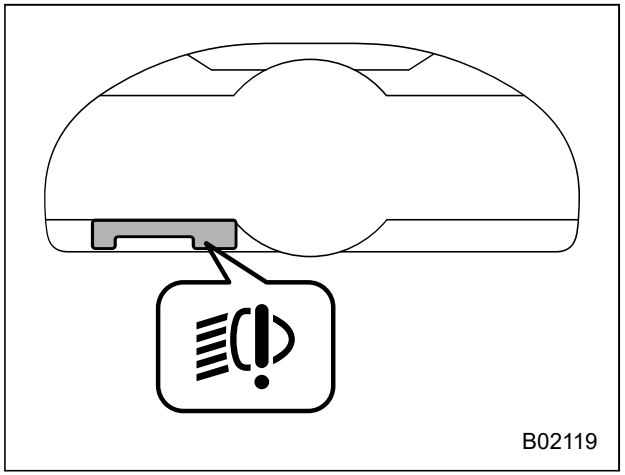


The LED headlight warning light illuminates if the LED headlights malfunction.

We recommend that you have your vehicle inspected at a SUBARU dealer as soon as possible.


■ Rear Fog Light (if equipped)/ Backup Light

NOTE


- **It may be difficult to replace the bulbs. We recommend that you have the bulbs replaced by your SUBARU dealer if necessary.**
- **If a genuine SUBARU accessory has been installed to the rear bumper, check the manual included with the accessory.**

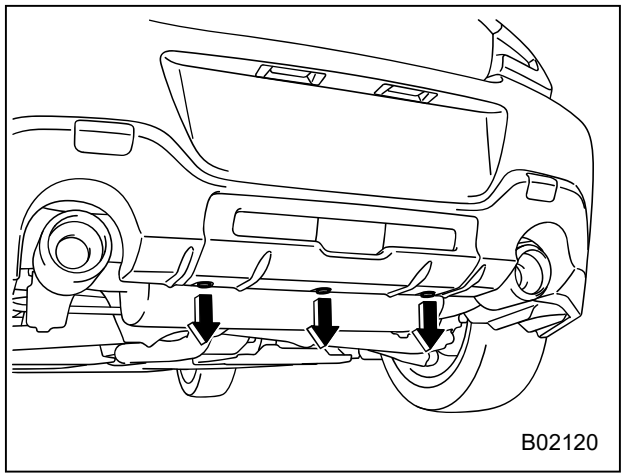

1. Remove the clips.

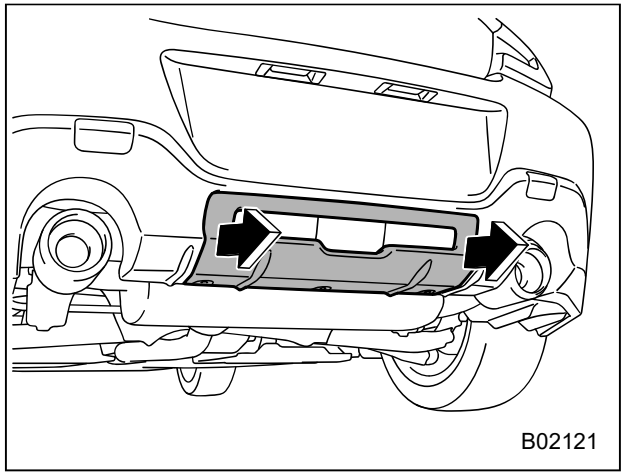

2. Remove the rear bumper cover.

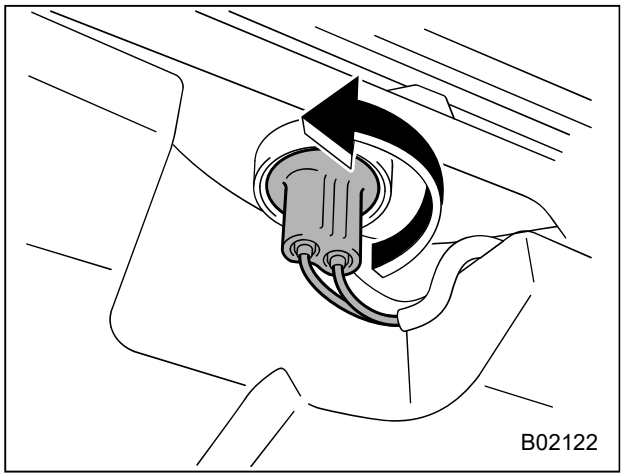

3. Turn the bulb socket counterclockwise and remove it.
4. Pull the bulb out of the bulb socket and replace it with a new one.
5. Install the bulb socket by turning it clockwise.
6. Reconnect the electrical connector.
7. Reinstall the rear bumper cover.

■ Trunk Light

⚠ CAUTION

Replacing the bulb could cause burns since the bulb may be very hot. We recommend that you have the bulb replaced by your SUBARU dealer.

■ Other Bulbs

It may be difficult to replace the bulbs. We recommend that you have the bulbs replaced by your SUBARU dealer if necessary.

11-29. Replacing Battery

The access key fob / transmitter battery may be discharged under the following conditions.

- The operation of the keyless access function is unstable.
- The operating distance of the remote keyless entry system is unstable.
- The transmitter does not operate properly when used within the standard distance.

Replace the battery with a new one.

■ Safety precautions

⚠ WARNING

Do not ingest the battery/Chemical Burn Hazard
(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.
If the battery compartment does not close securely, stop using the product and keep it away from children.
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

⚠ CAUTION

⚠ This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- **Do not let dust, oil or water get on or in the access key fob/transmitter when replacing battery.**
- **Be careful not to touch or damage the printed circuit board in the access key fob/transmitter when replacing the battery.**
- **Be careful not to allow children to touch the battery and any removed parts; children could swallow them.**
- **There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or an equivalent type.**
- **Do not exposed to excessive heat such as sunshine, fire or the like.**

NOTE


- **Replace only with the same or an equivalent type of battery recommended by the manufacturer.**
- **Dispose of used batteries according to the local laws.**
- **Mount the battery in the correct orientation to prevent fluid leakage. Be careful not to bend the terminals. It may result in a malfunction.**
- **It is recommended that the battery should be replaced by a SUBARU dealer.**
- **Use a new battery.**
- **After replacing the battery, confirm that the access key fob/transmitter functions properly.**

■ Replacing Battery of Access Key Fob

CAUTION


- **The battery is hazardous and is to be kept away from children (whether the battery is new or used).**
- **The battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body.**
- **Medical attention should be sought immediately if it is suspected the battery has been swallowed or placed inside any part of the body.**
- **When removing or fitting the access key fob cover, make sure that the plastic part does not come off or become misaligned.**
- **Before replacing the battery, remove any static electricity.**

Battery: Button battery CR2032 or equivalent

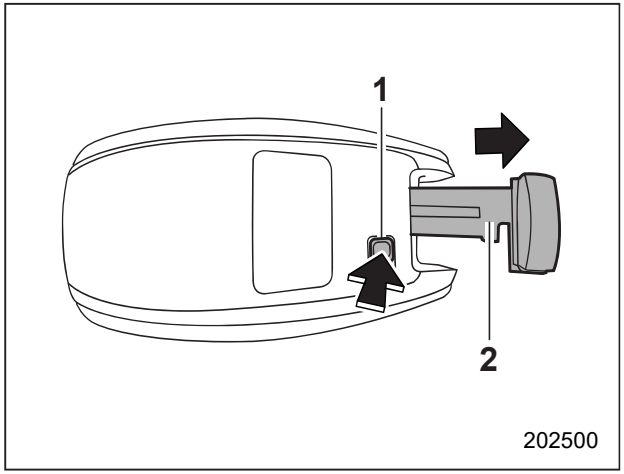


1) Release button
2) Emergency key


1. Take out the emergency key.

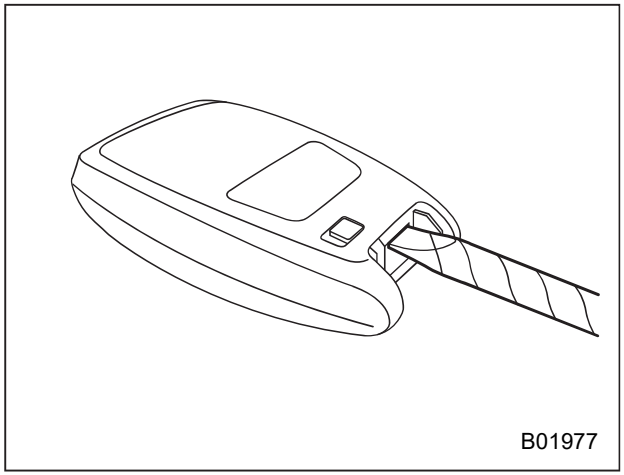

2. Wrap a flat-head screwdriver with vinyl tape or a cloth, and insert it in the gap to remove the cover.

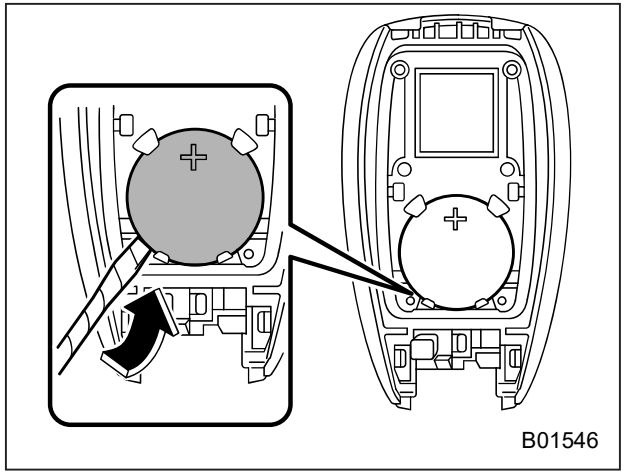


3. Take out the battery using a flat-head screwdriver with vinyl tape or a cloth.

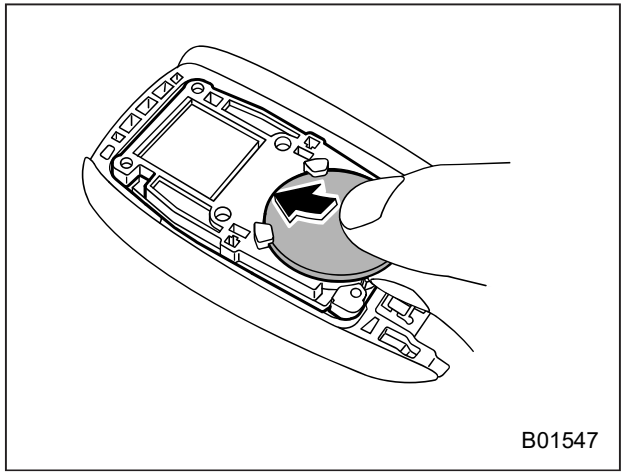

4. Insert a new battery with its positive (+) side facing upward as shown in the figure.

– CONTINUED –

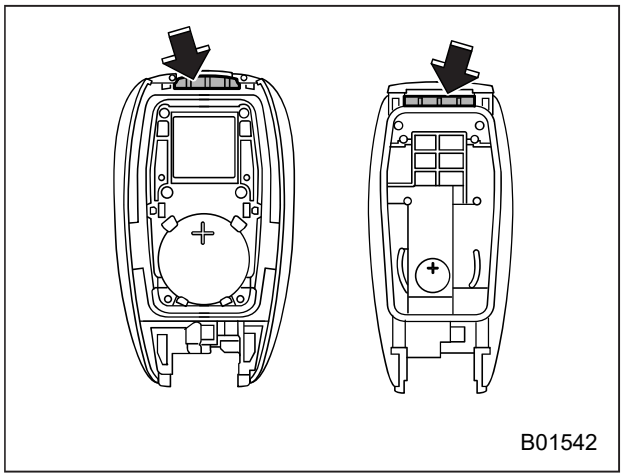

5. Attach the cover to the access key fob by fitting the projections and recesses together.

■ The safe disposal of button batteries

Please, safely dispose of button batteries immediately.
As soon as you have finished using a button battery put sticky tape around both sides of the battery. This will make them less attractive to children and to avoid the low risk of them catching fire. Then dispose of them immediately in an outside bin, out of reach of children, or recycle safely.

12-1.Specifications.....372
Dimensions 372
Engine.....373
Fuel 373
Engine Oil.....373
Manual Transmission and Differential Gear Oil.....375
Fluids 375
Engine Coolant 376
Electrical System.....377
Tires 377
Brake Disc 377
12-2.Bulb Chart.....378
Safety Precautions 378
Bulb Chart 379
12-3.Vehicle Identification 381
12-4.Function Settings.....382
Function Settings and Adjustments on the Center Information Display..... 382
Function Settings and Adjustments Performed by a Dealer 382

12-1. Specifications

These specifications are subject to change without notice.

■ Dimensions

mm (in)

Item		Dimensions	
Drive system		RWD	
Transmission type		AT	MT
Overall length		4,265 (167.9)	
Overall width		1,775 (69.9)	
Overall height		1,310 (51.6)	
Wheelbase		2,575 (101.4)	
Tread	Front	1,520 (59.8)	
	Rear	1,550 (61.0)	
Ground clearance*1		130 (5.1)	

*1: Measured with vehicle empty

AT: Automatic transmission
MT: Manual transmission
RWD: Rear Wheel Drive

■ Engine

Engine model	FA24 (2.4 L, DOHC, non-turbo)
Engine type	Horizontally opposed, liquid cooled 4 cylinder, 4-stroke petrol engine
Displacement cc	2,387
Bore × Stroke mm (in)	94.0 × 86.0 (3.70 × 3.39)
Compression ratio	12.5 : 1
Firing order	1 – 3 – 2 – 4

■ Fuel

Fuel requirement*1			Fuel tank capacity
Fuel types		Unleaded petrol	50 liters (13.2 US gal, 11.0 Imp gal)
Research Octane Number (RON)		98 or higher	
Ethanol blended petrol	For Europe	E5, E10 or ethanol content is up to 10%.	
	For others	Ethanol content is up to 10%.	

*1: For details, refer to "Fuel" ☞P211.

■ Engine Oil

For the checking, adding and replacing procedure or other details, refer to "Engine Oil" ☞P339.

NOTE

The procedure for changing the engine oil and oil filter should be performed by a properly-trained expert. It is recommended that you have this service performed by your SUBARU dealer.

▼ Approved engine oil

Always use the SUBARU approved engine oil. For further details, we recommend that you contact your SUBARU dealer.
If the approved engine oil is unavailable, use the alternative engine oil described on the next page.



– CONTINUED –

▼ Alternative engine oil

If the SUBARU approved oil is unavailable, the following alternative oil can be used.

NOTE

- **Each quantity indicated is only a guideline. The necessary quantity for replacement may differ slightly depending on the temperature and other factors.**
- **In choosing an oil, you want the proper quality and viscosity, as well as one that will enhance fuel economy. Oils of lower viscosity provide better fuel economy. However, in hot weather, oil of higher viscosity is required to properly lubricate the engine. The following table lists the recommended viscosities and applicable temperatures.**
- **When adding oil, different brands may be used together as long as they are the same API classification and SAE viscosity as those recommended by SUBARU.**

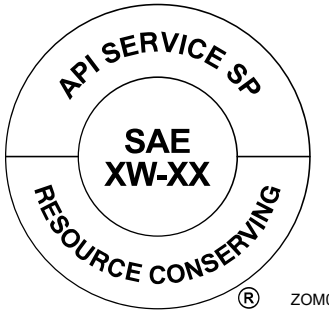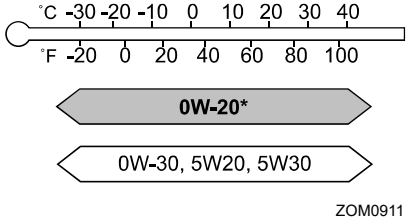Oil grade	SAE viscosity No. and applicable temperature	Engine oil capacity
 ZOM0886 **or**  ZOM0293 API (American Petroleum Institute) classification **SN** with the words “RESOURCE CONSERVING”, **SN PLUS** with the words “RESOURCE CONSERVING” or **SP** with the words “RESOURCE CONSERVING” ILSAC (International Lubricant Specification Advisory Committee) **GF-5** or **GF-6A**, which can be identified with the ILSAC certification mark (Starburst mark) or ACEA specification A3 or A5	**0W-20*** engine oil is recommended for optimum engine performance and protection. 0W-30, 5W-20 or 5W-30 engine oil may be used if replenishment is needed.  ZOM0911 *: Recommended	Adding the oil from low level to full level: 1.0 liter (1.1 US qt, 0.9 Imp qt) Changing the oil: 4.8 liter (5.1 US qt, 4.2 Imp qt) Changing the oil and oil filter: 5.0 liter (5.3 US qt, 4.4 Imp qt)

■ Manual Transmission and Differential Gear Oil

Oil	Manual transmission oil	Differential gear oil
Oil grade	• Manual Transmission Gear Oil LV 75W*3 • API GL-4 SAE 75W*4	• Differential Gear Oil LX*3 • Other gear oil that meets API GL-5 SAE 75W-85 or GL-5 SAE 75W-90 specifications*5
Oil capacity*1	2.2 liter (2.3 US qt, 1.9 Imp qt)	1.15 liter (1.22 US qt, 1.01 Imp qt)
Remarks*2	"Manual Transmission Oil" ☞P346	"Differential Gear Oil" ☞P346

*1: The indicated oil quantity is only a guideline. The necessary quantity for replacement may differ slightly depending on the temperature and other factors. After refilling the gearbox with oil, the oil level should be checked.
*2: For more details about maintenance and service, refer to the indicated section.
*3: The vehicle is filled at the factory.
*4: This type of manual transmission oil can be used. However, using this type of oil will increase fuel consumption.
If oil other than “Manual Transmission Gear Oil LV 75W” is used, the following may be experienced:
·The overall performance and function of the transmission may be adversely affected.
·Rattling noises may occur during idling and fuel consumption may increase.
Never use different brands together.
*5: Using a differential gear oil other than “Differential Gear Oil LX” may cause noise, vibrations and increased fuel consumption. Never use different brands together.

■ Fluids

Fluid	Fluid type*1	Fluid capacity*2	Remarks*3
Automatic Transmission Fluid (AT models)	ATF WS	7.5 liter (7.9 US qt, 6.6 Imp qt)	"Automatic Transmission Fluid" ☞P346
Brake fluid	FMVSS No. 116, DOT 3 or DOT 4 brake fluid	—	"Brake Fluid" ☞P347
Clutch fluid (MT models)	FMVSS No. 116, DOT 3 or DOT 4 brake fluid	—	"Clutch Fluid (MT models)" ☞P348

– CONTINUED –

*1: Use one of the indicated types of fluid.
*2: The indicated fluid quantity is only a guideline. The necessary quantity for replacement may differ slightly depending on the temperature and other factors.
*3: For more details about maintenance and service, refer to the indicated section.

■ Engine Coolant

Vehicle model	Coolant capacity	Coolant type
AT models	7.7 liter (8.1 US qt, 6.8 Imp qt)	SUBARU SUPER COOLANT
MT models	7.4 liter (7.8 US qt, 6.5 Imp qt)	

The indicated coolant quantity is only a guideline. The necessary quantity for replacement may differ slightly depending on the temperature and other factors. For more details about maintenance and service, refer to "Cooling System" ☞P341.

■ Electrical System

Battery type	Left-hand drive models	55D23L
	Right-hand drive models	55D23R
Alternator		12 V-150 A
Spark plugs		ZXE27HBR8 (DENSO)

■ Tires

For the tire specifications, see the tire pressure label located on the center pillar on the driver's side.

Spare tire*1	Size	215/40R18 85Y
	Pressure	240 kPa (2.4 kgf/cm^2, 35 psi)
Wheel nut tightening torque		120 N·m (12.2 kgf·m, 88.5 lbf·ft)*2

*1: If equipped

*2: This torque is equivalent to applying approximately 40 to 50 kgf (88 to 110 lbf) at the end of the wheel nut wrench. If you have tightened the wheel nuts by yourself, have the tightening torque checked at the nearest automotive service facility as soon as possible. For the wheel nut tightening procedure, refer to "Changing a Flat Tire" ☞P292.

■ Brake Disc

If you need information on the usage limit value of brake discs and the method for measuring them, we recommend that you consult your SUBARU dealer.

12-2. Bulb Chart

■ Safety Precautions


⚠ WARNING

Bulbs may become very hot while illuminated. Before replacing bulbs, turn off the lights and wait until the bulbs cool down. Otherwise, there is a risk of sustaining a burn injury.

⚠ CAUTION

Replace any bulb only with a new bulb of the specified wattage. Using a bulb of different wattage could result in a fire.

■ Bulb Chart

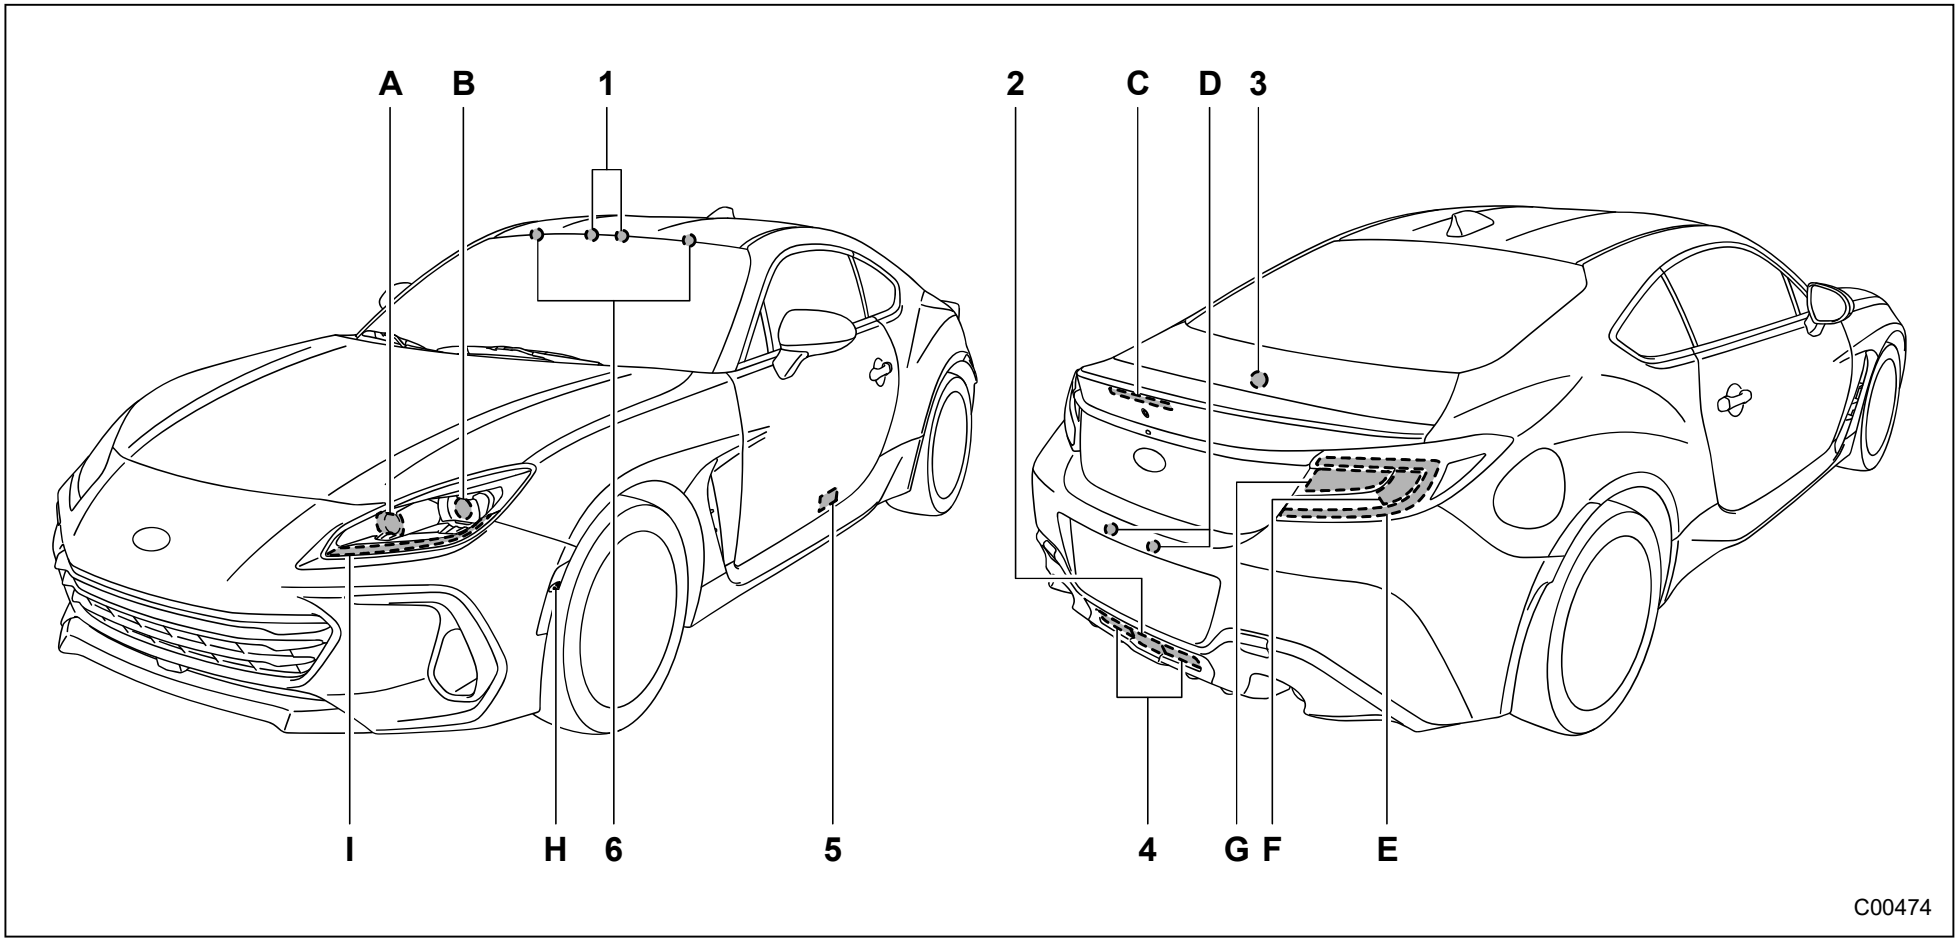


NOTE

Lights indicated by letters are the LED (Light Emitting Diode) type. We recommend that you consult your SUBARU dealer for replacement.

– CONTINUED –

		Wattage	Bulb No.
1)	Map lights	12 V-8 W	—
2)	Rear fog light (if equipped)	12 V-21 W	W21W
3)	Trunk light	12 V-3.8 W	SAE #194
4)	Backup lights	12 V-16 W	W16W
5)	Door step lights	12 V-5 W	W5W
6)	Vanity mirror lights	12 V-2 W	—
A)	Front turn signal lights	—	—
B)	Low and high beam headlights	—	—
C)	High-mounted stop light	—	—
D)	License plate lights	—	—
E)	Tail lights	—	—
F)	Stop lights	—	—
G)	Rear turn signal lights	—	—
H)	Side turn signal lights	—	—
I)	Front position lights	—	—
	Daytime running lights	—	—

12-3. Vehicle Identification

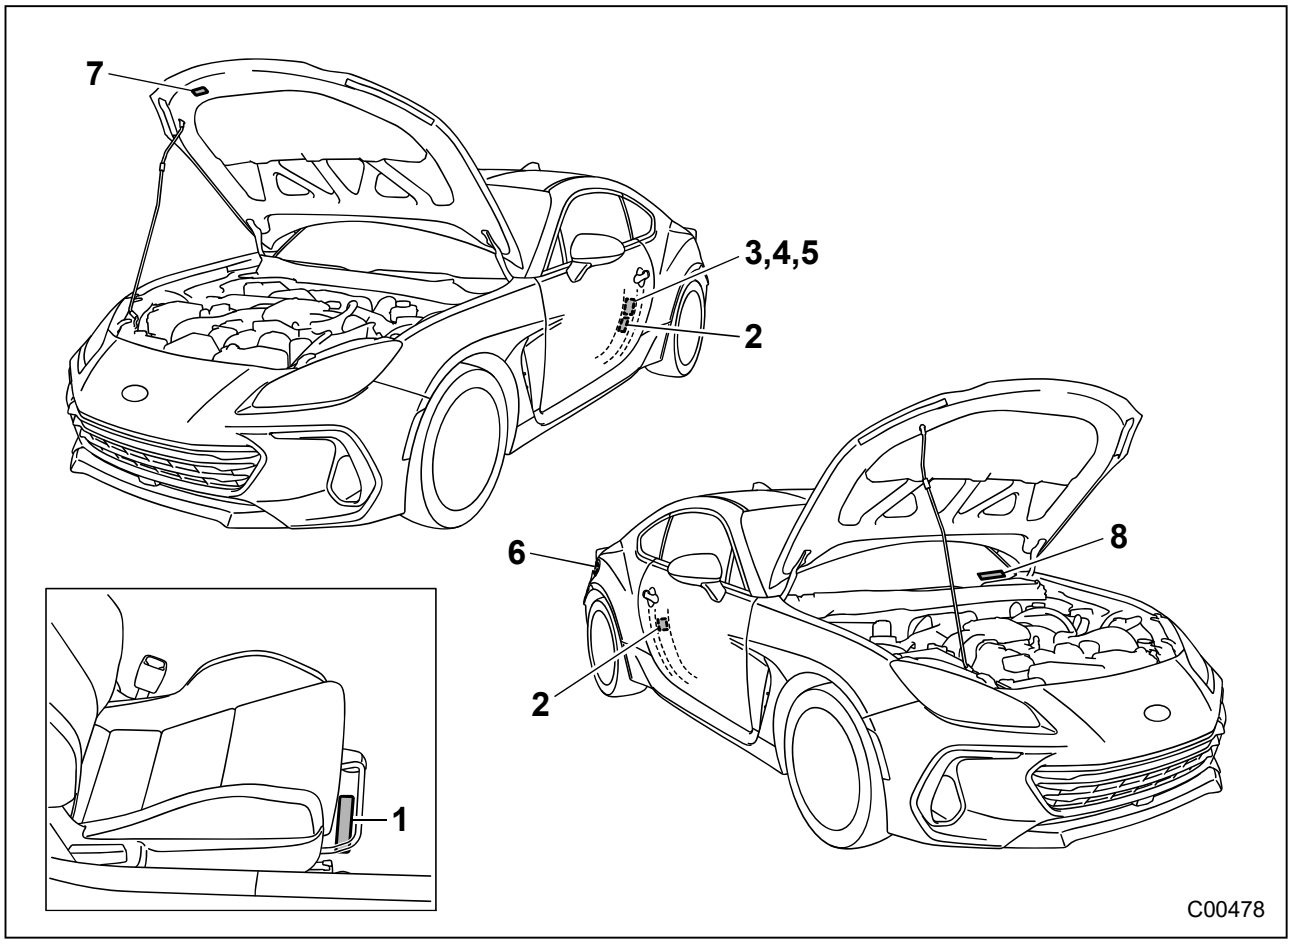

1) Vehicle identification number under the floor carpet of the right-hand front seat
2) Tire inflation pressure label (vehicle placard) (driver's side)
3) Year of manufacture label (Middle East models)
4) Model number label (if equipped)
5) Built date label (if equipped)
6) Fuel label
7) Air conditioner label
8) Vehicle identification number label

12-4. Function Settings

■ Function Settings and Adjustments on the Center Information Display

Setting adjustments can be manually changed within the center information display to meet your personal requirements. Refer to "Center Information Display (CID)" ☞P153.

■ Function Settings and Adjustments Performed by a Dealer


Item	Function		Available settings	Factory default setting
Remote keyless entry system	Audible signal		Operation/Non-operation	Operation
	Remote keyless entry system		Operation/Non-operation	Operation
Keyless access with push-button	Audible signal volume		Level 1 to 7	Level 5
	Trunk open without key		ON/OFF	ON
Remote trunk open function*1	Operation of trunk opening/power rear by access key fob		Non-operation/Pressing twice/ Pressing and holding	Pressing and holding
Key lock-in prevention	Key lock-in prevention		Operation/Non-operation	Operation
Battery drainage prevention function	Battery drainage prevention function		Operation/Non-operation	Operation
Power window	Remote control key link power window setting*2		Operation/Non-operation	Operation
Lights	Auto-on/off wiper-linked headlights		Operation/Non-operation	Operation
	Headlight off delay setting		30 seconds/60 seconds/90 seconds/120 seconds	30 seconds
	Welcome lighting	Approaching time set	30 seconds/60 seconds/90 seconds/120 seconds	30 seconds
		Leaving time set	30 seconds/60 seconds/90 seconds/120 seconds	30 seconds
Auto dimmer cancel	Sensitivity of the operation of the auto dimmer cancel		OFF/Min/Low/Mid/Hi/Max	Mid
High beam assist function*1	High beam assist function		Operation/Non-operation	Operation

Item	Function	Available settings	Factory default setting
Illumination	Operation when the doors are unlocked	Operation/Non-operation	Operation
	Operation after the engine switch is turned off	Operation/Non-operation	Operation
	Interior light illumination upon approach	Operation/Non-operation	Operation
	Interior light illumination	Operation/Non-operation	Operation
Active sound control	Active sound control	Operation/Non-operation	Operation

*1: If equipped
*2: Except Australia models

13-1.ID Label (If Equipped) 386
13-2.Built date information (If Equipped) 386
Definition 386
Location 386
13-3.Information for Middle East models 386
Year of Manufacture and Country of Origin 386
Speed limit, maximum torque and maximum power at rpm 387
Tires 387
Fuel economy tips 387
13-4.Declaration of Conformity in Accordance with EMC Directive 2014/30/EC 388
Compressor 388
13-5.Declaration of conformity in accordance with the Machinery Directive 2006/42/EC 389
Jack 389
13-6.Declaration of Conformity in Accordance with the Radio Equipment Directive (2014/53/EU) 390
Replacing a Coin/Button Cell Battery Precautions (Access Key) 390
Access Key Fob 395
Immobilizer 398
TPMS Transmitter 400
Subaru Rear Vehicle Detection (SRVD) 403
TPMS Receiver 407
LF Oscillator 410
13-7.Technical information 413
Singapore models 413
Indonesia models 413
Vietnam models 414
Philippine models 414
Taiwan models 415
Republic of South Africa models 416
Bahrain models 416
Australia/New Zealand models 417
Israel models 417
UAE models 418
Thailand Models 419
Importer Information 420

13-1. ID Label (If Equipped)

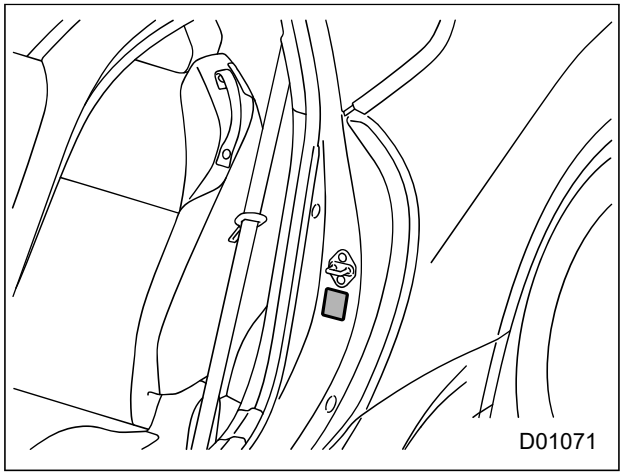


The ID label is located on the left side center pillar as shown in the illustration.

13-2. Built date information (If Equipped)

■ Definition

The “BUILT DATE” is the calendar month and the year in which the body shell and powertrain sub-assemblies are conjoined and the vehicle is driven or moved from the production line.


■ Location

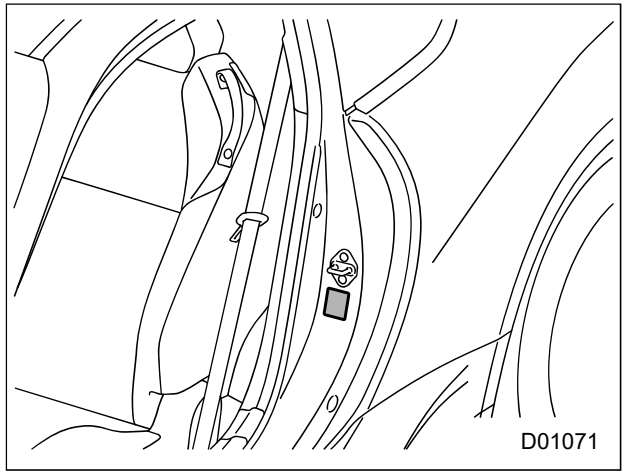

The “BUILT DATE” is indicated on a label which is located on the left side center pillar as shown in the illustration.

13-3. Information for Middle East models

■ Year of Manufacture and Country of Origin

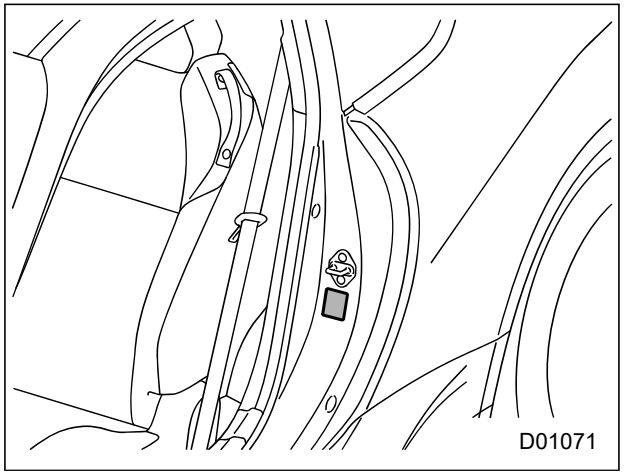

The calendar year when your vehicle was manufactured and the country of origin are indicated in the “Year of manufacture label” attached to the driver’s door jam.

■ Speed limit, maximum torque and maximum power at rpm

Model	2.4 L models	
	MT	AT
Speed limit km/h	226	216
Maximum torque N·m (kgf·m)/rpm	250 (25.5) /3,700	
Maximum power kW (PS)/rpm	174 (237) /7,000	

- The performance data above is the numeric value measured according to the GSO-ISO-1585- 2008 quality norm.
- The performance data above is the numeric value measured from petrol with an octane rating of 95 (Research Octane number).

■ Tires

Tire size*	215/40R18 85Y	
Pressure*	Front	240 kPa (2.4 kgf/cm^2, 35 psi)
	Rear	

*: For the information about temporary spare tire, refer to "Tires" ☞P377.

NOTE

For the information about wheel nut tightening torque, refer to "Tires" ☞P377.

■ Fuel economy tips

Observe the following in order to improve your vehicle's fuel economy and reduce CO_2 emissions.

- Drive the vehicle appropriately.
- Have your vehicle maintained periodically.
- Do not drive recklessly.
- Do not drive at excessively high speeds.
- Keep the tires inflated to an appropriate tire pressure.
- Minimize engine idling.
- Do not carry excessively heavy cargo.

13-4. Declaration of Conformity in Accordance with EMC Directive 2014/30/EC

■ Compressor

YOKOHAMA

ECDoC-Y04

EC Declaration of Conformity

Manufacturer: THE YOKOHAMA RUBBER CO., LTD.
Address: 2-1, Oiwake, Hiratsuka city, Kanagawa, Japan

Object of declaration

Product: Compressor
Model No.: C53H-08

conforms with the essential requirements of the EMC Directive 2014/30/EC, based on the following specifications applied;

EU Harmonized standards
EN 61000-6-2:2005
EN 61000-6-4:2007 + A1:2007

Authorized representative in Europe:
YOKOHAMA EUROPE GmbH
Monschauerstrasse 12, D-40549 Düsseldorf, GERMANY

Signed for and on behalf of: THE YOKOHAMA RUBBER CO., LTD.

Signature: Y. Seita
Yasuhiko Seita
General Manager
Tire Quality Assurance Department

Date of Issue: 1st August, 2016

D00509

13-5. Declaration of conformity in accordance with the Machinery Directive 2006/42/EC

■ Jack

EC Declaration of Conformity

We, WAKO INDUSTRY CO., LTD., 1823 Shinmachi Takasaki Gumma 370-1301 Japan, hereby declare that the machine described below.
This declaration shall cease to be valid if modifications, that includes disassemble and re-built, are made to the product. If usage is other than specific model of vehicle this declaration shall cease also.

Product: Portable Screw Jacks for Automobiles
Model: Jack Assy, Pantograph, applied to the specific vehicle
Part Number: 97031 CA020 , 97031 CA030

Applicable EU directives covered by this declaration is the Machinery Directive 89/392/EEC. The products identified above complies with the requirements of the Machinery above by applied standard is "JIS D8103-2006". It is ensured through internal measures that production units confirm at all times to requirement of current EC Directives and relevant standards.
A sample of the products has been tested by our quality assurance department.

Signed by: Tamotsu Sekiguchi
Tamotsu Sekiguchi
Operating Officer, Quality Assurance

Date of Issue: 9/out/2020

WAKO INDUSTRY CO., LTD. Tel : (81) 0274-42-1253
1823 Shinmachi Takasaki, Gumma 370-1301 Japan Fax (81) 0274-42-6735

D01096

13-6. Declaration of Conformity in Accordance with the Radio Equipment Directive (2014/53/EU)

■ Replacing a Coin/Button Cell Battery Precautions (Access Key)

⚠ This mark is a safety/warning mark.

Do not ingest battery.
Chemical Burn Hazard
This product contains a coin / button cell battery.
If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
Keep new and used batteries away from children.
If the battery compartment does not close securely, stop using the product and keep it away from children.
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION
Risk of explosion if the battery is replaced by an incorrect type.
Replace battery with the same type.

CAUTION
Risk of explosion or the leakage of flammable liquid or gas.

Do not use in /store in /bring into environment of extremely high temperature or extremely low pressure due to the very high altitude.
Do not attempt to burn, crush, or cut used battery.

⚠ Tämä merkki on turvallisuus/varoitusmerkki.

Älä nielaise paristoa.
Syövyttävää!
Tuote sisältää nappipariston.
Jos nappiparisto joutuu nieluun, voi se aiheuttaa vakavia sisäisiä palovammoja kahden tunnin kuluessa ja aiheuttaa kuoleman.
Pidä uudet ja käytetyt paristot poissa lasten ulottuvilta.
Jos paristolokero ei sulkeudu kunnolla, lopeta tuotteen käyttö ja pidä se poissa lasten ulottuvilta.
Hakeudu välittömästi lääkärin hoitoon, jos epäilet, että paristoja on joutunut jonkun nieluun tai muun kehonosan sisään.

VARO
Vääräntyyppinen paristo voi räjähtää.
Vaihda aina paristo samantyyppiseen.

VARO
Räjähdyksen tai syttyvien nesteiden tai kaasujen vuodon riski.

Älä käytä/säilytä tuotetta olosuhteissa, jossa se altistuu hyvin korkealle lämpötilalle tai paineelle tai suurten korkeuksien voimakkaalle alipaineelle.
Älä yritä polttaa, murskata tai leikata käytettyjä paristoja.

D00842

⚠ Dit is een veiligheids-/waarschuwingsteken.

Slik de batterij niet in.
Gevaar voor chemische brandwonden
Dit product bevat een knoopcelbatterij.
Bij inslikken kan de knoopcelbatterij binnen slechts 2 uur ernstige inwendige brandwonden veroorzaken, wat de dood tot gevolg kan hebben.
Houd nieuwe en gebruikte batterijen buiten het bereik van kinderen.
Stop met het gebruik van het product als het batterijvak niet goed sluit en houd het product buiten het bereik van kinderen.
Raadpleeg onmiddellijk een arts als u vermoedt dat een batterij is ingeslikt of in het lichaam is gestopt.

WAARSCHUWING
Er bestaat explosiegevaar als u de batterij vervangt door de verkeerde soort batterij.
Vervang de batterij door dezelfde soort batterij.

WAARSCHUWING
Explosiegevaar of gevaar voor lekken van brandbare vloeistof of brandbaar gas.

Niet gebruiken in/bewaren in/brengen naar een omgeving met extreem hoge temperatuur of extreem lage druk door zeer grote hoogte.
Verbrand en verpletter de gebruikte batterij niet en snijd deze niet open.

⚠ Ce marquage est un marquage de sécurité/d'avertissement.

Ne pas ingérer la pile.
Risque de brûlure chimique
Ce produit contient une pile bouton.
Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en seulement 2 heures et entraîner la mort.
Gardez les piles neuves et usagées hors de la portée des enfants.
Si le compartiment de pile ne se ferme pas correctement, arrêtez d'utiliser le produit et gardez-le à l'écart des enfants.
Si vous croyez que des piles ont été avalées ou placées dans n'importe quelle partie du corps, consultez immédiatement un médecin.

MISE EN GARDE
Risque d'explosion si la pile est remplacée par un type incorrect.
Remplacez la pile par le même type.

MISE EN GARDE
Risque d'explosion ou de fuite de liquide ou de gaz inflammable.

Ne pas utiliser / stocker / mettre dans un environnement de température extrêmement élevée ou de pression extrêmement basse en raison de l'altitude très élevée. N'essayez pas de brûler, écraser ou couper la pile usagée.

D00843

⚠ Denna etikett är en säkerhets-/varningsetikett.

Svälj inte batteriet (eller stoppa det i munnen).
Risk för kemisk brännskada
Denna produkt innehåller ett mynt-/knappbatteri.
Om mynt-/knappbatteriet sväljs ned kan det på bara 2 timmar orsaka allvarliga inre brännskador och kan leda till dödsfall.
Förvara nya och använda batterier utom räckhåll för barn.
Om batterifacket inte kan stängas säkert, sluta använda produkten och håll den borta från barn.
Om du tror att batterier har svalts ner eller kommit in i någon del av kroppen, sök omedelbart medicinsk hjälp.

OBSERVERA!
Explosionsrisk föreligger om batteriet ersätts med en felaktig typ.
Ersätt batteriet med ett batteri av samma typ.

OBSERVERA!
Risk för explosion eller läckage av brandfarlig vätska eller gas.

Använd inte i/förvara inte i/för inte i omedelbar närhet av extremt hög temperatur eller extremt lågt tryck beroende på mycket hög höjd.
Försök inte bränna, krossa eller skära sönder ett använt batteri.

⚠ Dette mærke er et sikkerheds-/ advarselsmærke.

Indsæt ikke batteri.
Kemisk forbrændingsfare
Dette produkt indeholder et mønt-/knapcellebatteri.
Hvis mønt-/knapcellebatteriet sluges, kan det forårsage alvorlige indre forbrændinger på kun 2 timer og kan føre til døden.
Hold nye og brugte batterier væk fra børn.
Hvis batterirummet ikke lukker sikkert, skal du holde op med at bruge produktet og holde det væk fra børn.
Hvis du tror, at batterier kan være blevet slugt eller være blevet placeret i nogen del af kroppen, skal du straks søge lægehjælp.

ADVARSEL
Fare for eksplosion, hvis batteriet udskiftes med en forkert type.
Udskift batteri med samme type.

ADVARSEL
Risiko for eksplosion eller lækage af brandfarlig væske eller gas.

Må ikke anvendes i/opbevares i/indbringes i omgivelser med ekstremt høj temperatur eller ekstremt lavt tryk på grund af den meget høje højde.
Forsøg ikke at brænde, knuse eller skære brugt batteri.

D00844

⚠ Dieses Zeichen ist ein Sicherheits-/Warnzeichen.

Nehmen Sie keine Batterien zu sich.
Chemische Verbrennungsgefahr
Dieses Produkt enthält eine Knopfzellenbatterie.
Wird die Knopfzellenbatterie verschluckt, kann sie innerhalb von nur 2 Stunden schwere innere Verbrennungen verursachen und zum Tode führen.
Halten Sie neue und gebrauchte Batterien von Kindern fern.
Wenn das Batteriefach nicht sicher schließt, stellen Sie die Verwendung des Geräts ein und halten Sie es von Kindern fern.
Wenn Sie der Meinung sind, dass Batterien verschluckt oder in irgendeinen Teil des Körpers platziert wurden, suchen Sie sofort einen Arzt auf.

WARNUNG
Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird.
Ersetzen Sie die Batterie durch den gleichen Typ.

WARNUNG
Gefahr von Explosion oder Austreten von brennbaren Flüssigkeiten oder Gasen.

Verwenden/lagern/bringen Sie das Gerät nicht in Umgebungen mit extrem hoher Temperatur oder extrem niedrigem Druck aufgrund von sehr großer Höhe.
Versuchen Sie nicht, verbrauchte Batterien zu verbrennen, zu zerquetschen oder zu zerschneiden.

⚠ Σήμα για την ασφάλεια/προειδοποιητικό σήμα.

Μην καταπίνετε την μπαταρία.
Κίνδυνος χημικού εγκαύματος
Αυτό το προϊόν περιέχει επίπεδη μπαταρία.
Σε περίπτωση κατάποσης της επίπεδης μπαταρίας μπορούν να προκληθούν σοβαρά εσωτερικά εγκαύματα σε διάστημα μόλις 2 ωρών και να επέλθει θάνατος.
Φυλάσσετε τις καινούριες και τις χρησιμοποιημένες μπαταρίες μακριά από τα παιδιά.
Εάν η θήκη της μπαταρίας δεν κλείνει καλά, σταματήστε να χρησιμοποιείτε το προϊόν και φυλάξτε το μακριά από τα παιδιά.
Εάν πιστεύετε ότι υπάρχει περίπτωση να έχει γίνει κατάποση μπαταρίας ή εισχώρησή της σε κάποιο μέρος του σώματος, ζητήστε αμέσως ιατρική συμβουλή.

ΠΡΟΣΟΧΗ
Υπάρχει κίνδυνος έκρηξης εάν τοποθετηθεί λάθος τύπος μπαταρίας.
Αντικαταστήστε την μπαταρία με τον ίδιο τύπο μπαταρίας

ΠΡΟΣΟΧΗ
Υπάρχει κίνδυνος έκρηξης ή διαρροής εύφλεκτου υγρού ή αερίου.

Μην χρησιμοποιείτε/αποθηκεύετε/μεταφέρετε την μπαταρία σε περιβάλλον με υπερβολικά υψηλή θερμοκρασία ή υπερβολικά χαμηλή πίεση που οφείλεται σε πολύ υψηλό υψόμετρο. Μην επιχειρήσετε να κάψετε, να συνθλίψετε ή να κόψετε την χρησιμοποιημένη μπαταρία.

D00845

⚠ Questo simbolo è un simbolo di sicurezza / avvertenza.

Non ingerire la batteria.
Pericolo di ustione chimica
Il prodotto contiene una batteria a cella a moneta / bottone.
Se la batteria a cella a moneta / bottone viene inghiottita può causare delle gravi ustioni interne in sole due ore e provocare il decesso.
Tenere le batterie nuove e quelle usate fuori dalla portata dei bambini.
Se il vano batterie non si chiude in modo sicuro, smettere di usare il prodotto e tenerlo fuori dalla portata dei bambini.
Se si ritiene che delle batterie possano essere state inghiottite o essere state introdotte all'interno di qualsivoglia parte del corpo consultare immediatamente un medico.

ATTENZIONE
Se la batteria è sostituita con una di tipo scorretto c'è rischio che esploda.
Sostituire la batteria con una del medesimo tipo.

ATTENZIONE
Rischio di esplosione o di perdita di liquidi o gas infiammabili.

Non usare / custodire / mettere in ambienti con temperature estremamente alte o una pressione estremamente bassa dovuta a una notevole altitudine.
Non cercare di bruciare, frantumare o tagliare delle batterie usate.

⚠ Esta marca es una marca de seguridad/advertencia.

No ingiera la pila.
Riesgo de Quemadura Química
Este producto contiene una pila tipo moneda/botón.
Si la pila de moneda/botón se traga, puede provocar quemaduras internas graves en solo 2 horas y puede causar la muerte.
Mantenga las pilas nuevas y las usadas lejos de los niños.
Si el compartimiento de la pila no se cierra de forma segura, deje de usar el producto y manténgalo alejado de los niños.
Si cree que las pilas pueden haberse tragado o colocado dentro de cualquier parte del cuerpo, busque atención médica inmediata.

PRECAUCIÓN
Riesgo de explosión si la batería es reemplazada por una de tipo incorrecto.
Reemplace la batería con una del mismo tipo.

PRECAUCIÓN
Riesgo de explosión o fuga de líquido o gas inflamables.

No use/almacene/lleve a un entorno de temperatura extremadamente alta o extremadamente baja, debido a la gran altitud.
No intente quemar, aplastar o cortar la batería usada.

D00846

– CONTINUED –

⚠ Esta marca é uma marca de segurança/alerta.

Não ingerir a pilha.
Perigo de queimaduras químicas
Este produto contém uma pilha de tipo moeda/botão.
Se a pilha de moeda/botão for engolida, pode causar queimaduras internas graves em apenas 2 horas e conduzir à morte.
Mantenha as pilhas novas e usadas longe das crianças.
Se o compartimento da pilha não se fechar de forma segura, pare de usar o produto e mantenha-o afastado das crianças.
Se achar que as pilhas podem ter sido engolidas ou colocadas dentro de qualquer parte do corpo, procure imediatamente um médico.

CUIDADO
Risco de explosão se a pilha for substituída por um tipo incorreto.
Substitua a pilha pelo mesmo tipo.

CUIDADO
Risco de explosão ou de vazamento de líquido ou gás inflamável.

Não use/armazene/coloque num ambiente com temperaturas extremamente altas ou pressões extremamente baixas devido a altitude elevada.
Não tente queimar, esmagar ou cortar a pilha usada.

⚠ Din il-marka hija marka ta' sigurtà/avviż.

Tiblax il-batterija.
Periklu ta' ħruq kimiku
Dan il-prodott fih batterja ċatta qisha buttuna żgħira.
Jekk din il-batterja ċatta tinbelha, tista' tikkawża ħruq intern sever f'temm sagħtejn u tista' twassal għall-mewt.
Żomm il-batteriji godda u użati 'l bogħod minn fejn jistgħu jilħquhom it-tfal.
Jekk il-kompartiment tal-batterija ma jistax jingħalaq b'mod sigur, tużax aktar il-prodott u żommu 'l bogħod minn fejn jistgħu jilħquh it-tfal.
Jekk ikollok xi suspett li l-batteriji nbelgħu jew ġew imdeffsa f'xi parti tal-ġisem, fittex għajnuna medika minnufih.

ATTENZJONI
Riskju ta' splużjoni jekk il-batterija jekk il-batterija tinbidel ma' waħda tat-tip skorrett.
Il-batterija għandha tinbidel ma' waħda tal-istess tip.

ATTENZJONI
Riskju ta' splużjoni jew ħruġ ta' likwidu jew gass fjammabbli.

Tużax/taħżinx f'ambjent b'temperatura għolja ħafna jew pressjoni estremament baxxa minħabba f'altitudni għolja ħafna.
Tipprovax taħraq, tgħaffeġ jew taqta' l-batterija ħażina.

D00847

⚠ See tähis on ohutus-/hoiatustähis.

Ärge neelake patareid alla.
Keemilise põletuse oht
See toode sisaldab kella-/nööppatareid.
Allaneelamisel võib kella-/nööppatarei juba kahe tunniga põhjustada raskeid sisemisi põletusi ning viia surmani.
Hoidke uusi ja kasutatud patareisid lastele kättesaamatus kohas.
Kui patareipesa ei sulgu kindlalt, lõpetage toote kasutamine ja paigutage see lastele kättesaamatusse kohta.
Kui kahtlustate patareide allaneelamist või kehasse sattumist, pöörduge viivitamata arsti poole.

ETTEVAATUST!
Patarei asendamine vale tüüpi patareiga põhjustab plahvatusohtu.
Asendage patarei sama tüüpi patareiga.

ETTEVAATUST!
Plahvatuse või tuleohtliku vedeliku või gaasi lekkimise oht.

Ärge kasutage/hoidke toodet keskkonnas ega viige keskkonda, kus on äärmiselt kõrge temperatuur või väga suurest kõrgusest tingitud äärmiselt madal õhurõhk.
Ärge üritage kasutatud patareid põletada, purustada ega lõigata.

⚠ Ez egy biztonsági/figyelmeztető jelzés.

Ne nyelje le az elemeket.
Vegyi égés veszély
Ez a termék gombelemeket tartalmaz.
Ha lenyeli a gombelemeket, akkor alig 2 órán belül halálos következményű, komoly égést szenvedhet.
Az új és lemerült elemeket gyermekektől tartsa távol.
Ha az elemrekesz nem zár biztonságosan, akkor ne használja tovább a terméket és gyermekektől tartsa távol.
Ha úgy gondolja, hogy az elemeket lenyelték vagy más testrészbe dugták, akkor azonnal hívja fel a háziorvosát.

VIGYÁZAT
Robbanásveszély áll fenn, ha nem megfelelő típusúra cseréli ki az elemet.
Az elemet mindig azonos típusúra cserélje.

VIGYÁZAT
Robbanásveszély, illetve éghető folyadék-, vagy gázszivárgás-veszély áll fenn.

Ne használja, tárolja vagy vigye nagyon magas hőmérsékletű vagy nagy magasságok miatti nagyon alacsony nyomású környezetbe.
A lemerült elemeket ne próbálja meg elégetni, széttörni vagy felvágni.

D00848

⚠ Táto značka je bezpečnostná značka/značka upozornenia.

Batériu nekonzumujte.
Nebezpečenstvo chemického popálenia
Tento výrobok obsahuje mincovú/gombíkovú článkovú batériu.
Ak dôjde k požitiu mincovej/gombíkovej článkovej batérie, v priebehu len 2 hodín môže dôjsť k vážnym vnútorným popáleninám a k smrti.
Nové a použité batérie uchovávajte mimo dosahu detí.
Ak priehradku na batérie nemožno bezpečne uzavrieť, prestaňte výrobok používať a uschovajte ho mimo dosahu detí.
Ak si myslíte, že došlo k požitiu batérií alebo k ich vloženiu do ktorejkoľvek časti tela, okamžite vyhľadajte zdravotnícku pomoc.

UPOZORNENIE
Ak batériu vymeníte za nesprávny typ, môže dôjsť k výbuchu.
Batériu nahraďte rovnakým typom.

UPOZORNENIE
Riziko výbuchu alebo unikania horľavej kvapaliny alebo plynu.

Nepoužívajte/neskladujte/neprinášajte do prostredia s extrémne vysokou teplotou alebo extrémne nízkym tlakom vo veľmi vysokej nadmorskej výške.
Použitú batériu sa nepokúšajte spaľovať, drviť ani prerezať.

⚠ Tato značka je bezpečnostní varovnou značkou.

Baterii nepolykejte.
Nebezpečí poleptání žíravinou.
Tento výrobek obsahuje knoflíkovou elektrickou baterii.
Pokud byste knoflíkovou elektrickou baterii spolkli, může to i jen do 2 hodin způsobit těžké vnitřní poleptání a vést to až k úmrtí.
Nové i použité baterie držte mimo dosah dětí.
Pokud by schránka baterie nebyla bezpečně uzavřena, pak takový výrobek přestaňte používat a držte jej mimo dosah dětí.
Pokud byste si mysleli, že mohlo dojít ke spolknutí baterie nebo k jejímu umístění do nějaké části těla, vyhledejte okamžitou lékařskou pomoc.

UPOZORNĚNÍ
Pokud by byla baterie vyměněna za nesprávný typ, hrozí riziko exploze.
Baterii vyměňujte za stejný typ.

UPOZORNĚNÍ
Hrozí exploze nebo únik hořlavých kapalin nebo plynů.

V prostředí s extrémně vysokou teplotou nebo extrémně nízkým tlakem kvůli hodně vysoké nadmořské výšce to nepoužívejte, neskladujte to v něm, ani to do něj nepřinášejte. Baterii se nepokoušejte spálit, rozbít nebo rozřezat.

D00849

⚠ Ta oznaka je varnostna/opozorilna oznaka.

Baterij ne zaužijte.
Nevanost kemičnih opeklin.
Ta izdelek vsebuje baterijo v obliki kovanca / gumbasto celico.
V primeru zaužitja baterije v obliki kovanca / gumbaste celice, le ta lahko povzroči resne notranje opekline v samo 2 urah in celo smrt.
Nove in uporabljene baterije hranite izven dosega otrok.
Če razdelka za baterijo ne morete zaprete, prenehajte uporabljati izdelek in ga hranite izven dosega otrok.
Če menite, da je bila baterija zaužita ali pa se nahaja v notranjosti kateregakoli dela telesa, nemudoma poiščite zdravniško pomoč.

POZOR
Če baterijo zamenjate z nepravilno vrsto baterije, obstaja tveganje eksplozije.
Baterijo zamenjajte z njej enako baterijo.

POZOR
Tveganje eksplozije ali uhajanja gorljive tekočine ali plina.

Ne uporabljajte / skladiščite / hranite baterije v okolju z izredno visoko temperaturo ali z izredno nizkim tlakom zaradi visoke nadmorske višine.
Uporabljene baterije ne poskušajte zažgati, zdrobiti ali rezati.

⚠ Šis ženklas – tai saugos / įspėjamasis ženklas.

Neprarykite elemento.
Cheminio nudegimo pavojus
Šiame gaminyje yra monetos / sagos formos elementas.
Prarijus monetos / sagos formos elementą, vos per 2 valandas galima patirti sunkių vidinių nudegimų ir mirti.
Naujus ir naudotus elementus laikykite vaikams nepasiekiamoje vietoje.
Jei elementų skyrius tvirtai neužsidaro, nenaudokite gaminio ir laikykite jį vaikams nepasiekiamoje vietoje.
Jei manote, kad elementai galėjo būti praryti arba įkišti į bet kurią kūno dalį, nedelsdami kreipkitės į medicinos įstaigą.

DĖMESIO
Elementą pakeitus netinkamo tipo gaminiu kyla sprogimo pavojus.
Elementą pakeiskite tokio paties tipo gaminiu.

DĖMESIO
Sprogimo arba degaus skysčio ar dujų nuotėkio pavojus.

Nenaudokite / nelaikykite / neatneškite į itin aukštos temperatūros aplinką ar aplinką, kurioje slėgis itin žemas dėl labai didelio aukščio.
Nemėginkite naudotą elementą deginti, traiškyti ar pjaustyti.

D00850

⚠ Šī ir drošības/brīdinājuma atzīme.

Nenorijiet akumulatoru.
Ķīmiska apdeguma risks
Šis produkts satur monētas/pogas elementa akumulatoru.
Monētas/pogas elementa akumulatora norīšanas gadījumā tas var izraisīt nopietnus iekšējus apdegumus 2 stundu laikā un, iespējams, nāvi.
Jaunus un lietotus akumulatorus sargājiet no bērniem.
Ja akumulatora nodalījumu nevar stingri aizvērt, pārtrauciet produkta lietošanu un sargājiet to no bērniem.
Ja domājat, ka akumulators ir norīts vai ievietots kādā ķermeņa atverē, nekavējoties nepieciešama medicīniska palīdzība.

UZMANĪBU
Ievietojot nepareiza veida akumulatoru, pastāv sprādziena risks.
Nomainiet tikai ar tāda paša veida akumulatoriem.

UZMANĪBU
Sprādziena vai uzliesmojoša šķidruma vai gāzes noplūdes risks.

Nelietojiet/neglabājiet/neienesiet vidē, kurā ir ļoti augsta temperatūra vai ārkārtīgi zems spiediens ļoti liela augstuma ietekmē.
Izlietoto akumulatoru nemēģiniet dedzināt, sasmalcināt vai sagriezt.

⚠ Niniejszy znak jest znakiem bezpieczeństwa/ostrzeżenia.

Nie wolno połykać baterii.
Istnieje zagrożenie poparzeniem chemicznym.
Produkt ten zawiera baterię typu guzikowego.
W przypadku połknięcia może ona spowodować poważne poparzenia wewnętrzne w ciągu zaledwie 2 godzin i doprowadzić do śmierci.
Nowe i zużyte baterie należy przechowywać z dala od dzieci.
Jeśli komora baterii nie zamyka się prawidłowo, należy zaprzestać używania produktu i przechowywać go z dala od dzieci.
Jeśli istnieje prawdopodobieństwo, że bateria została połknięta albo znalazła się w inny sposób wewnątrz ciała, należy natychmiast zgłosić się do lekarza.

UWAGA
W przypadku wymiany baterii na baterię nieprawidłowego typu istnieje zagrożenie wybuchem. Wymieniać wyłącznie na baterię takiego samego typu.

UWAGA
Zagrożenie wybuchem lub wyciekiem łatwopalnej cieczy lub gazu.

Nie stosować, nie przechowywać ani nie wprowadzać do środowiska o skrajnie wysokiej temperaturze lub skrajnie niskim ciśnieniu związanym z bardzo dużą wysokością nad poziomem morza. Nie próbować palić, miażdżyć ani ciąć baterii.

D00851

⚠ Þetta merki er öryggis-/viðvörunarmerki.

Gleypið ekki rafhlöðuna.
Hætta á efnabruna
Þessi vara inniheldur flata rafhlöðu.
Ef rafhlaðan er gleypt getur það valdið alvarlegum innvortis brunasárum á innan við 2 klukkutímum, sem getur leitt til dauða.
Geymið nýjar og notaðar rafhlöður þar sem börn ná ekki til.
Ef rafhlöðuhólfið lokast ekki örugglega, skal hætta notkun vörunnar og geyma hana þar sem börn ná ekki til.
Ef grunur leikur á að rafhlöður hafi verið gleyptar eða settar inn í eitthvert líkamsop, skal leita læknishjálpar tafarlaust.

VARÚÐ
Hætta á sprengingu ef rafhlöðunni er skipt út fyrir ranga gerð.
Notið sömu gerð af rafhlöðu þegar skipt er um hana.

VARÚÐ
Hætta á sprengingu eða leka á eldfimum vökva eða gasi.

Má ekki nota/geyma/flytja í umhverfi þar sem er afar hár hiti eða afar lágur loftþrýstingur vegna mikillar hæðar yfir sjávarmáli.
Ekki má reyna að brenna, kremja eða skera í notaða rafhlöðu.

⚠ Dette merket er sikkerhets-/advarselsmerke.

Du må ikke spise batterier.
Fare for kjemisk forbrenning
Dette produktet inneholder et cellebatteri.
Hvis cellebatteriet svelges, kan det forårsake alvorlige interne forbrenninger bare på 2 timer, og kan føre til døden.
Hold nye og brukte batterier utenfor barnas rekkevidde.
Hvis batterirommet ikke lukkes riktig, stopp bruken av produktet og hold det på avstand fra barn.
Hvis du har mistanke om at batteriene er blitt svelget eller kommet inn i kroppen, oppsøk lege umiddelbart.

FORSIKTIG!
Fare for eksplosjon hvis batteriet byttes ut med et feil batteri.
Skift ut batteriet med ett av samme type.

FORSIKTIG!
Fare for eksplosjon eller lekkasje av antennelig væske eller gass.

Bruk ikke/oppbevar ikke under ekstrem temperatur eller ekstremt trykk på grunn av betraktelig høyde over havet.
Forsøk ikke å brenne, knuse eller kappe batteriet.

D00852

– CONTINUED –

⚠ Този знак представлява знак за безопасност/предупреждение.

Не поглъщайте батерията.
Опасност от изгаряне на химикали
Този продукт съдържа кръгла плоска батерия.
Ако кръглата плоска батерия е погълната, тя може да причини тежки вътрешни изгаряния само за 2 часа и може да доведе до смърт.
Пазете новите и използвани батерии далеч от деца.
Ако отделението за батериите не се затваря добре, спрете да използвате продукта и го дръжте далеч от деца.
Ако смятате, че батериите биха могли да бъдат погълнати или поставени в някоя част на тялото, потърсете незабавно медицинска помощ.

ВНИМАНИЕ
Опасност от експлозия, ако батерията е заменена от неправилен тип.
Сменете батерията със същия тип.

ВНИМАНИЕ
Опасност от експлозия или изтичане на запалима течност или газ.

Не използвайте/съхранявайте/въвеждайте в среда с изключително висока температура или изключително ниско налягане поради много високата височина. Не се опитвайте да изгаряте, смачквате или отрязвате използваната батерия.

⚠ Acest marcaj este un marcaj de siguranță/avertizare.

A nu se ingera bateria.
Pericol de arsură chimică
Acest produs conține o baterie tip monedă / nasture.
În cazul înghițirii bateriei tip monedă / nasture, în doar 2 ore se pot produce arsuri interne grave, care pot provoca decesul persoanei.
A nu se lăsa la îndemâna copiilor bateriile noi, precum nici cele uzate.
În cazul în care un compartiment pentru baterii nu se închide corect, întrerupeți utilizarea produsului și nu îl lăsați la îndemâna copiilor.
În cazul înghițirii sau al introducerii bateriei în orice parte a corpului, solicitați imediat îngrijire medicală.

ATENȚIE!
Risc de explozie în cazul înlocuirii bateriei cu una de alt tip.
Înlocuiți bateria cu una de același tip.

ATENȚIE!
Risc de explozie sau de scurgeri de lichide sau gaze inflamabile.

A nu se folosi / depozita / amplasa în medii cu temperaturi extrem de ridicate sau cu presiuni extrem de scăzute generate de altitudinii foarte mari.
A nu se arde, zdrobi sau tăia bateriile uzate.

D00853

⚠ Ovo je sigurnosna oznaka / oznaka upozorenja.

Nemojte gutati bateriju.
Opasnost od kemijskih opeklina
Ovaj proizvod sadržava kovanica-baterije ili gumb-baterije.
Ako se kovanica-baterija ili gumb-baterija proguta, to u roku od samo dva sata može uzrokovati ozbiljne unutarnje opekline te rezultirati smrću.
Nove i upotrijebljene baterije držite dalje od djece.
Ako utor za bateriju nije sigurno zatvoren, prestanite upotrebljavati proizvod i držite ga dalje od djece.
Ako mislite da su baterije možda progutane ili stavljene u bilo koji dio tijela, zatražite hitnu medicinsku pomoć.

OPREZ
Rizik od eksplozije ako se baterija zamijeni neispravnim tipom baterije.
Bateriju zamijenite istim tipom.

OPREZ
Rizik od eksplozije ili istjecanja zapaljive tekućine ili plina.

Nemojte upotrebljavati / pohranjivati / unositi u okruženje iznimno visokih temperatura ili iznimno niskog tlaka zbog vrlo visoke nadmorske visine.
Nemojte pokušavati spaljivati, drobiti ili rezati iskorištenu bateriju.

⚠ Ovo je oznaka za bezbednost/oznaka upozorenja.

Ne gutajte baterije.
Rizik od hemijskih opekotina
Ovaj proizvod sadrži baterije u obliku novčića / dugmeta.
U slučaju gutanja baterije u obliku novčića / dugmeta, može doći do ozbiljnih unutrašnjih opekotina u roku od samo 2 sata, što može dovesti do smrtnog ishoda.
Držite i nove i stare (korišćene) baterije van domašaja dece.
U slučaju da pregrada za baterije ne može da se zatvori na bezbedan način, prestanite da koristite proizvod i odložite ga van domašaja dece.
Ukoliko mislite da je došlo do gutanja baterija ili do njihovog umetanja u bilo koji deo tela, momentalno se obratite lekaru.

OPREZ
Rizik od eksplozije u slučaju zamene baterije drugom baterijom neodgovarajućeg tipa. Zamenite bateriju drugom baterijom istog tipa.

OPREZ
Rizik od eksplozije ili curenja zapaljive tečnosti ili gasa.

Ne koristite / ne odlažite / ne unosite u okruženje sa izuzetno visokim temperaturama ili u okruženje sa izuzetno niskim pritiskom zbog velike nadmorske visine. Ne pokušavajte da zapalite, da zgnječite ili da presečete korišćenu bateriju.

D00854

⚠ Aquesta marca és una marca de seguretat/advertència.

No ingeriu la pila.
Perill de cremades químiques
Aquest producte conté una pila de botó.
Si s'empasseu la pila de botó, aquesta pot causar greus cremades internes en només 2 hores i provocar la mort.
Mantingueu les piles noves i usades lluny de l'abast dels nens.
Si el compartiment de la pila no es tanca de manera segura, deixeu d'utilitzar el producte i allunyeu-lo dels nens.
Si creieu que les piles podrien haver estat empassades o col·locades dins de qualsevol part del cos, busqueu atenció mèdica immediata.

PRECAUCIÓ
Risc d'explosió si la pila se substitueix per una altra d'un tipus incorrecte.
Substituïu la pila per una altra del mateix tipus.

PRECAUCIÓ
Risc d'explosió o fuga de líquids o gasos inflamables.

No la utilitzeu/guardeu/porteu a un entorn de temperatura extremadament alta o amb una pressió extremadament baixa a causa de l'altitud molt elevada.
No intenteu cremar, aixafar o tallar la pila usada.

⚠ Bu bir güvenlik uyarısı/damgasıdır.

Pili yutmayınız.
Kimyasal Yanık Tehlikesi
Bu ürün, düğme / hücre pil içermektedir.
Düğme / hücre pil yutulduğu takdirde, sadece 2 saat içerisinde tehlikeli iç yanıklara neden olabilir ve ölüme yol açabilir.
Yeni ve kullanılmış pilleri çocuklardan uzak tutunuz.
Pil bölmesi güvenli bir şekilde kapanmıyorsa, ürünü kullanmayınız ve çocuklardan uzak tutunuz.
Pillerin yutulmuş veya vücudun içinde herhangi bir yere yerleştirilmiş olduğundan şüphelenirseniz, derhal tıbbi müdahale başvurusunda bulununuz.

DİKKAT
Pil yanlış bir türle değiştirildiği takdirde patlama riski ortaya çıkabilir.
Aynı türde bir pille değiştiriniz.

DİKKAT
Patlama veya yanıcı sıvı ya da gaz sızıntısı riski.

Aşırı yüksek ısı veya çok yüksek rakım sebebiyle aşırı düşük basınç olan ortamlarda kullanmayınız / saklamayınız / bulundurmayınız.
Kullanılmış pilleri yakma, ezme veya kesme girişiminde bulunmayınız.

D00855

⚠ Kjo shenjë është simbol sigurie/paralajmërimi. Mos e përtypni baterinë. Rrezik për Djegie Kimike Ky produkt përmban pole/butona baterie. Nëse poli/butoni gëlltitet, mund të shkaktojë djegie të brendshme të rënda në vetëm dy orë dhe mund të çojë drejt vdekjes. Mbani bateritë e reja dhe të përdorura larg fëmijëve. Nëse ndarja e baterisë nuk mbyllet mirë,, ndërpritni përdorimin e produktit dhe mbajeni larg fëmijëve. Nëse mendoni se bateritë mund të jenë gëlltitur ose vendosur brenda çdo pjese të trupit, kërkoni kujdes të menjëhershëm mjekësor. KUJDES Rrezik shpërthimi nëse bateria zëvendësohet nga një tip tjetër i pasaktë. Zëvendësoni baterinë me të njëjtin tip baterie. KUJDES Rrezik shpërthimi ose rrjedhje të lëngut apo gazit. Mos e përdorni apo ta ruani në mjedis me temperaturë jashtëzakonisht të lartë ose presion jashtëzakonisht të ulët për shkak të lartësisë gjeografike shumë të lartë. Mos u përpiqni të digjni, shtypni ose prisni me mjete baterinë e përdorur.
D00856

Dispose of used batteries according to the local laws.
Käytetyt paristot hävitetään paikallisten säännösten ja määräysten mukaisesti.
Gebruikte batterijen gerecycled in overeenstemming met de plaatselijke voorschriften.
Les batteries utilisées doivent être recyclées selon les lois locales.
Förbrukade batterier återvinns i enlighet med lokala föreskrifter.
De brugte batterier genbruges i overensstemmelse med lokale regler.
Verbrauchte Batterien werden entsprechend den lokalen Rechtsvorschriften entsorgt.
Οι χρησιμοποιημένες μπαταρίες απορρίπτονται σύμφωνα με τους τοπικούς κανονισμούς.
Smaltire le batterie esauste in base alle normative locali vigenti.
Deseche las baterías usadas de acuerdo con la ley local.
As baterias usadas são descartadas de acordo com as leis locais.
Armi l-batteriji qodma skont il-liġijiet lokali.
Kasutatud patareide utiliseerimine toimub vastavalt kohalikule seadusele.
A használt elemek megsemmisétése a helyi jogszabályok értelmében történik.
Použité batérie sa likvidujú podľa miestnych zákonov.
Použité baterie zlikvidujte v souladu s místními předpisy.
Uporabljene baterije odstranite v skladu z lokalnimi predpisi.
Naudotas baterijas utilizuokite pagal vietinius įstatymus.
Izmantotās baterijas utilizē saskaņā ar vietējo likumdošanu.
Zużyte baterie należy utylizować zgodnie z prawem lokalnym.
Fargaðu notuðum rafhlöðum samkvæmt innlendum lögum.
Brukte batterier resirkuleres i henhold til lokale bestemmelser.
Използваните батерии се рециклират в съответствие с местните разпоредби.
Aruncați bateriile uzate în conformitate cu legile locale.
Iskorištene baterije reciklirati u skladu s lokalnim propisima.
Искоришћене батерије одлажите у складу са локалним прописима.
Eliminació de bateries utilitzades d'acord amb les lleis locals.
Kullanılmış piller yerel mevzuata uygun olarak bertaraf edilecektir.
Hidhni bateritë e përdorura sipas ligjeve lokale.
D00908

■ Access Key Fob

Transmitter:

Model: 14AHK

Operation frequency: 433.92 MHz

Maximum output power (ERP): 0.03 mW

Manufacturer: DENSO CORPORATION

Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661, Japan

передавач: модель: 14AHK смугу радіочастот: 433.92 МГц максимальну потужність випромінювання (ERP): 0.03 мВт виробник: DENSO CORPORATION адреса: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661, Japan
D00894

– CONTINUED –

Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
https://www.denso.com/global/en/contact-us/doc/

Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU.
De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
https://www.denso.com/global/en/contact-us/doc/

Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
https://www.denso.com/global/en/contact-us/doc/

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU.
Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
https://www.denso.com/global/en/contact-us/doc/

D00920

Hermed erklærer DENSO CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.
EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
https://www.denso.com/global/en/contact-us/doc/

Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
https://www.denso.com/global/en/contact-us/doc/

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.
Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
https://www.denso.com/global/en/contact-us/doc/

Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE.
Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
https://www.denso.com/global/en/contact-us/doc/

Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE.
El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
https://www.denso.com/global/en/contact-us/doc/

D00921

O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE.
O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
https://www.denso.com/global/en/contact-us/doc/

B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE.
It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
https://www.denso.com/global/en/contact-us/doc/

Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele.
ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.
Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
https://www.denso.com/global/en/contact-us/doc/

D00922

Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
https://www.denso.com/global/en/contact-us/doc/

Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
https://www.denso.com/global/en/contact-us/doc/

Ar šo DENSO CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE.
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
https://www.denso.com/global/en/contact-us/doc/

D00923

Hér með lýsir DENSO CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.
Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:
https://www.denso.com/global/en/contact-us/doc/

С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC.
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
https://www.denso.com/global/en/contact-us/doc/

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE.
Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU.
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
https://www.denso.com/global/en/contact-us/doc/

D00924

Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU.
Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси:
https://www.denso.com/global/en/contact-us/doc/

Amb aquest document, DENSO CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE.
El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet:
https://www.denso.com/global/en/contact-us/doc/

İşbu belge; DENSO CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder.
AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur:
https://www.denso.com/global/en/contact-us/doc/

Me anë të kësaj deklaratë, subjekti DENSO CORPORATION deklaron se pajisjet radio është në përputhje me këtë rregull teknik për pajisjet radio dhe fundore të komunikimeve elektronike.
Teksti i plotë i Deklaratës së Konformitetit është i disponueshëm në adresën e mëposhtme të internetit:
https://www.denso.com/global/en/contact-us/doc/

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Reglementarea tehnică „Punerea la dispoziție pe piață a echipamentelor radio".
Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:
https://www.denso.com/global/en/contact-us/doc/

D01178

– CONTINUED –

справжнім DENSO CORPORATION заявляє, що тип радіообладнання відповідає Технічному регламенту радіообладнання;
повний текст декларації про відповідність доступний на веб-сайті за такою адресою:
https://www.denso.com/global/en/contact-us/doc/

CE The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:
https://www.denso.com/global/en/contact-us/doc/

D00926

■ Immobilizer

Hereby, SUBARU CORPORATION declares that the radio equipment type SSPIMB03 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
http://www.tokai-rika.co.jp/pc

Frequency band: 119 - 135 kHz
Maximum radio-frequency power: 55 dBμA/m @10m

SUBARU CORPORATION vakuuttaa, että radiolaitetyyppi SSPIMB03 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://www.tokai-rika.co.jp/pc

Radiotaajuus: 119 - 135 kHz
suurin mahdollinen lähetysteho: 55 dBμA/m @10m

Hierbij verklaar ik, SUBARU CORPORATION, dat het type radioapparatuur SSPIMB03 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
http://www.tokai-rika.co.jp/pc

Frequentieband: 119 - 135 kHz
Maximaal radiofrequentievermogen: 55 dBμA/m @10m

Le soussigné, SUBARU CORPORATION, déclare que l'équipement radioélectrique du type SSPIMB03 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.tokai-rika.co.jp/pc

Bande de fréquences: 119 - 135 kHz
Puissance de radiofréquence maximale: 55 dBμA/m @10m

Härmed försäkrar SUBARU CORPORATION att denna typ av radioutrustning SSPIMB03 överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
http://www.tokai-rika.co.jp/pc

Frekvensband: 119 - 135 kHz
Maximal radiofrekvenseffekt: 55 dBμA/m @10m

D01152

Hermed erklærer SUBARU CORPORATION, at radioudstyrstypen SSPIMB03 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
http://www.tokai-rika.co.jp/pc

Frekvensbånd: 119 - 135 kHz
Maksimal radiofrekvenseffekt: 55 dBμA/m @10m

Hiermit erklärt SUBARU CORPORATION, dass der Funkanlagentyp SSPIMB03 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
http://www.tokai-rika.co.jp/pc

Frequenzband: 119 - 135 kHz
Abgestrahlte maximale Sendeleistung: 55 dBμA/m @10m

Με την παρούσα ο/η SUBARU CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός SSPIMB03 πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
http://www.tokai-rika.co.jp/pc

Ζώνη συχνοτήτων: 119 - 135 kHz
Μέγιστη ισχύς ραδιοσυχνότητας: 55 dBμA/m @10m

Il fabbricante, SUBARU CORPORATION, dichiara che il tipo di apparecchiatura radio SSPIMB03 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
http://www.tokai-rika.co.jp/pc

Banda di frequenza: 119 - 135 kHz
Potenza massima radiofrequenza: 55 dBμA/m @10m

Por la presente, SUBARU CORPORATION declara que el tipo de equipo radioeléctrico SSPIMB03 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
http://www.tokai-rika.co.jp/pc

Banda de frecuencia: 119 - 135 kHz
Potencia máxima de radiofrecuencia: 55 dBμA/m @10m

D01153

O(a) abaixo assinado(a) SUBARU CORPORATION declara que o presente tipo de equipamento de rádio SSPIMB03 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
http://www.tokai-rika.co.jp/pc

Banda de frequência: 119 - 135 kHz

Potência máxima de radiofrequências: 55 dBµA/m @10m

B'dan, SUBARU CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju SSPIMB03 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
http://www.tokai-rika.co.jp/pc

Tiċċnisviċ: 119 - 135 kHz

Hámarks útvarpsbylgjutíðni: 55 dBµA/m @10m

Käesolevaga deklareerib SUBARU CORPORATION, et käesolev raadioseadme tüüp SSPIMB03 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
http://www.tokai-rika.co.jp/pc

Sagedusriba: 119 - 135 kHz

Maksimaalne saatevõimsus: 55 dBµA/m @10m

SUBARU CORPORATION igazolja, hogy a SSPIMB03 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
http://www.tokai-rika.co.jp/pc

Frekvenciasáv: 119 - 135 kHz

Maximális jelerősség: 55 dBµA/m @10m

SUBARU CORPORATION týmto vyhlasuje, že rádiové zariadenie typu SSPIMB03 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
http://www.tokai-rika.co.jp/pc

Frekvenčné pásmo: 119 - 135 kHz

Maximálny rádiofrekvenčný výkon: 55 dBµA/m @10m

D01154

Tímto SUBARU CORPORATION prohlašuje, že typ rádiového zařízení SSPIMB03 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
http://www.tokai-rika.co.jp/pc

Kmitočtové pásmo: 119 - 135 kHz

Maximální radiofrekvenční výkon: 55 dBµA/m @10m

SUBARU CORPORATION potrjuje, da je tip radijske opreme SSPIMB03 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
http://www.tokai-rika.co.jp/pc

Frekvenčni pas: 119 - 135 kHz

Največja moč radijske frekvence: 55 dBµA/m @10m

Aš, SUBARU CORPORATION, patvirtinu, kad radijo įrenginių tipas SSPIMB03 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
http://www.tokai-rika.co.jp/pc

Dažnių juosta: 119 - 135 kHz

Didžiausia radijo dažnių galia: 55 dBµA/m @10m

Ar šo SUBARU CORPORATION deklarē, ka radioiekārta SSPIMB03 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
http://www.tokai-rika.co.jp/pc

Frekvenču josla: 119 - 135 kHz

Maksimālā radiofrekvenču jauda: 55 dBµA/m @10m

SUBARU CORPORATION niniejszym oświadcza, że typ urządzenia radiowego SSPIMB03 jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
http://www.tokai-rika.co.jp/pc

Zakres częstotliwości: 119 - 135 kHz

Maksymalna moc częstotliwości radiowej: 55 dBµA/m @10m

D01155

SUBARU CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð SSPIMB03 er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð:
http://www.tokai-rika.co.jp/pc

Tíðnisvið: 119 - 135 kHz

Hámarks útvarpsbylgjutíðni: 55 dBµA/m @10m

SUBARU CORPORATION erklærer herved at radioutstyrtypen SSPIMB03 er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:
http://www.tokai-rika.co.jp/pc

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvenseffekt: 55 dBµA/m @10m

С настоящото SUBARU CORPORATION декларира, че този тип радиосъоръжение SSPIMB03 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
http://www.tokai-rika.co.jp/pc

Радиочестотна лента: 119 - 135 kHz

Максимална радиочестотна мощност: 55 dBµA/m @10m

Prin prezenta, SUBARU CORPORATION declară că tipul de echipamente radio SSPIMB03 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
http://www.tokai-rika.co.jp/pc

Banda de frecvență: 119 - 135 kHz

Puterea maximă de radiofrecvență: 55 dBµA/m @10m

Ovime SUBARU CORPORATION potvrđuje da je radio-oprema tipa SSPIMB03 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:
http://www.tokai-rika.co.jp/pc

Frekvencijski opseg: 119 - 135 kHz

Maksimalna radio-frekvencijska snaga: 55 dBµA/m @10m

D01156

– CONTINUED –

Me anë të këtij dokumenti, SUBARU CORPORATION deklaron se tipi i radiopajisjes SSPIMB03 është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit:
http://www.tokai-rika.co.jp/pc

Brezi i frekuencës: 119 - 135 kHz

Fuqia maksimale e radiofrekuencës: 55 dBμA/m @10m

SUBARU CORPORATION ovime izjavljuje da je radijska oprema tipa SSPIMB03 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
http://www.tokai-rika.co.jp/pc

Frekvencijski pojas: 119 - 135 kHz

Maksimalna RF snaga: 55 dBμA/m @10m

Ovim SUBARU CORPORATION potvrđuje da je radio-oprema tipa SSPIMB03 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:
http://www.tokai-rika.co.jp/pc

Frekventni opseg: 119 - 135 kHz

Maksimalna radio-frekventna snaga: 55 dBμA/m @10m

SUBARU CORPORATION, işbu belgeyle telsiz cihazı türünün SSPIMB03 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:
http://www.tokai-rika.co.jp/pc

Frekans bandı: 119 - 135 kHz

Maksimum radyo frekans gücü: 55 dBμA/m @10m

D01157

CE

Address: 1-1, Subaru-cho, Ota-shi, Gunma 373-8555 JAPAN

D01158

■ TPMS Transmitter

- Manufacturer's name: PACIFIC INDUSTRIAL CO., LTD.
- Registered trademark: PACIFIC

This trademark is registered in the following countries:
UK, Italy, Austria, Greece, Germany, France, Belgium, the Netherlands, Luxembourg, Portugal.

- Manufacturer's address:
1300-1 Yokoi, Godo-cho, Anpachi-gun, Gifu, 503-2397 JAPAN
- Operating frequency band: 433.05 — 434.79MHz

Hereby, PACIFIC INDUSTRIAL CO., LTD. declares that the radio equipment type PMV-E100 is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

D01142

PACIFIC INDUSTRIAL CO., LTD. vakuuttaa, että radiolaitetyyppi PMV-E100 on direktiivin 2014/53/EU mukainen.
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hierbij verklaar ik, PACIFIC INDUSTRIAL CO., LTD., dat het type radioapparatuur PMV-E100 conform is met Richtlijn 2014/53/EU.
De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Le soussigné, PACIFIC INDUSTRIAL CO., LTD., déclare que l' équipement radioélectrique du type PMV-E100 est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Härmed försäkrar PACIFIC INDUSTRIAL CO., LTD. att denna typ av radioutrustning PMV-E100
överensstämmer med direktiv 2014/53/EU.
Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hermed erklærer PACIFIC INDUSTRIAL CO., LTD., at radioudstyrstypen PMV-E100 er i
overensstemmelse med direktiv 2014/53/EU.
EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

D01143

Hiermit erklärt PACIFIC INDUSTRIAL CO., LTD., dass der Funkanlagentyp PMV-E100 der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Με την παρούσα ο/η PACIFIC INDUSTRIAL CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός PMV-E100 πληροί την οδηγία 2014/53/ΕΕ.Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Il fabbricante, PACIFIC INDUSTRIAL CO., LTD., dichiara che il tipo di apparecchiatura radio PMV-E100 è conforme alla direttiva 2014/53/UE.
Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Por la presente, PACIFIC INDUSTRIAL CO., LTD. declara que el tipo de equipo radioeléctrico PMV-E100 es conforme con la Directiva 2014/53/UE.
El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

D01144

O(a) abaixo assinado(a) PACIFIC INDUSTRIAL CO., LTD. declara que o presente tipo de equipamento de rádio PMV-E100 está em conformidade com a Diretiva 2014/53/UE.
O texto integral da declaração de conformidade está disponí vel no seguinte endereço de Internet:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

B'dan, PACIFIC INDUSTRIAL CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju PMV-E100 huwa konformi mad-Direttiva 2014/53/UE.
It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Käesolevaga deklareerib PACIFIC INDUSTRIAL CO., LTD., et käesolev raadioseadme tüüp PMV-E100 vastab direktiivi 2014/53/EL nõuetele.
ELi vastavusdeklaratsiooni täielik tekst on kättesaadav jä rgmisel internetiaadressil:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. igazolja, hogy a PMV-E100 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.
Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a kö vetkező internetes címen:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu PMV-E100 je
v súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

D01145

– CONTINUED –

Tímto PACIFIC INDUSTRIAL CO., LTD. prohlašuje, že typ rádiového zařízení PMV-E100 je v souladu se směrnicí 2014/53/EU.
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. potrjuje, da je tip radijske opreme PMV-E100 skladen z Direktivo 2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Aš, PACIFIC INDUSTRIAL CO., LTD., patvirtinu, kad radijo įrenginių tipas PMV-E100 atitinka Direktyvą 2014/53/ES.
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Ar šo PACIFIC INDUSTRIAL CO., LTD. deklarē, ka radioiekārta PMV-E100 atbilst Direktīvai 2014/53/ES.
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego PMV-E100 jest zgodny z dyrektywą 2014/53/UE.
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

D01146

PACIFIC INDUSTRIAL CO., LTD. erklærer at PMV-E100 er i overensstemmelse med direktiv 2014/53/EU.
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

С настоящото PACIFIC INDUSTRIAL CO., LTD. декларира, че този тип радиосъоръжение PMV-E100 е в съответствие с Директива 2014/53/ЕС.
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

D01147

■ Subaru Rear Vehicle Detection (SRVD)

	ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany

ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ	С настоящото ADC Automotive Distance Control Systems GmbH декларира, че този тип радиосъоръжение SRR 3-A е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://continental.automotive-approvals.com/
	радиочестотната лента или ленти, в която или които работи радиосъоръжението: 24.05–24.25 GHz
	максималната радиочестотна мощност, излъчвана в радиочестотната лента или ленти, в която или които работи радиосъоръжението.: 100mW (20 dBm) Peak EIRP

DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA	Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico SRR 3-A es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://continental.automotive-approvals.com/
	Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 24.05–24.25 GHz
	Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 100mW (20 dBm) Peak EIRP

ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ	Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádiového zařízení SRR 3-A je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://continental.automotive-approvals.com/
	Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje: 24.05–24.25 GHz
	Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových pásmech), v němž (v nichž) je rádiové zařízení provozováno: 100mW (20 dBm) Peak EIRP

FORENKLET EU-OVERENSSTEMMELSESERKLÆRING	Hermed erklærer ADC Automotive Distance Control Systems GmbH, at radioudstyrstypen SRR 3-A er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://continental.automotive-approvals.com/
	Frekvensbånd, som radioudstyret fungerer på: 24.05–24.25 GHz
	Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på: 100mW (20 dBm) Peak EIRP

VEREINFACHTE EU-KONFORMITÄTSERKLÄRUNG	Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der Funkanlagentyp SRR 3-A der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://continental.automotive-approvals.com/
	Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage betrieben wird: 24.05–24.25 GHz
	Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung: 100mW (20 dBm) Peak EIRP

D01162

– CONTINUED –

LIHTSUSTATUD ELI VASTAVUSDEKLARATSIOON	Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev raadioseadme tüüp SRR 3-A vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://continental.automotive-approvals.com/
	Sagedusriba(d), millel raadioseade töötab: 24.05–24.25 GHz
	Raadioseadme töösagedus(t)el edastatav maksimaalne saatevõimsus: 100mW (20 dBm) Peak EIRP

ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ	Με την παρούσα ο/η ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεξοπλισμός SRR 3-A πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://continental.automotive-approvals.com/
	Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 24.05–24.25 GHz
	η μέγιστη ραδιοηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 100mW (20 dBm) Peak EIRP

SIMPLIFIED EU DECLARATION OF CONFORMITY	Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type SRR 3-A is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://continental.automotive-approvals.com/
	Frequency band(s) in which the radio equipment operates: 24.05–24.25 GHz
	Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates:
	100mW (20 dBm) Peak EIRP

DECLARATION UE DE CONFORMITE SIMPLIFIEE	Le soussigné, ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radioélectrique du type SRR 3-A est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://continental.automotive-approvals.com/
	Bandes de fréquences utilisées par l'équipement radioélectrique: 24.05–24.25 GHz
	Puissance de radiofréquence maximale transmise sur les bandes de fréquences utilisées par l'équipement radioélectrique: 100mW (20 dBm) Peak EIRP

POJEDNOSTAVLJENA EU IZJAVA O SUKLADNOSTI	ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa SRR 3-A u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:: http://continental.automotive-approvals.com/
	Frekvencijski pojas (frekvencijski pojasi) u kojem (kojima) radijska oprema radi: 24.05–24.25 GHz
	Najveća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasima) u kojem (kojima) radijska oprema radi: 100mW (20 dBm) Peak EIRP

DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA	Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio SRR 3-A è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://continental.automotive-approvals.com/
	Bande di frequenza di funzionamento dell'apparecchiatura radio: 24.05–24.25 GHz
	Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio: 100mW (20 dBm) Peak EIRP

D01163

VIENKARSOTA ES ATBILSTĪBAS DEKLARĀCIJA	Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārta SRR 3-A atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://continental.automotive-approvals.com/
	Frekvenču joslu(-as), kurā(-ās) radioiekārtas darbojas: 24.05–24.25 GHz
	Frekvenču joslā(-ās), kurā(-ās) darbojas radioiekārtas, maksimālo pārraidītā signāla jaudu.: 100mW (20 dBm) Peak EIRP

SUPAPRASTINTA ES ATITIKTIES DEKLARACIJA	Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radijo įrenginių tipas SRR 3-A atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://continental.automotive-approvals.com/
	Dažnių juosta (-os), kurioje (-iose) veikia radijo įrenginiai: 24.05–24.25 GHz
	Didžiausia radijo dažnių galia, perduodama toje (tose) dažnių juostoje (-ose), kurioje (-iose) veikia radijo įrenginiai: 100mW (20 dBm) Peak EIRP

EGYSZERUSITETT EU-MEGFELELŐSÉGI NYILATKOZAT	ADC Automotive Distance Control Systems GmbH igazolja, hogy a SRR 3-A típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:: http://continental.automotive-approvals.com/
	Az(ok) a frekvenciasáv(ok), amely(ek)en a rádióberendezés működik: 24.05–24.25 GHz
	Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított maximális jelerősség, amely(ek)ben a rádióberendezés üzemel: 100mW (20 dBm) Peak EIRP

DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TAL-UE	B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju SRR 3-A huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://continental.automotive-approvals.com/
	Il-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 24.05–24.25 GHz
	Il-potenza massima tal-frekwenza tar-radju trażmessa fil-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar- radju: 100mW (20 dBm) Peak EIRP

VEREENVOUDIGDE EU-CONFORMITEITSVERKLARING	Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur SRR 3-A conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental.automotive-approvals.com/
	Frequentieband(en) waarin de radioapparatuur functioneert: 24.05–24.25 GHz
	Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 100mW (20 dBm) Peak EIRP

UPROSZCZONA DEKLARACJA ZGODNOŚCI UE	ADC Automotive Distance Control Systems GmbH niniejszym oświadcza, że typ urządzenia radiowego SRR 3-A jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://continental.automotive-approvals.com/
	Zakresu(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 24.05–24.25 GHz
	Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotliwości, w którym (których) pracuje urządzenie radiowe: 100mW (20 dBm) Peak EIRP

D01164

– CONTINUED –

DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA	O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio SRR 3-A está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://continental.automotive-approvals.com/
	A(s) banda(s) de frequências em que o equipamento de rádio funciona: 24.05–24.25 GHz
	A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 100mW (20 dBm) Peak EIRP

DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ	Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio SRR 3-A este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://continental.automotive-approvals.com/
	Banda (benzile) de frecvențe în care funcționează echipamentul radio: 24.05–24.25 GHz
	Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 100mW (20 dBm) Peak EIRP

ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE	ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rádiové zariadenie typu SRR 3-A je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://continental.automotive-approvals.com/
	Frekvenčné pásmo resp. pásma, v ktorých rádiové zariadenie pracuje: 24.05–24.25 GHz
	Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádiové zariadenie pracuje: 100mW (20 dBm) Peak EIRP

POENOSTAVLJENA IZJAVA EU O SKLADNOSTI	ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme SRR 3-A skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://continental.automotive-approvals.com/
	Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 24.05–24.25 GHz
	Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali pasovih, na katerih radijska oprema deluje: 100mW (20 dBm) Peak EIRP

YKSINKERTAISTET TU EU-	ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyyppi SRR 3-A on direktiivin 2014/53/EU mukainen. EU-
VAATIMUSTENMUKAISUUSVAKUUTUS	vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://continental.automotive-approvals.com/
	Radiotaajuudet, joilla radiolaite toimii: 24.05–24.25 GHz
	Suurin mahdollinen lähetysteho radiotaajuuksilla, joilla radiolaite toimii: 100mW (20 dBm) Peak EIRP

FÖRENKLAD EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE	Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning SRR 3-A överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://continental.automotive-approvals.com/
	Det eller de frekvensband där radioutrustningen arbetar: 24.05–24.25 GHz
	Den maximala radiofrekvenseffekt som överförs inom det eller de frekvensband där radioutrustningen arbetar: 100mW (20 dBm) Peak EIRP

D01165

EINFÖLDUÐ ESB SAMRÆMISYFIRLÝSING	Hér með lýsir ADC Automotive Distance Control Systems GmbH því yfir, að fjarskiptabúnaðurinn að gerð SRR 3-A er í samræmi við tilskipun 2014/53/ ESB. Textinn í fullri lengd um Samræmisyfirlýsingu ESB er aðgengilegur á eftirfarandi veffangi: http://continental.automotive-approvals.com/
	Bandbreidd(ir), sem fjarskiptabúnaðurinn starfar í: 24.05–24.25 GHz
	Hámarks fjarskiptatíðni sendistyrkleika í bandbreiddinni/bandbreiddunum sem fjarskiptabúnaðurinn starfar í: 100mW (20 dBm) Peak EIRP

BASİTLEŞTİRİLMİŞ AB UYGUNLUK BEYANI	İşbu belge ile, ADC Automotive Distance Control Systems GmbH şirketi SRR 3-A tipi radyo ekipmanının 2014/53/AB sayılı direktife uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki İnternet adresinde mevcuttur: http://continental.automotive-approvals.com/
	Radyo cihazının çalıştığı frekans bandı/bantları: 24.05–24.25 GHz
	Radyo ekipmanının çalıştığı frekans bandında/bantlarında iletilen maksimum radyo frekansı gücü: 100mW (20 dBm) Peak EIRP

СПРОЩЕНА ДЕКЛАРАЦІЯ ЄС ПРО ВІДПОВІДНІСТЬ	Цим ADC Automotive Distance Control Systems GmbH заявляє, що радіообладнання типу SRR3-A відповідає вимогам Директиви 2014/53/EU. Повний текст декларації ЄС про відповідність доступний за наступною адресою в мережі Інтернет: http://continental.automotive-approvals.com/
	Частотний діапазон(-и), в якому працює радіообладнання: 24.05–24.25 ГГц
	Максимальна потужність радіочастотного сигналу, що передається у частотному діапазоні(-ах), в якому працює радіообладнання: 100 мВт (20 дБм) Пікова ефективна потужність випромінювання

D01166

■ TPMS Receiver

EU

Receiver: Model: 23ABD

Manufacturer: DENSO CORPORATION
Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661
Japan

00

D01132

– CONTINUED –

Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
https://www.denso.com/global/en/contact-us/doc/

Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU.
De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
https://www.denso.com/global/en/contact-us/doc/

Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
https://www.denso.com/global/en/contact-us/doc/

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU.
Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
https://www.denso.com/global/en/contact-us/doc/

D01133

Hermed erklærer DENSO CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.
EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
https://www.denso.com/global/en/contact-us/doc/

Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
https://www.denso.com/global/en/contact-us/doc/

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.
Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
https://www.denso.com/global/en/contact-us/doc/

Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE.
Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
https://www.denso.com/global/en/contact-us/doc/

Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE.
El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
https://www.denso.com/global/en/contact-us/doc/

D01134

O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE.
O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
https://www.denso.com/global/en/contact-us/doc/

B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE.
It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
https://www.denso.com/global/en/contact-us/doc/

Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele.
ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.
Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
https://www.denso.com/global/en/contact-us/doc/

D01135

Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
https://www.denso.com/global/en/contact-us/doc/

Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
https://www.denso.com/global/en/contact-us/doc/

Ar šo DENSO CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE.
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
https://www.denso.com/global/en/contact-us/doc/

D01136

Hér með lýsir DENSO CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.
Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:
https://www.denso.com/global/en/contact-us/doc/

С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC.
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
https://www.denso.com/global/en/contact-us/doc/

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE.
Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU.
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
https://www.denso.com/global/en/contact-us/doc/

D01137

Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU.
Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси:
https://www.denso.com/global/en/contact-us/doc/

Amb aquest document, DENSO CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE.
El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet:
https://www.denso.com/global/en/contact-us/doc/

İşbu belge; DENSO CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder.
AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur:
https://www.denso.com/global/en/contact-us/doc/

D01138

– CONTINUED –

Nepermjet kesaj, DENSO CORPORATION, deklaroj qe ky
23ABD eshte ne pajtim me kerkesat thelbesore
dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.

AL

00

CE The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:
https://www.denso.com/global/en/contact-us/doc/

EU

02

D01141

■ LF Oscillator

Model: SU19S-3
Operation frequency: 134.2 kHz
Maximum output power (ERP): 6.195 mW
Manufacturer: SUBARU CORPORATION
Address: 1-1, Subaru-cho, Ota-shi, Gunma-ken, 373-8555, Japan

Hereby, SUBARU CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
https://www.denso.com/global/en/contact-us/doc/

SUBARU CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.
EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
https://www.denso.com/global/en/contact-us/doc/

Hierbij verklaar ik, SUBARU CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU.
De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
https://www.denso.com/global/en/contact-us/doc/

Le soussigné, SUBARU CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
https://www.denso.com/global/en/contact-us/doc/

Härmed försäkrar SUBARU CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU.
Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
https://www.denso.com/global/en/contact-us/doc/

D01074

Hermed erklærer SUBARU CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.
EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
https://www.denso.com/global/en/contact-us/doc/

Hiermit erklärt SUBARU CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
https://www.denso.com/global/en/contact-us/doc/

Με την παρούσα ο/η SUBARU CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.
Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
https://www.denso.com/global/en/contact-us/doc/

Il fabbricante, SUBARU CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE.
Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
https://www.denso.com/global/en/contact-us/doc/

Por la presente, SUBARU CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE.
El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
https://www.denso.com/global/en/contact-us/doc/

D01075

O(a) abaixo assinado(a) SUBARU CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE.
O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
https://www.denso.com/global/en/contact-us/doc/

B'dan, SUBARU CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE.
It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
https://www.denso.com/global/en/contact-us/doc/

Käesolevaga deklareerib SUBARU CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele.
ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
https://www.denso.com/global/en/contact-us/doc/

SUBARU CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.
Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
https://www.denso.com/global/en/contact-us/doc/

SUBARU CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
https://www.denso.com/global/en/contact-us/doc/

D01076

– CONTINUED –

Tímto SUBARU CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
https://www.denso.com/global/en/contact-us/doc/

SUBARU CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
https://www.denso.com/global/en/contact-us/doc/

Aš, SUBARU CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.
Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
https://www.denso.com/global/en/contact-us/doc/

Ar šo SUBARU CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
https://www.denso.com/global/en/contact-us/doc/

SUBARU CORPORATION niniejszym oświadcza, że typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE.
Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
https://www.denso.com/global/en/contact-us/doc/

D01077

Hér með lýsir SUBARU CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.
Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:
https://www.denso.com/global/en/contact-us/doc/

SUBARU CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.
Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:
https://www.denso.com/global/en/contact-us/doc/

С настоящото SUBARU CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC.
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
https://www.denso.com/global/en/contact-us/doc/

Prin prezenta, SUBARU CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE.
Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
https://www.denso.com/global/en/contact-us/doc/

SUBARU CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU.
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
https://www.denso.com/global/en/contact-us/doc/

D01078

Овиме, SUBARU CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU.
Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси:
https://www.denso.com/global/en/contact-us/doc/

Amb aquest document, SUBARU CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE.
El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet:
https://www.denso.com/global/en/contact-us/doc/

İşbu belge; SUBARU CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder.
AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur:
https://www.denso.com/global/en/contact-us/doc/

Me anë të kësaj deklaratë, subjekti SUBARU CORPORATION deklaron se pajisjet radio është në përputhje me këtë rregull teknik për pajisjet radio dhe fundore të komunikimeve elektronike.
Teksti i plotë i Deklaratës së Konformitetit është i disponueshëm në adresën e mëposhtme të internetit:
https://www.denso.com/global/en/contact-us/doc

D01079

передавач: модель: SU19S-3
смугу радіочастот: 134.2 кГц
максимальну потужність
випромінювання (ERP): 6.195мВт
виробник: SUBARU CORPORATION
адреса: 1-1, Subaru-cho, Ota-shi, Gunma-ken, 373-8555, Japan


справжнім SUBARU CORPORATION заявляє, що тип радіообладнання відповідає Технічному регламенту радіообладнання;
повний текст декларації про відповідність доступний на веб-сайті за такою адресою:
https://www.denso.com/global/en/contact-us/doc/

D01080


13-7. Technical information

■ Singapore models


▼ Access key fob

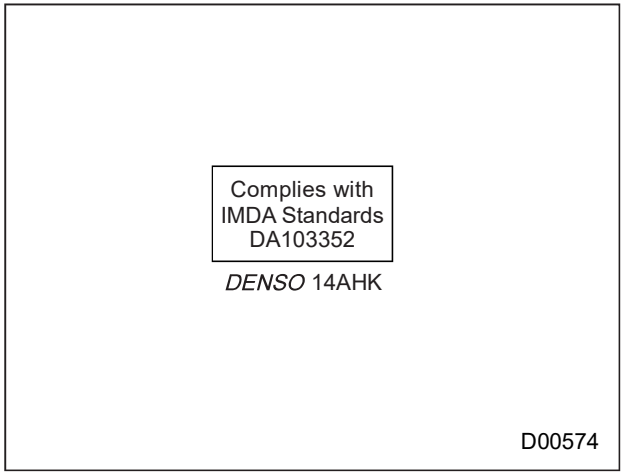

▼ Immobilizer

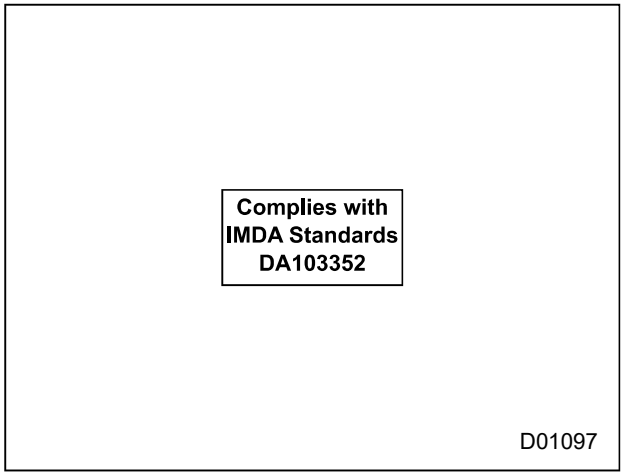


▼ Subaru Rear Vehicle Detection (SRVD)

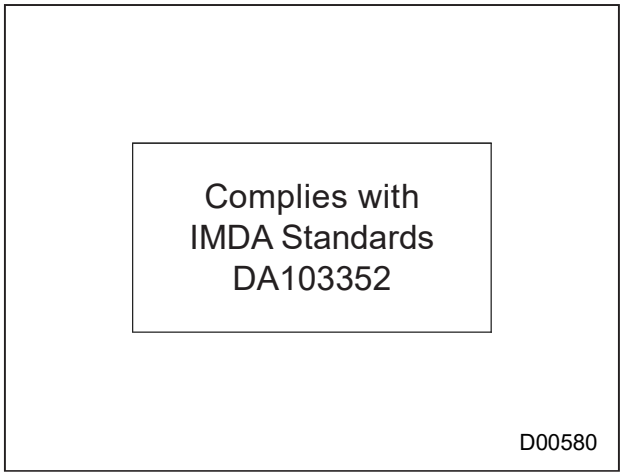

■ Indonesia models


▼ Subaru Rear Vehicle Detection (SRVD)

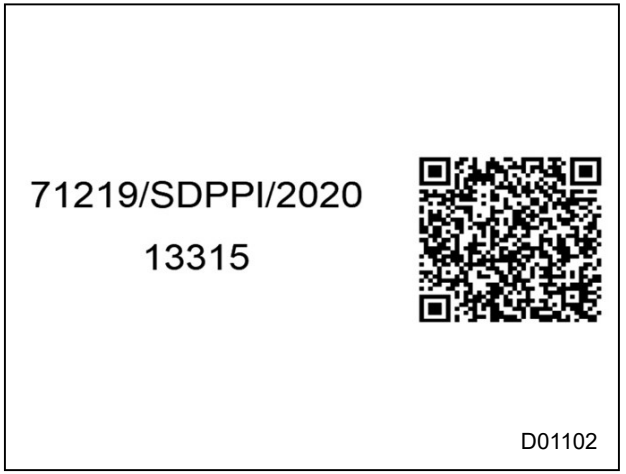

– CONTINUED –


■ Vietnam models

▼ Subaru Rear Vehicle Detection (SRVD)

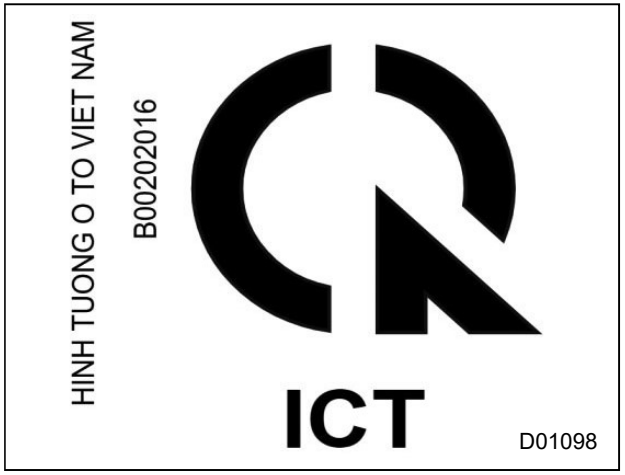


D01098

▼ Access key fob

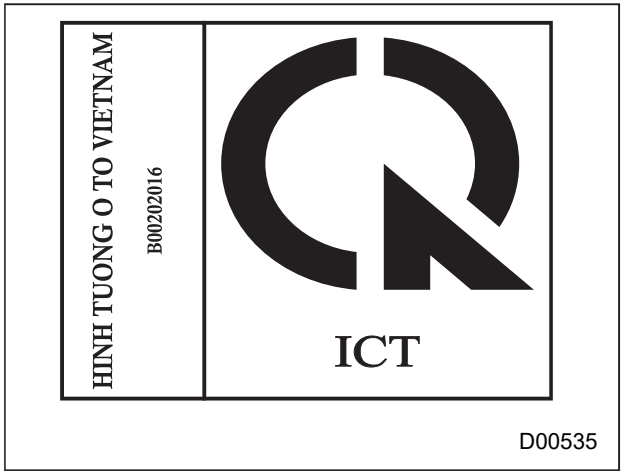


D00535

▼ Keyless access with push-button start system

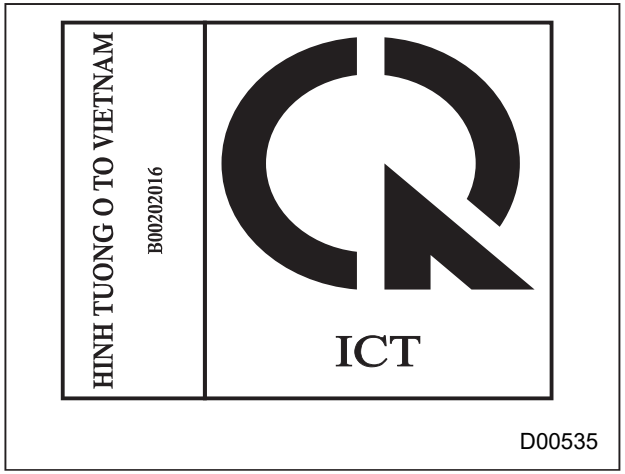

D00535

▼ Immobilizer

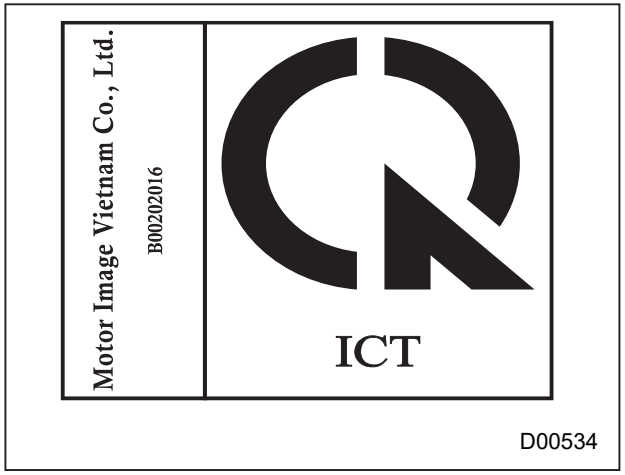

D00534

■ Philippine models

▼ Subaru Rear Vehicle Detection (SRVD)



D00730

■ Taiwan models

▼ Access key fob

TW

取得審驗證明之低功率射頻器材，非經核准，公司、
商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
低功率射頻器材之使用不得影響飛航安全及干擾合法通信；
經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前述合法通信，指依電信管理法規定作業之無線電通信。
低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機
設備之干擾。

00

D01150

▼ Keyless access with push-button start system

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均
不得擅自變更頻率、加大功率或變更原設計之特性及功能。
低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有
干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前述合法通信，指依電信管理法規定作業之無線電通信。
低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電
機設備之干擾。

D01151

▼ Immobilizer

第十二條
經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條
低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前項合法通信，指依電信法規定作業之無線電通信。
低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

500631

▼ Tire pressure monitoring system

第十二條
經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條
低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前項合法通信，指依電信法規定作業之無線電通信。
低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

500631

– CONTINUED –

▼ Active sound control

限用物質含有情況標示

設備名稱： 主動聲音控制 型號（型式）：EAAE1115N0
Equipment name：Active Sound Control Type designation (Type)：EAAE1115N0

單元Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr^{+6})	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
外殼	○	○	○	○	○	○
散熱片	○	○	○	○	○	○
螺絲	○	○	○	○	○	○
電路板	○	○	○	○	○	○
連接器	—	○	○	○	○	○
電子元件	—	○	○	○	○	○

備考1.〝超出0.1 wt %〞及〝超出0.01 wt %〞係指限用物質之百分比含量超出百分比含量基準值。
Note1：“Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2.〝○〞係指該項限用物質之百分比含量未超出百分比含量基準值。
Note2：“○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3.〝—〞係指該項限用物質為排除項目。
Note3：The “—” indicates that the restricted substance corresponds to the exemption.

D01101

▼ Subaru Rear Vehicle Detection (SRVD)

取得審驗證明之低功率射頻器材，非經核准，公司、
商號或使用者均不得擅自變更頻率、
加大功率或變更原設計之特性及功能。
低功率射頻器材之使用不得影響飛航安全及干擾合法通信；
經發現有干擾現象時，應立即停用，
並改善至無干擾時方得繼續使用。前述合法通信，
指依電信管理法規定作業之無線電通信。
低功率射頻器材須忍受合法通信或工業、
科學及醫療用電波輻射性電機設備之干擾。

D01118

■ Republic of South Africa models

▼ Access key fob

ICASA TA - 2015/661 Approved

D00464

▼ Subaru Rear Vehicle Detection (SRVD)

ICASA TA - 2014/2260 APPROVED

D00805

■ Bahrain models

▼ Subaru Rear Vehicle Detection (SRVD)

The Equipment Identified hereon is approved for use under the following rules.

1. This equipment must not cause harmful interference to other service.
2. This equipment is subject to harmful interference, and the owner of this equipment must not claim for protection.

■ Australia/New Zealand models

▼ Subaru Rear Vehicle Detection (SRVD)



D00804

■ Israel models

▼ Subaru Rear Vehicle Detection (SRVD)

חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.

D01199

– CONTINUED –

▼ Tire pressure monitoring system

▽ Transmitter

"מספר אישור התאמה מטעם משרד התקשורת:" – 55-06185

"חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.";

D01201

▽ Receiver

חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.

סימן רשום	DENSO:
שנת ייצור	ראה מוצר:
מוצר : מערכת ניטור לחץ צמיגים (מקלט)	
דגם	23ABD :
ארץ ייצור	יפן :

00 IL

06

IL: 55-10502

D01200

▼ Access key fob

סימן רשום	DENSO:
שנת ייצור	ראה מוצר:
מוצר : מפתח אלאקטרוני	
דגם	14AHK :
ארץ ייצור	יפן :

00 IL

04

D01202

▼ Keyless access with push-button start system

מוצר : שלט רחוק כולל לחצן הפעלה למערכת
סימן רשום : SUBARU
ארץ ייצור : ראה מוצר
דגם : SU19S-3
שנת ייצור : ראה מוצר

IL : 55-10863

חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.

D01203

▼ Immobilizer

מספר אישור רדיו ממשרד התקשורת : 51-86488

"חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.";

D01232

■ UAE models

▼ Tire pressure monitoring system

TRA
REGISTERED No:
ER58534/17

DEALER No:
DA0063612/11

D01100

■ Thailand Models

▼ Subaru Rear Vehicle Detection (SRVD)

1) เครื่องโทรคมนาคมและอุปกรณ์นี้ มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดของ กสทช.

2) เครื่องวิทยุคมนาคมนี้มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้องตามมาตรฐานความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้เครื่องวิทยุคมนาคมที่คณะกรรมการกิจการโทรคมนาคมแห่งชาติประกาศกำหนด

ZOM0936

– CONTINUED –

■ Importer Information

United Kingdom	Subaru (UK) Ltd	The Gate, International Drive, Solihull, B90 4WA, United Kingdom
Ireland	I.M. Automotive Ltd	IM House, NVD Complex, Browns Barn, Baldonnell, Co. Dublin, D22 AV20
Netherlands	N.V. Subaru Benelux	Zwarteweg 88, 1431 VM AALSMEER, THE NETHERLANDS
Belgium	N.V. Subaru Benelux	Leuvensesteenweg 555 B/1, 1930 Zaventem, Belgium
Luxembourg	N.V. Subaru Benelux	Leuvensesteenweg 555 B/1, 1930 Zaventem, Belgium
France	SUBARU FRANCE S.A.S.	P.A. Les Béthunes, 1 Avenue du Fief, BP 10432 - St-Ouen-l'Aumône, 95005 Cergy-Pontoise Cedex
Andorra	SUBARU FRANCE S.A.S.	P.A. Les Béthunes, 1 Avenue du Fief, BP 10432 - St-Ouen-l'Aumône, 95005 Cergy-Pontoise Cedex
Sweden	Subaru Nordic AB	Starrvägen 15 232 61 ARLÖV, Sweden
Denmark	Subaru Nordic AB	Starrvägen 15 232 61 ARLÖV, Sweden

D01112

Finland	Subaru Nordic AB	Starrvägen 15 232 61 ARLÖV, Sweden
Germany	SUBARU Deutschland GmbH	Mielestrasse 6, 61169 Friedberg, Germany
Greece	PLEIADES MOTORS SA	286, Kifissias Ave., Chalandri 15232, Greece
Italy	Subaru Italia S. p. A.	20156 MILANO - Via Montefeltro, 6/A, Italia
Canary islands	SUBARU ESPAÑA S.A	Avenida de Bruselas No. 32, 28108 Alcobendas Madrid, Spain
Spain	SUBARU ESPAÑA S.A	Avenida de Bruselas No. 32, 28108 Alcobendas Madrid, Spain
Malta	Liaco Limited	Lia buildings, Triq il-Mosta, Lija LJA9012, Malta
Estonia	Subaru Nordic AB	Starrvägen 15 232 61 ARLÖV, Sweden

D01113

– CONTINUED –

Hungary	Emil Frey Import Kft.	Mogyoródi út 34-40, 1149, Budapest, Hungary
Slovakia	Mikona s.r.o.	Vajnorska 129, 831 04 Bratislava, Slovakia
Czech Republic	SUBARU ČR, s.r.o.	Pekarska 5, 155 00 Prague 5, Czech Republic
Slovenia	Subaru Italia S. p. A.	20156 MILANO - Via Montefeltro, 6/A, Italia
Lithuania	Subaru Nordic AB	Starrvägen 15 232 61 ARLÖV, Sweden
Latvia	Subaru Nordic AB	Starrvägen 15 232 61 ARLÖV, Sweden
Cyprus	A. Stephanides & Son Automotive Ltd.	92 Athalassas Avenue, Strovolos 2024, Nicosia, Cyprus

D01114

Poland	Subaru Import Polska sp. z o.o.	ul. Josepha Conrada 51, 31-357 Kraków, Poland
Iceland	BL ehf.	Sævarhöfða 2 – 110 Reykjavík, Iceland
Norway	Subaru Norge AS	Masteveien 4, Skytta, Kingdom of Norway
Bulgaria	Subaru Italia S. p. A.	20156 MILANO - Via Montefeltro, 6/A, Italia
Montenegro	NC.Kattamis(Serbia Montenegro)Ltd.,	59 Ayiou Nicplaou Str, Engomi, Nicosia, Republic of Cyprus
Croatia	Subaru Italia S. p. A.	20156 MILANO - Via Montefeltro, 6/A, Italia
Austria	Subaru Österreich	Michael-Walz-Gasse 18C 5020 Salzburg
Liechtenstein	SUBARU Schweiz AG	Emil-Frey-Strasse, CH-5745 Safenwil, Schweiz

D01115

– CONTINUED –

Serbia	NC.Kattamis (Serbia Montenegro) Ltd.,	59 Ayiou Nicplaou Str, Engomi, Nicosia, Republic of Cyprus
Turkey	Bayrur Motorlu Vasıtalar Ticaret A.Ş	Boyalı Köşk sok No:4/1 Bebek-BEŞİKTAŞ / İST
Switzerland	SUBARU Schweiz AG	Emil-Frey-Strasse, CH-5745 Safenwil, Schweiz
Tahiti	Royal Automobiles	Avenue George Clemenceau BP20349 Papeete, Tahiti 98713, French Polynesia
New Caledonia	Almameto	BP31280 98895 Noumea Cedex Nouvelle Caledonie
Ukraine	Subaru Ukraine LLC	Esplanadna street 20 KYIV Ukraine 01601
Isle of Man	Subaru (UK) Ltd	The Gate International Drive Solihull B90 4WA, United Kingdom
Channel Islands	Subaru (UK) Ltd	The Gate International Drive Solihull B90 4WA, United Kingdom

D01081

Index

A

Abbreviation P4
ABS (Anti-lock Brake System) P232
  Warning light....P133
Access key
  Warning indicator....P137
Access key fob
  Warning light....P137
Accessories....P366
Accessory power outlet P203
Active sound control....P229
Air cleaner element P343
Air conditioner
  Automatic climate control P188
  Manual climate control system P189
Air filtration system....P194
Airflow mode selection P189
All season tires....P351
Alloy wheel....P359
  Cleaning P321
Antenna
  Roof antenna P198
Anti-lock Brake System (ABS) P232
Ashtray....P205
AT OIL TEMP warning light....P131
Audio
  Antenna system....P198
  Set P198
Audio system-linked display P150
Auto dimmer cancel function P125
Auto on/off headlights.... P168
  Sensor P170
Automatic
  Transmission P222
Automatic climate control operation P188
Automatic headlight beam leveler P175
  Warning light.... P142
Automatic Locking Retractor/Emergency Locking Retractor (ALR/ELR).... P39
Automatic transmission
  Oil temperature warning light (AT OIL TEMP) P131
Average vehicle speed P147

B

Battery
  Drainage prevention function.... P109
  Jump starting P305
  Replacement (access key fob) P369
  Replacement (keyless access with push-button start system) P369
  Vehicle battery P363
Blind Spot Detection (BSD) P256
Booster seat P59
Bottle holder P203
Brake
  Assist P231
  Booster P231, P348

Disc P377
Fluid P347, P375
Pad P349
Parking P243, P350
Pedal P349
System P231
Brake pedal
Free play P349
Reserve distance P349
Brake system P231
Warning light P134
Braking P230
Tips P230
Breaking-in of new brake pads P350
Bulb
Chart P378
Replacing P366

C

Camera
Rear view camera P251
Catalytic converter P277
Center console P202
Center information display (CID) P153
Cleaning P324
Malfunctions of the center information display P316
Changing
Coolant P343
Flat tire P292
Oil and oil filter P340
Charge warning light P131
Checking
Brake pedal free play P349
Brake pedal reserve distance P349
Clutch function P349
Clutch pedal free play P349
Coolant level P342
Fluid level (brake fluid) P347
Fluid level (clutch fluid) P348
Fluid level (washer fluid) P359
Oil level (engine oil) P339
Child restraint systems P45
Installation of a booster seat P59
Installation with ISOFIX anchor bars P60
Installation with seatbelt P55
ISOFIX anchor bars P60
Top tether anchorages P62
Child safety P5
Chime
Light P168
Seatbelt P126, P127
Cleaning
Alloy wheels P321
Center information display P324
Interior P323
Ventilation grille P192
Climate control system P186
Automatic P188

Manual P189
Clock P166
Clutch
Fluid P348, P375
Pedal P349
Combination meter display (color TFT) P145
Audio system-linked display P150
Drive information P146
Driving support system setting display P150
Exclusive content for SUBARU BRZ P148
Navigation system-linked display P149
Settings display P150
Warning message display P152
Console P202
Control switch light P168
Coolant P342, P376
Cooling system P341
Corrosion protection P322
Cruise control P247
Indicator light P142
Set indicator light P142
Cup holder P202

D

Daytime running light (DRL) system P173
Defogger P181
Defrosting P191
Differential gear oil P346, P375
Dimensions P372
Disc brake pad wear warning indicators P232
Door
Locks P108
Open indicator P134
Double trip meter P122
Drive belt P345
Drive information P146
Driving
Car phone/cell phone P8
Drinking P7
Drugs P8
Foreign countries P280
Pets P9
Snowy and icy roads P283
Tips P222, P227, P280
Tired or sleepy P8
Winter P281
Driving distance P147
Driving mode select switch P228
Driving range P146
Driving support system setting display P150
Driving time P147

E

Electrical system P377
Electronic Brake Force Distribution (EBD) system P233
Warning P134
Emergency Locking Retractor (ELR) P39
Engine

Compartment overview P338
Coolant P342, P376
Exhaust gas (carbon monoxide) P7, P276
Hood P336
Hood release knob P336
Oil P339, P373
Overheating P308
Start & stopping P216
Engine oil temperature gauge P146
Exclusive content for SUBARU BRZ P148
Exterior care P320

F

Flat tire P292
Floor mat P206
Fluid level
Automatic transmission P346
Brake P347
Clutch P348
Front
Seatbelt pretensioners P42
Front seats P28
Forward and backward adjustment P31
Head restraint adjustment P32
Manual seat P31
Reclining P31
Seat heater P33
Seat height adjustment (driver's seat) P31
Fuel P211
Economy hints P276
Filler door and cap P212
Filler lid and cap P212
Gauge P123
Requirements P373
Tank capacity P373
Fuel consumption
Average fuel consumption P146
Current fuel consumption P146
Fuses P364

G

Gasoline P211
Gasoline particulate filter P278
Gasoline particulate filter warning light P144
Gear shift indicator P10
G-force P148
G-force (peak hold function) P148
Glove box P202

H

Hazard warning flasher P121, P290
Head restraint adjustment P32
Headlight
Beam leveler P175
Bulb replacement P366
Bulb wattage P379
Control switch P168
Flasher P171

Indicator light P143
Welcome lighting function....P169
High Beam Assist
Function....P171
Indicator light P142
High beam indicator light....P142
High/low beam change (dimmer) P170
Hill start assist P244
Indicator light P143
To activate/deactivate....P246
Hook
Towing and tie-down P309
Horn P184
Hose and connections....P342

I

Icy road surface warning light P143
Illumination brightness control....P124
Immobilizer....P105
Indicator light P141
Indicator light
Cruise control P142
Cruise control set....P142
Door open....P134
Drive mode P141
Front passenger's frontal airbag ON and OFF P128
Headlight P143
High beam P142
High Beam Assist P142
Hill start assist.... P143
Immobilizer P141
Malfunction P129
RAB OFF P144
Rear fog light P143
REV P124
Select lever/Gear position.... P141
Steering Responsive Headlight OFF P143
Subaru Rear Vehicle Detection OFF P143
TRC OFF P135
Turn signal P142
Vehicle Stability Control (VSC) OFF P136
Vehicle Stability Control (VSC) operation P135, P136
Inside mirror P182
Interior lights.... P200
ISOFIX anchor bars.... P60

J

Jack and jack handle P290
Jack-up point P292
Jump starting.... P305

K

Key P92
Number plate P104
Replacement.... P105
Keyless access with push-button start system P92
Disabling keyless access functions P101
Locking and unlocking doors P97

Opening trunk P97
Warning chimes and warning indicator P104, P137
When access key fob does not operate properly P314

L

Lane Change Assist (LCA) P256
Leather seat materials P323
LED headlight warning light P143, P366
LED headlights P366
Light
Backup P366
Control switch P168
Daytime running P173
Map P200
Rear fog P366
Trunk P367
Turn signal P176
Loading your vehicle P285
Low fuel warning light P134
Low tire pressure warning light P131

M

Maintenance
Precautions P332
Schedule P327
Seatbelt P42
Tips P334
Tools P290
Malfunction indicator light (check engine light) P129
Manual
Climate control P189
mode (automatic transmission) P226
Seat P31
Transmission P220
Transmission oil P346, P375
Map light P200
Meters and gauges P121
Mirror defogger P181
Mirrors P182

N

Navigation system-linked display P149
New vehicle break-in driving P276

O

Odometer P122
Oil filter P340
Oil level
Differential gear P346
Engine P339
Manual transmission P346
Oil pressure warning light P131
One-touch lane change P177
Outside
Mirror defogger P181
Mirrors P182
Overheating engine P308

P

Parking
Brake P243
Brake stroke P350
Tips P243
Periodic inspections P280
Petrol fuel P211
PIN code Access P98
Power
Door locking switch P109
Folding switch P182
Outlets P203
Outside mirrors P182
Steering P229
Steering warning light P135
Window switches P111
Windows P110
Power and torque curve P148
Precautions against vehicle modification P44, P89
Preparing to drive P215
Push-button
Ignition switch P119
Starting and stopping engine P216

R

Rear Cross Traffic Alert (RCTA) P257
Rear fog light
Indicator light P143
Rear seat P35
Folding down P35
Rear view camera P251
Rear window
Defogger P181
Recommended
Brake fluid P375
Clutch fluid P375
Differential gear oil P375
Engine oil P373
Manual transmission oil P375
Spark plugs P377
Refueling P212
Remote control mirror switch P182
Remote keyless entry system P106
Replacing battery P369
Replacement
Access key fob battery P369
Air cleaner element P343
Battery of access key fob P369
Brake pad and lining P349
Cabin air filter P194
Lost transmitters (remote keyless entry system) P107
Wiper blades P360
Replacing bulbs P366
Backup light P366
Headlight P366
Trunk light P367
REV indicator light and buzzer P124
Reverse Automatic Braking (RAB) system P263

OFF indicator light P144
ON/OFF setting P144, P272
Warning indicator P144, P273
Rocking the vehicle P285
Roof antenna P198

S

Safety
Precautions when driving P5
Symbol P3
Warnings P3
Seat
Fabric P323
Front P28
Heater P33
Height adjustment P31
Rear P35
Seatbelt P5, P37
Fastening P39
Maintenance P42
Pretensioners P42
Safety tips P37
Warning light and chime P126, P127
Security
Immobilizer P105
Select lever
Position indicator P141
Shift lock function P225
Settings display P150
Shoulder pretensioner P42
Snow tires P284, P351
Snowy and icy roads P283
Spark plugs P345, P377
Specifications P372
Speedometer P121
SRS airbag (Supplemental Restraint System airbag) P5, P64
Monitors P87
Servicing P88
Warning light P128
Starting & stopping engine P216
Steering lock P219
Steering Responsive Headlight P174
OFF indicator P143
OFF indicator light P143
ON/OFF setting P143, P174
Warning light P143
Steering wheel
Lock P219
Power P229
Tilt/telescopic P183
Stopwatch P149
Storage compartment P201
Subaru Rear Vehicle Detection (SRVD) P255
OFF indicator P261
OFF switch P262
SRVD approach indicator light/warning buzzer P259
Warning indicator P143, P261
Summer tires P351

Sun visors P201
Supplemental Restraint System airbag (SRS) P64
Curtain airbag P83
Side airbag P83
Synthetic leather upholstery P324

T

Tachometer P121
Temperature gauge P123
Temperature warning light
AT OIL TEMP P131
Tether(child restraint system) P62
Tie-down hooks P309
Tilt/telescopic steering wheel P183
Tire P351, P377
All season tires P351
Chains P284
Inspection P353
Pressures and wear P353
Replacement P357
Rotation P356
Size and pressure P377
Types P351
Tire pressure monitoring system (TPMS) P239, P303, P351
Screen P241
Warning light P131
Tires and wheels P351
Tools P290
Top tether anchorages P62
Towing P309
All wheels on the ground P313
Flat-bed truck P313
Hooks P309
Tie-down hooks P309
TPMS screen P241
TRACK mode P238
Trailer
Towing P287
Trip meter P122
Trunk lid P113
Trunk light P367
Turn signal
Indicator lights P142
Lever P176

U

USB power supply P204

V

Vacuum pressure system warning light P134
Vanity mirror P201
Light P201
Vehicle
Capacity weight P286
Identification P381
Symbols P4
Vehicle data recording P10

Vehicle speed warning light P144
Vehicle Stability Control (VSC)
OFF indicator light P136
OFF switch P236
Operation indicator light P135, P136
Warning light P135
Vehicle Stability Control (VSC)/TRC
System P234
Ventilator P186
Voltmeter P146

W

Warning and indicator lights P125
Warning chime
Keyless access with push-button start system P137
Seatbelt P126
Warning indicator
RAB P144, P273
Warning light
ABS P133
Access key P137
Access key fob P137
AT OIL TEMP P131
Automatic headlight beam leveler P142
Brake system P134
Charge P131
Gasoline particulate filter P144
Icy road surface P143
Keyless access with push-button start system P137
LED headlight P143
Low fuel P134
Low tire pressure P131
Master P144
Oil pressure P131
Power steering P135
Seatbelt P126, P127
SRS airbag system P128
Steering Responsive Headlight P143
Subaru Rear Vehicle Detection (SRVD) P143
Vacuum pressure system P134
Vehicle speed P144
Vehicle Stability Control (VSC) P135
Warning message display P152
Warranties P2
Washing P320
Waxing and polishing P321
Wear indicators P356
Welcome lighting function P169
Wheel
Alloy P359
Balance P355
Nut tightening torque P292, P377
Replacement P358
Windows P110
Windshield
Washer fluid P359
Wiper and washer switches P177
Wiper blades P361

Winter
Driving P281
Tires..... P284, P351
Wiper and washer P177

GAS STATION REFERENCE

■ Fuel

▼ For Australia

- Fuel type: **Unleaded petrol** only
- Research Octane Number (RON): **98** or higher is recommended. For optimum engine performance and driveability, it is recommended that you use premium grade unleaded petrol.
- Ethanol blended petrol: Ethanol content is up to 10%.

▼ For Europe

- Fuel type: **Unleaded petrol** only
- Research Octane Number (RON): **98** or higher is recommended. If unleaded petrol with 98 RON or higher is not available, unleaded petrol with 95 RON or higher may be used.
- Ethanol blended petrol: **E5, E10** or the ethanol content is up to 10%.

▼ For other areas

- Fuel type: **Unleaded petrol** only
- Research Octane Number (RON): **98** or higher is recommended. If unleaded petrol with 98 RON or higher is not available, unleaded petrol with 95 RON or higher may be used.
- Ethanol blended petrol: Ethanol content is up to 10%.

■ Fuel tank capacity

50 liters (13.2 US gal, 11.0 Imp gal)

■ Engine oil

Use only the following oils.

- API classification SN with the words “RESOURCE CONSERVING”, SN PLUS with the words “RESOURCE CONSERVING” or SP with the words “RESOURCE CONSERVING”
- or ILSAC GF-5 or GF-6A, which can be identified with the ILSAC certification mark (Starburst mark)
- or ACEA specification A3 or A5

For the complete viscosity requirements, refer to "Engine Oil" ☞P373.

■ Engine oil capacity

5.0 liter (5.3 US qt, 4.4 Imp qt)

The indicated oil quantity is only a guideline and is estimated based on a case when the engine oil is changed with an oil filter. After refilling the engine with oil, the oil level should be checked using an oil level gauge. For more details about maintenance and service, refer to "Engine Oil" ☞P339.

■ Cold tire pressure

See the label located under the driver’s door latch.